

Click on the title to open the Windows Help Module.

TITLE: [PRIORIS LX Server Family On-Line Reference](#)

VERSION: 1.0

FILE NAME: 940WWA01.HLP

FORMAT: Microsoft Help file

Course Overview

As you can see from the above table of contents, this HELP file contains all the technical information you will need to perform the following to a PRIORIS HX server system.

- o Prepare a site
- o Install
- o Configure
- o Expand
- o Troubleshoot
- o Repair

Contents

SERVER BASICS

- Initial Server Setup
- Server Features
- Local Area Network (LAN)
- Connecting to a Network
- Your Server's Components
- Caring For Your Server

SERVER UTILITIES

- Configuring Your Server
- Server Security Feature
- System Configuration Utility (SCU)
- Other Server Utilities
- Loading Drivers

EXPANDING YOUR SERVER

- Preparation and Setup
- Internal Server Components
- Installing New or Additional Components
- Removing & Replacing Components
- Field Service Procedures

TROUBLESHOOTING

- Initial Troubleshooting
- Disk Drive Troubleshooting
- CD-ROM Troubleshooting
- Monitor Troubleshooting
- Server Troubleshooting
- POST and Boot Messages

- POST Execution Messages
- Beep Codes

SERVER SPECIFICATIONS

- Server Dimensions
- Performance Specifications
- Environmental Specifications
- Power Cord Specifications

TECHNICAL REFERENCE

- EISA Expansion Slots
- PCI Local Bus Expansion Slots
- Nominal Current Requirements
- Power Supply and Input Power Requirements
- Main Logic Board Jumpers
- Device Mapping
- Part Lists

CUSTOMER SUPPORT

- Limited Warranty
- Warranty Coverage
- On-Line Bulletin Boards
- Digital Phone Support
- Digital Multivendor Customer Services

GLOSSARY

System Requirements

- 80386 (80486 recommended) or higher microprocessor
- 4MB RAM minimum, 8MB RAM recommended
- 9MB available on a hard disk drive
- 3.5-inch 1.44MB floppy diskette drive
- VGA graphics onboard or on a adapter card, with VGA Color monitor
- Windows 3.1 or higher