



DEClaser 5100

QUICK REFERENCE CARD


EK-D5100-RC

Use this card as a guide to locate the printer features and values you want.
Note: Printer must be **Paused** in order to display menu choices.


Press this KEY To...

- scroll through the values available.
- move down a level.
- scroll back through the menu values.
- move up a level.
- select the feature or value displayed.


© Digital Equipment Corporation 1994. All rights reserved.

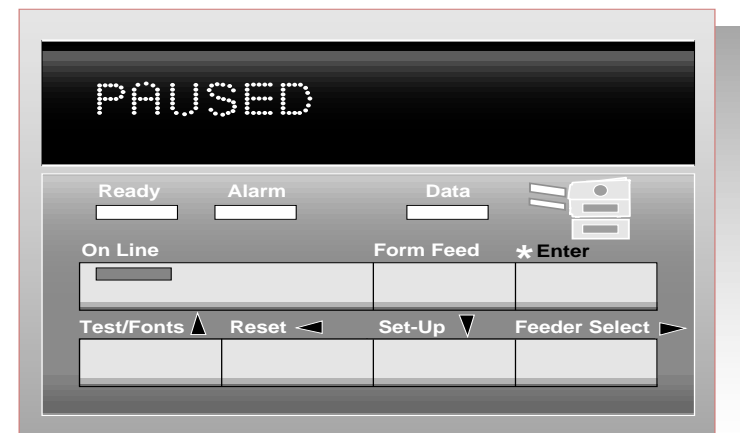

indicates that the value displayed is selected.

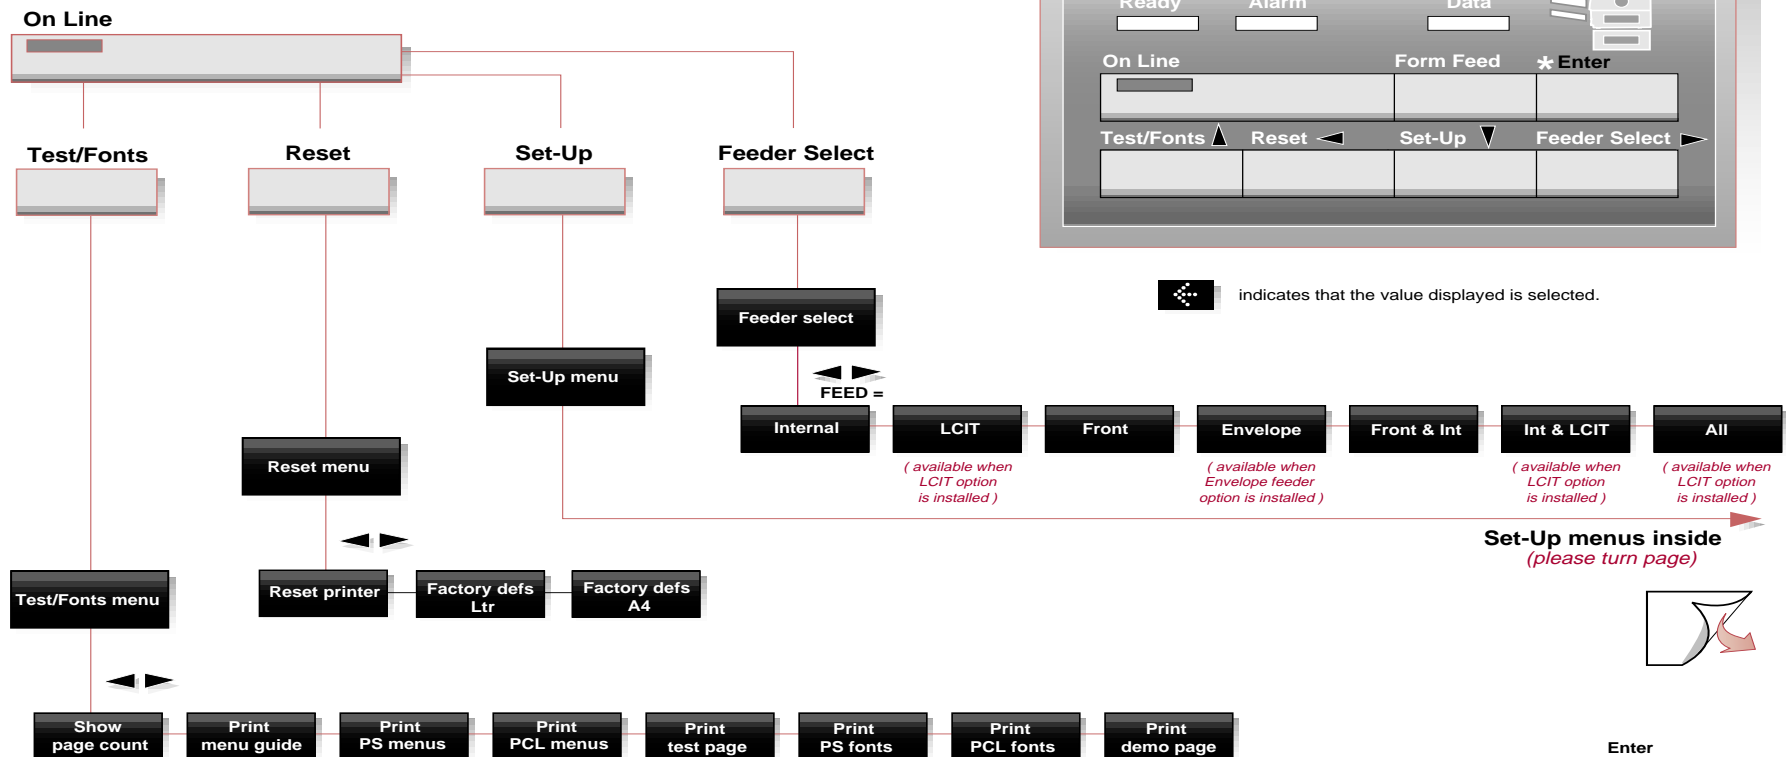


Set-Up menus inside (please turn page)

 


Press to select feature

DEClaser 5100

QUICK REFERENCE CARD

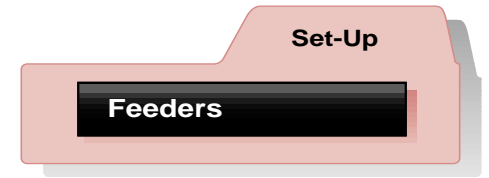



to PostScript menu

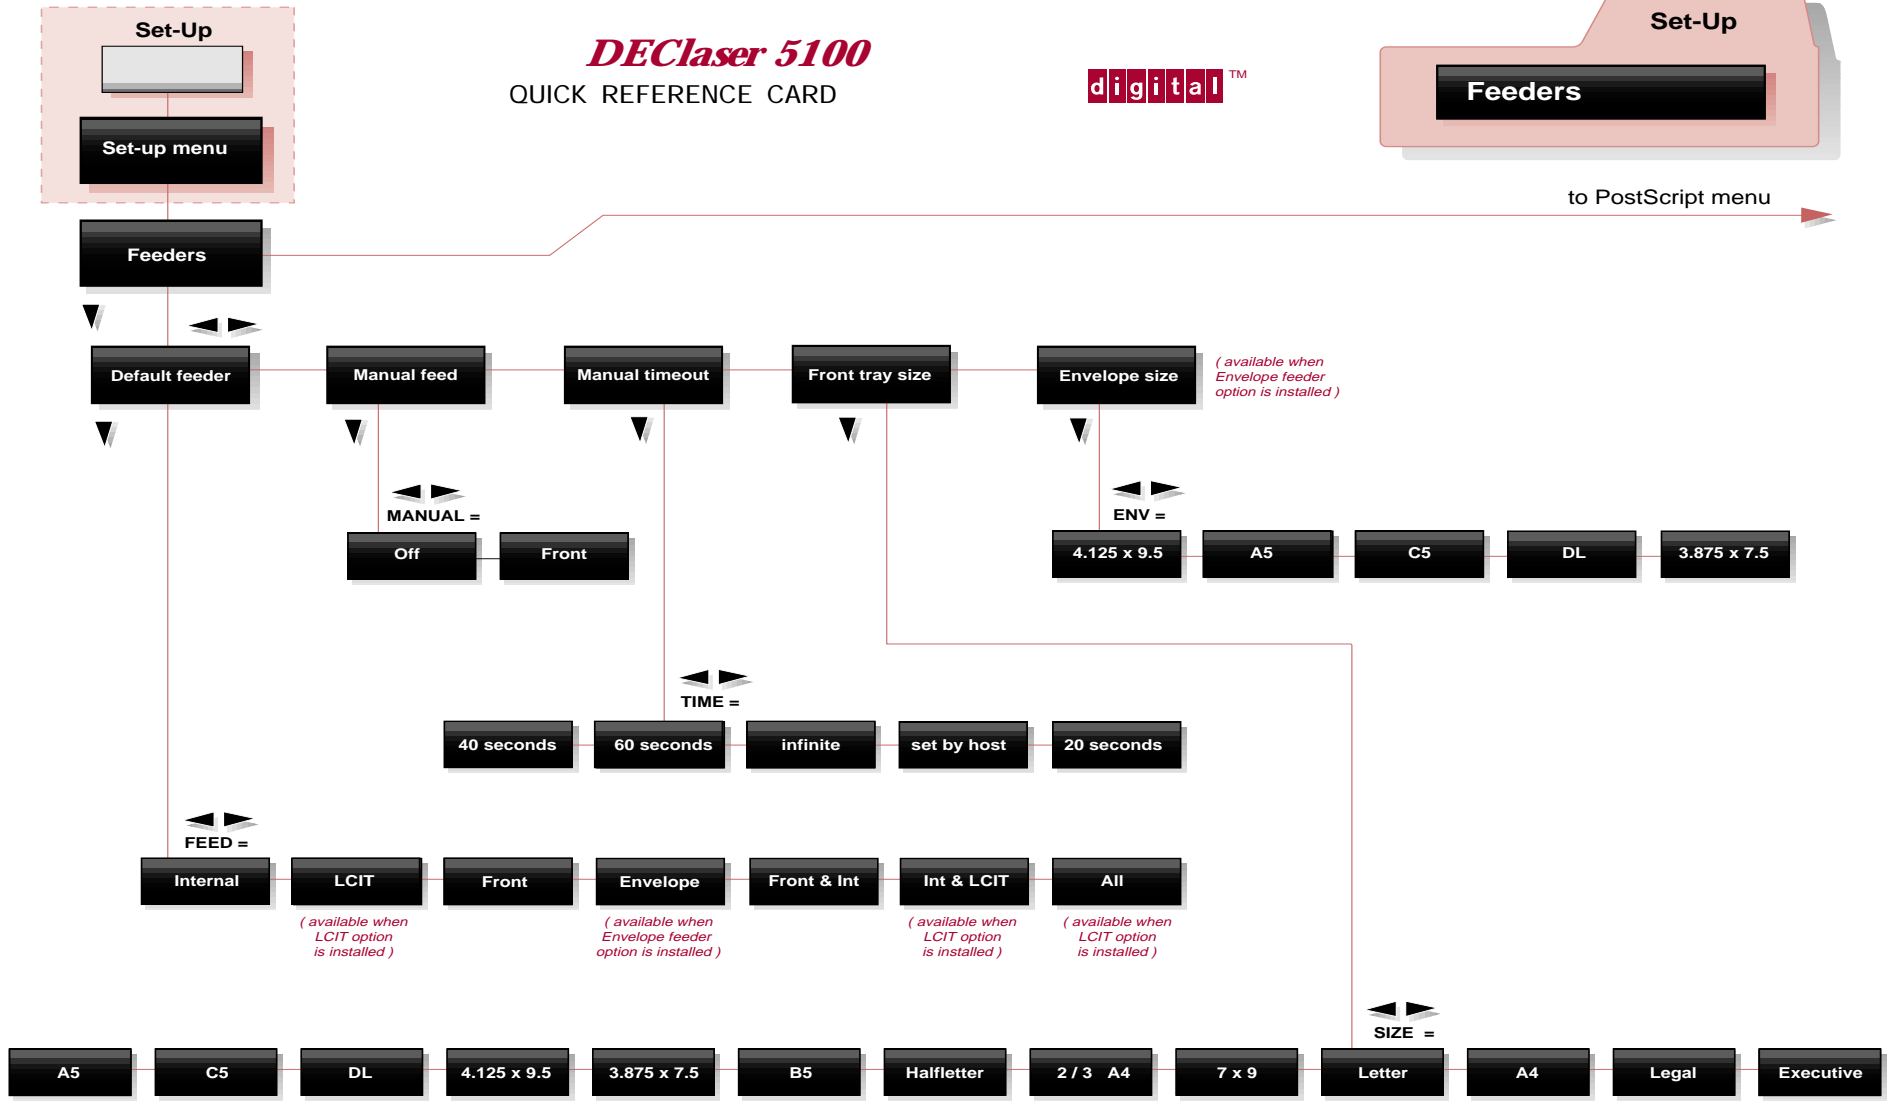

Enter
Press to select value

DECLaser 5100
 QUICK REFERENCE CARD

digital™

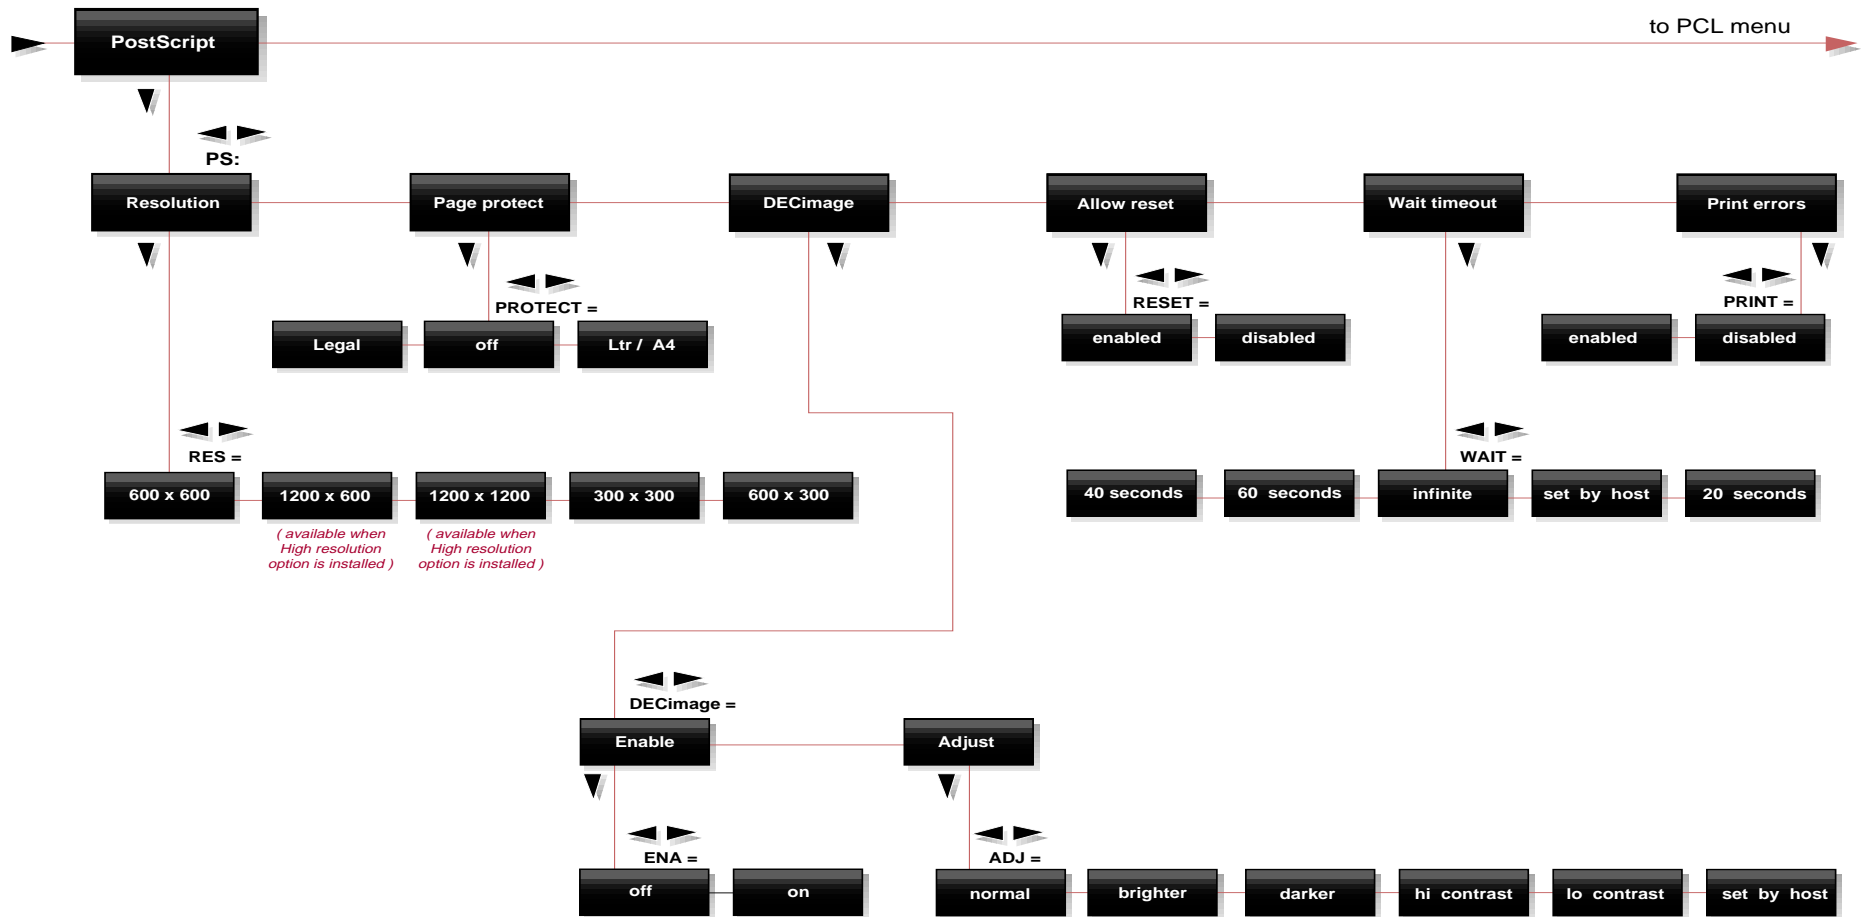
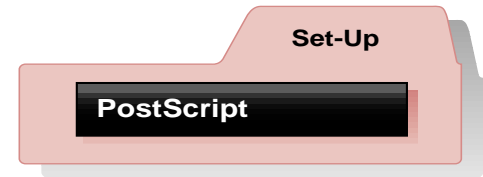


Enter
 Press to select value

DEClaser 5100

QUICK REFERENCE CARD



digital™

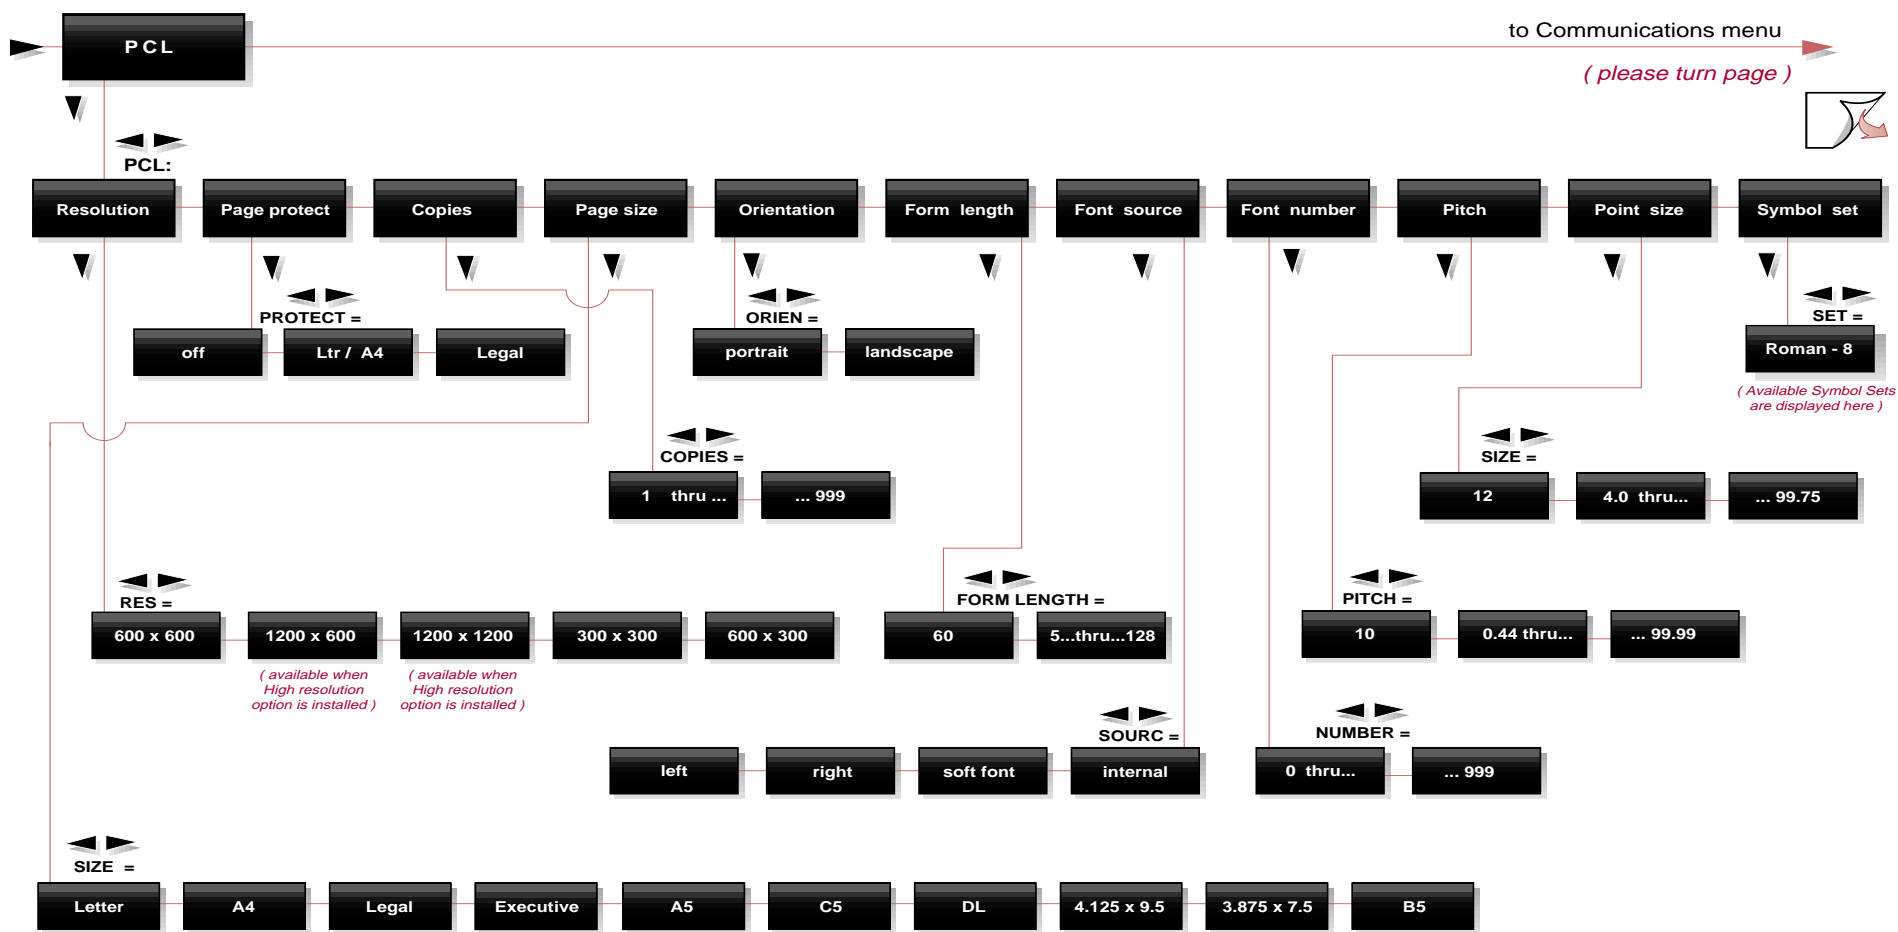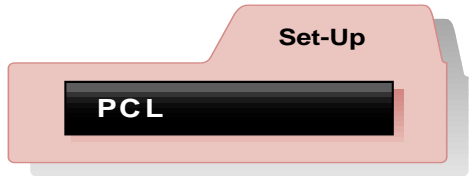

Enter
Press to select value

DECLaser 5100

QUICK REFERENCE CARD

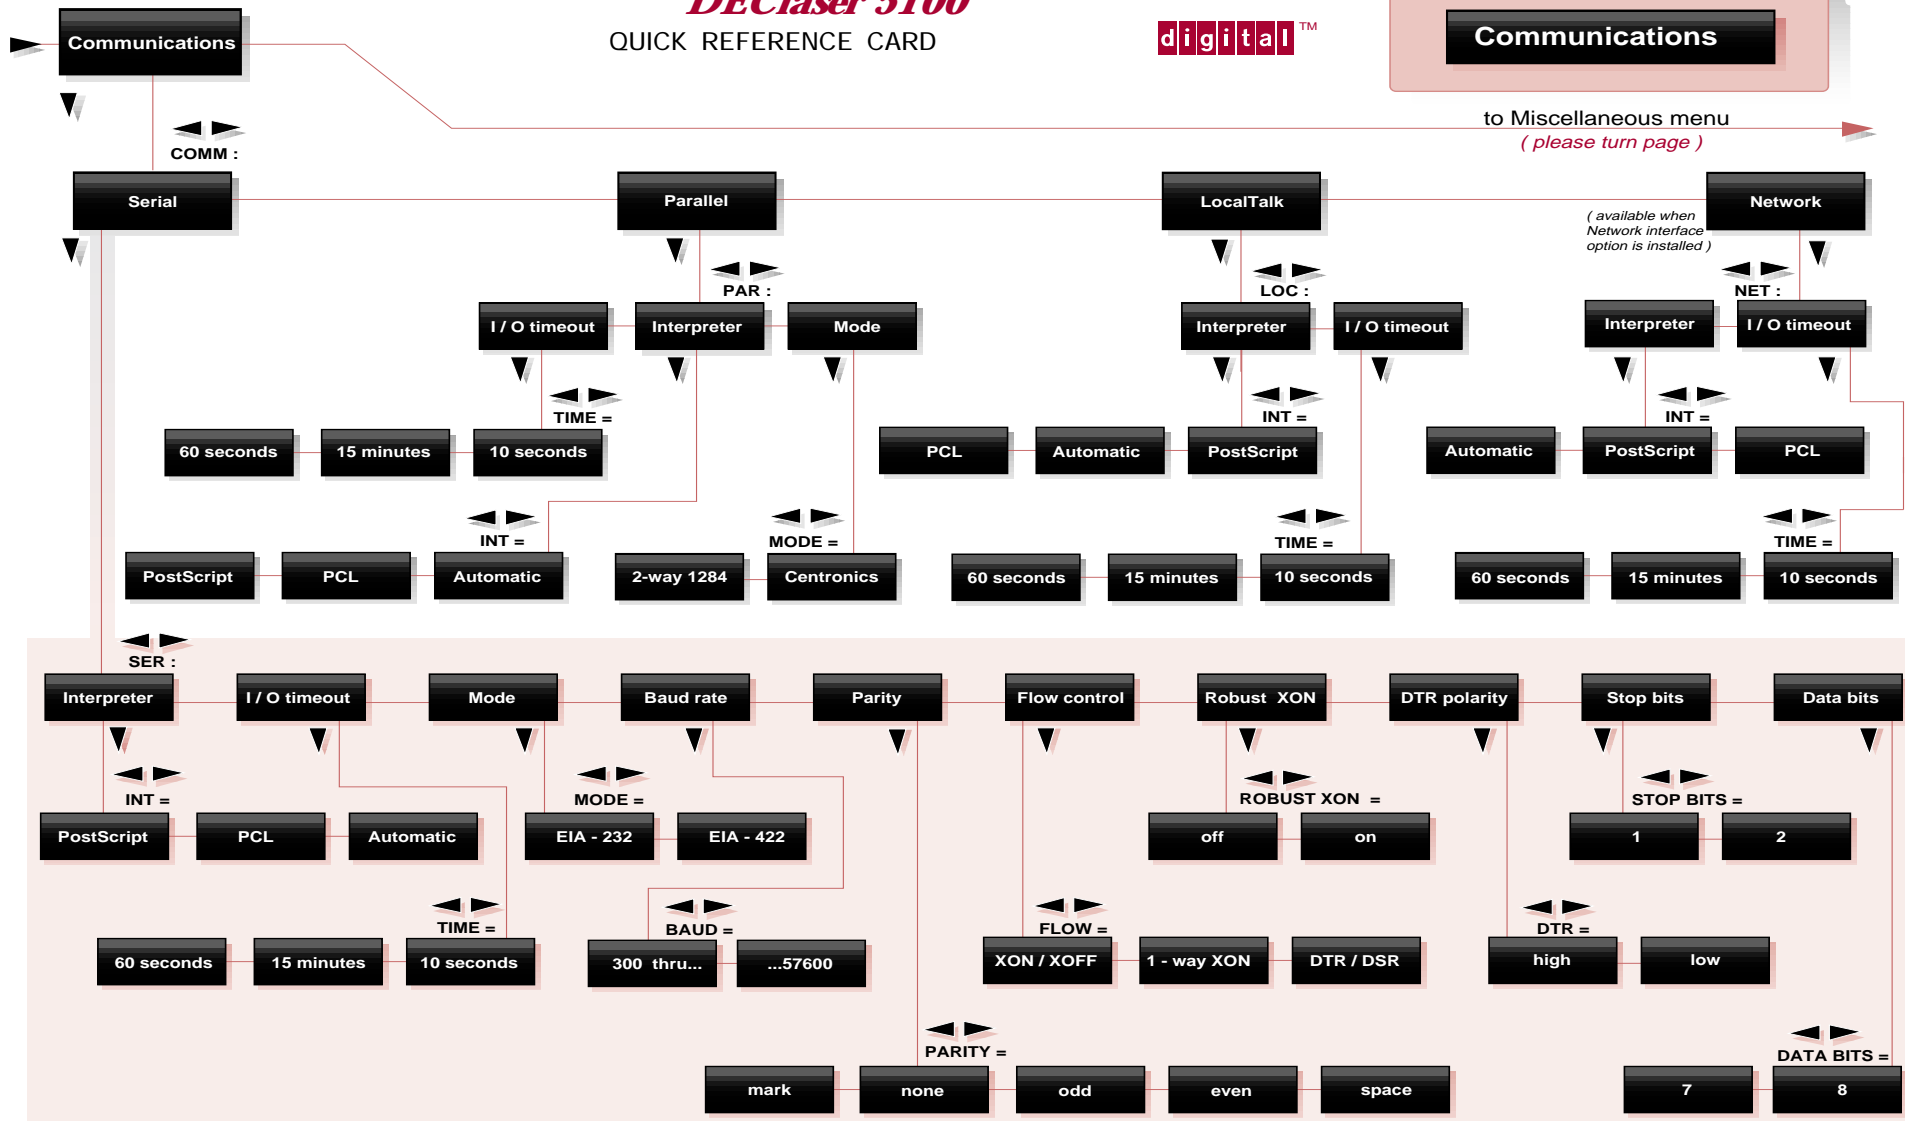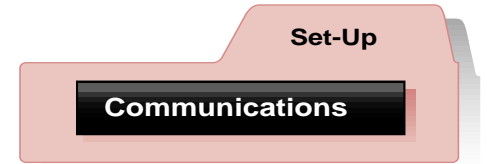


to Miscellaneous menu
(please turn page)

(available when
Network interface
option is installed)

Enter
Press to select value

DEClaser 5100
QUICK REFERENCE CARD

digital™

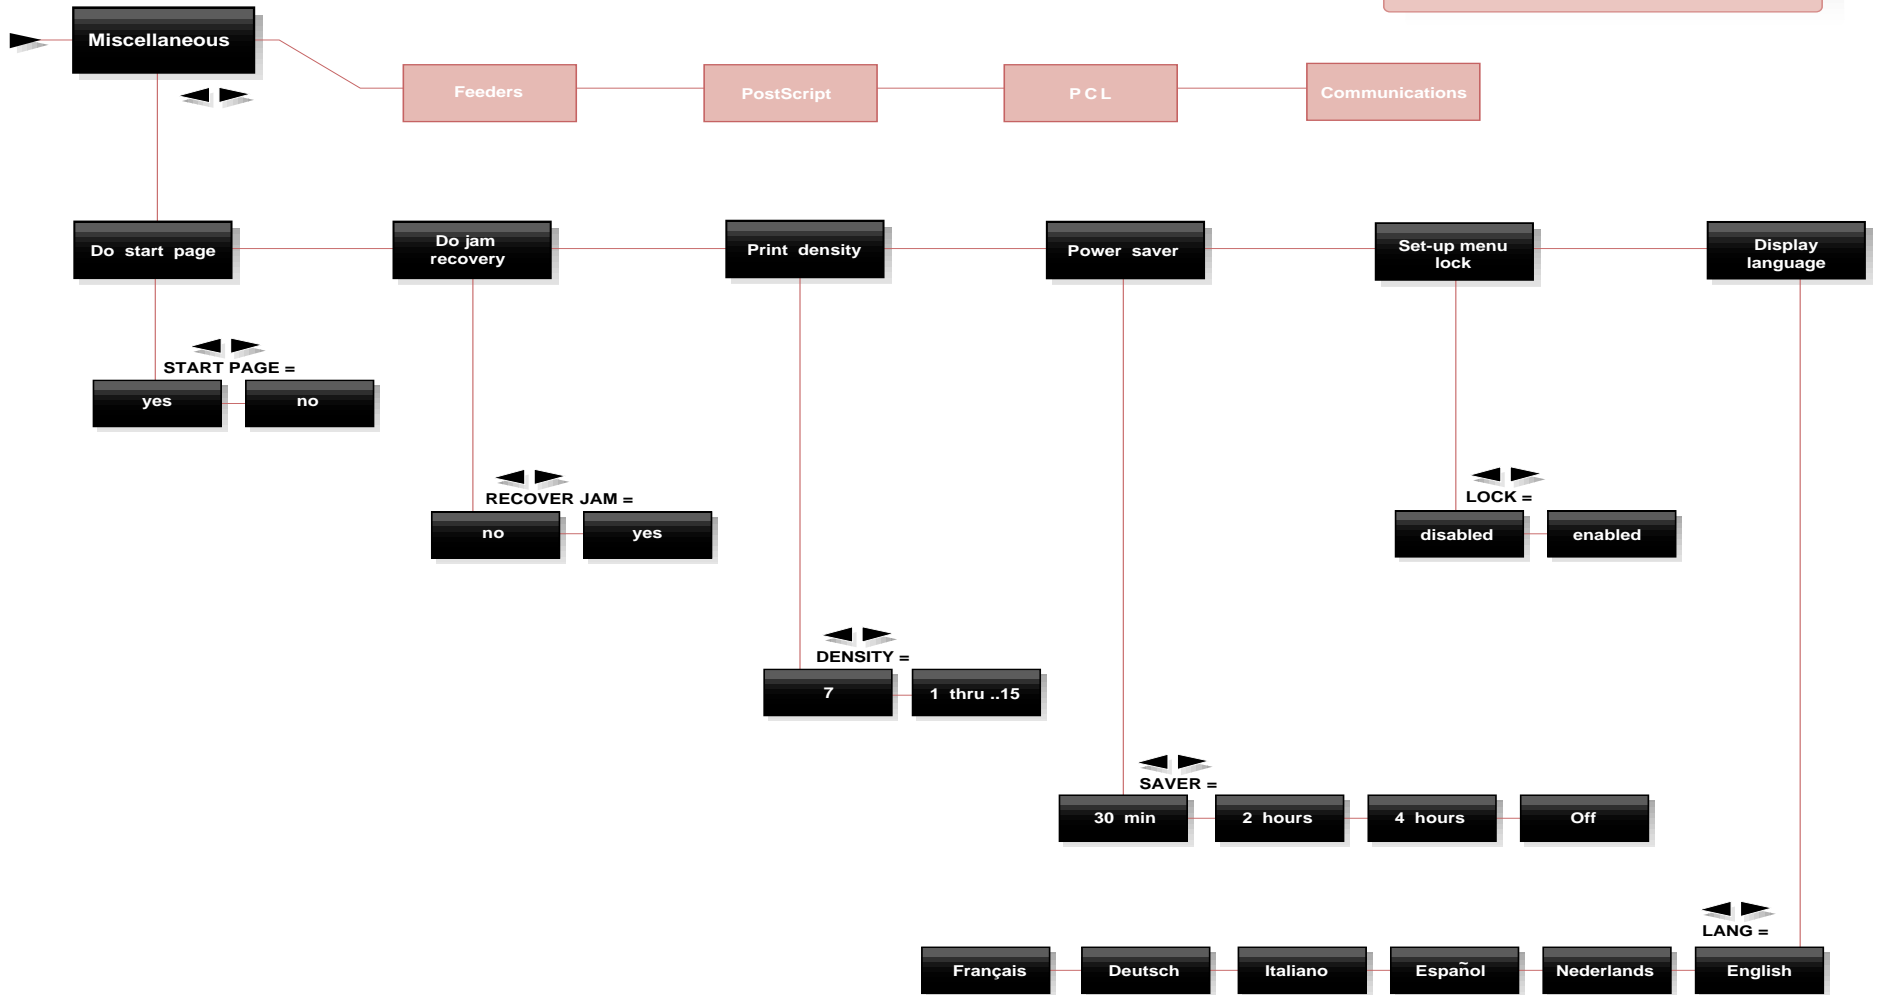

Enter
Press to select value