VT 220

Installation Guide

1st Edition, August 1983

Copyright • 1983 by Digital Equipment Corporation. All Rights Reserved. Printed in U.S.A.

The reproduction of this material, in part or whole, is strictly prohibited. For copy information, contact the Educational Services Department, Digital Equipment Corporation, Maynard, Massachusetts 01754.

The information in this document is subject to change without notice. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

The following are trademarks of Digital Equipment Corporation, Maynard, Massachusetts.

digital DEC	DECwriter DIGITAL	P/OS Professional	UNIBUS VAX
DECmate	LA	Rainbow	VMS
DECnet	MASSBUS	RSTS	VT
DECUS	PDP	RSX	Work Processor

SITE PLANNING SPECIFICATIONS

VIDEO TERMINAL WEIGHT 11.8 Kg (26 lbs.)

KEYBOARD WEIGHT 2 Kg (4.5 lbs.)

ELECTRICAL REQUIREMENTS 90 VAC to 128 VAC

47 Hz to 63 Hz

OR

180 VAC to 268 VAC

47 Hz to 63 Hz

OPERATING CONDITIONS


RELATIVE HUMIDITY 10% to 90%

TEMPERATURE 10 °C to 40°C

(50° F to 104° F)

VT220 INSTALLATION

Unpack and check the contents of each carton

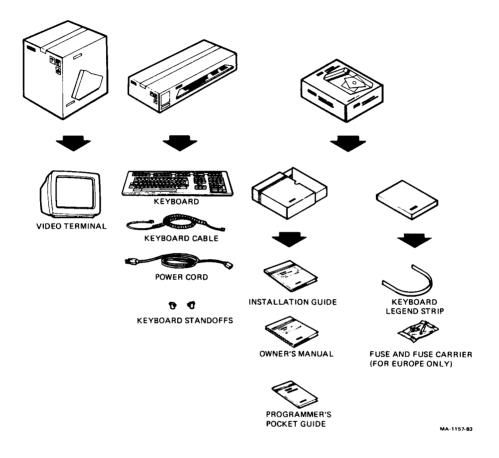


MISSING ITEMS?

- Identify item(s)
- Contact your sales representative and delivery agent


DAMAGE?

- Stop unpacking
- Contact your sales representative and delivery agent


Identify connectors on rear panel of terminal

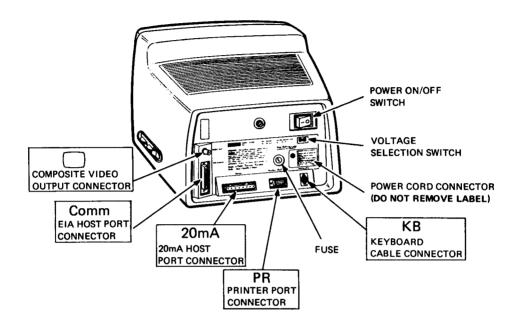


Install legend strip

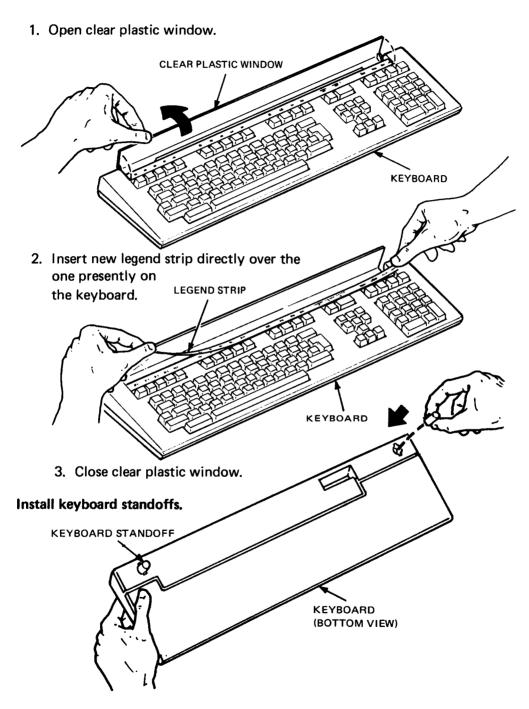

Connect keyboard to video terminal

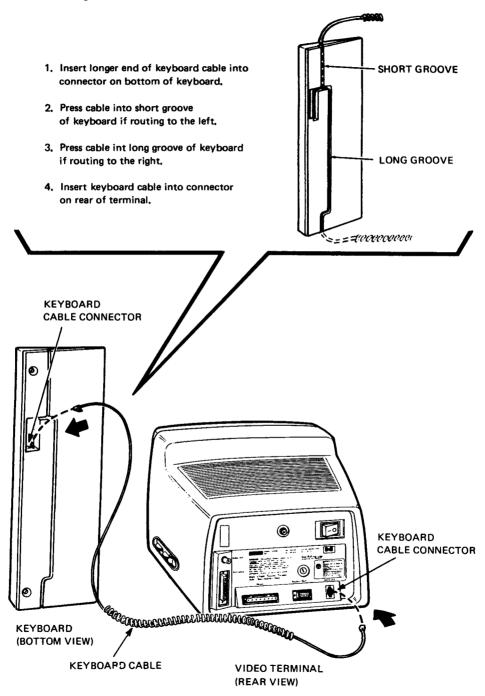

Match power cord to wall outlet voltage.

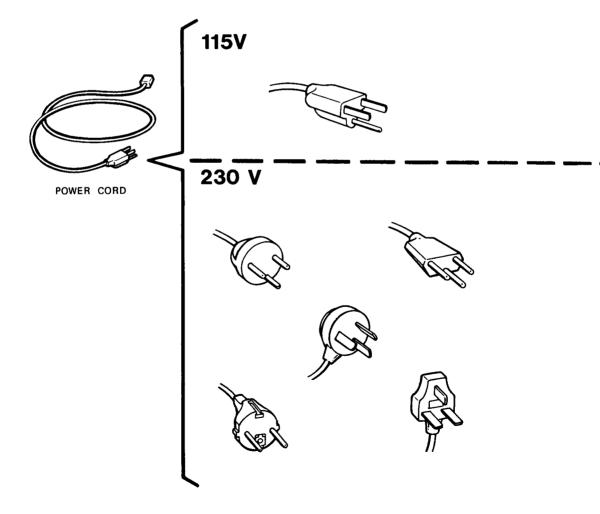


Set voltage selection switch to match power cord voltage

Your terminal may be damaged if the voltage selection switch is set incorrectly.


CAUTION

The voltage selection switch on your VT220 terminal was set to 115 volts by the manufacturer. If your input voltage is 230 volts, the voltage selection switch must be set to 230 volts, and both the fuse and fuse carrier must be replaced with the 230 volt parts provided.

VOLTAGE SELECTION SWITCH 115V Make sure voltage selection switch is set to 115V. 230V VOLTAGE SELECTION SWITCH Set voltage selection FUSE switch to 230V VOLTÁGE HOLDER TO SELECTION SWITCH Remove and replace fuse and fuse carrier with 230V replacement parts. FUSE CARRIER

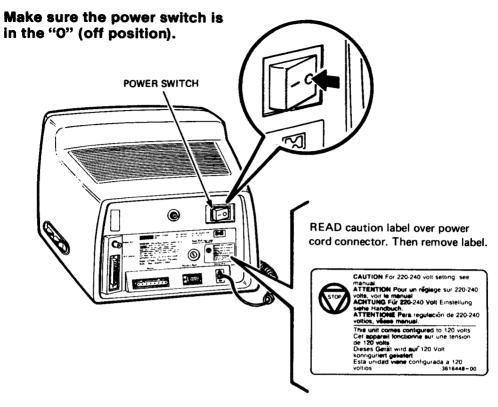


Plug power cord into power cord connector on video terminal and into wall outlet

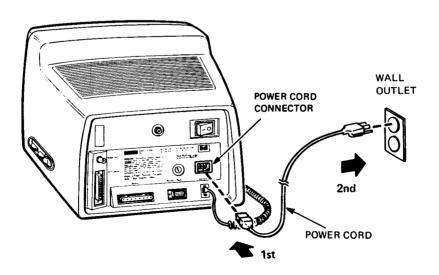


Start up your terminal

1. Set the power switch to "1" (on position).

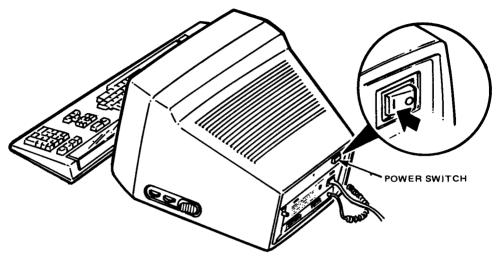

2. Make sure "Power OK" Indicator, the small green light on the front of your terminal, is on.

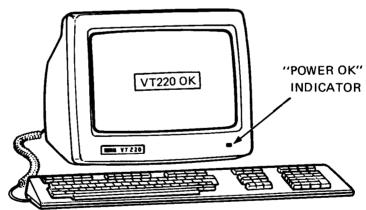


- 3. Listen for bell tone from keyboard.
- 4. Wait about 30 seconds for the display shown above to appear on the screen.

If you had problems, refer to page 14.


Set brightness and contrast controls

- 1. Increase both the brightness and contrast to maximum.
- 2. Decrease the brightness until the white diagonal lines just disappear.
- 3. Decrease the contrast until the display relative to the screen background is of the desired intensity.

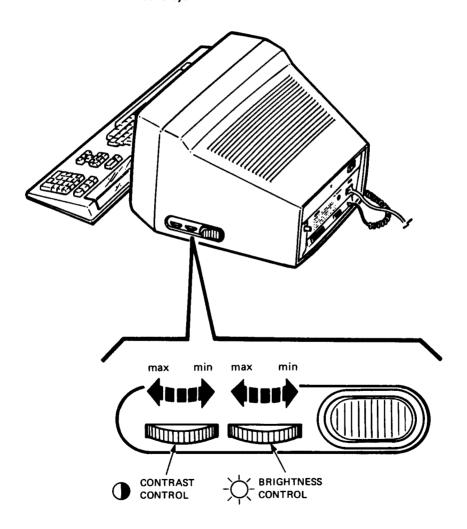

Adjust viewing angle

With front of monitor resting on flat surface, raise rear of monitor until screen is at desired viewing angle. Press tilt leg release button to release tilt leg.

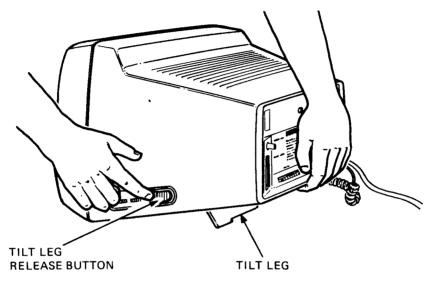


MA-0799-83

Refer to the following illustration for connecting the optional EIA, 20 mA, or printer cables to your terminal.

CAUTION

Set power switch to "O" (off position) before connecting cables.

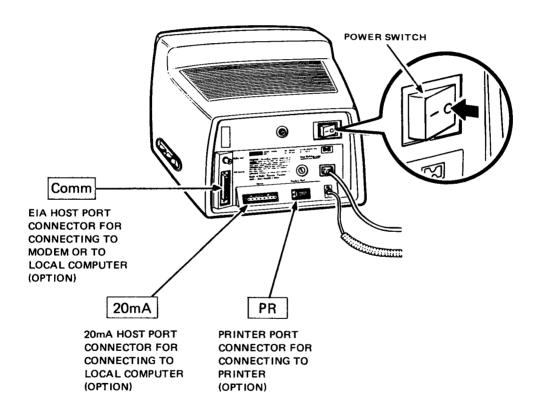

Set power switch to "1" (on position) after connecting cables.

CONGRATULATIONS

You have installed your video terminal successfully. Refer to your Owner's Manual for information that will get you started on your new VT220 terminal.

PROBLEMS?

Problem Corrective Action "Power OK" indicator is off Check wall outlet. Make sure power cord connections are secure. Check fuse. "Power OK" indicator on Keyboard bell tone heard Adjust brightness and contrast until "VT220 OK" appears on screen. (See page 10) No screen display Call Digital Service Information

(800)-DEC-8000