

# DIGITAL Server 7100 Series

---

## Service Maintenance Manual

Part Number: ER-932WW-SM. A01

**Digital Equipment Corporation**

## **January 1998**

---

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation.

Digital Equipment Corporation assumes no responsibility for any errors that might appear in this document.

The software, if any, described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license. No responsibility is assumed for the use or reliability of software or equipment that is not supplied by Digital Equipment Corporation or its affiliated companies.

Restricted Rights: Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

*DIGITAL Server 7100 Series Service Maintenance Manual*

© 1998 Digital Equipment Corporation.

All Rights Reserved.

AMI is a registered trademark of American Megatrends, Inc.

DEC, DIGITAL, ServerWORKS, and the DIGITAL logo are trademarks of Digital Equipment Corporation.

Intel and Pentium are registered trademarks of Intel Corporation.

Microsoft, Windows NT, and Windows 95 are registered trademarks of Microsoft Corporation.

Novell and NetWare are U.S. registered trademarks of Novell Inc.

OS/2 and PS/2 are registered trademarks of International Business Machines Corporation.

SCO is a trademark of The Santa Cruz Operation, Inc.

SCSI *Select* is a registered trademark of Adaptec Corporation.

UNIX is a registered trademark of X/Open Company, Ltd.

All other trademarks and registered trademarks are the property of their respective holders.

FCC ID: 93XWW1

**The FCC wants you to know...**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

All external cables connecting to this basic unit need to be shielded. For cables connecting to option cards, see the option manual or installation instructions.

This digital apparatus does not exceed the Class B limits for radio noise emissions set out in the radio interference regulations of the Canadian Department of Communications.

This equipment is in the 2nd Class category (information equipment to be used in a residential area or an adjacent area thereto) and conforms to the standards set by the Voluntary Control Council For Interference by Data Processing Equipment and Electronic Office Machines aimed at preventing radio interference in such residential area.

When used near a radio or TV receiver, it may become the cause of radio interference.

Read the instructions for correct handling.

This equipment meets or exceeds requirements for safety in the U.S. (UL 1950), Canada (CSA C22.2 No. 950), and Europe (EN 60950/IEC 950) with Nordic requirements.

This equipment meets or exceeds the ergonomic requirements of ZH1/618 and is certified to bear the GS mark by TUV Rheinland of Germany.

This equipment has been tested for radio frequency emissions and has been verified to meet VDE 0871 Class B.

# Contents

<b>Preface</b> .....	vii
<b>1</b>	
<b>Product Description</b>	
System Introduction.....	1-1
Reliability/Availability.....	1-2
Server Expansion.....	1-3
Server Management and Security.....	1-4
Server Configurations.....	1-5
Server Naming Guidelines.....	1-5
Product Model Numbering Convention.....	1-6
Related Material.....	1-8
Latest Product Information and Updates.....	1-10
Enterprise Server Product Information.....	1-10
Updates.....	1-10
<b>2</b>	
<b>Server Software and Utilities</b>	
Introduction.....	2-1
ServerWORKS Quick Launch.....	2-2
Creating Diskettes and Viewing On-line Documentation.....	2-2
System Configuration Utility (SCU).....	2-2
When to Run the SCU.....	2-3
Configuring Expansion Boards.....	2-3
Starting the SCU.....	2-4
Using the SCU.....	2-6
SCU Keyboard Function Keys.....	2-7
Configure Computer.....	2-7
Setting the Date and Time.....	2-8
Maintain System Configuration Diskette.....	2-8

Contents

RAID Configuration Utility .....	2-9
BIOS Upgrade Utility .....	2-9
SCSI <i>Select</i> Utility .....	2-10
Diagnostics .....	2-11

**3**

**SCU Features**

Introduction .....	3-1
System - DIGITAL Server 7100 .....	3-2
System Management Group .....	3-3
Diskette Drive Group .....	3-4
Boot Options Group .....	3-5
Integrated Peripherals Group .....	3-6
Keyboard Features Group .....	3-7
Shadow Options Group .....	3-8
Security Options Group .....	3-9
Cache Options Group .....	3-10
Advanced Control Group .....	3-10
EISA or PCI Devices Group .....	3-12

**4**

**Troubleshooting**

Introduction .....	4-1
Initial Troubleshooting .....	4-2
Diagnostics .....	4-3
Running the Diagnostics .....	4-4
Running Quick Tests or Groups of Tests .....	4-4
Running DIGITAL Vendor Extended Tests .....	4-5
Running Diagnostics Tests from the Hard Disk Drive .....	4-5
Obtaining Information about the Server .....	4-6
Obtaining Information Using the SCU .....	4-8
Obtaining Information Using Server Management Software .....	4-8
Displaying Server Status Using the Hardware .....	4-9
Server Status Messages .....	4-10
POST OCP Messages .....	4-12
POST Codes .....	4-12
Boot Codes .....	4-13
OCP Messages .....	4-14
OCP Status and Error Messages .....	4-15

Server Processor Voltage and Temperature Ranges .....	4-17
Processor Voltage Range .....	4-17
VRM Voltage Range .....	4-18
Processor Temperature Warning Levels .....	4-18
Advanced Troubleshooting .....	4-19
Server Troubleshooting .....	4-20
Disk Drive Troubleshooting .....	4-24
SBB Troubleshooting .....	4-27
Tape Drive Troubleshooting .....	4-27
Monitor Troubleshooting .....	4-28
CD-ROM Troubleshooting .....	4-29
Diskette Drive Troubleshooting .....	4-30
RAID Troubleshooting .....	4-31
Wide Ultra SCSI Bus Repeater Module Troubleshooting .....	4-32

## 5

### FRU Replacement

Introduction .....	5-1
Server Front View .....	5-2
Server Left-Side View .....	5-4
Server Right-Side/Rear View .....	5-6
Miscellaneous .....	5-8
Labels and Nameplates .....	5-8
Service Procedures .....	5-9
Recommended Tools .....	5-9
Special Tools Required .....	5-9
Other Materials Needed .....	5-10
Remedial Diagnostic Test Software .....	5-10
Virus Software Information .....	5-10
BIOS Version Information .....	5-10
Disconnecting External Devices and Power .....	5-11
Removing and Installing the Side Panels .....	5-12
Server Front View .....	5-15
Server Left Side View .....	5-17
Server Right Side View .....	5-19
Server Rear View .....	5-21
Main Logic Board Connectors .....	5-23
Main Logic Board Components .....	5-25
Processor Module Components and Connectors .....	5-27
Wide Ultra SCSI Bus Repeater Module Layout .....	5-29
Main Logic Board Switch Settings .....	5-31

## Contents

Processor Module Switch Settings .....	5-34
Installing Additional Memory .....	5-36
Supported DIMM Upgrade Kits .....	5-37
Memory Configuration Guidelines .....	5-37
Memory Troubleshooting .....	5-41
Removing and Replacing the Power Supply .....	5-42
Removing and Replacing the Diskette Drive.....	5-44
Removing and Replacing the CD-ROM Drive.....	5-46
Removing and Replacing a Cooling Fan .....	5-48
Removing and Replacing the Secondary Cooling Fan 2.....	5-50
Removing and Replacing the Speaker .....	5-52
Removing the Main Logic Board .....	5-54
Replacing the Main Logic Board .....	5-56
Removing the Storage Backplane .....	5-56
Replacing the Storage Backplane .....	5-58
Removing and Replacing a Caster.....	5-58

## 6

### Processor Module Upgrades

Introduction .....	6-1
Configuration Guidelines.....	6-2
Create Diskettes from the Quick Launch CD-ROM.....	6-2
Installing a Second Processor Module .....	6-3
Processor Compatibility in a Multiprocessor Environment.....	6-7
Installing a Processor on a Processor Module.....	6-7
Removing the Processor Module .....	6-8
Installing a Processor and Voltage Regulator Module (VRM).....	6-9
Run the System Configuration Utility (SCU) .....	6-15
Update the BIOS .....	6-16
Troubleshooting.....	6-16
Using the Crisis Recovery Diskette if Necessary .....	6-16



**7****Device Mapping**

Introduction .....	7-1
Processor Memory Address Map .....	7-2
Processor I/O Address Map .....	7-2
I/O Address Map .....	7-3
Server Interrupt Levels .....	7-3
DMA Channel Assignment .....	7-4
PCI Configuration Space Address Map .....	7-4

**A**

<b>Service Notes</b> .....	A-1
----------------------------	-----

**Figures**

Typical DIGITAL Server 7100 .....	viii
2-1. SCU Main Menu Options .....	2-5
4-1. DIGITAL Server Component Information .....	4-7
5-1. Server Front View .....	5-3
5-2. Server Left-Side View .....	5-5
5-3. Server Right-Side/Rear View .....	5-7
5-4. Server Brake .....	5-11
5-5. Unlocking and Removing the Side Panels .....	5-13
5-6. Installing Side Covers .....	5-14
5-7. Server Front View .....	5-16
5-8. Server Left Side View .....	5-18
5-9. Server Right Side View .....	5-20
5-10. Server Rear View .....	5-22
5-11. Main Logic Board Connectors .....	5-24
5-12. Main Logic Board Components .....	5-26
5-13. Processor Module Components and Connectors .....	5-28
5-14. Wide Ultra SCSI Repeater Module Component Locations .....	5-30
5-15. Main Logic Board Switch Location .....	5-33
5-16. Processor Module Switch Location .....	5-35
5-17. DIMM Bank Locations .....	5-38
5-18. Removing and Replacing the Power Supply .....	5-43
5-19. Removing and Replacing the Diskette Drive .....	5-45
5-20. Removing and Replacing the CD-ROM Drive .....	5-47
5-21. Removing and Replacing a Cooling Fan .....	5-49
5-22. Removing and Replacing the Secondary Cooling Fan 2 .....	5-51

## Contents

5-23. Removing and Replacing the Speaker .....	5-53
5-24. Removing and Replacing the Main Logic Board .....	5-55
5-25. Removing and Replacing the Storage Backplane.....	5-57
5-26. Removing and Replacing a Caster .....	5-59
6-1. Removing the Terminator Card.....	6-4
6-2. Installing a Processor Module .....	6-6
6-3. Removing the Processor Module.....	6-8
6-4. Removing the Retaining Clip.....	6-9
6-5. Removing the Processor/Heat Sink Assembly.....	6-10
6-6. Installing the New Processor.....	6-11
6-7. Installing the Retaining Clip .....	6-12
6-8. Installing a VRM .....	6-13
6-9. Installing the Processor Module .....	6-14

# Preface **P**


---

This *Service Maintenance Manual* is a troubleshooting guide that can be used for reference when servicing DIGITAL Servers.

DIGITAL reserves the right to make changes to this *Service Maintenance Manual* without notice. Accordingly, the illustrations and procedures in this document might not apply to all DIGITAL Servers to be serviced since many of the diagnostic tests are designed to test more than one product.



**CAUTION:** DIGITAL recommends that only A+/DIGITAL Server certified engineers attempt to repair this equipment. All troubleshooting and repair procedures are detailed to support subassembly/module level exchange. Because of the complexity of the individual boards and subassemblies, no one should attempt to make repairs at the component level or make modifications to any printed circuit board. Improper repairs can create a safety hazard. Any indications of component replacement or circuit board modifications might void any warranty or exchange allowances.

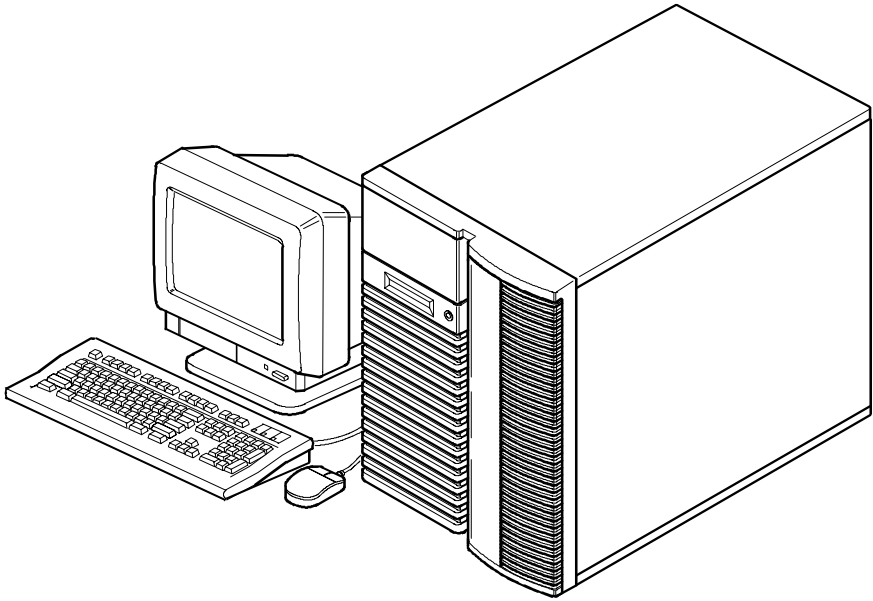

DEC00421

**Typical DIGITAL Server 7100**

# Product Description

---

# 1

## System Introduction

The DIGITAL Server 7100 is a high-performance, highly-scalable network and enterprise server featuring the latest in modular processor and storage technology.

The DIGITAL Server provides support for the following features:

## Reliability/Availability

<i>Pentium Pro Processor Module</i>	Up to four SMP Pentium Pro processors, each with an integrated 512 KB, four way set-associative, write-back cache.
<i>Error Correction Code (ECC) Memory</i>	Maximum expandability with up to 4 GB of ECC protected DIMM memory.
<i>Dual-Channel Storage Backplane</i>	Redundant disk subsystems using dual-channel wide Ultra SCSI or wide Ultra RAID adapters.
<i>Power Supplies</i>	The DIGITAL Server 7100 ships with two 450 W power supplies for normal operation. In some configurations, the second power supply can be used for redundant operation.
<i>Variable Fan Speed</i>	Automatically adjusts fan speed according to ambient temperature.
<i>Internal Sensors</i>	Monitors internal server temperatures, fan operation, and power supply temperatures and voltages.

## Server Expansion

*Flexible Memory Architecture*

Two memory modules provide a 4-way interleaved memory system, with 128 MB (4 x 32 MB) of minimum supported memory and 4 GB (16 x 256 MB) of maximum supported memory.

*12 I/O Expansion Slots*

Seven PCI expansion slots, four EISA slots, and one shared EISA/PCI slot. Dual peer PCI bus design with peak bandwidth of 264 MB/sec PCI-to-EISA bridge.

*Integrated SVGA Video Controller*

Supports management and configuration applications locally (on the main logic board) without use of an expansion slot.

*Adaptec 3940UW Wide Ultra SCSI or RAID Adapter*

Support for narrow and internal wide Ultra SCSI devices.

*Capacity for 10 internal SCSI Storage Devices*

Accommodates seven 3½-inch half-height drives in Storage Building Blocks (SBBs), two 5¼-inch, half-height drives (hard drives or tape drives), and one CD-ROM drive.

*External I/O Ports*

Two serial ports and one parallel port to support external options such as a printer, modem, or local terminal.

*Wide Ultra SCSI Storage Backplane*

Supports high-performance drives for single or dual channel wide Ultra SCSI and wide Ultra RAID configurations.

*Disk Hot Swap Capability*

Allows replacement of SBB disk drives while the server is operating.

*Clusters*

Supports DIGITAL Clusters for Windows NT and Microsoft Cluster Server (part of Microsoft Windows NT Server, Enterprise Edition) for database and file services failover.

## Server Management and Security

<i>Server Diagnostics</i>	Allows local and remote diagnosis of server problems.
<i>Hardware Configuration</i>	Allows local and remote server configuration.
<i>Unique Asset Management</i>	Unique server identifier in non-volatile memory provides easy asset management.
<i>Firmware Upgrade Utility</i>	Upgrades firmware versions.
<i>Operator Control Panel (OCP)</i>	Back-lit, 16-character display for diagnostic and error messages.
<i>Hard Drive Indicator Lights</i>	Provides immediate status information on SBB hard drive activity or failure.
<i>Key Lock</i>	Limits access to server components.
<i>Interlock Sensor Switches</i>	Automatically turns off server power if either side panel is removed when the server power is on.

## Server Configurations

The following rules apply when **Product Family Names** and **Product Model Names** are assigned to DIGITAL Server products. These rules apply to all products developed in the NT Server Business Unit (NTSBU).

### Server Naming Guidelines

- All products in a family carry the same name on the nameplate. (i.e. all products in the Entry space will carry the name DIGITAL SERVER 1000)

<u>Family Name</u>	<u>Segment</u>
<b>DIGITAL SERVER 500</b>	SUB ENTRY
<b>DIGITAL SERVER 1000</b>	ENTRY
<b>DIGITAL SERVER 3000</b>	DEPARTMENT
<b>DIGITAL SERVER 5000</b>	APPLICATION
<b>DIGITAL SERVER 7000</b>	ENTERPRISE
<b>DIGITAL SERVER 9000</b>	SUPER ENTERPRISE

- Products in a rackmount chassis will have an R after the Family Name (DIGITAL Server 3000R).
- Product models within a family will be differentiated by the Product Model Name. The Product Model Name will appear on a label on the rear of the product. Specific configurations within a model will carry the same Product Model Name and will be differentiated by the part number.



## Product Model Numbering Convention

The following example describes the product model numbering convention:

### **DIGITAL SERVER 1234 5678A R**

1 = PRODUCT FAMILY NAME (first character of family number)

2 = MAJOR PROCESSOR TECHNOLOGY DIFFERENTIATOR WITHIN THE FAMILY

This number will be assigned to each new platform based on the following matrix. Open numbers will be assigned as new processor technology is introduced. THIS FIELD IS NOT USED FOR SUB ENTRY PRODUCTS.

100 = Pentium Pro

200 = Pentium II – Slot 1

300 = EV5

400 = Pentium II – Slot 2

500 = EV6

600 = OPEN

700 = OPEN

800 = OPEN

900 = OPEN

3,4 = USED TO DIFFERENTIATE MODELS BASED UPON DIFFERENT PROCESSORS WITHIN A PROCESSOR TECHNOLOGY (I.E. CLOCK SPEED, CACHE SIZE) START AT 00 FOR FIRST MODEL AND INCREMENT BY 05 FOR EACH ADDITIONAL MODEL.

## Product Description

5 = CPU TYPE

BLANK = PENTIUM

1= PENTIUM PRO

2 = PENTIUM II/SLOT 1

3 = PENTIUM II/SLOT 2

4 = Open/Available for future processors

5 = Open/Available for future processors

6 = ALPHA EV56

7 = ALPHA PCA57

8 = ALPHA EV6

9 = ALPHA EV67

6, 7, 8,9 = CPU CLOCK SPEED IN MHZ

## Related Material

The following related material is available:

Document or Software Title	Order Number	Description
Service Quick Reference	ER-932WW-SR (English only)	Provides troubleshooting information that can be used when servicing DIGITAL servers. This manual is a condensed version of the Service Maintenance Manual and is provided in a pocket-size format (4 x 8-inches).
Installation Guide	ER-932WW-IM (Multilanguage)* ER-932WW-IJ (Japanese)	Provides information on connecting hardware cables and booting the server. This guide also explains how to use DIGITAL ServerWORKS Quick Launch to install an operating system, create driver and utility diskettes, and view on-line help and support documentation.
System Reference	ER-932WW-UA (English) ER-932WW-UJ (Japanese)	Provides information on using the server's configuration utilities, installing peripherals and options, security, and troubleshooting. The System Reference is available on the Quick Launch CD-ROM in English, Spanish, German, Italian, and French.
Quick Reference labels	36-47812-03 (left side panel) 36-47812-04 (right side panel)	Provides an overview of major server components, configuration guidelines, and SCSI cabling information. These labels are located on the inside of the server's side panels.
Warranty and Service Information	ER-PCWAR-CM (Multilanguage)*	Provides warranty information and a listing of phone numbers for technical support.

\* Multilanguage includes: English, French, Italian, German, and Spanish

*continued*

Product Description

Document or Software Title	Order Number	Description
DIGITAL ServerWORKS software	QB-4WY9A-SA (Multilanguage)*	<p>Contains ServerWORKS Quick Launch and ServerWORKS Manager software and documentation.</p> <p>Quick Launch consists of a bootable CD-ROM disc and Getting Started guide. This program steps the user through the initial server setup and operating system installation.</p> <p>ServerWORKS Manager consists of two CD-ROMs and an Overview and Installation Guide and supporting documentation.</p>
Product README and Revision History Information - Quick Launch CD-ROM	Refer to the Quick Launch CDROM in the DIGITAL ServerWORKS software kit.	Provides additional product information and product change history.
Option documentation - Quick Launch CD-ROM	Refer to the Quick Launch CDROM in the DIGITAL ServerWORKS software kit.	Provides postscript files that can be viewed and printed using Adobe Acrobat Reader software. These files are provided in PDF format on the Quick Launch CD-ROM
Diagnostic Software - Quick Launch CD-ROM	Refer to the Quick Launch CDROM in the DIGITAL ServerWORKS software kit.	<p>Contains an advanced set of diagnostic utilities for identifying and correcting problems on the server.</p> <p>The diagnostic software can be used to verify proper hardware installation and isolate intermittent problems that are not detected by the Power On Self Test (POST). Refer to chapter 2 for information on using the diagnostic utilities.</p>
PC Product Support Information Kit	QA-5RJAA-G8 (English only)	Provides all the latest product documentation for all NTSBU mobile, desktop, and server products.

\* Multilanguage includes: English, French, Italian, German, and Spanish



**NOTE:** Refer to Chapter 2 for procedures on how to create diskettes and view documentation from the Quick Launch CDROM.

## Latest Product Information and Updates

Listed below is the current product information and update source locations.

### Enterprise Server Product Information

Family Name	Model Name	Part Number	Description	Prioris Family Name
DIGITAL Server 7000	DIGITAL Server 7100 1200	FR-932WW-CX	6200/512 (PP) - KERNAL	N/A
DIGITAL Server 7000	DIGITAL Server 7100 1200	FR-932WW-CA	6200/512 (PP) - MODEL 1	N/A
DIGITAL Server 7000	DIGITAL Server 7100 1200	FR-932WW-CB	6200/512 (PP) - RAID	N/A
PowerGrade Chip Upgrade	DIGITAL Server 7000 PowerGrade Kit	FR-PC93U-AD	6200/512 (PP) PowerGrade Chip Upgrade	Prioris ZX 6000 Series PowerGrade
PowerGrade Board Upgrade with 2 processors	DIGITAL Server 7000 PowerGrade Kit	FR-PC93U-AB	6200/512 (PP) PowerGrade Board Upgrade	Prioris ZX 6000 Series PowerGrade

### Updates

Current server utilities and technical support information is available on the Quick Launch CD-ROM disc and the Internet.

For product information, use the address:

<http://www.windows.digital.com>

For technical support, use the address:

<http://www.windows.digital.com/support/support.asp>

For access directly to the software library for BIOS and driver updates, use the address:

<http://www.windows.digital.com/~ftp/00-index.stm>

# Server Software and Utilities

---

# 2

## Introduction

This chapter describes the utilities supplied with the server. Server utilities include:

- **ServerWORKS Quick Launch** — This software is used to install a network operating system onto the server. The CD-ROM also contains various drivers and on-line documentation.
- **System Configuration Utility (SCU)** — This utility is available to configure the server when relocating, adding, or removing EISA/ISA/PCI expansion boards and when changing the server's factory-defined settings. The SCU is available on the Quick Launch CD-ROM.
- **RAID Configuration Utility** — This utility is available for RAID-ready servers only. This utility is available to configure the RAID array. The RAID configuration utility is available on the Quick Launch CD-ROM.
- **BIOS Upgrade Utility** — This utility is available to update or restore the server's BIOS. The BIOS Upgrade Utility is available on the Internet.
- **SCSI *Select* Utility** — This utility allows you to configure and view settings of the onboard SCSI controller and SCSI devices. The SCSI *Select* Utility is available each time you boot your server.
- **Diagnostics** — This utility is used to verify server operation. The diagnostics utility is available on the Quick Launch CD-ROM.

## ServerWORKS Quick Launch

ServerWORKS Quick Launch is used to install the server's Network Operating System (NOS). In addition to providing quick and seamless NOS installation, Quick Launch also provides drivers, documentation, and the ability to make diskettes of utilities such as diagnostics. For more information, refer to the *ServerWORKS Quick Launch Getting Started* guide.

### Creating Diskettes and Viewing On-line Documentation

Use the following procedure to create diskettes using the Quick Launch CD-ROM and to view on-line product documentation.

1. Power on your server and boot the ServerWORKS Quick Launch CD-ROM.
2. Select the "User Documentation" button to view on-line product documentation.
3. From the Quick Launch Main Screen, select the "Installations & Utilities" button and then the Utility tab to create driver and utility diskettes.
4. Insert a DOS-formatted diskette into drive A, and choose the utility or driver you wish to copy and select Continue.
5. Repeat this procedure for all the utilities and drivers you wish to copy.

### System Configuration Utility (SCU)

The server was pre-configured at the factory using the System Configuration Utility (SCU). This means that the server's hardware (processor modules, memory, cache, mass storage devices, expansion boards, etc.) has been identified and configured for optimum performance. If you need to make changes to this configuration, DIGITAL recommends that you use the SCU along with the information provided in this section.

*Refer to "Starting the SCU" described later in this chapter.*

*Refer to Appendix C, "SCU Features," for more details about the SCU.*

*Refer to the ServerWORKS Quick Launch Getting Started guide and the README.TXT file, which is located on the Quick Launch CD-ROM, for additional information.*

## When to Run the SCU

Always run the SCU each time you add, remove, or relocate ISA, PCI and/or EISA expansion boards to reconfigure server resources (IRQs). You should also run the SCU if the main logic board changed, after adding a processor module, or after adding memory modules.

If the main logic board changes or a processor module is added, run the SCU (select the option "Configure Computer") to update the serial numbers of the components. For more information on how to change the serial numbers, refer to Chapter 4, "Obtaining Information About The Server."

Typically, the server displays a message such as `Run SCU Utility.....Press F1 to Continue`. Select how you want to access and run the SCU by following the instructions displayed on the SCU screens.

## Configuring Expansion Boards

Each time you add, remove, or relocate any EISA/ISA/PCI expansion board, you need to run the SCU to identify their operating characteristics, server resource requirements, and slot locations. Based on this information, the SCU will then automatically assign the proper server resources to EISA expansion boards, enable PCI boards, and inform you as to what jumper or switch settings need to be manually set on ISA expansion boards to avoid resource conflicts.

The SCU identifies an expansion board's operating characteristics and resource requirements through Configuration (.CFG) files. These files contain main logic board, EISA, PCI, and ISA expansion board vital characteristics and the server resources they require for proper operation. Before you can configure the server, you must copy the CFG files (and overlays if applicable) supplied with the additional EISA expansion boards you installed to either the SCU directory on your hard disk drive or the SCU diskette that you created earlier.

As an added feature, the SCU creates and stores all setup changes in a System Configuration (.SCI) file. This file is automatically generated when you run the SCU. Afterwards, this SCI file can be used on any DIGITAL Server that is identically configured and can serve as a backup to the EISA configuration stored in NVRAM memory.



## Starting the SCU

The SCU is located on the ServerWORKS Quick Launch CD-ROM disk. The SCU options are shown in Figure 2-1. If this is your first time using the SCU, it is recommended that you select “Learn About Configuring your Computer” for detailed information on using the SCU. If this is a subsequent session, refer to the appropriate sections in this chapter to change the server’s configuration.

You can start the SCU in one of three ways:

1. During the Quick Launch boot process, if a DOS partition was created, the SCU was copied to the partition on the hard disk drive. This allows you to run the SCU anytime from the DOS partition.

At the MS-DOS prompt change to the SCU directory and type:

```
SCU .BAT
```


2. Creating a bootable SCU diskette by using the Quick Launch CD-ROM and selecting the *Installations & Utilities* button and then the *Utilities* page. On the *Utilities* page, select the appropriate BIOS level for the server that the SCU is being created for (if this is being done on the server, the default BIOS that is highlighted is the BIOS of that server).

Afterwards, you can run the SCU anytime by booting the diskette you created.

3. You can also run the SCU by inserting the Quick Launch CD-ROM disk, rebooting the server, and pressing and holding the right [ALT] key during the boot process to display the SCU.



**NOTE:** If EISA (in some cases, PCI) cards have been added to the server, the SCU will be invoked automatically when you boot from the Quick Launch CD-ROM disc. The .SCI file is not saved when you use this method to run the SCU.

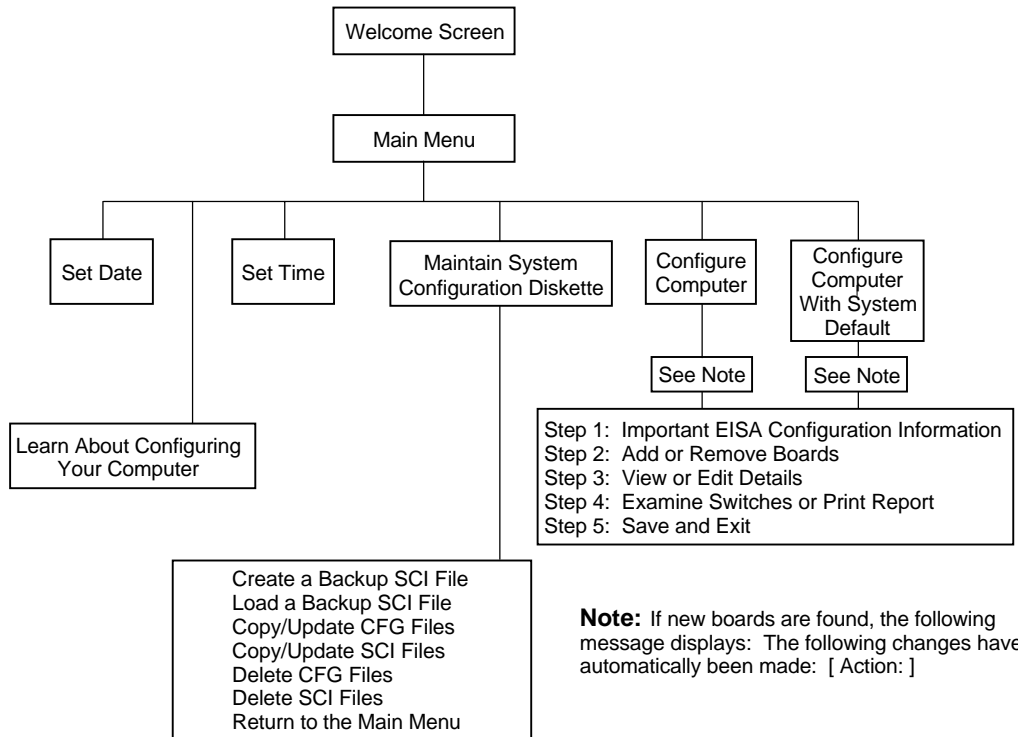

DEC00456

**Figure 2-1. SCU Main Menu Options**

## Using the SCU

To use the SCU:

1. Turn on the server and allow the Power-On Self Test (POST) to complete.  
If POST detects an error, take the appropriate steps to correct the problem.  
After the problem has been resolved, restart the server.
2. Start the SCU using one of the three methods described previously.
3. Press [Enter] to display the SCU introductory screen.



**NOTE:** The SCU contains help pop-up screens for any selected menu item. Press [F1] at anytime to display a help screen. Press [Esc] to remove a help screen.

4. If no configuration errors appear, the Welcome screen displays.  
Press [Enter] to display the Main menu.  
If a configuration error appears, the Welcome screen displays information about the error and tells you to reconfigure the server.
5. Step through the menu items to familiarize yourself with the SCU.

## SCU Keyboard Function Keys

The following table lists the keyboard function keys used to scroll through the menu screens, and select specific menu items in the SCU.

Keyboard Key	Function
[↓]	Moves the cursor down one menu item.
[↑]	Moves the cursor up one menu item.
[→]	Moves the cursor one character to the right.
[←]	Moves the cursor one character to the left.
[Enter]	Displays the available user-selectable settings for the highlighted option or selects the highlighted menu item.
[F6]	View, change, or lock available resources for the highlighted option.
[F10]	Press [F10] to complete a step.
[F1]	Displays the selected menu item's help screen.
[Esc]	Returns the monitor screen to the previously selected menu item.

## Configure Computer

This option provides step-by-step instructions on how to configure the server when adding, removing, or relocating expansion boards and when changing operating parameters.

Select one of the following menu options:

- “Configure Computer with System Default” — Loads the SCU default settings.
- “Configure Computer” — Instructions are displayed. Complete the instructions if you are performing an initial configuration on the server. If this is a subsequent configuration, refer to the appropriate menu item to update the server's configuration.

## Setting the Date and Time

Use these two SCU options to reset the date and time maintained by the server's battery.

To access this menu item:

1. Start the SCU using one of the three methods described in "Starting the SCU."
2. Press [Enter] to display the SCU main menu.
3. Configure the server for the current date and time by selecting the `Set Date` and `Set Time` options.

## Maintain System Configuration Diskette

Select this option to maintain Configuration (CFG) files and System Configuration Information (SCI) files.

To access this menu item:

1. Start the SCU using one of the three methods described in "Starting the SCU."
2. Press [Enter] to display the SCU main menu.
3. Select the `Maintain System Configuration Diskette` option, and then press [Enter].
4. Select a menu item and complete the displayed instructions for that item.

Afterwards, the following menu options are available:

- Create a backup SCI file
- Load a backup SCI file
- Copy/update CFG files
- Copy/update SCI files
- Delete CFG files
- Delete SCI files
- Return to the Main Menu

## RAID Configuration Utility

RAID-ready DIGITAL Servers include a RAID adapter and RAID configuration utility. The RAID configuration utility appears when you boot the server with the ServerWORKS Quick Launch CD-ROM disc. Use this utility to configure your RAID array.



**NOTE:** If you are configuring the server for Ultra SCSI, use the DACCF utility for the Mylex controller to enable Ultra SCSI data transfers.

*Refer to the RAID User's Manual on the Quick Launch CD-ROM. Select the "User Documentation" button.*

## BIOS Upgrade Utility

All servers have BIOS software in a flash (ROM) chip located on the main logic board. This BIOS initializes hardware and boots the operating system when the server is turned on. The BIOS also provides access to other services such as keyboard and disk drives.

You can upgrade the server's BIOS to future releases by executing the BIOS upgrade utility (PHLASH.EXE) located in the BIOS upgrade kit. The "BIOS upgrade" switch (J35-SW1) on the main logic board must be set to ON before you can upgrade the system BIOS.

BIOS upgrades are available on the Internet.

For technical support, use the address:

<http://www.windows.digital.com/support/support.asp>

For access directly to the software library for BIOS and driver upgrades, use the address:

<http://www.windows.digital.com/~ftp/00-index.stm>



**CAUTION:** A crisis recovery diskette should be created before upgrading the server BIOS.

When upgrading the BIOS, you must remove any video expansion boards and enable the onboard VGA. In the rare event that you may need to use the crisis recovery diskette, the server will require that the onboard VGA be used in this mode.

## SCSISelect Utility

The DIGITAL server comes with an Adaptec wide Ultra SCSI adapter and a SCSISelect configuration utility. This utility allows you to change adapter settings without opening the server.

Use SCSISelect to:

- Check factory default settings for each device on the wide Ultra SCSI bus.
- Change SCSI device settings that might conflict with other SCSI devices.
- Perform low-level formatting on new wide Ultra SCSI disk drives.

To start the SCSISelect configuration utility:

Press [Ctrl] + [A] when the Adaptec BIOS banner appears during the boot process and before the end of the device information display.



**NOTE:** If you are configuring the server for Ultra SCSI, use the SCSISelect utility to enable Ultra SCSI data transfers.

## Diagnostics

Diagnostic software is shipped with every DIGITAL Server on the Quick Launch CD-ROM. This software contains an advanced set of diagnostic utilities for identifying and correcting problems with the server. The diagnostic software can be used to verify proper hardware installation and isolate intermittent problems that are not detected by the Power-On Self Test (POST). The diagnostic software includes:

- AMIDiag base diagnostic (processors, memory, and main logic board components tests) from American Megatrends
- DIGITAL vendor extended tests (SCSI, network, storage, and RAID)
- Extensive on-line help and the *AMIDiag User's Guide*

The diagnostic program is a stand-alone MS-DOS package that can be run from diskettes or from the DOS partition on the server's hard disk drive.

To access the supplied diagnostic software:

- During the server installation process, the diagnostic software will be automatically copied to a subdirectory on the DOS partition (only if you selected the option to create a DOS partition). This allows you to run the diagnostic software from the DOS partition you created.
- Using the Quick Launch CD-ROM, you can create bootable diagnostic software diskettes. This allows you to run the diagnostic software using the diskettes you created.



**NOTE:** DIGITAL strongly recommends that you copy the diagnostics to diskettes and then use these diskettes to run the diagnostics on the server.



To run the diagnostics from the DOS partition, perform the following:

1. At the MS-DOS prompt, type:  
`C:\diag\diagnose.bat`
2. After the server boots, choose MS-DOS from the boot selection.
3. Once the diagnostics begin, the main screen appears.

To create the diagnostic diskettes from the Quick Launch CD-ROM, perform the following:

1. Insert the Quick Launch CD-ROM into the drive and boot the server or from a PC or workstation, use Windows File Manager or Explorer and run:

```
<cd-rom>:\QLAUNCH.EXE.
```

2. From the Quick Launch main menu, select *Installations & Utilities*.
3. Select the *Utilities* tab and then select the server model.
4. Insert a blank MS-DOS formatted diskette into drive A and select *Diagnostics*.
5. Select *Continue*. Afterwards, remove the diskette for safekeeping.
6. Choose the next diagnostic diskette from the list and then select *Continue*. Create all the diskettes labeled "Diagnostics."

## Introduction

After entering the SCU, you can edit a variety of resources and configure the server for the most optimized condition. The following tables list the SCU options that are available in the SCU.

## System - DIGITAL Server 7100

Menu Fields	Settings	Comments
System processor type	Not user selectable	Displays the type of the processor that is resident on the main logic board.
System processor clock	Not user selectable	Displays the clock of the processor that is resident on the main logic board.
System base memory	Not user selectable	Displays the amount of base (conventional) memory each time the server boots.
System extended memory	[memory amount], AT-bus space disabled <sup>(1)</sup> [memory amount], AT-bus space enabled at F00000h, 1M [memory amount], AT-bus space enabled at E00000h, 2M [memory amount], AT-bus space enabled at C00000h, 4M	Displays the amount of extended memory each time the server boots. You can select disabling or enabling one of three memory ranges that could be used by expansion boards.
System extended memory mode	Compatibility <sup>(1)</sup> Non-compatibility	Selects the means for supporting extended memory above 64 MB. Select [Compatibility] for using conventional service in BIOS. Select [Non-Compatibility] for memory support above 64 MB when using Windows NT v3.1 or above.
System information	Not user selectable	Displays the version of the server BIOS. Also, the resources occupied by the server BIOS can be viewed via this selection.
System language	Not user selectable	English only.

<sup>(1)</sup> Factory default setting

## System Management Group

Menu Fields	Settings	Comments
System reserved resources	Asset Number	Always shown as installed. Select [Enter] to display the Asset number of the server. The Asset number can be changed by the user.
Main logic board information	Asset Number	Select [Enter] to display main logic board information including Asset number, Serial number, Artwork Revision number, Model number, and System ID. The Asset number is the only item that can be changed by the user.
CPU module 1 information	Asset Number	Select [Enter] to display main logic board information including Asset number, Serial number, Artwork Revision number, Model number, and System ID. The Asset number is the only item that can be changed by the user.
CPU module 2 information	Asset Number	If processor module 2 is installed, select [Enter] to display processor module 2 information including Asset number, Serial number, Artwork Revision number, Model number, and System ID. The Asset number is the only item that can be changed by the user.
Memory module 1 information	Asset Number	If memory module 1 is installed, select [Enter] to display memory module 1 information including Asset number, Serial number, Artwork Revision number, Model number, and System ID. The Asset number is the only item that can be changed by the user.
Memory module 2 information	Asset Number	If memory module 2 is installed, select [Enter] to display memory module 2 information including Asset number, Serial number, Artwork Revision number, Model number, and System ID. The Asset number is the only item that can be changed by the user.

(1) Factory default setting

## Diskette Drive Group

Menu Fields	Settings	Comments
Integrated diskette controller	Enabled <sup>(1)</sup> Disabled	Enables or disables the onboard diskette controller. The onboard diskette controller must be disabled if an external diskette controller performs the interfacing to the diskette drives.
Diskette drive A	Not Installed 5.25" 360 KB drive 5.25" 1.2 MB drive 3.5" 720 KB drive 3.5" 1.44 MB drive <sup>(1)</sup> 3.5" 2.88 MB drive	Sets the size and density of diskette drives.
Diskette drive B	Not Installed <sup>(1)</sup> 5.25" 360 KB drive 5.25" 1.2 MB drive 3.5" 720 KB drive 3.5" 1.44 MB drive 3.5" 2.88 MB drive	Sets the size and density of diskette drives.
Exchange diskette drives	Disabled <sup>(1)</sup> Enabled	Allows you to logically exchange physical diskette drive designation. Enabling this function allows you to boot diskette software that is compatible with physical drive B: instead of physical drive A:.
Diskette write protection	Disabled <sup>(1)</sup> Enabled	Enables or disables the selected diskette drives to be write-protected at the disk drive level. Enabling this option means writing data to a diskette is prohibited. However, you can still read data from the diskette.

<sup>(1)</sup> Factory default setting

## Boot Options Group

Menu Fields	Settings	Comments
Boot option	A: then C: <sup>(1)</sup> C: then A: C: only A: only	Each time the server boots, it will load the operating system from the sequence selected.
POST errors	Enabled <sup>(1)</sup> Disabled	If enabled, the server pauses and displays POST errors. To continue, Press <F1>.
Floppy check	Enabled <sup>(1)</sup> Disabled	Enabling this option forces the server to verify the diskette type during boot.
Summary screen	Enabled <sup>(1)</sup> Disabled	Enables or disables the ability to display the server's configuration during boot.
OCP soft banner	Not installed <sup>(1)</sup> Installed	If installed, you can define a 16 character string that appears on the Operator Control Panel (OCP).

<sup>(1)</sup> Factory default setting

## Integrated Peripherals Group

Menu Fields	Settings	Comments
Video type	VGA or EGA <sup>(1)</sup> CGA 80 columns Monochrome	Sets the video controller type.
Monitor type	Color <sup>(1)</sup> Monochrome	Sets the type of monitor connected to the server: Color or Monochrome.
Mouse port	Disabled Enabled <sup>(1)</sup>	Enables or disables the onboard PS/2 style mouse port.
Parallel port	Disabled	Selects the Enhanced Parallel Port (EPP) mode.
	Compatible mode	Selects the standard printer connection.
	Bi-Directional Mode <sup>(1)</sup>	Selects the PS/2 compatible mode to receive data.
	EPP 1.7 mode EPP 1.9 mode	Selecting EPP 1.7 or EPP 1.9 is based on what EPP version your printer supports. If you are not sure what version your printer supports, use the default setting.
Serial port 1	ECP mode	Sets the Extended Capabilities Port (ECP) mode.
	Disabled	Enables or disables onboard serial port 1 at the specified address and IRQ.
	Enable at: 3F8h-3FFh (IRQ4) <sup>(1)</sup>	
	Enable at: 2F8h-2FFh (IRQ3)	
Enable at: 3E8h-3Efh (IRQ4) Enable at: 2E8h-2Efh (IRQ3)		
Serial port 2	Disabled	Enables or disables onboard serial port 2 at the specified address and IRQ.
	Enable at: 3F8h-3FFh (IRQ4)	
	Enable at: 2F8h-2FFh (IRQ3) <sup>(1)</sup>	
	Enable at: 3E8h-3Efh (IRQ4) Enable at: 2E8h-2Efh (IRQ3)	

<sup>(1)</sup> Factory default setting

## Keyboard Features Group

Menu Fields	Settings	Comments
NumLock	Auto <sup>(1)</sup> Off On	Selects the power on state for Numlock. If Auto is selected, the server turns on Numlock if it detects a numeric keypad.
Key Click	Disabled <sup>(1)</sup> Enabled	Enables or disables the audible key click feature.
Keyboard auto-repeat rate	30/sec <sup>(1)</sup> 26.7/sec 21.8/sec 18.5/sec 13.3/sec 10/sec 6/sec 2/sec	Sets the number of times a second to repeat a keystroke while you hold the key down.
Keyboard auto-repeat delay	1/4 sec 1/2 sec <sup>(1)</sup> 3/4 sec 1 sec	Sets the delay time after a key is held down before it begins to repeat a keystroke.

<sup>(1)</sup> Factory default setting



## Shadow Options Group

Menu Fields	Settings	Comments
Shadow video BIOS ROM	Enabled <sup>(1)</sup> Disabled	The main logic board reserves an area of DRAM for a copy of video BIOS ROM. This DRAM called “shadow memory” is write-protected and has the same addresses as the video BIOS ROM locations. When you shadow video BIOS ROM, the ROM image is copied into an appropriate area in DRAM. This increases the server’s performance because the video BIOS instructions are in fast DRAM instead of low speed ROM. For PCI VGA devices, video BIOS is always shadowed in C0000h-C7FFFh, regardless of this field’s setting.
Shadow C8000h-CBFFFh	Disabled <sup>(1)</sup> Enabled	Allows you to disable or enable the shadowing request for optional ROM at the corresponding addresses.
Shadow CC00h-CFFFh	Disabled <sup>(1)</sup> Enabled	Allows you to disable or enable the shadowing request for optional ROM at the corresponding addresses.
Shadow D0000h-D3FFFh	Disabled <sup>(1)</sup> Enabled	Allows you to disable or enable the shadowing request for optional ROM at the corresponding addresses.
Shadow D4000h-D7FFFh	Disabled <sup>(1)</sup> Enabled	Allows you to disable or enable the shadowing request for optional ROM at the corresponding addresses.
Shadow D8000h-DBFFFh	Disabled <sup>(1)</sup> Enabled	Allows you to disable or enable the shadowing request for optional ROM at the corresponding addresses.
Shadow DC000h-DFFFh	Disabled <sup>(1)</sup> Enabled	Allows you to disable or enable the shadowing request for optional ROM at the corresponding addresses.

<sup>(1)</sup> Factory default setting

## Security Options Group

Menu Fields	Settings	Comments
Supervisor password	Not installed <sup>(1)</sup> Installed	Allows you to set a supervisor password.  If set, you will be prompted to enter a password prior to accessing the SCU.
User password	Not installed <sup>(1)</sup> Installed	Can only be set in the condition that the Supervisor password is set. This password functions with "Password on Boot" or "Quick Lock Hot-Key."
Password on boot	Enabled Disabled <sup>(1)</sup>	Enables or disables password entry on boot. If enabled, the server will prompt you to enter the password, either the User password or the Supervisor password.
Quick lock hot-key	Disabled <sup>(1)</sup> Alt-Ctrl-F1 through Alt-Ctrl-F12	Enables or disables the Quick Lock function. When enabled, you can lock both the keyboard and PS2 mouse by pressing the defined hot key, Alt-Ctrl-[key].  During the lock state, if a user password is entered, the keyboard and PS2 mouse will function again.
Diskette access	Supervisor User <sup>(1)</sup>	If set to supervisor, the diskette can only be accessed if the server is booted via a supervisor password. Otherwise, the diskette is free to be accessed.
Network server	Disabled <sup>(1)</sup> Enabled	When enabled, the server does not require a keyboard to function and therefore, keyboard error messages which might occur during POST will be ignored.
System backup reminder	Disabled <sup>(1)</sup> Daily Weekly Monthly	Allows you to display a backup reminder message at boot (daily, every Monday, or the 1 <sup>st</sup> of every month).
Virus check reminder	Disabled <sup>(1)</sup> Daily Weekly Monthly	Allows you to display a virus check reminder message at boot (daily, every Monday, or the 1 <sup>st</sup> of every month).

<sup>(1)</sup> Factory default setting

## Cache Options Group

Menu Fields	Settings	Comments
Internal cache	Enabled <sup>(1)</sup> Disabled	Enables or disables the server's processor internal cache operation.
External cache	Disabled Write through Write back <sup>(1)</sup>	Allows you to select the external cache operation type.
Cache system BIOS ROM	Enabled <sup>(1)</sup> Disabled	Enables or disables caching request for server BIOS ROM (F0000h to FFFFFh).
Cache video ROM	Enabled <sup>(1)</sup> Disabled	Enables or disables the server to cache the video BIOS in the C000 to C7FFh segment.

<sup>(1)</sup> Factory default setting

## Advanced Control Group

Menu Fields	Settings	Comments
CPU to PCI Write Posting	Disabled Enabled <sup>(1)</sup>	When enabled, allows processor writes to the PCI to be posted in the compatibility OPB chipset.
OPBC PCI to CPU Write Posting	Disabled Enabled <sup>(1)</sup>	When enabled, allows PCI writes to the processor to be posted in the compatibility OPB chipset.
OPBC CPU Line Read Pre-Fetch	Disabled Enabled <sup>(1)</sup>	When enabled, allows the compatibility OPB chipset's PCI memory read line commands to pre-fetch additional processor cache lines.
2nd OPB CPU to PCI Write Posting	Disabled Enabled <sup>(1)</sup>	When enabled, allows processor writes to the PCI to be posted in the 2nd OPB chipset.
2nd OPB PCI to CPU Write Posting	Disabled Enabled <sup>(1)</sup>	When enabled, allows PCI writes to the processor to be posted in the 2nd OPB chipset.

<sup>(1)</sup> Factory default setting

*continued*

Menu Fields	Settings	Comments
2nd OPB CPU Line Read Pre- Fetch	Disabled Enabled <sup>(1)</sup>	When enabled, allows the 2nd OPB's PCI memory read line commands to pre-fetch additional processor cache lines.
CPU in order queue depth	8 <sup>(1)</sup> 1	Allows you to select the depth of the processor in-order-queue.
APIC & MP table	Disabled MPS 1.1 MPS 1.4 <sup>(1)</sup>	Applicable to single processor configurations only, always enabled for Multi-Processing (MP) operating system configurations. When set to MPS 1.1 or MPS 1.4, the processor's Advanced Programmable Interrupt Controller (APIC) is enabled, and the MP table used by MP operating systems will be created.  <b>Note:</b> This parameter must be disabled for NetWare 3.12 single processor systems.
ECC interrupt	Disabled <sup>(1)</sup> IRQ14, Shared IRQ14, Non-Shared IRQ15, Shared IRQ15, Non-Shared	Enables the Error Correction Code (ECC) interrupt. If enabled, you can select IRQ14 or IRQ15 as the ECC interrupt. You can also define the IRQ as shared with other devices, such as EISA or PCI devices.
GAT mode	Enabled <sup>(1)</sup> Disabled	Should be enabled only when an ISA bus mastering card is installed in the server. Disable it for all other configurations.
System arbitration	CPU Bus first <sup>(1)</sup> EISA Bus first Full Rotation	This option controls the operating modes of the server's PCI arbiter. The arbiter controls the arbitration priorities for EISA, PCI, and processor buses.

<sup>(1)</sup> Factory default setting

## EISA or PCI Devices Group

Menu Fields	Settings	Comments
EISA [slot#] - [device]		You can edit resources provided by the expansion board's vendor. Please refer to the menu displayed on this item.
PCI [slot#] - [device] PCI function 1	Enabled Disabled	Whenever PCI devices are installed in the PCI slots, the device is automatically added. You can enable or disable this device. If enabled, you can set the related resources based on the menu the SCU displays.
Embedded - [device] PCI function 1	Enabled Disabled	Three kinds of PCI devices can be identified as Embedded devices. The first are onboard PCI devices. The second are the PCI devices beyond 10 PCI devices that have been identified and shown as the normal PCI devices. The third are the PCI devices that share the same IRQ with the PCI devices displayed as the normal PCI devices. When enabled, all the resources shown on the menu can be changed.
Embedded - PCI VGA controller PCI function 1	Enabled Disabled	Onboard PCI VGA device.
Standard VGA resources	Enabled Disabled	Enables or disables the compatible VGA resources.

# Troubleshooting **4**

---

## Introduction

This chapter provides troubleshooting information. The sections that follow describe specific problems, probable causes, and recommended actions to pursue if the server fails. Information includes:

- Initial Troubleshooting
- Diagnostics
- Obtain Server Information Using the SCU and Server Management Software
- Status, POST, and OCP Messages
- Processor Voltage and Temperature Ranges
- Advanced Troubleshooting

## Initial Troubleshooting

Follow these general procedures to troubleshoot the DIGITAL server.

- Record all configuration information and have it readily available.
- Turn off the server, wait until all hard disk drives completely spin down, and then turn it back on.
- Ensure that all cables and connections are secure.
- Make sure all necessary video, printer, and application device drivers are properly installed.
- Try not to troubleshoot more than one problem at a time.
- Try to duplicate the problem.
- Run the diagnostic software.
- Run the SCU.
- Run the SCSI or RAID configuration utility if you have problems after connecting devices.

## Diagnostics

The diagnostic software is a versatile tool that can be used to verify proper hardware installation and isolate intermittent problems that are not detected by the Power-On Self Test (POST). You should run the diagnostic software in the following situations:

- The server fails to boot or load the operating system software.
- The server fails to boot or load the operating system software after you add additional hardware such as more memory, additional processors, additional SCSI devices, or expansion boards.
- The operating system hangs repeatedly and no changes have been recently added to the software such as service packs or a new application.
- You suspect a server hardware failure.
- You want to validate server operation.
- An intermittent hardware problem exists.



## Running the Diagnostics

To run the AMIDiag base package (Emergency Mode diskette) from a diskette, follow this procedure:

1. Insert the diskette labeled "For Emergency Use" in drive A and then boot the server.
2. Use the arrow keys to highlight the desired test.
3. Press [Enter].

*For additional troubleshooting information refer to the AMIDiag User's Guide, located on the Quick Launch CD-ROM.*

## Running Quick Tests or Groups of Tests

Function keys can be used to select and run groups of tests. A list of function keys is available by pressing the F9 key. The following list includes examples of how to run Quick Tests or Groups of Tests.

- To run Quick Test, press F8 to select tests, then F10 to run all the selected tests.
- To run all Memory tests, press F6 to select tests listed on the menu, then press F10 to run all the selected tests.
- To run all tests from all menus, press F7 to select all tests, then press F10 to run all the selected tests.

## Running DIGITAL Vendor Extended Tests

To run DIGITAL Vendor Extended Tests from a diskette:

1. Insert the DIGITAL Vendor Extended Tests diskette for the selected device and then boot the server or type

```
A: \DMENU.
```

2. Select the desired test.

Each diskette has a README.TXT file with a list of devices that can be tested and additional information about each diagnostic.

## Running Diagnostics Tests from the Hard Disk Drive

To run diagnostic tests from the server's hard disk drive, perform the following:

1. Boot the system and select MS-DOS from the boot menu.
2. At the C:\> prompt, type:

```
\DIAG\DIAGNOSE.BAT
```

This will setup the CONFIG.SYS and AUTOEXEC.BAT files to run the diagnostics and then reboot the server. Select MS-DOS again and the AMIDIag program will load. Note that the original CONFIG.SYS and AUTOEXEC.BAT are restored before the diagnostics load.

3. Select the test or group of tests using the arrow keys and function keys previously defined. DIGITAL Vendor Extended Tests can also be run from the *User* menu.

## Obtaining Information about the Server

The DIGITAL Server provides the following system information for the main logic board and the processor module configured on the server:

- Asset number — User definable field for tracking these components
- Part number — DIGITAL part number
- Revision number — Board assembly revision number
- Serial number — Serial number of the board assembly
- Artwork number — Revision of the printed circuit board


The System ID is also located on the main logic board and processor module. The System ID contains the following information:

- Model number — Server model number
- Serial number — Server serial number
- System asset number — User definable field for tracking the system

The main logic board and processor module each contain memory where specific information and System ID information is stored. The main logic board also stores the server's System Asset number (see Figure 4-1).

Information is available for the server's main logic board and processor module (such as part numbers, revisions, serial numbers, etc.). You can also assign Asset numbers to these components. In addition, the software can detect when you change the server configuration by adding or removing either component.

You can obtain information about the server's configuration by running the SCU or by using ServerWORKS management software.

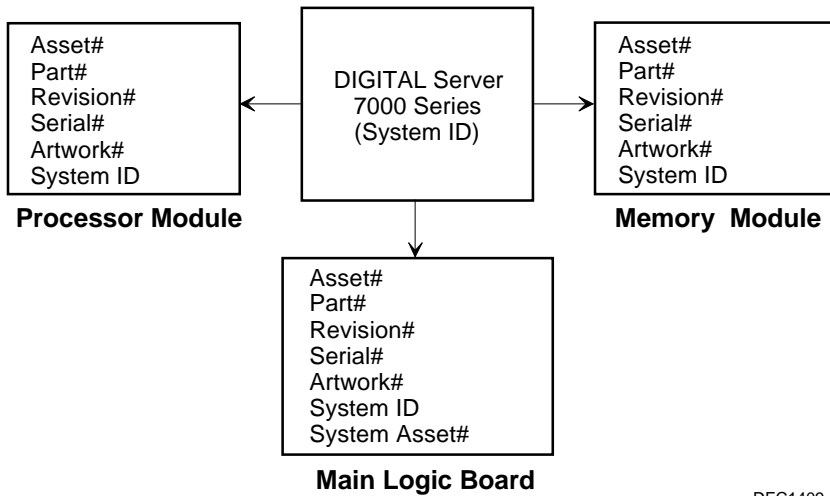

DEC1409

**Figure 4-1. DIGITAL Server Component Information**

## Obtaining Information Using the SCU

You can use the SCU to check the Serial number, Revision number, and Asset number for the main logic board and Pentium Pro processor configured in the server. For example, if you change the main logic board or processor module in the server, you must run the SCU to re-synchronize the System ID (server model number and serial number) in the main logic board or processor module's memory. The SCU will check the new main logic board or processor module and detect the System ID mismatch.

You can view the details for the main logic board or processor module simply by selecting either the main logic board or processor module. Once selected, the Serial number, Revision number, and Asset number display. The SCU then lists the server model number and server serial number information stored on the main logic board or processor module. You can then confirm the correct model number and serial number. This data is available on the label located on the server back panel.

## Obtaining Information Using Server Management Software

The DIGITAL server is shipped with the DIGITAL ServerWORKS Manager software. ServerWORKS Manager is a workgroup and server management product for DIGITAL's family of servers. ServerWORKS Manager uses the Simple Network Management Protocol (SNMP) environment to assist the Network or Server administrator by constantly monitoring the network for problems.

DIGITAL ServerWORKS Manager is based on an open architecture that enables seamless integration and interoperability with popular enterprise management software packages such as Computer Associates' POLYCENTER Manager/NetView, Hewlett-Packard's OpenView UX for Windows, and IBM's Netview/6000 AIX. Also included with ServerWORKS Manager are Network Operating System (NOS) Agents for Windows NT V3.51 and V4.0, Novell NetWare V3.12 and V4.x, and SCO UNIX V5.0. The OS/2 NOS includes its own agent and can also be managed from ServerWORKS Manager.

DIGITAL ServerWORKS Manager allows the Network or Server Administrator to perform the following functions on the server:

- Manage DIGITAL PC print, file, and application servers supported by DIGITAL servers using a Windows-based graphical user interface (GUI) for point and click simplicity.
- Display server component information that provides critical information such as processor and file system utilization and information about the network interface.
- Automatically build a database of the network by Autodiscovering all SNMP network resources and display the nodes discovered during Autodiscovery on a color-coded topological map.
- Poll all network devices at intervals defined by the administrator.
- Perform an in-depth network analysis to continuously monitor the status of the network.
- Set alarms and alerts for specified events on all network devices, as well as the network itself, to spot problems early and avoid costly downtime.

*Refer to the DIGITAL ServerWORKS Manager Overview and Installation Guide for more information on how to use ServerWORKS Manager to view and be notified of events on the server.*

You can also manage the DIGITAL Server with other SNMP-based managers.

*Refer to the DIGITAL ServerWORKS Manager Overview and Installation Guide for more information.*

## Displaying Server Status Using the Hardware

There are two types of information displayed when the DIGITAL Server is operating:

- Normal status messages
- Error messages

During normal operation, Power On Self Test (POST) and boot messages are displayed on the monitor. Some POST messages are also displayed on the OCP panel. When an error occurs, an error message is displayed on both the monitor and OCP panel and a beep is sounded from the server's speaker.

Messages displayed on the OCP panel can also be seen by using the DIGITAL ServerWORKS Manager.

## Server Status Messages

Component	Possible Failures	Result
Main logic board voltages: +12, +5, +3.3, and -12V	The voltages are outside of the power good range.	An error message displays and a warning beep sounds.
	The voltage exceeds the upper limit.	The server will shutdown after 5 minutes.
	The voltage falls below the lower limit.	A warning message displays and a warning beep sounds.
Fans 1, 2, 3, 4	The primary fans (fans 1 and 3) fail.	The redundant fans will activate.
	The primary fans (fans 1 and 3) and redundant fans (fans 2 and 4) do not operate.	The server will shutdown after 10 minutes.
Processor module voltages	The voltages are outside of the power good range.	A message displays and a warning beep sounds.
	The voltage exceeds the upper limit.	A warning message displays and a warning beep sounds.
	The voltage falls below the lower limit.	A warning message displays and a warning beep sounds.
Processor failure	A processor failure:  Internal	An error message displays and a warning beep sounds.
	Over temperature	Usually caused by a fan failure and the result is that the server shuts down.
Processors present	The incorrect number of processors are present in the server.	A message displays indicating the number of processors are present in the server.

*continued*

Component	Possible Failures	Result
Processor temperature sensing	The temperature exceeds 82 °C (179.6 °F).	The backup fans will activate without any warning.  If the temperature drops below 80 °C (176 °F), the backup fans will be turned off.
	The temperature exceeds the warning level >85 °C (>185 °F).	A warning message displays and a warning beep sounds. If the temperature exceeds the warning level for more than five minutes, the server will shut down.
	The temperature exceeded the upper limit >90 °C (>194 °F).	The server will shut down.
Power supplies present	The incorrect number of power supplies are present with good status in the server.	A message displays indicating the number of power supplies present in the server.
Power supply failure	The temperature exceeds the upper limit or the voltages are out of range.	Power supply shuts down, an error message displays, and a beep sounds.



## POST OCP Messages

The following table lists the messages, both normal and error, that will display on the server's OCP panel during POST and any beeps that might sound when an error occurs.



**NOTE:** To disable the speaker, press the appropriate button located below the OCP once after a beep sounds. To enable it, repress the button once.

## POST Codes

POST Code Descriptions	Count Down Code <sup>(1)</sup>	Normal OCP Display	OCP Error Display	Beep Codes
BIOS ROM checksum				1-2-2-3
Test DRAM refresh				1-3-1-1
Test 8742 keyboard controller				1-3-1-3
RAM failure on address line xxxx				1-3-4-1
RAM failure on data bits xxxx of low byte of memory bus				1-3-4-3
RAM failure on data bits xxxx of high byte of memory bus				1-4-1-1
Check ROM copyright notice				2-1-2-3
Unexpected interrupts test	230	Unexpected int		2-2-3-1

<sup>(1)</sup> Count down codes are displayed on the server's monitor.

*continued*

<b>POST Code Descriptions</b>	<b>Count Down Code<sup>(1)</sup></b>	<b>Normal OCP Display</b>	<b>OCP Error Display</b>	<b>Beep Codes</b>
Shadow ROMs	220	Shadow ROMs test		
Test DRAM refresh 512K and 640K	210	512-640K DRAM		
Extended memory test	200	Ext. mem test	Memory test fail	
Set cache registers	190	Set cache regs.		
Cache configuration	180	Cache config.	Cache fail	
Real-time clock test	170	Real time clock	RTC fail RTC dead battery CMOS chksum bad	
Keyboard test	160	Keyboard test	KBC-8042 fail Keyboard fail	
Initial hardware interrupt	150	Init HW int		
Co-processor test	140	Co-processor test		
Serial ports test	130	Ser. Ports test		
Parallel ports test	120	Par. ports test		
Initiate onboard SIO	110	Init super I/O		
Mouse test	100	Mouse test		
Testing diskette drives	90	Floppy disk test	FDD A or B error	
Testing hard disk drives	80	Hard disk test		
CPU search	50	Search other CPU		
Search for option ROMs		Scan option ROM	OPROM chksum bad	1-2
Enable IRQs	20	Enable IRQs		
Setting time of day	10	Set time of day		
One short beep before boot				1

<sup>(1)</sup> Count down codes are displayed on the server's monitor.

## Boot Codes

<b>Boot Code Descriptions</b>	<b>Normal OCP Display</b>	<b>OCP Error Display</b>	<b>Beep Codes</b>
Do a complete RAM test			3-3-3-3-3
Boot the flash program			1
Boot code was read OK			3-1-1

## OCP Messages

During certain failure conditions, including out-of-range conditions, an error message will display on the OCP panel and a corresponding error code will sound from the server's speaker.



**NOTE:** To disable the speaker, press the appropriate button located below the OCP once after a beep sounds. To enable it, repress the button once.

Hot keys are defined in BIOS as [CTRL] + [ALT] +[1] and enable toggling of the OCP display status messages just as though the OCP button were pressed.



**NOTE:** Hot keys do not work during POST or during host server request service from the OCP.

If you do not press keys or buttons for some time, the LCD backlight will be disabled until you press a key. The time is set by the host server.

You can examine the server status messages by pressing the OCP switch located on the front panel repeatedly to sequence through the status list. The OCP switch is disabled during POST, during host request service from the 8031, or if an error is detected. The following table lists and describes the status messages and the error messages that display on the server's OCP panel. Also included are possible actions to take if a problem persists.

## OCP Status and Error Messages

Status	Normal OCP Display	OCP Error Display	Description of Error Display/Action
CPU ambient temperature	CPU1 temp=xxx°C CPU2 temp=xxx°C CPU3 temp=xxx°C CPU4 temp=xxx°C	CPU1 over heat CPU2 over heat CPU3 over heat CPU4 over heat	Temperature of processor 1 is out of range. Temperature of processor 2 is out of range. Temperature of processor 3 is out of range. Temperature of processor 4 is out of range.  Action: Verify fans are operational.  Action: Check that heat sink is correctly attached to the processor chip.
Power supply status	P/S1 OK P/S2 OK	P/S1 fail P/S2 fail	Power supply 1 is not working. Power supply 2 is not working.  Action: Check that power supply cables and connectors are connected correctly.
Fan status	Sys fans OK	Sys fan 1 fail Sys fan 2 fail Sys fan 3 fail Sys fan 4 fail	Fan 1 is not working. Fan 2 is not working. Fan 3 is not working. Fan 4 is not working.  Action: Check that fan connectors are connected correctly.
CPU status	6000MPn n = CPU number	CPU1 fail  CPU2 fail  CPU3 fail  CPU4 fail  No CPU exists	Internal defect of processor 1 or internal temperature exceeds the upper limit.  Internal defect of processor 2 or internal temperature exceeds the upper limit.  Internal defect of processor 3 or internal temperature exceeds the upper limit.  Internal defect of processor 4 or internal temperature exceeds the upper limit.  No processors are present in the server.  Action: Reboot server and check if the failed processor is still malfunctioning during POST.

*continued*

## Troubleshooting

Status	Normal OCP Display	OCP Error Display	Description of Error Display/Action
System voltages	Sys voltages OK	Sys +12V = xxxV Sys +5V = xxxV Sys 3.4V = xxxV Sys -12V = -xxxV	+12V is out of tolerance. + 5V is out of tolerance. +3.4V is out of tolerance. -12V is out of tolerance.  Action: Check that power supply cables and connectors are connected correctly.
CPU voltages	CPU voltages OK	VRM1 y.yyV=x.xxV  VRM2 y.yyV=x.xxV  VRM3 y.yyV=x.xxV  VRM4 y.yyV=x.xxV	Voltage Regulator Module (VRM) 1 should be y.yy volts and is being measured at x.xx volts.  VRM 2 should be y.yy volts and is being measured at x.xx volts.  VRM 3 should be y.yy volts and is being measured at x.xx volts.  VRM 4 should be y.yy volts and is being measured at x.xx volts.  Action: Diagnose whether the VRM or the processor module is bad.
Memory size information	xxxxxMB		
System BIOS revision	BIOS Vx.yy		x = main version yy = sub-version
8031 BIOS revision	8031 Vx.yy		x = main version yy = sub-version

## Server Processor Voltage and Temperature Ranges

The following tables list the processor and Voltage Regulator Module (VRM) operating voltage and temperature ranges.

### Processor Voltage Range

Nominal	Nominal Tolerance	Normal Voltage Range	Server Error Occurs	Server Shutdown Occurs
+12	-4 to + 5	+11.1 to +13.0 V	<+9.0 V	>+13.8 V
+5	-2 to + 5	+4.80 to +5.35 V	<+4.3 V	>+5.80 V
+3.43	-1 to + 1	+3.32 to +3.54 V	<+3.0 V	>+3.80 V
-12	-10 to + 10	-13.7 to -10.3 V	>-9.0 V	<-14.2 V
VGTL	-10 to + 10	+1.32 to +1.68 V	<+1.10 V	>+1.80 V

## VRM Voltage Range

VRM Voltage	Power Good Range	Lower Limit	Upper Limit
2.1 V	+1.95 to 2.25 V	<+1.89 V	>+2.31 V
2.2 V	+2.04 to 2.35 V	<+1.98 V	>+2.42 V
2.3 V	+2.14 to 2.46 V	<+2.07 V	>+2.53 V
2.4 V	+2.23 to 2.46 V	<+2.16 V	>+2.64 V
2.5 V	+2.32 to 2.68 V	<+2.25 V	>+2.75 V
2.6 V	+2.42 to 2.78 V	<+2.34 V	>+2.86 V
2.7 V	+2.51 to 2.89 V	<+2.43 V	>+2.97 V
2.8 V	+2.60 to 3.00 V	<+2.52 V	>+3.08 V
2.9 V	+2.70 to 3.10 V	<+2.61 V	>+3.19 V
3.0 V	+2.79 to 3.21 V	<+2.70 V	>+3.30 V
3.1 V	+2.88 to 3.32 V	<+2.79 V	>+3.41 V
3.2 V	+2.97 to 3.42 V	<+2.88 V	>+3.52 V
3.3 V	+3.07 to 3.53 V	<+2.97 V	>+3.63 V
3.4 V	+3.16 to 3.64 V	<+3.06 V	>+3.74 V
3.5 V	+3.25 to 3.75 V	<+3.15 V	>+3.84 V

## Processor Temperature Warning Levels

Warning Level	Upper Limit	Backup Fan Activated
>85 °C	>90 °C	>82 °C

## Advanced Troubleshooting

DIGITAL has a Customer Replaceable Unit (CRU) process during the warranty period for:

- DIGITAL monitors with screens less than 20 inches
- Mice
- Keyboards
- Speakers
- Other parts as defined by Digital as CRUs

The DIGITAL CRU process provides for overnight shipment of the part directly to the customer site. Customers are billed for the specified part if they fail to return the part to DIGITAL within ten days of the replacement unit shipment.

In the following troubleshooting tables, “CRU Process” means that when a process is determined to be broken, use the previously-described CRU process.



**NOTE:** The following troubleshooting suggestions are not in any specific order. They are merely a list of possible problems and solutions.



## Server Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
No response when the server is turned on.	Server is not plugged in.	Turn off the server, plug it in, and then turn it back on again.
	No power at the wall outlet.	Use another wall outlet.
	Main logic board failed.	Replace the main logic board.
	Main logic board switches incorrectly set.	Set all appropriate switches.
	Processor module has failed.	Replace the processor module.
	Processor module switches incorrectly set.	Make sure all switches are correctly set.
	Terminator card not seated properly (1P and 2P configurations only).	Reseat terminator card.
	Terminator card not installed.	Install terminator card.
	Side panels removed.	Replace side panels.
Power supply failed.	Replace the power supply.	

*continued*

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Power is on, but there is no screen display.	Brightness and contrast controls are not correctly set.	Adjust the brightness and contrast controls.
	Monitor is off.	Turn on the monitor.
	Monitor cable is incorrectly installed.	Check all monitor connections.
	Incorrect video drivers installed.	Install the correct video drivers.
	Video controller has failed.	Replace the main logic board.
	Monitor has failed.	Replace monitor.
Server does not boot from CD-ROM drive.	CD-ROM drive is not connected to the Adaptec controller.	Connect the CD-ROM to the Adaptec controller.
	CD-ROM drive not configured as a bootable device.	Change the CD-ROM setting to "bootable" using <i>SCSISelect</i> .
	CD-ROM disc is not bootable.	Install the latest BIOS.
Server operates incorrectly after installing a processor module.	Processor module installed incorrectly.	Reinstall processor module.
	SCU indicates an error after installing a processor module.	Remove processor module and reboot. If server boots without errors, replace processor module.

*continued*

## Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Server operates incorrectly after installing optional expansion board.	Expansion board installed incorrectly.	Remove expansion board and reinstall.
	Did not run SCU to configure expansion board after installation.	Run the SCU to properly configure expansion board.
	Did not install CFG file for expansion board.	Run SCU and add CFG file (if necessary).
	Expansion board has failed.	Remove expansion board and reboot. If server boots without errors, replace expansion board.
Server operates incorrectly after installing optional memory (DIMMs).	Memory configured incorrectly.	Reboot the server and check for any boot message to identify faulty DIMM(s).  Check that the memory configuration is according to the memory guidelines explained Chapter 5.
	DIMMs installed incorrectly.	Remove DIMMs and reinstall.
	DIMMs have failed.	Replace DIMMs.
	Memory module installed incorrectly.	Reinstall memory module.
	Memory module failed.	Replace memory module.

*continued*

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
No response to keyboard commands.	Keyboard might be password protected by a local or remote control program.	Enter the keyboard password.
	Keyboard is not connected.	Power down the server and connect the keyboard.
	Keyboard is connected to the mouse port.	Power down the server and connect the keyboard to the keyboard port.
No response to mouse commands.	Keyboard failed.	Replace the keyboard.
	Mouse might be password protected by a local or remote control program.	Enter the keyboard and mouse password.
	Mouse is not connected.	Power down the server and connect the mouse.
	Mouse is connected to the keyboard port.	Power down the server and connect the mouse to the mouse port.
	Mouse driver not installed.	Install the appropriate mouse driver.
	Mouse trackball dirty.	Clean trackball.
	Mouse failed.	Replace the mouse.
Server operates correctly but application software does not.	Application software installed incorrectly.	Refer to the application software documentation.
	Having external cache enabled causes conflict with application software.	Run the SCU and disable external cache.

## Disk Drive Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Server does not recognize an internal SCSI device.	SCSI device jumpers incorrectly set.	Refer to the supplied kit installation instructions.
	SCSI ID conflicts.	Refer to the supplied kit installation instructions and to the storage backplane jumper configuration.
	Terminating resistors not removed from the SCSI device.	Remove terminating resistors. Refer to the supplied kit installation instructions.
	SCSI adapter has failed.	Replace the SCSI adapter.
	Loose SCSI cable.	Secure all cable connections.
	SCSI cables incorrectly installed between SCSI host adapter, wide Ultra SCSI bus repeater module, SCSI device or backplane.	Check all cabling.
	SCSI device has failed.	Replace SCSI device.

*continued*

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Server does not recognize an external SCSI device.	SCSI device jumpers incorrectly set.	Refer to the supplied kit installation instructions.
	SCSI ID conflicts.	Refer to the supplied kit installation instructions and to the storage backplane jumper configuration.
	Terminating resistors not removed from the SCSI device.	Remove terminating resistors. Refer to the supplied kit installation instructions.
	SCSI adapter has failed.	Replace the SCSI adapter.
	Loose SCSI cable.	Secure all cable connections.
	SCSI device has failed.	Replace SCSI device.

*continued*

## Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Server does not boot from an internal SCSI hard disk drive.	Boot device not attached to the SCSI adapter at the lowest ROM address.	Run the SCU to define the server boot device.
	PCI/EISA scanning order incorrect.	Refer to the bus scanning examples in the <i>System Reference</i> manual.
	Bootable CD-ROM drive not connected to the primary SCSI adapter.	Connect the CD-ROM to the SCSI adapter.
	SCSI boot hard disk drive not formatted.	Format the SCSI hard disk drive.  <b>CAUTION:</b> Formatting the SCSI hard disk drive will destroy all the data on the drive.
	SCSI device drivers not installed or incorrectly installed on SCSI boot hard disk drive.	Properly install all required SCSI device drivers.
	Operating system software is not installed on the SCSI boot hard disk drive.	Install the appropriate operating system.
SCSI hard disk drive cannot read or write information.	Requested partition does not exist.	Partition the SCSI hard disk drive and then reload the operating software.
	SCSI boot hard disk drive at wrong SCSI address.	Set SCSI boot hard disk drive to lowest "primary" SCSI address.
	SCSI device has failed.	Replace SCSI device.
	Incorrect disk drive jumper settings.	Refer to the supplied kit installation instructions.
SBB failure.	Loose or incorrectly installed cables.	Make sure all cables are correctly installed.
	SCSI hard disk drive is not correctly formatted or partitioned.	Format and partition as required using the supplied operating system.
	Check SBB status LEDs for a drive failure indication.	Replace the SBB.

## SBB Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
SBB fault LED lit.	Disk drive failed.	Replace disk drive.
SBB activity and fault LEDs lit.	Disk drive hung or has failed.	Replace disk drive.
SBB fault LED flashing.	Disk drive failed and is spinning down.	Replace disk drive.

## Tape Drive Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Tape will not load.	Tape inserted incorrectly.	Insert the tape with the arrow on the cassette pointing towards the drive.
Cannot write data to a tape.	Tape write-protected.	Slide the write-protect tab on the cassette to the closed position.
Tape will not eject.	Tape jammed in drive.	<p>Using a small screwdriver, rotate the motor shaft clockwise to bring threading mechanism to the initial loading position.</p> <p>If necessary, press the ratchet mechanism to tighten the tape before ejecting.</p> <p>Continue to turn the motor shaft clockwise until the tape can be lifted out of the drive mechanism and ejected from the drive.</p>



## Monitor Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Monitor power indicator is not on.	Monitor is turned off.	Turn on the monitor.
	Power cord is not connected.	Connect the power cord to the server.
	No power at wall outlet.	Use another outlet.
	Power indicator is defective.	Replace the monitor.
No screen display.	Configuration error.	Run the SCU to configure the server for video operation.
	Monitor brightness and contrast controls are incorrectly set.	Adjust the monitor brightness and contrast controls.
	Monitor has failed.	Replace monitor.
Distorted, rolling, or flickering screen display, or wrong/uneven color.	Monitor incorrectly adjusted.	Adjust accordingly.
	Monitor signal cable incorrectly installed.	Straighten any bent connector pins and then reconnect.
Color monitor displaying monochrome.	Server was turned on before the monitor was turned on.	Turn off the server, turn on the monitor, then turn the server back on.
Monitor fails to switch to high-resolution mode.	Appropriate high-resolution video drivers are not installed or incorrectly installed.	Correctly install all appropriate high-resolution video drivers. Refer to the documentation supplied with the monitor.

## CD-ROM Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Cannot access the CD-ROM drive. Error message reading drive x.	Device drivers not installed.	Install correct device drivers.
	No disc in the CD-ROM drive.	Insert a disc.
	Incorrect SCSI ID assigned.	Make sure correct SCSI ID is assigned.
Power is on but indicator shows no activity.	Tray open.	Close the tray.
	No disc or tray is open.	Insert a disc and close the tray.
Disc is spinning but drive is idle.	Check cable connections.	Make sure cables are correctly connected.
	Application software not running.	Run application software.

## Diskette Drive Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
Target diskette drive cannot read or write information.	Diskette is not formatted.	Format the diskette.
	Diskette is worn or damaged.	Try another diskette.
	Diskette is write-protected.	Slide the write-protect switch so the hole is not visible.
	Diskette drive is empty.	Insert a diskette.
	Diskette write protection enabled.	Run the SCU and set the Diskette Write Protection option to "Disabled."
	Disabled in SCU.	Run the SCU and enable the diskette drive.
Server does not boot from a target diskette drive.	Drive ID incorrectly set.	Make sure the drive ID is correctly set. Refer to the documentation that came with the diskette drive.
	Diskette drive not enabled.	Run the SCU and enable the diskette drive.
	Diskette boot option disabled.	Run the SCU and set boot option A then C.
	Diskette does not contain start-up files.	Insert a diskette with the correct start-up files.
	Diskette drive is empty.	Insert a diskette that contains an operating system.
	Diskette is worn or damaged.	Try another diskette.
	Loose cables.	Secure all cable connections.
Cannot write to target diskette drive.	Diskette drive write protected.	Run the SCU and disable the diskette write protection option.

# RAID Troubleshooting

<b>Problem</b>	<b>Possible Cause</b>	<b>Action</b>
SBB fault LED lit.	Disk drive failed.	Replace disk drive.
SBB activity and fault LEDs lit.	Disk drive hung or has failed.	Replace disk drive.
SBB fault LED flashing.	Disk drive failed and is spinning down.	Replace disk drive.
SBB fault status is either on or off; fault status LED flashing.	Disk drive is active and spinning down due to a fault.	Correct the fault or replace the disk drive.
Replaced SBB drive does not spin up to speed.	SBB drive not seen by RAID controller.	Manually rebuild the SBB drive. Remove the SBB drive, wait 20 seconds, reinsert SBB drive. Wait one minute and then rebuild the SBB drive.
Multiple SBB drives have failed.	No power available.	Restore power, run the RAID configuration utility and change the state of any failed (FLD) SBB drive to optimal (OPT). Run the RAID configuration utility and check for bad blocks on the SBB drives. Repair any bad blocks.
SBB drive not seen by RAID adapter.	SCSI cable not connected.	Check all SCSI connections.
	Incorrect SCSI termination.	Properly terminate the SCSI bus.
	Duplicate SCSI IDs on the bus.	Check SBB drive SCSI ID settings.
	Defective SBB drive.	Replace SBB drive.
	SBB drive improperly inserted.	Reinsert SBB drive.
	Defective RAID adapter	Replace the RAID adapter.

## Wide Ultra SCSI Bus Repeater Module Troubleshooting

Problem	Possible Cause	Action
Server does not recognize an internal wide Ultra SCSI device.	Wide Ultra SCSI bus repeater module cables and/or power cables not connected properly.	Make sure all cables are connected as shown on the Quick Reference labels attached to the server's side panels.
	Wide Ultra SCSI bus repeater module not connected to all wide Ultra SCSI buses.	Make sure a wide Ultra SCSI bus repeater module is connected to each wide Ultra SCSI bus. Refer to the Quick Reference labels.
	SCSI bus repeater module failed.	Remove the cables from the bus repeater and connect the cables from the SCSI adapter and power supply directly to the backplane. Reboot the server. If the server boots and the problem disappears, replace the SCSI bus repeater module.
Server unable to perform wide Ultra SCSI data transfers	Did not run the SCSI or RAID Configuration Utility.	Run the SCSI or RAID configuration utility and enable wide Ultra SCSI data transfers.

# FRU Replacement **5**

---

## Introduction


The following sections list the Illustrated Parts Breakdown (IPB) part numbers and related replacement procedures.



**NOTE:** Customer installable devices, such as expansion boards, memory, and disk drives are discussed in the *System Reference Manual*.

## Server Front View

Figure Legend	Orderable Spare Part	Exchangeable Spare Part	Description
1	70-31674-06 70-31901-06		Enclosure assembly Enclosure subassembly (without power supplies)
2	70-31898-03		Front bezel assembly
3	74-49277-01		Push button (3)
4	54-23594-01		OCP module
5	30-43447-01		LCD
6	70-31897-01 70-31897-02		Caster left (front and back) Caster right (front and back)
7	12-39309-04		Speaker assembly
8	74-49365-01		Drive holder (CD-ROM, right side)
9	12-43231-04		Front keylock assembly
10	70-30796-05		Cover assembly, 5.25-inch drive
11A	74-48642-01		SBB rail, right
11B	74-48642-02		SBB rail, left
12	70-31906-02		Door assembly
13	70-31675-01		Side panels (left and right)
14	30-48116-02		1.6-inch high 12x CD-ROM
15	PCXRJ-AD		3.5-inch, floppy disk drive, 1.44 MB
16	74-49586-01		Brake
17	70-31927-02		Drive door assembly

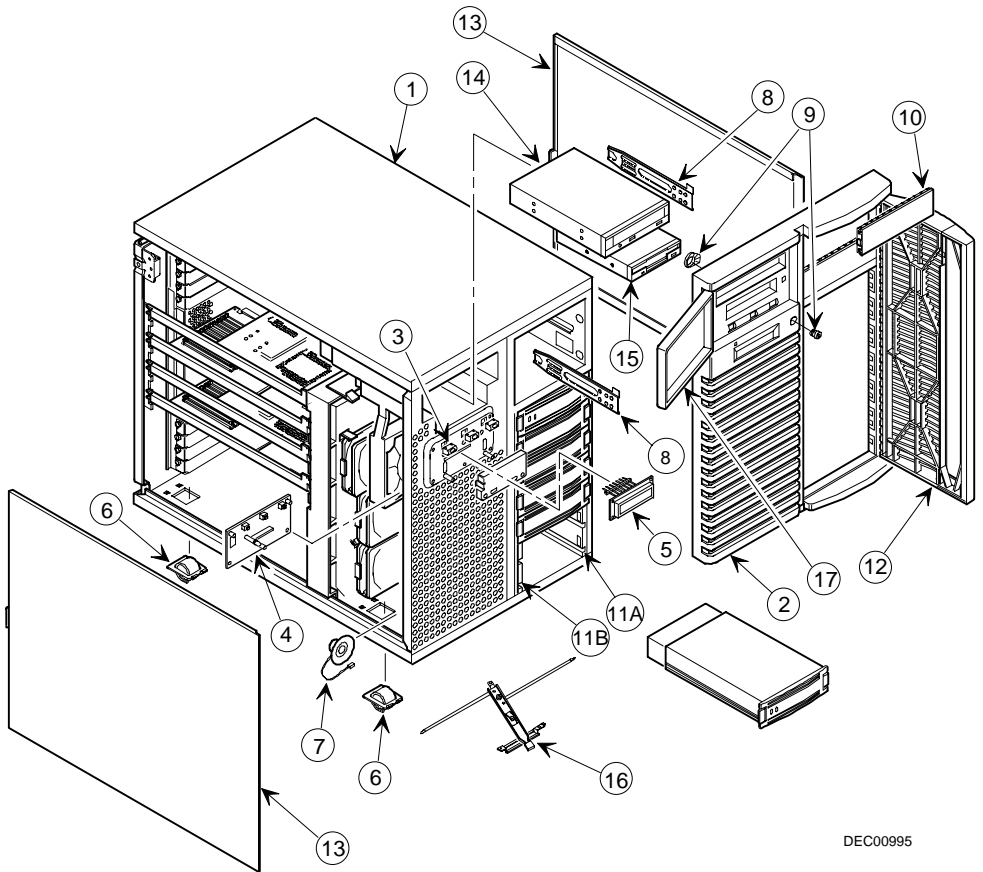


DEC00995

Figure 5-1. Server Front View



## Server Left-Side View

Figure Legend	Orderable Spare Part	Exchangeable Spare Part	Description
1A	12-41569-02		Primary fan
1B	12-41569-06		Secondary fan
2	17-04096-01		Flat 10-pin cable assembly (OCP power/data cable)
3	21-39151-01		Real-time clock (server battery)
4	54-24480-02		Main logic board
5	54-24060-01		CPU terminator
6	70-32543-03		Single P6 200 512 cache processor module
7	70-32520-01		Retainer assembly (for processor and memory modules)
8	54-25314-01		Memory module (2)
9	20-47083-D7		60 ns DIMM, 32 MB
	20-45790-D7		60 ns DIMM, 64 MB
	20-45608-D7		60 ns DIMM, 128 MB
	20-45695-D7		60 ns DIMM, 256 MB
10	17-03460-08		Flat 34-pin cable assembly (for diskette drive)
11	17-04144-01		68-pin SCSI cable assembly (five connectors)
12	17-04143-03		68-pin SCSI cable assembly (two connectors unshielded)
13	54-24052-01		CPU module VRMs
14	30-48127-01		Adaptec 3940UW PCI SCSI adapter
15A	12-44211-01		Primary fan
15B	12-44211-01		Secondary fan

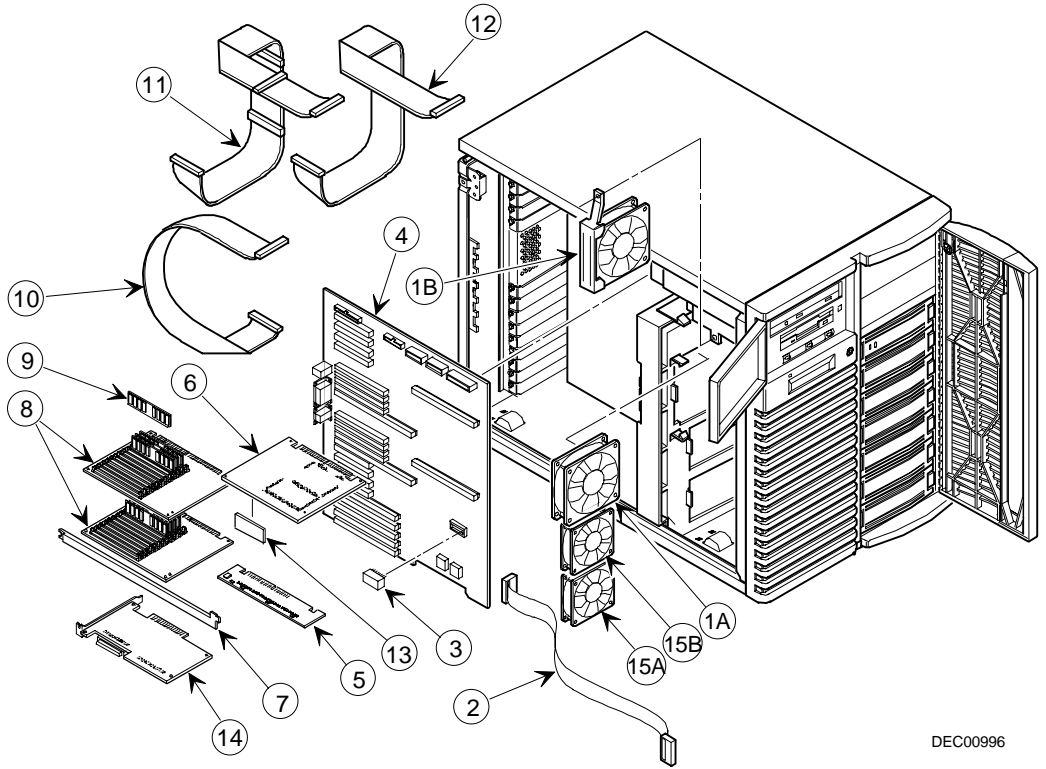


DEC00996

Figure 5-2. Server Left-Side View

## Server Right-Side/Rear View

Figure Legend	Orderable Spare Part	Exchangeable Spare Part	Description
1	30-43120-01		Power supply (2)
2	12-41768-03		SCSI terminator 68-position single-ended
3	17-04143-02		68-pin SCSI cable assembly (jumper cable)
4	54-23384-02		Hot-swap backplane module
5	17-04143-07		SCSI repeater module cable
6	30-48985-01		SCSI repeater module
7	70-31894-01		Wire assembly (12 wires)
8	70-31928-01		System power wire assembly
9	70-31890-01		Wire assembly (three wires)
10	70-31909-01 70-31909-02		Micro switch cable assembly (right) Micro switch cable assembly (left)
11	70-31919-01		Door lock assembly
12	12-37977-04		Rear keylock assembly
13	74-48303-01		I/O expansion board cover bracket

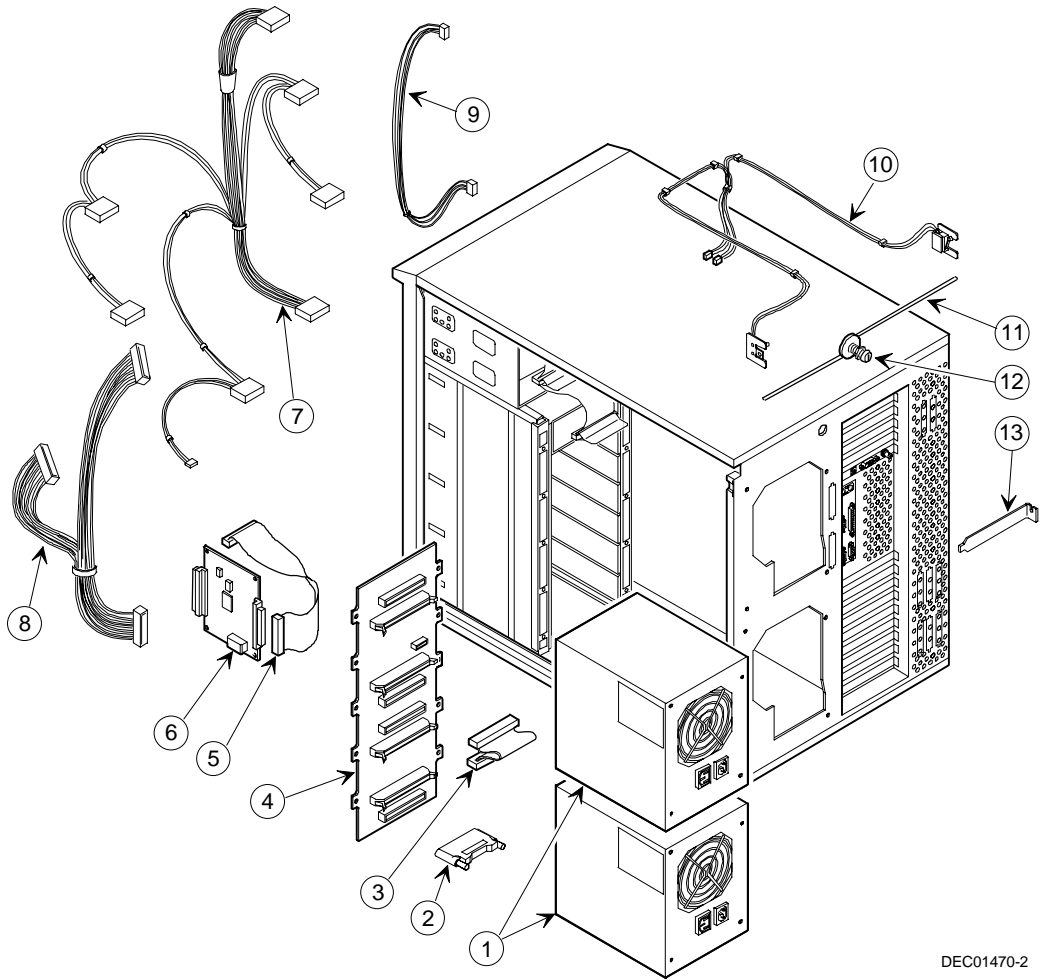

DEC01470-2

**Figure 5-3. Server Right-Side/Rear View**

## Labels and Nameplates

Orderable Spare Part	Exchangeable Spare Part	Description
74-49386-44		Nameplate, DIGITAL Server 7000 Series
36-44556-01		Warning label, power switch
36-47812-04		Label, user info guide (right)
36-47812-03		Label, user info guide (left)

## Service Procedures

The following sections provide detailed service instructions for DIGITAL Servers.



**CAUTION:** Static electricity collects on non-conductors such as paper, cloth, or plastic. A static discharge can be damaging even though you often cannot see or feel it. To prevent damage to circuit boards and/or components:

- Before touching any circuit board or component, touch the metal frame of the workstation to discharge any static electricity.
- Keep circuit boards and components away from non-conductors.

## Recommended Tools

Have the following tools available:

- Multimeter (4½-inch digit)
- Phillips screwdriver
- Antistatic wrist strap (recommended, but not required)

## BIOS Version Information


For access directly to the software library for BIOS and driver updates, use the address::

<http://www.windows.digital.com/~ftp/00-index.stm>

## Disconnecting External Devices and Power

To disconnect external devices and power, perform the following:

1. Secure the server using the brake (see Figure 5-4).
2. Shut down any applications that are currently running, then shut down the operating system.
3. Turn off power to all external devices connected to the server.
4. Turn the server off.
5. Unplug the power cord from the back of the server.
6. Disconnect the monitor's power cord from the external ac outlet and the data cable from the server.

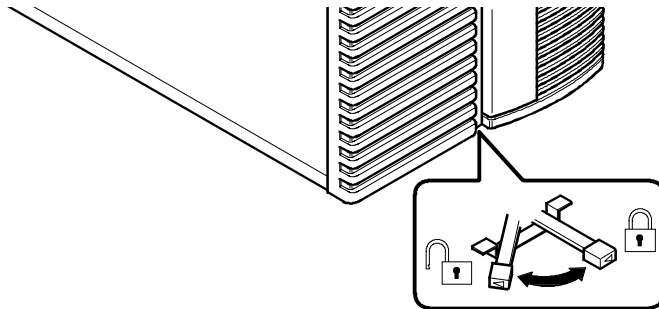

DEC00831

**Figure 5-4. Server Brake**


## Removing and Installing the Side Panels

To remove the side panels, perform the following:



**WARNING:** Removing the side panels activates two interlock switches located at the top-left and top-right of your server. These switches inhibit power to your server when activated. You might injure yourself or damage your server if you attempt to bypass these switches.

1. Unlock the side panels.
2. Slide the panels to the rear of the server.

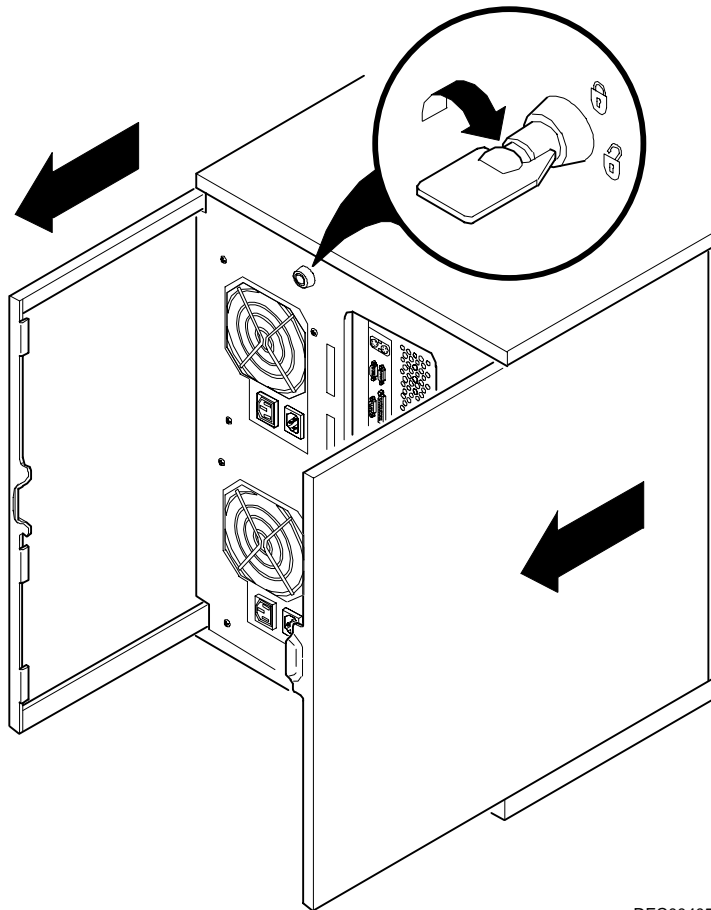

DEC00405-2


**Figure 5-5. Unlocking and Removing the Side Panels**



## FRU Replacement

To install the side panels.

1. Slide the panels to the front of the server.
2. Lock the side panels.

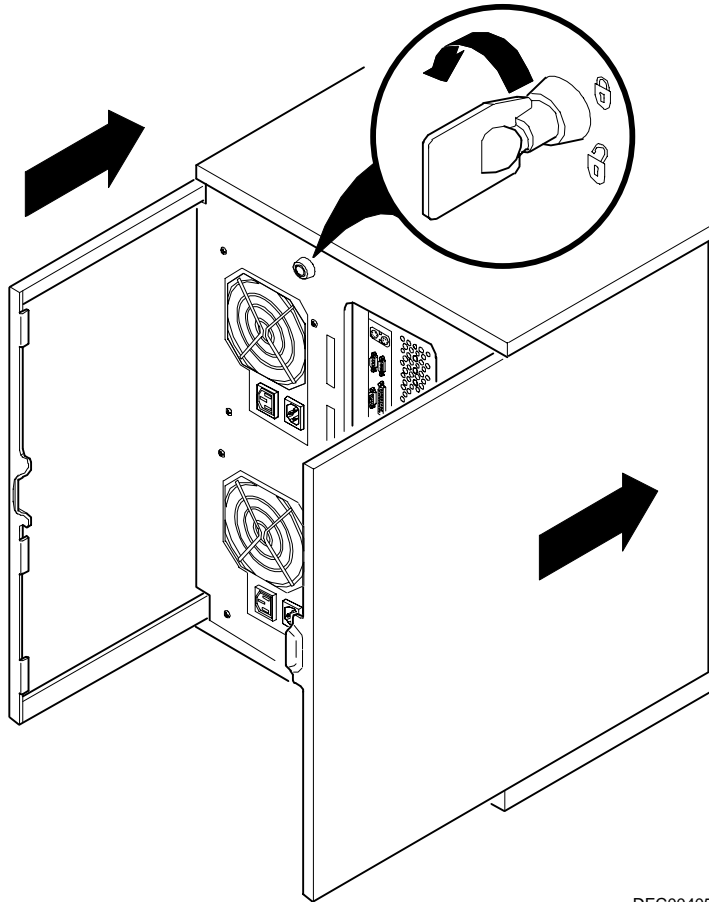


DEC00405-3

**Figure 5-6. Installing Side Covers**

## Server Front View

<b>Figure Legend</b>	<b>Component</b>
A	CD-ROM drive
B	3½-inch diskette drive
C	Front access 5¼-inch or 3½-inch half-height drive bays
D	3-way security lock
E	Integral hot-swap device bay for Storage Building Blocks (SBBs)
F	Power, Operator Control Panel (OCP), and reset buttons
G	Brake
H	Operator control panel (OCP)
I	Power indicator

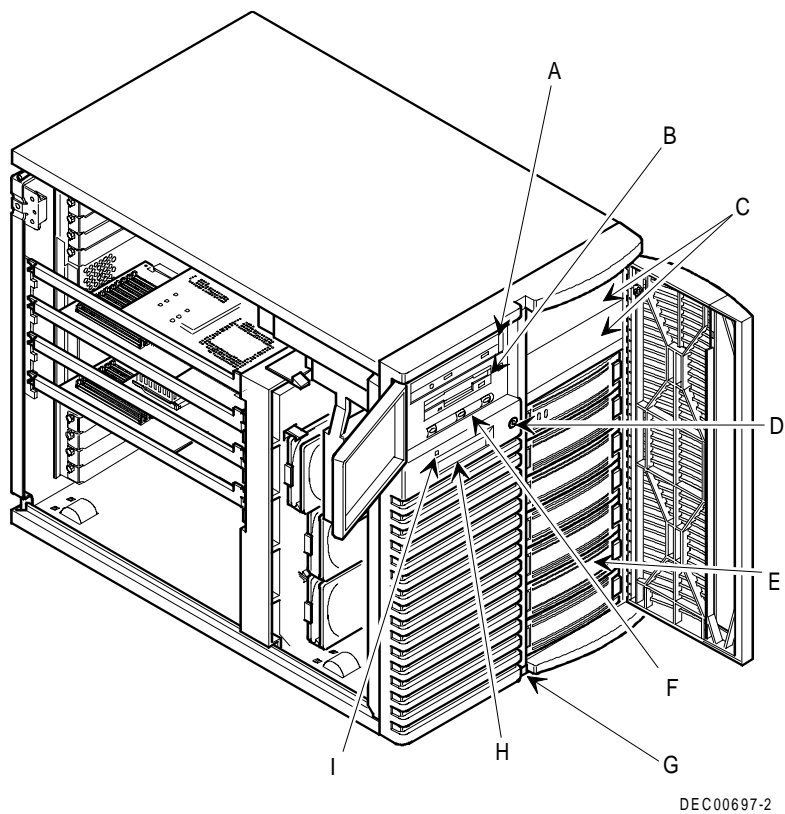


DEC00697-2

**Figure 5-7. Server Front View**

## Server Left Side View

<b>Figure Legend</b>	<b>Component</b>
J	Redundant cooling fans
K	Cooling fans
L	Terminator card or processor module 2
M	Casters
N	Five EISA expansion slots (includes one shared EISA/PCI)
O	Memory module 2
P	Memory module 1
Q	Four primary PCI slots (includes one shared PCI/EISA slot)
R	Processor module 1
S	Location of main logic board
T	Four secondary PCI slots
U	Power interlock switch

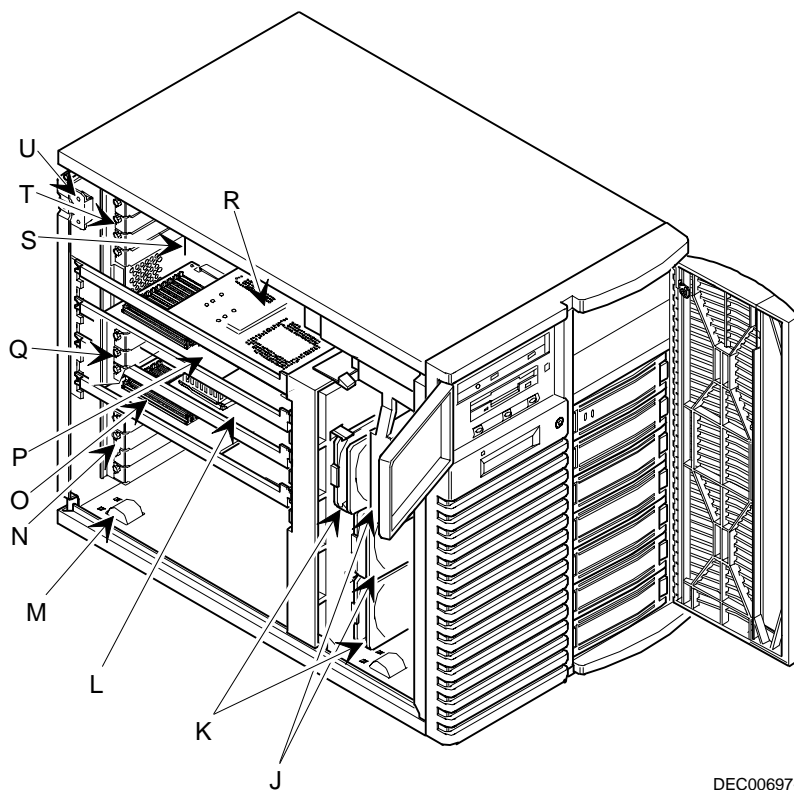


DEC00697-3

**Figure 5-8. Server Left Side View**

## Server Right Side View

<b>Figure Legend</b>	<b>Component</b>
J	Power interlock switch
K	Secondary power supply
L	Primary power supply
M	Storage backplane SCSI terminator
N	SCSI address jumpers (J181)
O	Storage backplane
P	Jumper cable
Q	Power plug
R	Wide SCSI 68-pin connector
S	Ultra SCSI bus repeaters

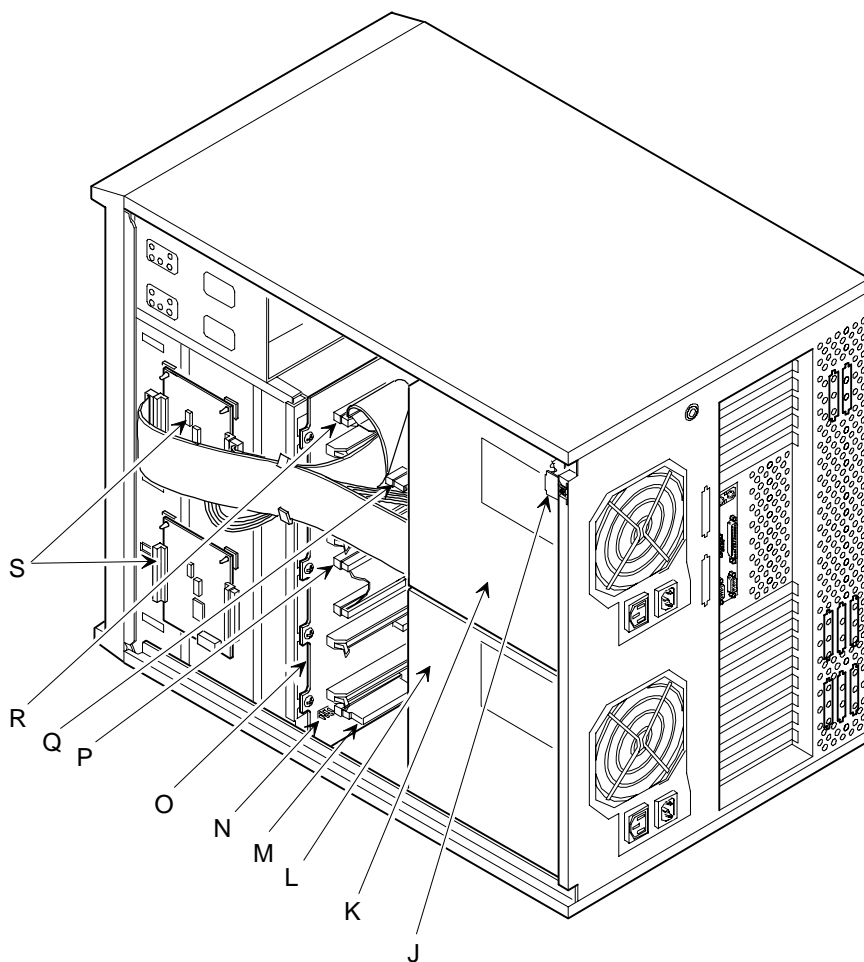

DEC01407-2

**Figure 5-9. Server Right Side View**


## Server Rear View

Figure Legend	Component
A	Keylock
B	SCSI knockouts (back panel)
C	Keyboard and mouse ports
D	Parallel port
E	Video port
F	Serial ports
G	ac power plug
H	ac power out/monitor plug



**CAUTION:** Both power supplies must be connected to ac power in order for your server to operate correctly. Failure to plug in one power supply will result in a *P/S Failure* message on the OCP panel during server power up.



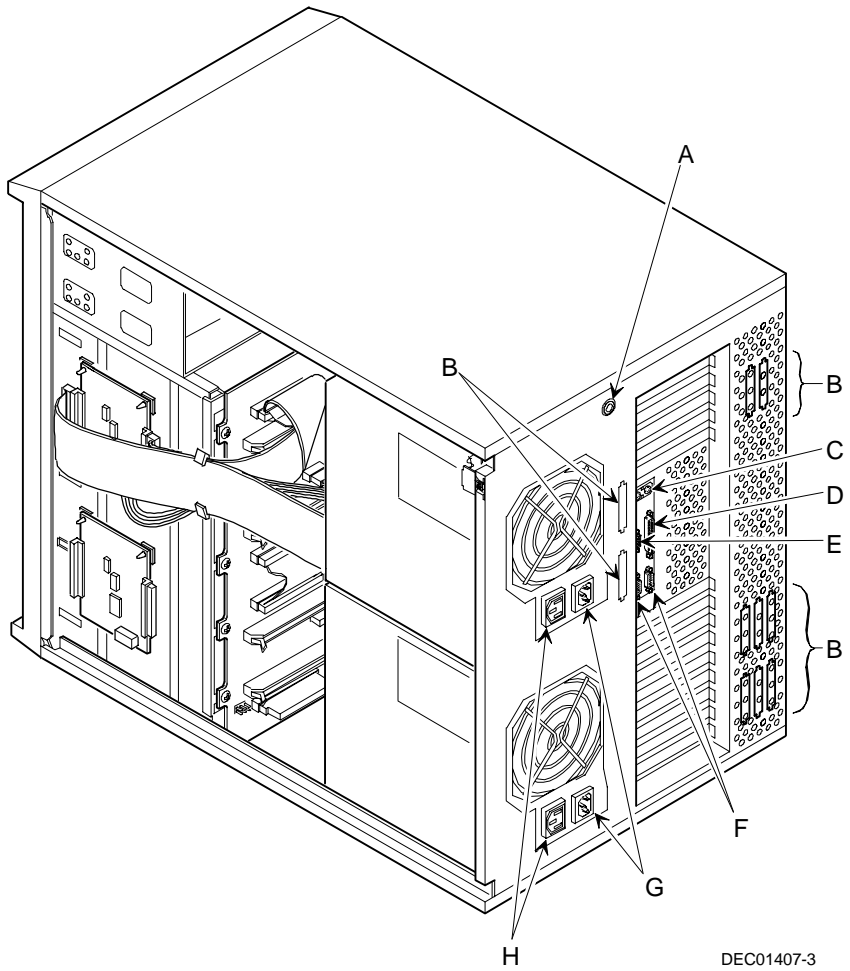


DEC01407-3

Figure 5-10. Server Rear View

## Main Logic Board Connectors

Figure Legend	Connector
A	EISA expansion slots (1 through 5); slot 1 is a shared EISA/PCI slot
B	Primary PCI expansion slots (1 through 4); slot 4 is a shared PCI/EISA slot
C	Memory module 2
D	Serial ports
E	Parallel port and video port
F	Mouse and keyboard ports
G	Secondary PCI expansion slots (5 through 8)
H	Diskette drive
I	Storage backplane power
J	3.3 V dc power
K	5 V dc power supply
L	Power control signal
M	Operator Control Panel (OCP)
N	Fan 2 (redundant)
O	Fan 1
P	Processor module 1
Q	Memory module 1
R	Eight SIMM sockets <sup>(1)</sup>
S	Processor module 2 or terminator card
T	Fan 4 (redundant)
U	Speaker
V	Remote Server Management (RSM)
W	Fan 3

<sup>(1)</sup> SIMMs are not supported in a DIMM memory system. All SIMMs must be removed from the main logic board and DIMM memory modules must be installed.

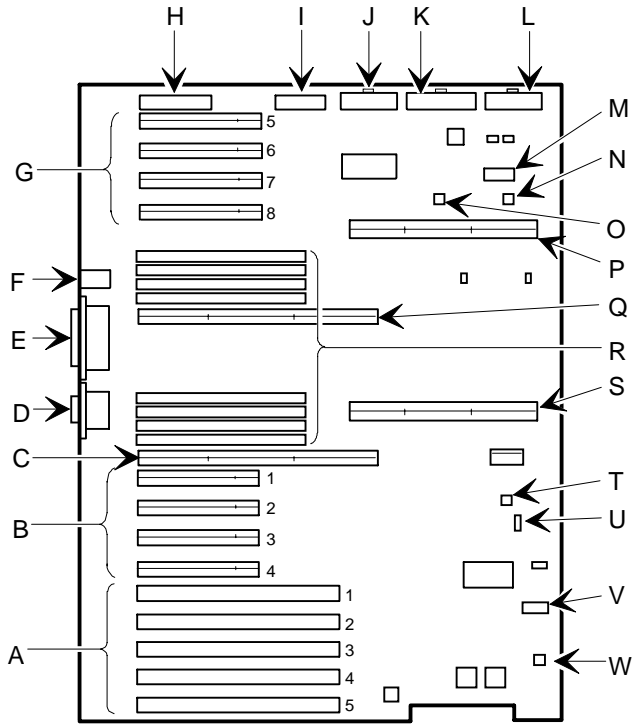


DEC00692-2

**Figure 5-11. Main Logic Board Connectors**

## Main Logic Board Components


Figure Legend	Component
A	Real-time clock/server battery
B	8031 ROM
C	DIP switch block
D	BIOS flash ROM

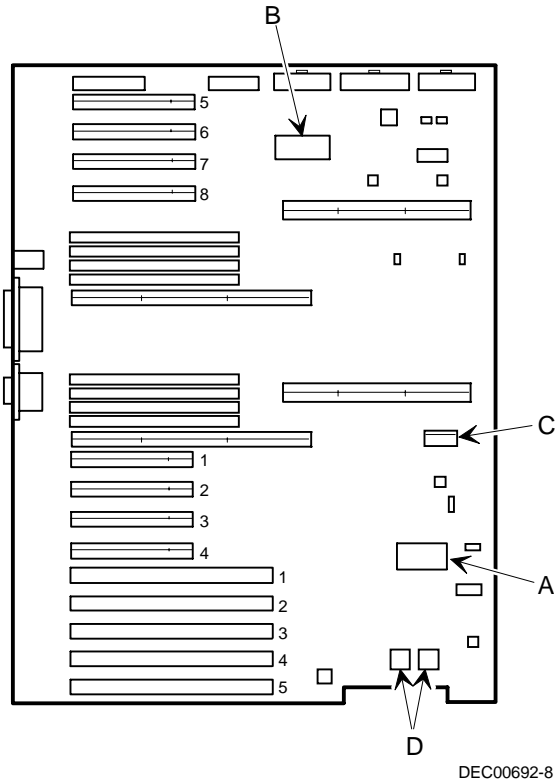

**Figure 5-12. Main Logic Board Components**

## Processor Module Components and Connectors

<b>Figure Legend</b>	<b>Component/Connector</b>
A	Voltage regulator module (VRM) 2 or 4 slot
B	Processor 2 or 4 ZIF socket
C	Processor 1 or 3 ZIF socket
D	Voltage regulator module (VRM) 1 or 3 slot
E	Frequency ratio DIP switches

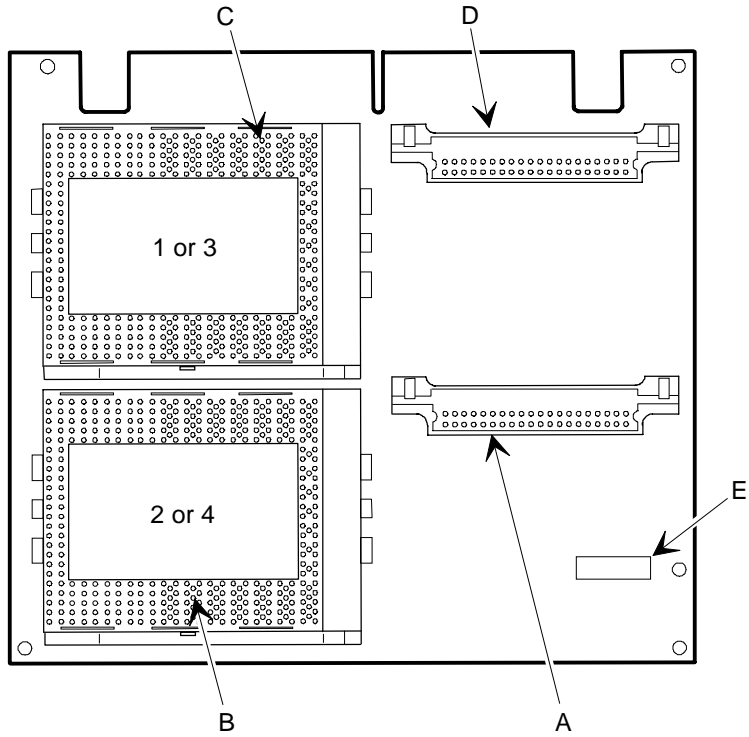


DEC01408-2

**Figure 5-13. Processor Module Components and Connectors**

## Wide Ultra SCSI Bus Repeater Module Layout

Figure Legend	Description
A	J3, 68-pin wide Ultra SCSI connector (SE-B)
B	CR3, (yellow) B-side TERMPWR LED
C	CR5, (green) A-side BUSY (SCSI active on side A) LED
D	CR6, (yellow) A-side TERMPWR LED
E	J2, 68-pin wide Ultra SCSI connector (SE-A)
F	J1, power connector



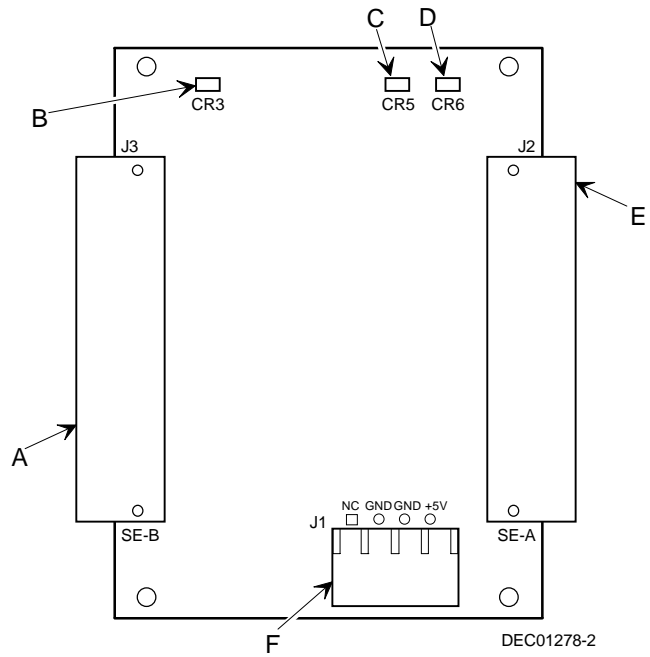

**Figure 5-14. Wide Ultra SCSI Repeater Module Component Locations**

## Main Logic Board Switch Settings

The following table lists the main logic board switch and factory-default settings. Figure 5-15 shows the switch location.




**CAUTION:** Do not touch any electronic component unless you are safely grounded. Wear a grounded wrist strap or touch an exposed metal part of the server chassis. A static discharge from your fingers can result in permanent damage to electronic components.

## FRU Replacement

Feature	Function	Setting	Description
BIOS upgrade	Disabled Enabled <sup>(1)</sup>	J35-SW1, off J35-SW1, on <sup>(1)</sup>	The main logic board's flash BIOS upgrade switch must be set to the disabled (OFF) position to prevent unauthorized personnel from loading a new server BIOS. Loading a new server BIOS might allow someone to override other server security features or introduce a virus into the server.
Recovery mode	Normal <sup>(1)</sup> Recovery mode	J35-SW2, off <sup>(1)</sup> J35-SW2, on	If the BIOS upgrade failed, refer to the README.TXT file that came with the BIOS upgrade.
Boot block update	Disabled <sup>(1)</sup> Enabled	J35-SW3, off <sup>(1)</sup> J35-SW3, on	Set this switch to disabled (OFF) position to prevent unauthorized personnel from changing the BIOS boot block.
Password clear	Normal mode <sup>(1)</sup> Password clear	J35-SW4, off <sup>(1)</sup> J35-SW4, on	Set this switch to the password clear (ON) position and then restart the server to reset the password.
RSM	Not installed <sup>(1)</sup> Installed	J35-SW5, on <sup>(1)</sup> J35-SW5, off	If DIGITAL's Remote Server management (RSM) option is added to the server, connect the RSM reset cable to connector RSM and change the switch position to the installed (OFF) position.
NVRAM	Normal <sup>(1)</sup> Clear	J35-SW6, off <sup>(1)</sup> J35-SW6, on	Clears contents of NVRAM. Set only in the case when a configuration change using the SCU did not complete successfully (e.g. power failed while configuring), or a configuration was defined which no longer allows the server to boot. The BIOS settings will return to their default values, and the SCU will need to be rerun to reconfigure the server.
CPU bus speed	60 MHz 66 MHz <sup>(1)</sup>	J35-SW7, off J35-SW7, on <sup>(1)</sup>	Determines the processor clock speed for the installed processor(s).  200 MHz processor = 66 MHz
Reserved	Reserved	J35-SW8, off <sup>(1)</sup>	This switch should always be OFF.

(1) Factory default setting

ON = switch closed; OFF = switch open

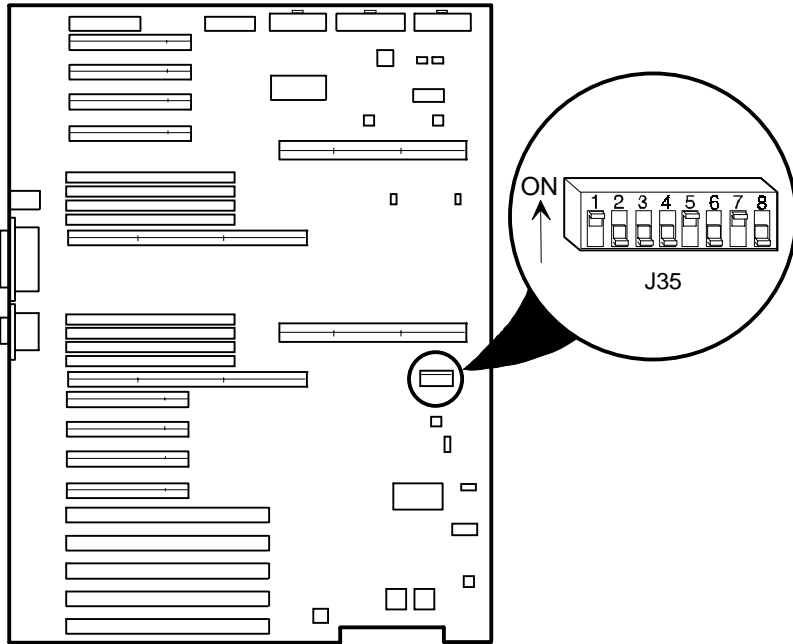

DEC00692-6

**Figure 5-15. Main Logic Board Switch Location**


## Processor Module Switch Settings

The following table lists the processor module switch settings. Figure 5-16 shows the switch location.



**CAUTION:** Do not touch any electronic component unless you are safely grounded. Wear a grounded wrist strap or touch an exposed metal part of the server chassis. A static discharge from your fingers can result in permanent damage to electronic components.

Speed	Position	Switches	J19 Switch Settings
120/133 MHz	<input type="checkbox"/> UP	4, 8	■ ■ ■ <input type="checkbox"/> ■ ■ ■ <input type="checkbox"/>
	<input checked="" type="checkbox"/> DOWN	1, 2, 3, 5, 6, 7	
150/166 MHz	<input type="checkbox"/> UP	3, 4, 7, 8	■ ■ <input type="checkbox"/> <input type="checkbox"/> ■ ■ <input type="checkbox"/> <input type="checkbox"/>
	<input checked="" type="checkbox"/> DOWN	1, 2, 5, 6	
180/200 MHz	<input type="checkbox"/> UP	1, 4, 5, 8	<input type="checkbox"/> ■ ■ <input type="checkbox"/> <input type="checkbox"/> ■ ■ <input type="checkbox"/>
	<input checked="" type="checkbox"/> DOWN	2, 3, 6, 7	
210/233 MHz	<input type="checkbox"/> UP	1, 3, 4, 5, 7, 8	<input type="checkbox"/> ■ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> ■ <input type="checkbox"/> <input type="checkbox"/>
	<input checked="" type="checkbox"/> DOWN	2, 6	
240/266 MHz	<input type="checkbox"/> UP	2, 4, 6, 8	■ <input type="checkbox"/> ■ <input type="checkbox"/> ■ <input type="checkbox"/> ■ <input type="checkbox"/>
	<input checked="" type="checkbox"/> DOWN	1, 3, 5, 7	
270/300 MHz	<input type="checkbox"/> UP	2, 3, 4, 6, 7, 8	■ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> ■ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
	<input checked="" type="checkbox"/> DOWN	1, 5	
300/333 MHz	<input type="checkbox"/> UP	1, 2, 4, 5, 6, 8	<input type="checkbox"/> <input type="checkbox"/> ■ <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> ■ <input type="checkbox"/>
	<input checked="" type="checkbox"/> DOWN	3, 7	
330/363 MHz	<input type="checkbox"/> UP	1, 2, 3, 4, 5, 6, 7, 8	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>

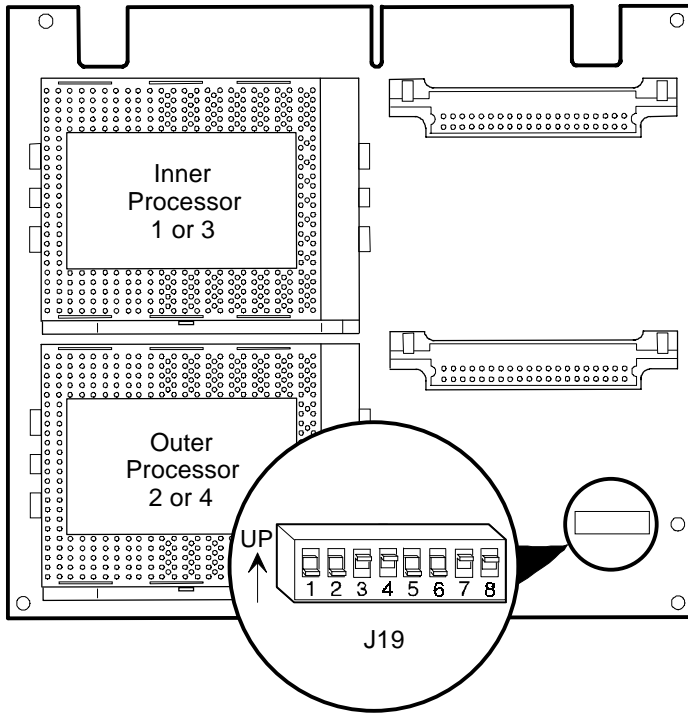

DEC01408-3

**Figure 5-16. Processor Module Switch Location**

## Installing Additional Memory

The DIGITAL server supports up to 4 GB of EDO/ECC server memory using 168-pin Dual In-Line Memory Modules (DIMMs). Memory can be increased by adding or replacing DIMMs.

This chapter provides the memory configuration guidelines that must be followed prior to installing additional DIMMs on memory modules 1 and 2. Procedures for removing a memory module and troubleshooting are also included.

The DIGITAL Server provides a 4-way interleaved memory system, with 128 MB (4 x 32 MB) minimum supported memory and 4 GB (16 x 256 MB) of maximum supported memory. Prior to installing any DIMM combination, make sure you read the memory configuration guidelines that follow.

Only install DIMMs supported by Digital Equipment Corporation. DIGITAL does not support server performance or product warranty resulting from installing non-qualified DIMMs.

## Supported DIMM Upgrade Kits


The following DIMM upgrade kits are available:

DIMM Size	Order Number	Quantity	Total Capacity
32 MB	FR-PCSMA-AG	4	128 MB
64 MB	FR-PCSMA-AH	4	256 MB
128 MB	FR-PCSMA-AJ	4	512 MB
256 MB	FR-PCSMA-AK	4	1024 MB

## Memory Configuration Guidelines

- Install DIMMs supplied by DIGITAL as follows:
  - Install 168-pin, 72-bit EDO/ECC DIMMs operating at 60 ns
  - DIMM capacities supported are 32 MB, 64 MB, 128 MB, and 256 MB
- Both DIMM memory expansion boards must be installed for proper server operation.
  - Memory banks consists of four DIMM sockets (two DIMM sockets on each memory expansion board). For example, two sockets (J2 and J3) on board 1 with the corresponding two sockets (J2 and J3) on board 2 equals one bank. See Figure 5-13 for DIMM bank locations.



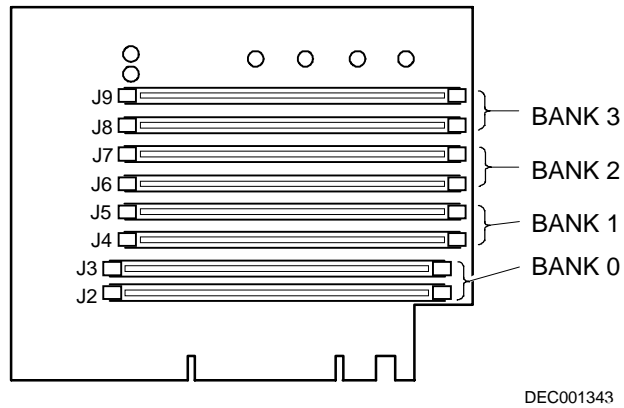

**Figure 5-17. DIMM Bank Locations**

- Memory banks must be filled completely (with four DIMMs) and consecutively starting with Bank 0.
- Different capacity DIMMs can be installed in subsequent banks. However, within each memory bank, DIMMs must be the same capacity, type, and speed.

### Memory Configuration Examples, In Megabytes (MB)

Bank 0				Bank 1				Bank 2				Bank 3				Total
Board 1		Board 2		Board 1		Board 2		Board 1		Board 2		Board 1		Board 2		
J2	J3	J2	J3	J4	J5	J4	J5	J6	J7	J6	J7	J8	J9	J8	J9	
32	32	32	32													128
32	32	32	32	32	32	32	32									256
32	32	32	32	32	32	32	32	32	32	32	32					384
32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	32	512
64	64	64	64													256
64	64	64	64	32	32	32	32									384
64	64	64	64	32	32	32	32	32	32	32	32					512
64	64	64	64	64	64	64	64									512
64	64	64	64	32	32	32	32	32	32	32	32	32	32	32	32	640
64	64	64	64	64	64	64	64	32	32	32	32					640
64	64	64	64	64	64	64	64	32	32	32	32	32	32	32	32	768
64	64	64	64	64	64	64	64	64	64	64	64					768
64	64	64	64	64	64	64	64	64	64	64	64	32	32	32	32	896
64	64	64	64	64	64	64	64	64	64	64	64	64	64	64	64	1024
128	128	128	128													512
128	128	128	128	32	32	32	32									640
128	128	128	128	64	64	64	64									768
128	128	128	128	32	32	32	32	32	32	32	32					768
128	128	128	128	64	64	64	64	32	32	32	32					896
128	128	128	128	32	32	32	32	32	32	32	32	32	32	32	32	896
128	128	128	128	64	64	64	64	64	64	64	64					1024
128	128	128	128	64	64	64	64	64	64	64	64	32	32	32	32	1152
128	128	128	128	64	64	64	64	64	64	64	64	64	64	64	64	1280
128	128	128	128	128	128	128	128									1024
128	128	128	128	128	128	128	128	32	32	32	32					1152
128	128	128	128	128	128	128	128	64	64	64	64					1280
128	128	128	128	128	128	128	128	32	32	32	32	32	32	32	32	1280
128	128	128	128	128	128	128	128	64	64	64	64	64	64	64	64	1408
128	128	128	128	128	128	128	128	64	64	64	64	64	64	64	64	1536

*continued*

# FRU Replacement

Bank 0				Bank 1				Bank 2				Bank 3				Total
Board 1		Board 2		Board 1		Board 2		Board 1		Board 2		Board 1		Board 2		
J2	J3	J2	J3	J4	J5	J4	J5	J6	J7	J6	J7	J8	J9	J8	J9	
128	128	128	128	128	128	128	128	128	128	128	128					1536
128	128	128	128	128	128	128	128	128	128	128	128	32	32	32	32	1664
128	128	128	128	128	128	128	128	128	128	128	128	64	64	64	64	1792
128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	128	2048
256	256	256	256													1024
256	256	256	256	32	32	32	32									1152
256	256	256	256	64	64	64	64									1280
256	256	256	256	64	64	64	64	32	32	32	32					1408
256	256	256	256	128	128	128	128									1536
256	256	256	256	256	256	256	256									2048
256	256	256	256	32	32	32	32	32	32	32	32					1280
256	256	256	256	64	64	64	64	64	64	64	64					1536
256	256	256	256	128	128	128	128	32	32	32	32					1664
256	256	256	256	128	128	128	128	64	64	64	64					1792
256	256	256	256	128	128	128	128	128	128	128	128					2048
256	256	256	256	256	256	256	256	32	32	32	32					2176
256	256	256	256	256	256	256	256	64	64	64	64					2304
256	256	256	256	256	256	256	256	128	128	128	128					2560
256	256	256	256	256	256	256	256	256	256	256	256					3072
256	256	256	256	256	256	256	256	256	256	256	256	32	32	32	32	3200
256	256	256	256	256	256	256	256	256	256	256	256	64	64	64	64	3328
256	256	256	256	256	256	256	256	256	256	256	256	128	128	128	128	3584
256	256	256	256	256	256	256	256	256	256	256	256	256	256	256	256	4096

## Memory Troubleshooting

The DIGITAL Server Power-On Self Test (POST) can detect memory errors when it boots. The error can be isolated to a single DIMM on memory expansion boards 1 and 2.

The memory error message format is:

<Type of error>:      <Location>

Where:

Type of error:              Correctable error

   Uncorrectable error

Location	Memory Expansion Module	Jxx (x = DIMM socket number)
	Memory Expansion Module	Jxx (x = DIMM socket number)

### Example:


Uncorrectable Error: Memory Expansion Module 1, Jxx

If a correctable error occurs, the BIOS displays: "Press <F1> to resume" after the server boots. Press the <F1> key to continue booting the server. The memory error is automatically corrected.

If an uncorrectable error occurs, the server halts after the memory test and the faulty DIMM must be replaced immediately.

## **Removing and Replacing the Power Supply**

1. Turn off the server.
2. Remove the ac power cord and monitor cables, if applicable.
3. Unlock and remove the right side panel.
4. Disconnect the wire harness connectors from the power supply.
5. Remove the four screws from the rear of the chassis.
6. Remove the power supply.
7. Replace the power supply by performing the removal steps in reverse order.

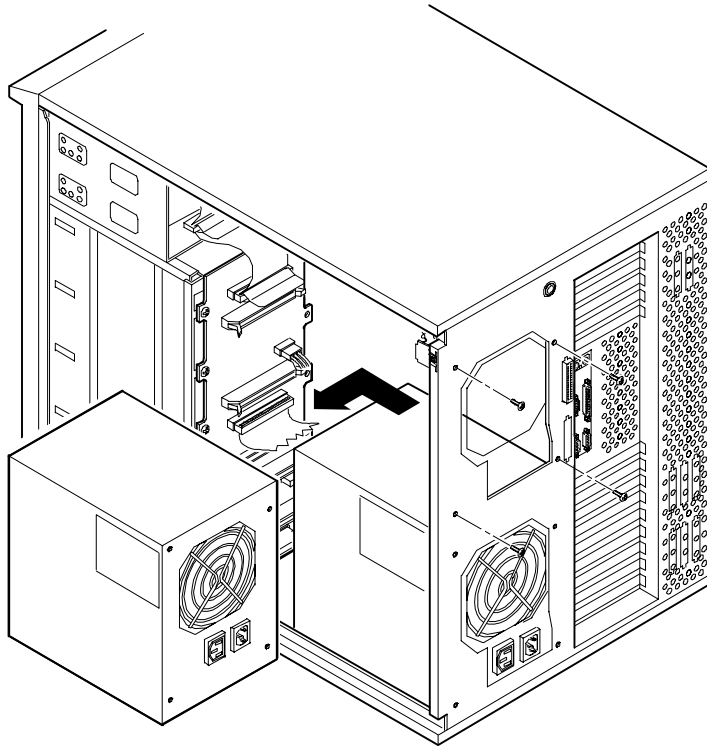


DEC00978

**Figure 5-18. Removing and Replacing the Power Supply**

## Removing and Replacing the Diskette Drive

1. Turn off the server.
2. Unlock and remove the left side panel.
3. Open the door.
4. Disconnect the power and data cables from the drive.
5. Remove the two screws from the drive bay.
6. Slide the drive out from the front of the drive bay.
7. Replace the diskette drive by performing the removal steps in reverse order.

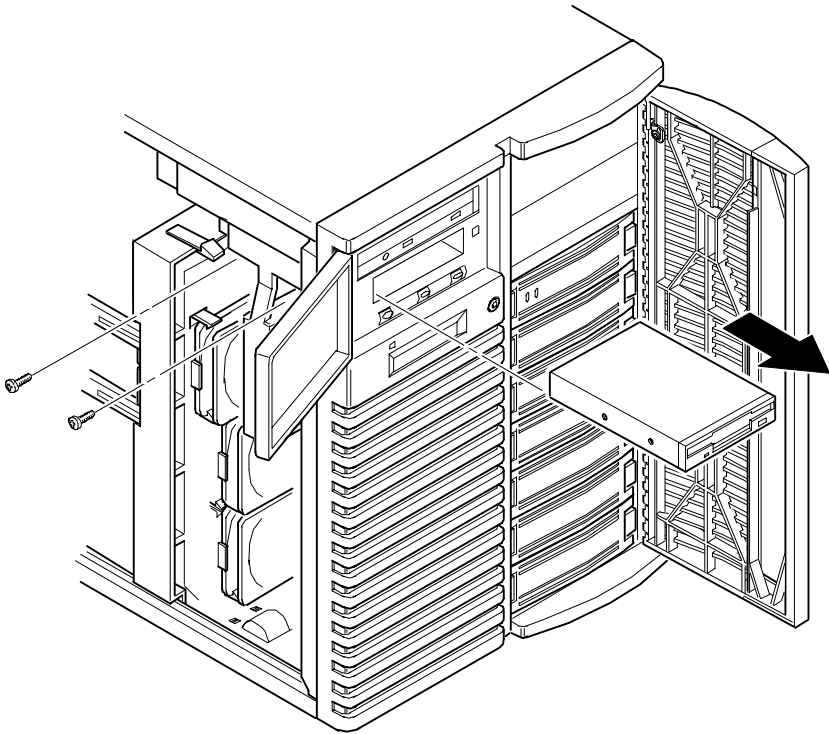


DEC00470-2

**Figure 5-19. Removing and Replacing the Diskette Drive**



## Removing and Replacing the CD-ROM Drive

1. Turn off the server.
2. Unlock and the remove left side panel.
3. Open the door.
4. Disconnect the power and data cables from the CD-ROM drive.
5. Remove the two screws from the drive bay.
6. Slide the drive out from the drive bay by applying pressure at the rear of the CD-ROM drive.
7. Remove the right side bracket from the right side of the CD-ROM drive.
8. Set jumpers on the new CD-ROM drive identical to those on the removed CD-ROM drive.
9. Replace the CD-ROM drive by performing the removal steps in reverse order.

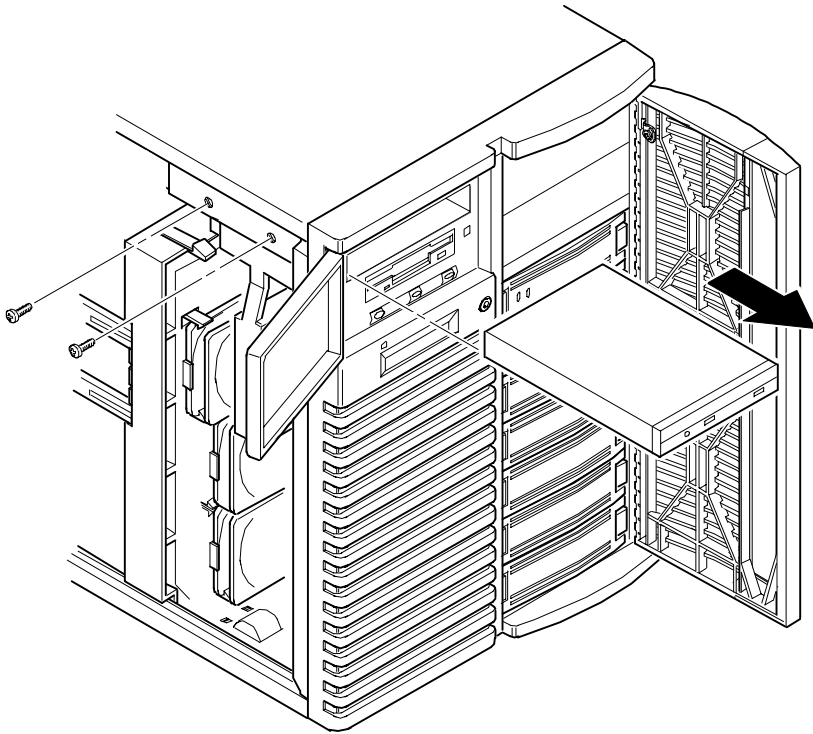


DEC00470-3

**Figure 5-20. Removing and Replacing the CD-ROM Drive**

## Removing and Replacing a Cooling Fan

The following procedure can be used to remove primary cooling fan 1, secondary cooling fan 4, and primary cooling fan 3.

1. Turn off the server.
2. Unlock and remove the left side panel.
3. Disconnect the fan cable from the main logic board.
4. Release the fan from the plastic tabs.
5. Remove the fan from the chassis.
6. Replace the fan by performing the removal steps in reverse order.

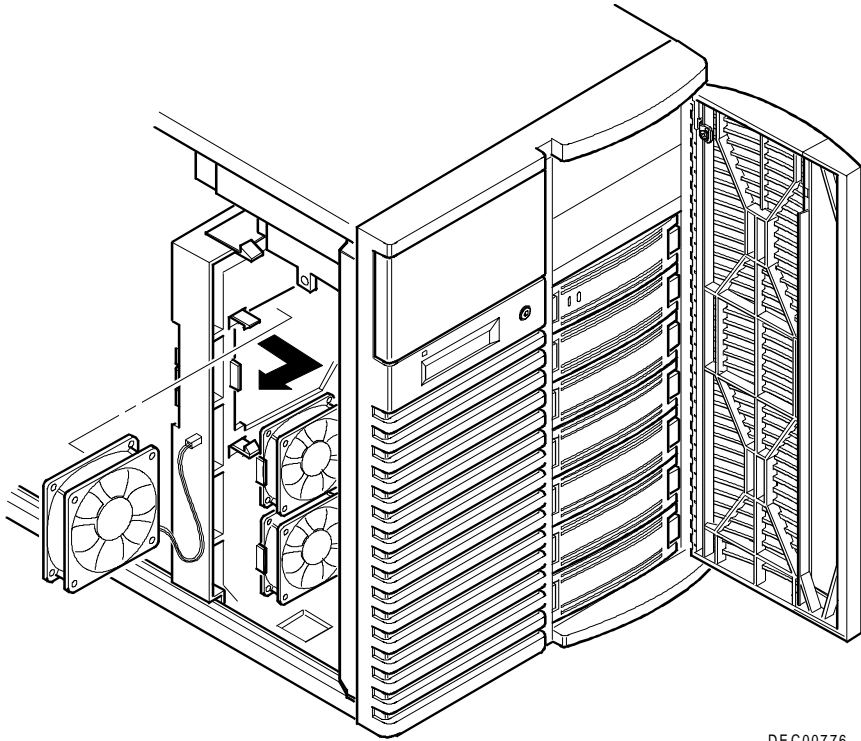


DEC00776

**Figure 5-21. Removing and Replacing a Cooling Fan**

## **Removing and Replacing the Secondary Cooling Fan 2**

1. Turn off the server.
2. Unlock and remove the left side panel.
3. Disconnect the fan cable from the main logic board.
4. Remove the screw.
5. Remove the fan from the chassis.
6. Remove the fan from the bracket.
7. Replace the fan by performing the removal steps in reverse order.

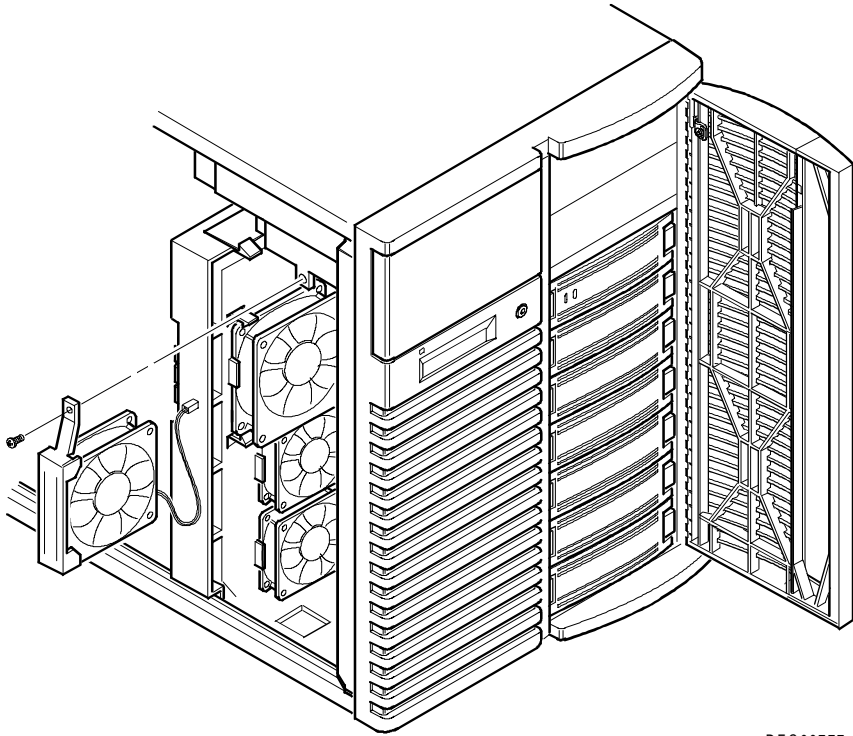


DEC00777

**Figure 5-22. Removing and Replacing the Secondary Cooling Fan 2**

## **Removing and Replacing the Speaker**

1. Turn off the server.
2. Unlock and remove the left side panel.
3. Disconnect the speaker cable from the main logic board.
4. Remove the speaker from the chassis.
5. Replace the speaker by performing the removal steps in reverse order.

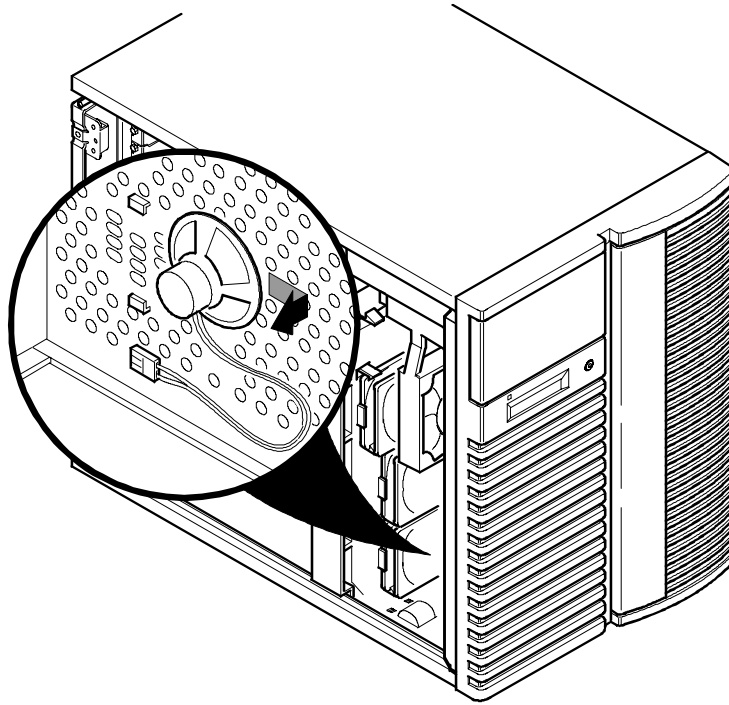


DEC00778

**Figure 5-23. Removing and Replacing the Speaker**



## Removing the Main Logic Board

1. Turn off the server.
2. Disconnect all external cables from the I/O expansion modules located at the rear of server.
3. Unlock and remove the left side panel.
4. Disconnect all cables from the main logic board.
5. Record EISA/PCI, CPU, and memory slot assignments before removing modules.
6. Remove the expansion boards, CPU module, and memory module.
7. Remove the four screws securing the main logic board to the chassis (A, Figure 5-24).
8. Loosen the six standoff screws (B, Figure 5-24).
9. Slide the main logic board to the right to release it from the standoffs.
10. Remove the main logic board from the chassis.
11. Configure switch J35 on the new main logic board.
12. If the new main logic board does not have a battery/RTC, remove the battery/RTC from the old main logic board and replace it on the new main logic board.

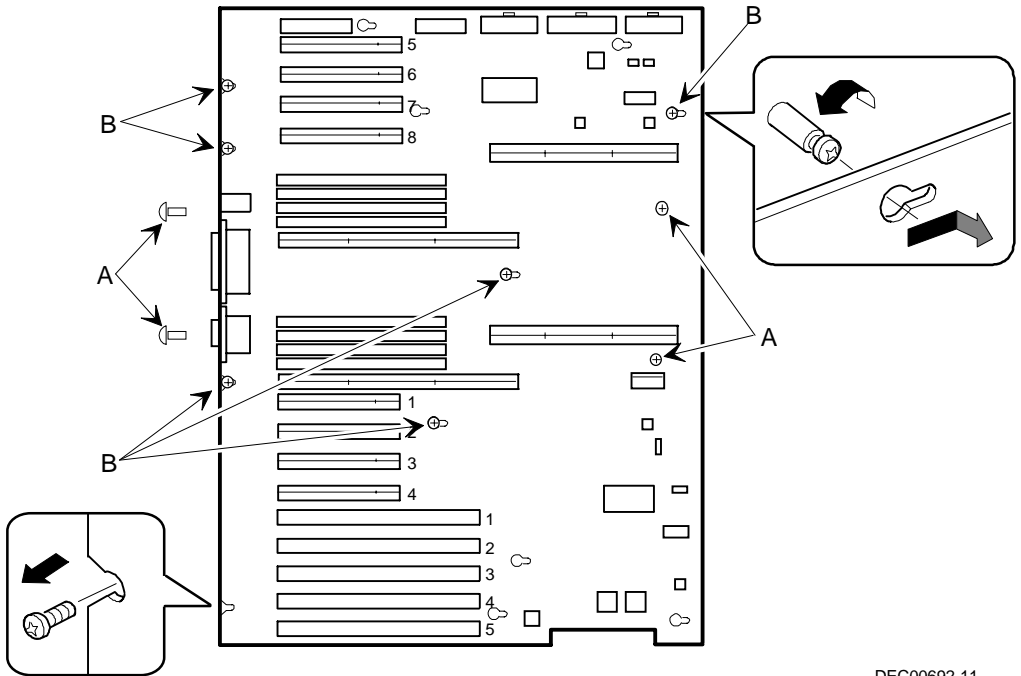

DEC00692-11

**Figure 5-24. Removing and Replacing the Main Logic Board**

## Replacing the Main Logic Board

To reinstall main logic board:

1. Align the main logic board over the six standoff screws and then slide it to the left.
2. Reinstall and tighten the four screws removed in step 7 of the removal procedures.
3. Tighten the six standoff screws loosened in step 8 of the removal procedures.
4. Using the side panel label as a reference, reconnect all cables to the main logic board.
5. Using information recorded in step 5, reinstall CPU, memory, and expansion modules to their original configuration.
6. Reconnect all external and internal cable connections.
7. Reinstall and lock the left and right side panel.
8. Turn on the server.
9. Run the SCU to configure the server and restore the system management information.


## Removing the Server Battery/Real Time Clock (RTC)

To remove the battery/RTC, perform the following:

1. Record server configuration settings using the SCU.
2. Turn off the server.
3. Disconnect external devices, ac power, and monitor power.
4. Unlock and remove the top cover.
5. Remove the old battery/RTC (see Figure 5-25).



**CAUTION:** Depending on your locality, the server's battery/RTC might be considered hazardous waste. Make sure you follow any state or local statute to properly dispose of the old battery/RTC because of its imbedded lithium battery.

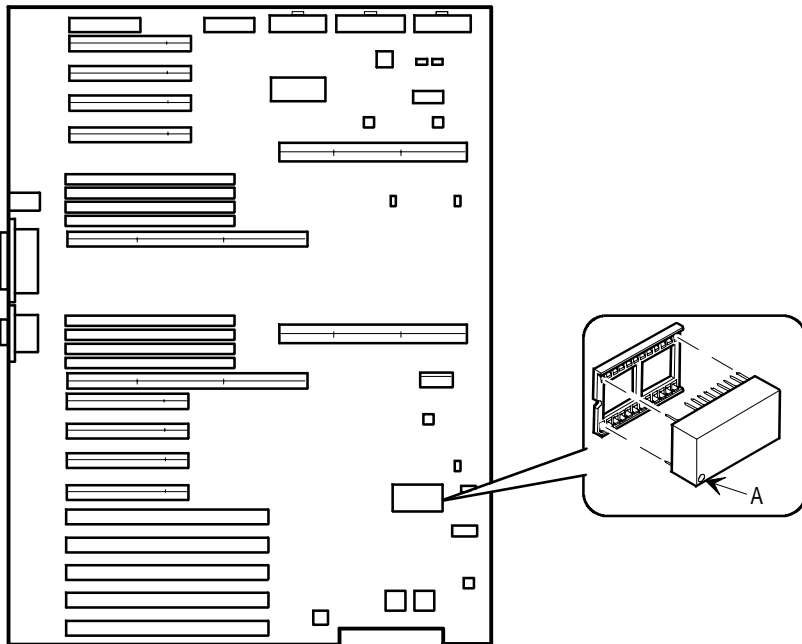

DEC00692-3

Figure 5-25. Replacing the Server Battery/RTC

## Replacing the Server Battery/Real Time Clock (RTC)

1. Install the new battery/RTC. Make sure pin 1 of the battery/RTC is aligned with pin one on the socket (A, Figure 3-12).




**CAUTION:** Danger of explosion if the server battery/RTC is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

2. Replace and lock the top cover.
3. Connect external devices and restore power.
4. Reboot and run the SCU

## Removing the Storage Backplane

1. Turn off the server.
2. Unlock and remove the right side panel.
3. Record all cable configuration information.
4. Disconnect all cables and terminators.
5. Before removing SBB devices, record how they are configured.
6. Remove all devices connected to storage backplane.
7. Remove the ten screws.
8. Remove the storage backplane from the chassis.

- Configure the J181 jumpers located on new storage backplane so they are identical to settings on storage backplane being replaced. Also configure jumper cables and terminators as they were previously configured on the storage backplane being replaced.

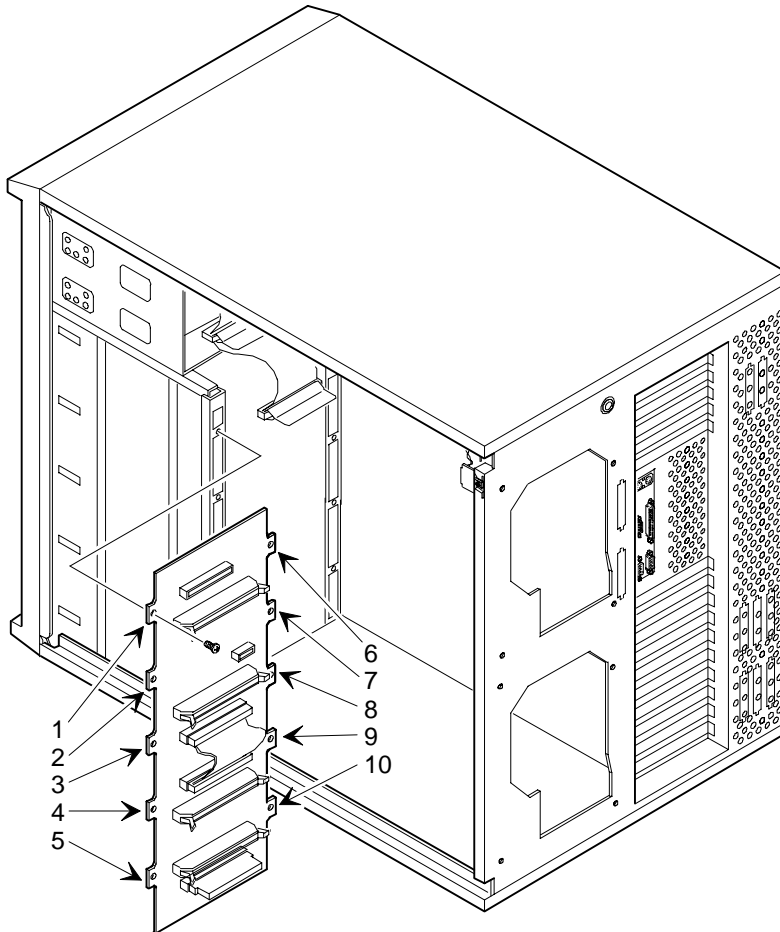

DEC00979

**Figure 5-25. Removing and Replacing the Storage Backplane**


## Replacing the Storage Backplane

To replace the storage backplane:

1. Install the new storage backplane into the chassis.
2. Reinstall and tighten the ten screws securing the storage backplane in chassis.
3. Using the configuration information recorded in step 5, replace the SBB devices.
4. Using the cabling information recorded in step 3, reconnect the cables and terminators.
5. Replace and lock the right side panel.

## Removing and Replacing a Caster

1. Turn off the server.
2. Carefully lay the server on its side.  
Note that the right and left casters are different.
3. If removing the left- or right-front caster, release the server brake. Otherwise, skip to step 4.
4. Remove the screw.
5. Release the caster from metal tab.
6. Remove the caster from the chassis.
7. Replace the caster by performing the removal steps in reverse order.

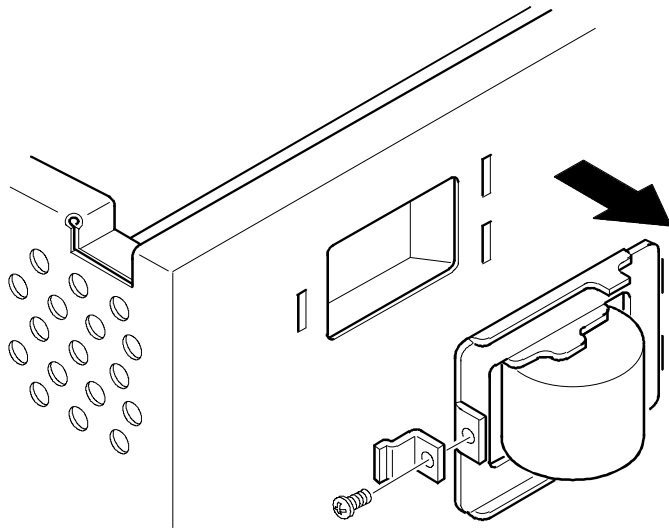

DEC00779

**Figure 5-26. Removing and Replacing a Caster**



# Processor Module Upgrades

---

# 6

## Introduction

DIGITAL sells processor upgrade kits known as PowerGrade kits. Installing a PowerGrade kit increases the capabilities of the server. This chapter describes the configuration guidelines that must be followed prior to adding a Pentium Pro processor as well as detailed procedures on removing and installing processor modules.



**NOTE:** Installing additional processor(s) might involve updating the server's BIOS. To do this, you need to remove any video option card, if installed, and enable the internal SVGA controller. Once the BIOS update process successfully completes, you can then reinstall any video option card. You must install the new BIOS before installing another processor.



**NOTE:** In this chapter “processor” refers to a single Intel Pentium Pro processor, and “processor module” refers to a processor board with one or two processors and voltage regulators attached.

## Processor Compatibility in a Multiprocessor Environment

DIGITAL recommends using identical steppings/versions of processors within a multiprocessor system whenever possible, since these configurations have received the greatest amount of validation testing. Since it is not possible to validate every combination of processor steppings, each new stepping of a processor is fully validated only against the latest stepping. Refer to the readme file on the ServerWORKS Quick Launch CD-ROM to view the latest processor compatibility information.

### Configuration Guidelines

- Up to four processors (two processors per module) can be installed on the DIGITAL Server 7100.
- Use only DIGITAL-supplied processor modules.
- A processor upgrade can be done either by installing a higher-performance processor or a processor module.
- If a second processor module is not installed, a terminator card must be installed.
- Processor speed and cache size on a second processor module must be identical to the primary processor module.
- Before you begin, create an SCU diskette using the Quick Launch CD-ROM disc. You must run the SCU after installing any processor upgrade. This allows the server to recognize the new processor configuration.

## Create Diskettes from the Quick Launch CD-ROM

Perform this procedure to create a crisis recovery diskette, BIOS upgrade diskette, and a System Configuration Utility (SCU) diskette.

1. Power on the server and boot the ServerWORKS Quick Launch CD-ROM.
2. Select `User Documentation` and view the `Readme` file for compatibility issues.
3. From the Quick Launch Main Screen, select `Installations & Utilities` and then the `Utility` tab.
4. Insert a DOS-formatted diskette into drive A, choose `Crisis Recovery Diskette` and select `Continue`.
5. Insert another diskette , choose `BIOS Phlash Diskette` and select `Continue`.
6. Insert a third diskette, choose `System Configuration Utility (SCU)` diskette, and select `Continue`.
7. Select the BIOS version created in step 5, to create the appropriate SCU diskette.
8. Select `Exit` to end Quick Launch, and remove the CD-ROM.

## Upgrade the BIOS

If you need to update the BIOS because of a change in processor speed or cache size, you will first need to remove any video option card installed and enable the onboard SVGA controller in the SCU. Once the BIOS process completes successfully, you can then enable and reinstall the video option card. You **must** upgrade the BIOS before installing a second processor or processor module.



**NOTE:** The BIOS upgrade switch SW1-1 on the main logic board must be set to ON before you can upgrade the system BIOS.

## Update the BIOS

Use the following procedure to update the BIOS:

1. Power up and boot the server with the BIOS Upgrade diskette in drive A.
2. Change the directory to "upgrade":

```
A:\cd upgrade
```

3. At the MS-DOS prompt, type `phlash` and press Enter. The following message appears:

```
***Warning***
```

```
You are about to erase the system BIOS in this machine. Are you absolutely sure? Press "Y" to continue.
```

4. Select "Y", and the BIOS upgrade continues until the system reboots.



**NOTE:** DO NOT power down the system once this procedure has started. If the system loses power, or if at the end of this procedure the system fails, refer to "Troubleshooting – Using the Crisis Recovery Diskette if Necessary."

5. Remove the diskette from Drive A.

## Installing a Second Processor Module

To install a second processor module:

1. Shut down the operating system software.
2. Turn off your server.
3. Disconnect all external devices, ac power, and monitor power.
4. Unlock and remove the left side panel.
5. Carefully remove the terminator from the second processor module location and place in an antistatic package (see Figure 6-1).
6. Remove the processor module, two regulators, and retaining bracket from the antistatic package. Check switch J19 on the processor module for the appropriate switch settings.

*Refer to Chapter 5, "FRU Replacement," for switch descriptions and locations.*



7. Install the regulators in the appropriate slots on the processor module.

*Refer to "Installing a Processor and Voltage Regulator Module" later in this chapter.*

8. Install the second processor module. Install the retaining bracket and secure the captive screw located on the bracket to the chassis.



**CAUTION:** Make sure you align the processor module with the corresponding slot. Failure to do so might cause faulty processor module or server operation.

Also, the processor module has two rows of gold fingers on its edge that plug into the main logic board slot. The processor module must be pushed firmly in the slot to engage both rows of gold fingers or your server might not power up on boot.


9. Replace and lock the left side panel.



**NOTE:** Your server will not power up with the side panel removed.

10. Connect all external devices and restore power.

*Refer to the Run the SCU section later in this chapter to complete the installation.*

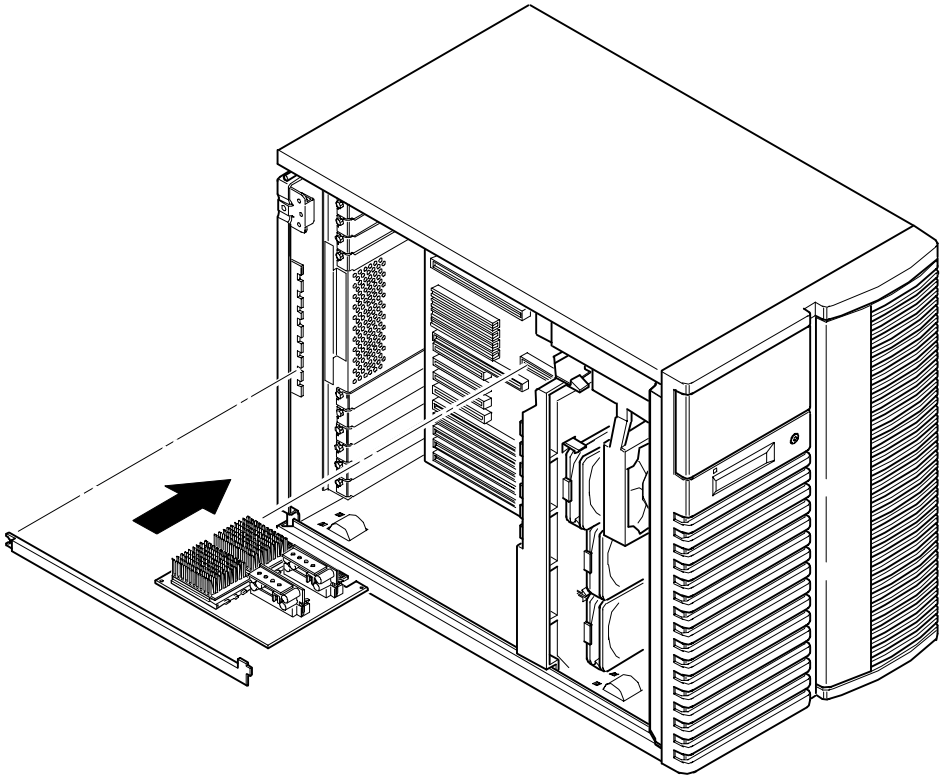

DEC00695-3

**Figure 6-2. Installing a Processor Module**




## Installing a Processor on a Processor Module

The following sections provide detailed instructions on how to install a processor on a processor module.

### Removing the Processor Module

1. Power down the server.
2. If applicable, remove the video expansion board.
3. Place the antistatic wrist strap on your wrist and connect the grounding clip to a non-painted metal surface of the server's chassis.
4. Using a Phillips screwdriver, unscrew and remove the processor module retaining bracket (Figure 6-3).
5. Grasping both ends of the processor module, carefully remove it from the main logic board and place it on an antistatic surface.


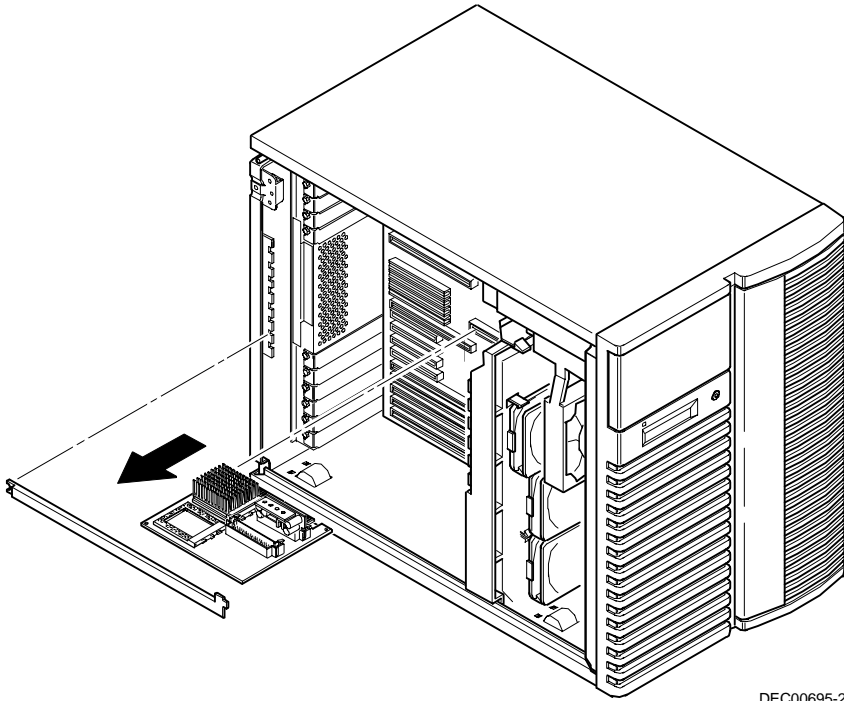


DEC00695-2

**Figure 6-3. Removing the Processor Module**


## Installing a Processor and Voltage Regulator Module (VRM)

1. Remove the processor from its shipping holder by removing the retaining clip. To remove the clip, press down firmly on the top of the clip. If needed, press down with a small screwdriver in the hole of the second style clip shown in Figure 6-4.

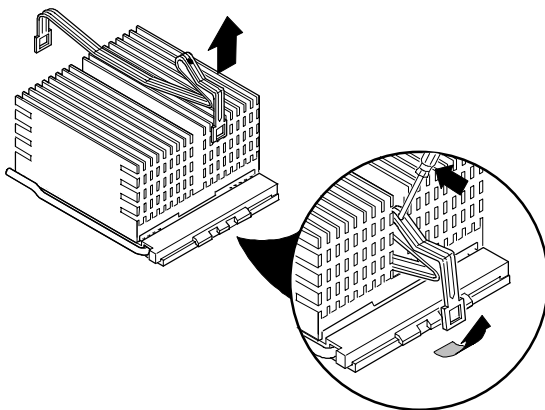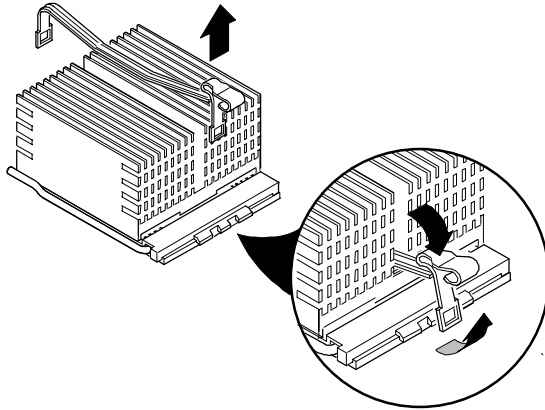

**Figure 6-4. Removing the Retaining Clip**

2. Remove the processor/heat sink assembly from its shipping holder. Do not pull the heat sink off of the processor. Use care not to bend the pins.

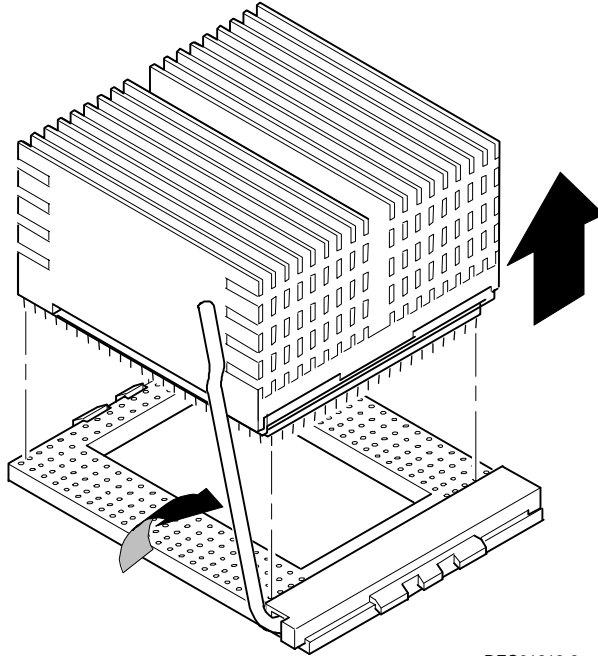


DEC01212-2

**Figure 6-5. Removing the Processor/Heat Sink Assembly**

3. On the processor module, lift up on the lever of the empty processor socket. Position the pins of the new processor in the socket of the processor module. Note that the pins are denser on one side for correct orientation.


4. Lower the lever to engage the pins (Figure 6-6).

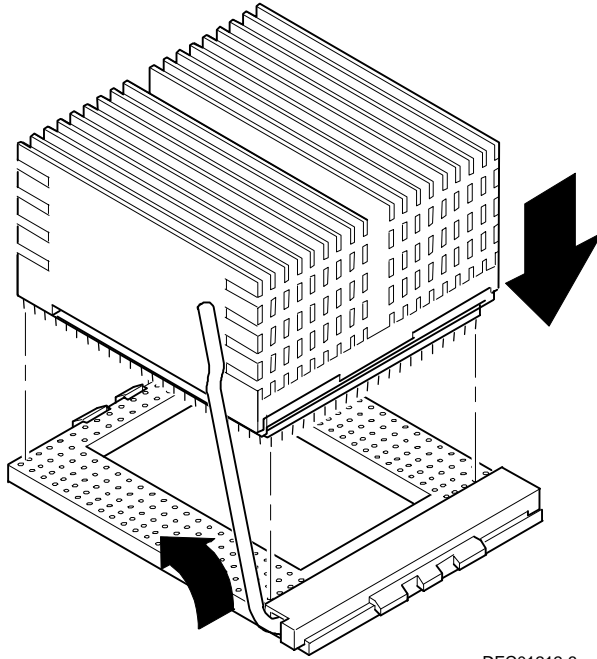


DEC01212-3

**Figure 6-6. Installing the New Processor**

5. Replace the retaining clip by installing the back side of the clip first, then pressing it into place as shown in Figure 6-7.

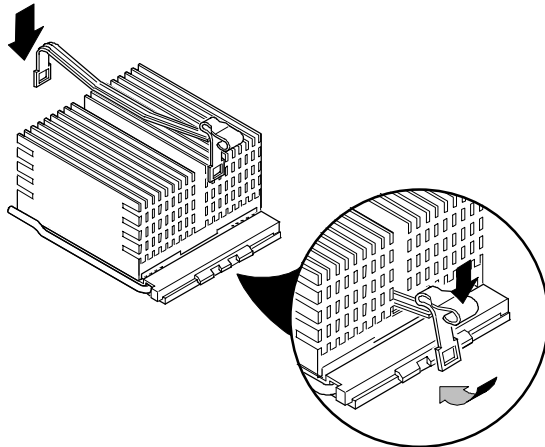

DEC01211-4

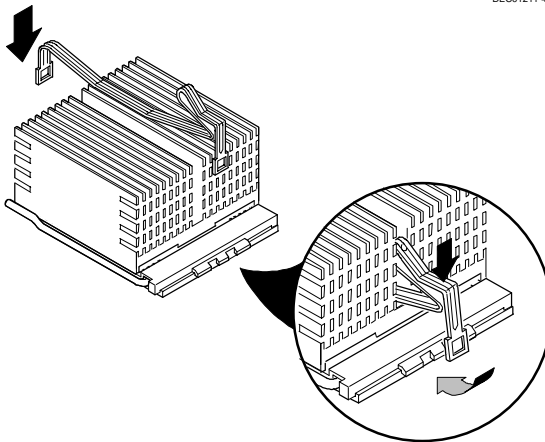


DEC01211-5

**Figure 6-7. Installing the Retaining Clip**

- 6. Remove the new VRM from its shipping container.
- 7. Install the VRM into the empty VRM socket (see Figure 6-8).



**NOTE:** A voltage regulator module must be installed for each processor that is installed in the server.

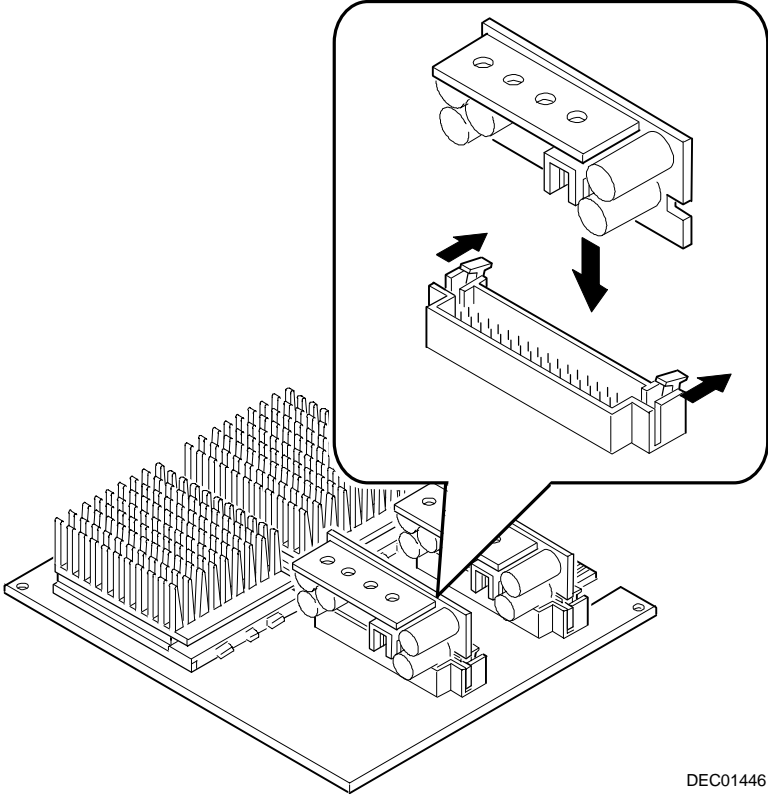


DEC01446

**Figure 6-8. Installing a VRM**

- 8. Set all appropriate switch settings on the processor module.  
*Refer to Chapter 5, "FRU Replacement," for switch locations.*

## Processor Module Upgrades

9. Install the processor module into the slot on the main logic board.
10. Secure the processor module to the main logic board using the previously removed retaining bracket and screw.

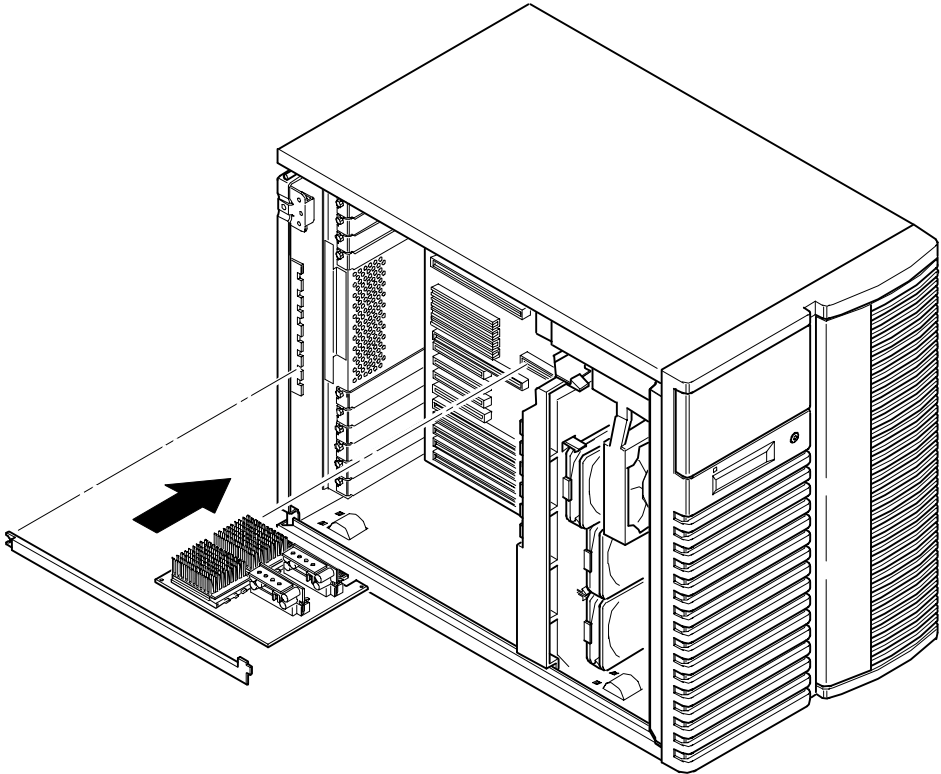

DEC00695-3

**Figure 6-9. Installing the Processor Module**



11. If applicable, replace the video expansion board.
12. Install the left side panel and lock the server. The server will not power up with the side panel removed.
13. Connect any cables and power cords previously removed to the back of the server.

## Run the System Configuration Utility (SCU)

Power up and boot the server from the SCU diskette. The SCU allows checking or changing the server's configuration. Run the SCU to configure the server for the new processor module.

To start and run the SCU:

1. Insert the SCU diskette into drive A and turn on the server. The diskette should boot automatically.
2. When the SCU title appears, press any key to continue. Afterwards, follow instructions to access the SCU main menu.
3. From the main menu, press the up or down arrow to highlight an item and then press Enter to select it. Press F1 at any time for help about a selection.
4. From the main menu select `Configure Computer` and then `View and Edit Details`. Example:
5. If a video option card is installed, select the `Advanced Control Group` and disable the `Embedded - PCI VGA controller`.
6. Select `Save and Exit` to configure the server for the CPU module.
7. When complete, remove the SCU diskette from drive A.
8. Move the video cable to the newly installed video card and reboot the server.

*Refer to Chapter 2, "Server Software and Utilities," in the System Reference manual for additional information on the SCU.*

## Troubleshooting

### Using the Crisis Recovery Diskette if Necessary

If the BIOS is updated, the crisis recovery diskette may be used **only** if the server's BIOS fails or if a BIOS upgrade is unsuccessful.

When using the Crisis Recovery diskette, remove any video option card and enable the on-board SVGA.

1. Turn off the server and set SW1-2 on the main logic board to ON (Recovery mode).
2. Insert the Crisis Recovery diskette into drive A and reboot the server.



**NOTE:** Remember to return switch SW1-2 to the Normal position after using the Crisis Recovery diskette.

## Introduction

This chapter provides a series of tables listing map and address information related to server memory and various main logic board devices (keyboard controller, interrupt controller, DMA controller, etc.).

The server memory and address locations are allocated at the factory to operate within a standard environment. However, due to the number of optional devices and/or expansion boards that are available, sometimes memory and address locations need to be changed. For example, some expansion boards require a specific memory location. If that location is already allocated, a memory conflict results and the expansion board will not operate as expected. Note that some memory, I/O and interrupt locations can be changed using the SCU.



**CAUTION:** Before changing any memory or address location, refer to the documentation supplied with the optional device, expansion board, or software application and make sure adequate information is available. If not, contact the option or software manufacturer for further information.

## Processor Memory Address Map

Address Range	Function	Size
00000 to 7FFFF	Main memory	512 KB
80000 to 9FFFF	Main/PCI/EISA/ISA memory	128 KB
A0000 to BFFFF	PCI/EISA/ISA video buffer memory	128 KB
C0000 to C7FFF	Video memory BIOS	32 KB
C8000 to DFFFF	PCI/EISA/ISA expansion board BIOS and buffer memory	96 KB
E0000 to E7FFF	EISA/ISA/PCI adapter RAM after POST completes Used by BIOS Setup during POST	32 KB
E8000 to EFFFF	EISA/ISA and buffer memory	32 KB
F0000 to FFFFF	System BIOS memory	64 KB

## Processor I/O Address Map

Range (hexadecimal)	Function
0000 to 0CF7	PCI I/O space
0CF8	Configuration space enable register
0CF9	Turbo and reset control register
0CFA to 6FFF	EISA/PCI I/O space
0CFC	Configuration space data register
0D00 to 6FFF	EISA/PCI I/O space
7000 to BFFF	PCI I/O space
C000 to CFFF	PCI configuration space
D000 to FFFF	PCI I/O space

## I/O Address Map

Range (hexadecimal)	Function
060 to 064	Keyboard/mouse controller
0F0 to 0FF	Math co-processor
1F0 to 1F7	IDE controller (if enabled)
278 to 27F	LPT2 (if enabled)
2E8	COM4 (if enabled)
2F8	COM2 (if enabled)
378 to 37F	LPT1 (if enabled)
3BC to 3BE	LPT3 (if enabled)
3E8	COM3 (if enabled)
3F0 to 3F7	Diskette controller (if enabled)
3F8	COM1 (if enabled)

## Server Interrupt Levels

Interrupt Number	Interrupt Source
IRQ1	Keyboard controller
IRQ3	COM2, COM4 (if enabled)
IRQ4	COM1, COM3 (if enabled)
IRQ6	Diskette controller (if enabled)
IRQ7	LPT1, LPT2, LPT3 (if enabled)
IRQ12	Mouse interrupt
IRQ13	Math co-processor

## DMA Channel Assignment

Channel	Controller	Function
0	1	Refresh
1	1	Not used
2	1	Diskette controller (if enabled)
3	1	Not used
4	2	Cascade DMA
5	2	Not used
6	2	Not used
7	2	Not used

## PCI Configuration Space Address Map

PCI Bus No.	Device No.	Device
0	14	OMC
0	19	Primary PCI bridge
0	2	EISA bridge
0	6	PCI slot 1 <sup>(1)</sup>
0	7	PCI slot 2
0	8	PCI slot 3
0	9	PCI slot 4
0	D	PCI VGA Trio32/64
0	1A	Secondary PCI bridge
1	1	PCI slot 5
1	2	PCI slot 6
1	3	PCI slot 7
1	4	PCI slot 8

<sup>(1)</sup> Install a VGA expansion board in PCI slot 1, if used.  
 PCI slots 5-8 are located on the secondary PCI bus.

**Service Notes**

**A**

---

Service Notes





## Service Notes