



---

## Sun Enterprise 250 Server Owner's Guide

---

A Sun Microsystems, Inc.  
Business  
901 San Antonio Road  
Palo Alto, , CA 94303-4900

Part No: 805-3389-11  
Revision A, June 1998

USA 650 960-1300 fax 650 969-9131



---

# Sun Enterprise 250 Server Owner's Guide

Part No: 805-3389-11  
Revision A, June 1998

Copyright 1998 Sun Microsystems, Inc. 901 San Antonio Road, Palo Alto, California 94303-4900 U.S.A. All rights reserved.

All rights reserved. This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Portions of this product may be derived from the UNIX<sup>®</sup> system, licensed from Novell, Inc., and from the Berkeley 4.3 BSD system, licensed from the University of California. UNIX is a registered trademark in the United States and in other countries and is exclusively licensed by X/Open Company Ltd. Third-party software, including font technology in this product, is protected by copyright and licensed from Sun's suppliers. RESTRICTED RIGHTS: Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

Sun, Sun Microsystems, the Sun logo, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the United States and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK<sup>®</sup> and Sun<sup>™</sup> Graphical User Interfaces were developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox Corporation in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a nonexclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

THIS PUBLICATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT.

Copyright 1997 Sun Microsystems, Inc., 901 San Antonio Road, Palo Alto, Californie 94303-4900 U.S.A. Tous droits réservés.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie et la décompilation. Aucune partie de ce produit ou de sa documentation associée ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Des parties de ce produit pourront être dérivées du système UNIX<sup>®</sup> licencié par Novell, Inc. et du système Berkeley 4.3 BSD licencié par l'Université de Californie. UNIX est une marque enregistrée aux Etats-Unis et dans d'autres pays, et licenciée exclusivement par X/Open Company Ltd. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Sun, Sun Microsystems, le logo Sun, et Solaris sont des marques déposées ou enregistrées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC, utilisées sous licence, sont des marques déposées ou enregistrées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

Les utilisateurs d'interfaces graphiques OPEN LOOK<sup>®</sup> et Sun<sup>™</sup> ont été développés de Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox Corporation pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique, cette licence couvrant aussi les licenciés de Sun qui mettent en place les utilisateurs d'interfaces graphiques OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

CETTE PUBLICATION EST FOURNIE "EN L'ETAT" SANS GARANTIE D'AUCUNE SORTE, NI EXPRESSE NI IMPLICITE, Y COMPRIS, ET SANS QUE CETTE LISTE NE SOIT LIMITATIVE, DES GARANTIES CONCERNANT LA VALEUR MARCHANDE, L'APTITUDE DES PRODUITS A REPENDRE A UNE UTILISATION PARTICULIERE OU LE FAIT QU'ILS NE SOIENT PAS CONTREFAISANTS DE PRODUITS DE TIERS.



# Contents

---

**Regulatory Compliance Statements** xxii

**Preface** xxviii

- 1. System Overview** 1
  - About the Sun Enterprise 250 Server 1
  - Locating Front Panel Features 3
  - Locating Rear Panel Features 5
  - About the Status and Control Panel 6
- 2. Photographic Tour of System** 11
  - System View 11
  - Internal System Components 13
  - Removable Media Components 15
  - Main Logic Board Components 17
  - Side Access Panel 19
  - Disk Drives 20
  - Removable Media Assembly 21
  - Diskette Drive 22
  - CD-ROM Drive 23
  - Tape Drive 25
  - Main Logic Board 26

	CPU Modules	28
	Memory Modules	29
	PCI Cards	30
	SSP Paddle Card and Cable	31
	NVRAM/TOD Module	32
	Power Supply	33
	Power Distribution Board	35
	Disk Cage Assembly	37
	UltraSCSI Backplane	39
	Fan Tray Assembly	40
	LED/Keyswitch Assembly	41
<b>3.</b>	<b>System Setup</b>	<b>43</b>
	About the Parts Shipped to You	43
	How to Install the Enterprise 250 Server	44
	Before You Begin	44
	What to Do	44
	How to Install the Security Lock Block	48
	What to Do	48
	About Setting Up a Console	49
	How to Attach an Alphanumeric Terminal	50
	Before You Begin	50
	What to Do	50
	What Next	51
	How to Configure a Local Graphics Console	51
	Before You Begin	51
	What to Do	52
	What Next	53
<b>4.</b>	<b>Preparing to Install or Replace Parts</b>	<b>55</b>

How to Power Off the System	55
What to Do	55
How to Power On the System	56
Before You Begin	56
What to Do	57
How to Initiate a Reconfiguration Boot	58
Before You Begin	58
What to Do	59
What Next	60
How to Remove the Side Access Panel	60
Before You Begin	60
Video Demonstration	60
What to Do	61
What Next	62
How to Install the Side Access Panel	62
Before You Begin	62
Video Demonstration	62
What to Do	63
What Next	64
How to Avoid Electrostatic Discharge	64
Before You Begin	64
What to Do	65
Reference for Installation and Service: Tools Required	66
<b>5. Hardware Configuration</b>	<b>69</b>
About Reliability, Availability, and Serviceability Features	69
Error Correction and Parity Checking	70
Status LEDs	70
Hot-Pluggable Disk Drives	71

Support for RAID 0, RAID 1, and RAID 5 Disk Configurations	71
Environmental Monitoring and Control	71
N+1 Power Supply Redundancy	73
Hot-Swappable Power Supplies	73
Automatic System Recovery (ASR)	73
Hardware Watchdog Mechanism	74
Four Levels of Diagnostics	74
Remote System Control (RSC)	75
About Memory	76
Configuration Rules	77
About CPU Modules	78
Configuration Rules	79
About Peripheral Component Interconnect (PCI) Buses	80
Configuration Rules	82
About Internal Disk Drives	83
Configuration Rules	85
About Power Supplies	87
About the Standard Ethernet Port	89
About the Serial Ports	90
About the Parallel Port	90
About the Main Logic Board Jumpers	90
About Serial Port Jumpers	92
About Flash PROM Jumpers	93
About the SCSI Removable Media Bays and the External SCSI Port	95
Target Devices	95
Bus Length	96
External SCSI Cabling and Termination	97
Multi-initiator Support	98

Configuration Rules 98

**6. Removing and Installing Main Logic Board Components 99**

How to Remove the Main Logic Board 100

Before You Begin 100

Video Demonstration 100

What to Do 100

What Next 102

How to Install the Main Logic Board 102

Before You Begin 102

Video Demonstration 102

What to Do 102

What Next 104

How to Remove a Memory Module 105

Before You Begin 105

What to Do 105

What Next 106

How to Install a Memory Module 107

Before You Begin 107

What to Do 107

What Next 108

How to Remove a CPU Module 109

Before You Begin 109

What to Do 109

What Next 110

How to Install a CPU Module 110

Before You Begin 110

What to Do 111

What Next 112

How to Remove a PCI Card	112
Before you Begin	112
Video Demonstration	112
What to Do	112
What Next	113
How to Install a PCI Card	114
Before You Begin	114
Video Demonstration	114
What to Do	114
What Next	116
How to Remove the SSP Paddle Card	117
Before you Begin	117
Video Demonstration	117
What to Do	117
What Next	119
How to Install the SSP Paddle Card	120
Video Demonstration	120
What to Do	120
What Next	122
How to Remove the NVRAM/TOD Module	123
Before You Begin	123
What to Do	123
What Next	124
How to Install the NVRAM/TOD Module	124
What to Do	125
What Next	125
<b>7. Removing and Installing Storage Devices</b>	<b>127</b>
How to Remove the Removable Media Assembly (RMA)	128

Before You Begin	128
Video Demonstration	128
What to Do	128
What Next	131
How to Install the Removable Media Assembly (RMA)	132
Video Demonstration	132
What to Do	132
What Next	135
How to Remove a Disk Drive	135
Before You Begin	135
What to Do	135
What Next	137
How to Install a Disk Drive	137
Before You Begin	137
What to Do	137
What Next	139
How to Remove a CD-ROM Drive or Tape Drive	139
Before You Begin	139
Video Demonstration	140
What to Do	140
What Next	141
How to Install a CD-ROM Drive or Tape Drive	141
Before You Begin	141
Video Demonstration	142
What to Do	142
What Next	144
How to Remove the Diskette Drive	144
Before You Begin	144

	Video Demonstration	144
	What to Do	144
	What Next	146
	How to Install the Diskette Drive	146
	Before You Begin	146
	Video Demonstration	146
	What to Do	146
	What Next	148
<b>8.</b>	<b>Removing and Installing Miscellaneous Assemblies</b>	<b>149</b>
	How to Remove the Fan Tray Assembly	150
	Before You Begin	150
	What to Do	150
	What Next	151
	How to Install the Fan Tray Assembly	151
	What to Do	151
	What Next	153
	How to Remove a Power Supply	153
	Before You Begin	153
	What to Do	154
	What Next	155
	How to Install a Power Supply	155
	Before You Begin	155
	What to Do	155
	What Next	156
	How to Remove the LED/Keyswitch Assembly	157
	Before You Begin	157
	Video Demonstration	157
	What to Do	157

What Next	159
How to Install the LED/Keyswitch Assembly	160
Video Demonstration	160
What to Do	160
What Next	162
How to Remove the Disk Cage Assembly	163
Before You Begin	163
What to Do	163
What Next	166
How to Install the Disk Cage Assembly	167
What to Do	167
What Next	170
How to Remove the Floor Casters Assembly	170
Before You Begin	170
What to Do	171
What Next	172
How to Install the Floor Casters Assembly	172
Before You Begin	172
What to Do	173
How to Remove the Chassis Foot Glides	174
Before You Begin	174
What to Do	175
What Next	176
How to Install the Chassis Foot Glides	176
Before You Begin	176
What to Do	176
<b>9. Removing and Installing Backplanes and Cables</b>	<b>179</b>
How to Remove the UltraSCSI Backplane	179

Before You Begin	179
What to Do	180
What Next	181
How to Install the UltraSCSI Backplane	182
What to Do	182
What Next	183
How to Remove the Power Distribution Board	184
Before You Begin	184
What to Do	184
What Next	185
How to Install the Power Distribution Board	185
What to Do	185
What Next	187
How to Connect the System Cables	187
Before You Begin	187
What to Do	187
What Next	193
<b>10. Administration and Networking</b>	<b>195</b>
About Network Interface Options	195
How to Configure the Standard Ethernet Interface	196
Before You Begin	196
What to Do	197
What Next	197
How to Add an Ethernet Interface	198
Before You Begin	198
What to Do	198
What Next	200
How to Attach a Twisted-Pair Ethernet (TPE) Cable	200

Before You Begin	200
What to Do	201
What Next	201
How to Attach an MII Ethernet Transceiver	202
Before You Begin	202
What to Do	202
What Next	204
How to Boot the System Using the Standard Ethernet Interface	204
Before You Begin	204
What to Do	205
What Next	205
How to Boot the System Using a PCI-Based Ethernet Interface	205
Before You Begin	205
What to Do	206
What Next	207
How to Select the Boot Device	207
Before You Begin	207
What to Do	208
What Next	209
About Disk Array Configurations and Concepts	209
Disk Concatenation	210
RAID 1: Disk Mirroring	210
RAID 0: Disk Striping	211
RAID 5: Disk Striping With Parity	211
Hot Spares	211
Hot Plug	212
For More Information	212
<b>11. Using Storage Devices</b>	<b>213</b>

How to Prevent Overwriting of a Diskette	214
What to Do	214
What Next	214
How to Allow Writing to a Diskette	215
What to Do	215
What Next	215
How to Insert a Diskette Into Its Drive	216
What to Do	216
What Next	216
How to Remove a Diskette From Its Drive	217
Before You Begin	217
What to Do	217
How to Use <code>fdformat</code> to Format a New Diskette	217
Before You Begin	217
What to Do	218
How to Use <code>fdformat</code> to Reformat a Used Diskette	218
Before You Begin	218
What to Do	219
How to Copy Files To and From a Diskette	220
What to Do	220
How to Insert a Compact Disc Into the Drive	220
What to Do	220
What Next	221
How to Eject a Compact Disc With Software Commands	222
Before You Begin	222
What to Do	222
What Next	222
How to Eject a Compact Disc Manually	223

What to Do	223
What Next	223
How to Eject a Compact Disc in an Emergency	224
Before You Begin	224
What to Do	224
What Next	225
About the Tape Drive and Tape Cartridges	225
Handling and Storing Tape Cartridges	226
Thermal Conditioning	226
How to Insert a Tape Cartridge	226
What to Do	226
What Next	227
How to Remove a Tape Cartridge	228
Before You Begin	228
What to Do	228
What Next	229
How to Control the Tape Drive	229
What to Do	229
How to Clean the Tape Drive	229
Before You Begin	229
What to Do	229
What If Your CD Drive Can't Read a CD?	230
Before You Begin	230
What to Do	230
What Next	231
<b>12. Diagnostics and Troubleshooting</b>	<b>233</b>
About Diagnostic Tools	234
About Power-On Self-Test (POST) Diagnostics	235

How to Use POST Diagnostics	236
Before You Begin	237
What to Do	237
Results	237
About OpenBoot Diagnostics (OBDiag)	239
OBDiag Menu	240
OBDiag Commands	241
OBDiag Configuration Variables	242
OBDiag Test Descriptions	244
How to Use OpenBoot Diagnostics (OBDiag)	248
What to Do	248
How to Set the Diagnostic Level for POST and OBDiag	250
Before You Begin	250
What to Do	250
About SunVTS Software	251
For More Information	252
How to Check Whether SunVTS Software Is Installed	252
What to Do	253
What Next	253
How to Use SunVTS Software	253
Before You Begin	253
What to Do	254
Results	255
About Solstice SyMON Software	255
About Remote System Control (RSC)	256
For More Information	256
About Troubleshooting Your System	257
Error Indications	257

Software Commands	261
About Diagnosing Specific Problems	267
Network Communications Failure	267
Power-on Failures	269
Video Output Failure	270
Disk or CD-ROM Drive Failure	270
SCSI Controller Failures	271
Power Supply Failure	272
DIMM Failure	272
Environmental Failures	273
<b>A. Connector Pinouts</b>	<b>277</b>
Reference for the Serial Port A and B Connectors	277
Reference for the Parallel Connector	279
Reference for the SCSI Connector	280
Reference for the Keyboard/Mouse Connector	282
Reference for the Twisted-Pair Ethernet (TPE) Connector	283
Reference for the Media Independent Interface (MII) Ethernet Connector	284
Reference for the 13W3 Video Connector	285
Reference for the RSC/SSP Serial Port Connector	287
Reference for the RSC/SSP Twisted-Pair Ethernet (TPE) Connector	288
<b>B. System Specifications</b>	<b>291</b>
Reference for System Specifications	291
Physical Specifications	291
Clearance and Service Access Specifications	292
Environmental Requirements	292
Agency Compliance Specifications	293
Electrical Specifications	294
<b>C. Safety Precautions</b>	<b>297</b>

Reference for Safety Precautions	297
Safety Precautions	297
Symbols	297
Modifications to Equipment	298
Placement of a Sun Product	298
SELV Compliance	298
European Ergonomics	299
Power Cord Connection	299
Lithium Battery	299
System Unit Cover	300
Laser Compliance Notice	300
Einhaltung sicherheitsbehördlicher Vorschriften	300
Sicherheitsvorkehrungen	300
Symbole	301
Aufstellung von Sun-Geräten	301
Einhaltung der SELV-Richtlinien	302
Ergonomie-Richtlinien	302
Anschluß des Netzkabels	302
Lithiumbatterie	303
Gehäuseabdeckung	303
Einhaltung der Richtlinien für Laser	303
Conformité aux normes de sécurité	303
Mesures de sécurité	304
Symboles	304
Modification du matériel	305
Positionnement d'un produit Sun	305
Conformité SELV	305
Ergonomie européenne	305

	Connexion du cordon d'alimentation	305
	Batterie au lithium	306
	Couvercle	306
	Conformité aux certifications Laser	306
	Normativas de seguridad	307
	Precauciones de seguridad	307
	Símbolos	307
	Modificaciones en el equipo	308
	Ubicación de un producto Sun	308
	Cumplimiento de la normativa SELV	308
	Normativa ergonómica europea	309
	Conexión del cable de alimentación eléctrica	309
	Batería de litio	310
	Tapa de la unidad del sistema	310
	Aviso de cumplimiento con requisitos de láser	310
	Nordic Lithium Battery Cautions	311
	Norge	311
	Sverige	311
	Danmark	311
	Suomi	311
<b>D.</b>	<b>Illustrated Parts Breakdown</b>	<b>313</b>
	Illustrated Parts Breakdown	313
	Assembly Illustrations	316
<b>E.</b>	<b>Video Player Help</b>	<b>323</b>
	Do You Have a Problem Playing Video?	323
	Requirements for Playing Video	324
	Installing the ShowMe TV Player on Solaris Systems	325
	How to Install ShowMe TV on Your System	325

Configuring Browsers to Use ShowMe TV	327
Configuring Netscape to Use ShowMe TV	327
Configuring HotJava to Use ShowMe TV	330
Improving Online Video Performance	331
Improving File Loading Time	331
Avoiding Using Proxy Servers to Access the AnswerBook2 Server	331
Quitting the Video Player	333
Adjusting the Brightness of ShowMe TV Files	334
<b>F. Index to Videos</b>	<b>335</b>

# Regulatory Compliance Statements

---

Your Sun product is marked to indicate its compliance class:

- Federal Communications Commission (FCC) — USA
- Department of Communications (DOC) — Canada
- Voluntary Control Council for Interference (VCCI) — Japan

Please read the appropriate section that corresponds to the marking on your Sun product before attempting to install the product.

---



**Caution** - For important safety precautions to follow when installing or servicing this system, please see Appendix C.

---

---

## FCC Class A Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause

harmful interference in which case the user will be required to correct the interference at his own expense.

**Shielded Cables:** Connections between the system and its peripherals must be made using shielded cables in order to maintain compliance with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted-pair (UTP) cables.

**Modifications:** Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

---

## FCC Class B Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

**Shielded Cables:** Connections between the system and its peripherals must be made using shielded cables in order to maintain compliance with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted pair (UTP) cables.

**Modifications:** Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

---

## DOC Class A Notice - Avis DOC, Classe A

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

---

## DOC Class B Notice - Avis DOC, Classe B

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

---

### VCCI基準について

#### 第一種VCCI基準について

第一種VCCIの表示があるワークステーションおよびオプション製品は、第一種情報装置です。これらの製品には、下記の項目が該当します。

この装置は、第一種情報装置（商工業地域において使用されるべき情報装置）で商工業地域での電波障害防止を目的とした情報処理技術者等電波障害自主規制協議会（VCCI）基準に適合しております。したがって、本製品を、住宅地域または住宅地域に隣接した地域でご使用になりますと、ラジオ、テレビジョン受信機等に電波障害を与えることがあります。取り扱い説明書に従って正しくお取り扱いください。

## 第二種VCCI基準について

第二種VCCIの表示  があるワークステーションおよびオプション製品は、第二種情報装置です。これらの製品には、下記の項目が該当します。

この装置は、第二種情報装置(住宅地域または住宅地域に隣接した地域において使用されるべき情報装置)で住宅地域での電波障害防止を目的とした情報処理装置等電波障害自主規制協議会(VCCI)基準に適合しております。しかし、本製品を、ラジオ、テレビジョン受信機に近接してご使用になりますと、受信障害の原因となることがあります。

取り扱い説明書に従って正しくお取り扱いください。

## Declaration of Conformity

Compliance ID: C250

Product Name: Sun Enterprise 250

EMC

USA – FCC Class B

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference that may cause undesired operation.

European Union

This equipment complies with the following requirements of the EMC Directive 89/336/EEC:

**TABLE P-1**

EN55022 / CISPR22 (1985)	Class B	Curtis-Straus LLC, Report No: 970643
EN50082-1		
	IEC801-2 (1991)	8 kV (Direct), 15 kV (Air)
	IEC801-3 (1984)	10 V/m, 80% AM at 1KHz
	IEC801-4 (1988)	4.0 kV Power Lines, 1 kV Signal Lines
	IEC801-5	2 kV Power Lines (L-L, L-G)  1 kV Signal Lines (L-G, Shield-G)
EN61000-3-2/IEC1000-3-2 (1994)	Pass	

**Safety**

This equipment complies with the following requirements of the Low Voltage Directive 73/23/EEC:

**TABLE P-2**

EC Type Examination Certificates:

EN60950/ IEC950 (1993)	TUV GS Certificate # S9871518 – Model Sun Enterprise 250, floor-mount unit
	TUV Bauart Certificate # R9871519 – Model Sun Enterprise 250R, rack-mount unit
EN60950 w/ Nordic Deviations	CB Scheme Certificate # UL2214-113363/USA

**Supplementary Information**

This product was tested and complies with all the requirements for the CE Mark.

**TABLE P-3**

/s/ Wayne L. Bolivar      2/18/98  
Manager, Qualification Engineering  
Sun Microsystems Computer Company  
4 Omni Way UCHL04-203  
Chelmsford, MA 01824 USA  
Tel: (508) 442-0599  
Fax: (508) 250-5059

/s/ John Shades      2/18/98  
Quality Assurance Manager  
Sun Microsystems Limited  
Springfield, Linlithgow  
West Lothian, EH49 7LR  
Scotland, United Kingdom  
Tel: 1506 670000  
Fax: 1506 672323

# Preface

---

*Sun Enterprise 250 Server Owner's Guide* answers your questions about setting up and running the Sun Enterprise 250 server. Features and options, installation, troubleshooting, parts replacement, and network administration information for the Enterprise 250 server are covered in this manual.

This manual presents information in a modular format designed to answer the type of questions that you might ask while installing, configuring, and using the Enterprise 250 server. Look at the titles of the modules and you'll find the cue words that direct you to the categories of questions and answers, such as:

- How to . . . How do I do something?
- About . . . Is there more information about this topic?
- Reference for . . . Where can I find reference material for something?

You determine how much or how little of the information you need to read.

Using the table of contents or the task list on the first page of each chapter, you can quickly find a specific topic or task. The information modules are brief; however, they are interrelated and refer to other modules that you may want to read. For instance, if you're installing a memory module and you're already familiar with the task, you could go to "How to Install a Memory Module" and follow the installation procedure. But if you need more background information before performing the task, you should first read "About Memory."

---

## Using UNIX Commands

This document may not contain information on basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices.

See one or more of the following for this information:

- *Solaris 2.x Handbook for SMCC Peripherals*
- AnswerBook™ online documentation for the Solaris™ 2.x software environment
- Other software documentation that you received with your system

---

## Shell Prompts

The following table shows the default system prompt and superuser prompt for the C shell, Bourne shell, and Korn shell.

TABLE P-1

Shell	Prompt
C shell	<i>machine_name%</i>
C shell superuser	<i>machine_name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

---

## Conventions

The following table describes the typographic conventions used in this book.

TABLE P-2

Typeface or Symbol	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output.	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output.	% <code>su</code> Password:
AaBbCc123	Book titles, new words or terms, words to be emphasized. Command-line variable; replace with a real name or value.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be <code>root</code> to do this. To delete a file, type <code>rm filename</code> .

The table below provides definitions of the terms “left” and “right” as used in this book.

TABLE P-3

Term	Meaning
Left	The side to your left as you face the front of the system; the side that contains the system's main logic board.
Right	The side to your right as you face the front of the system.

## Related Documentation

The following documents contain topics that relate to the information in the *Sun Enterprise 250 Server Owner's Guide*.

TABLE P-4

Application	Title
Performing diagnostic tests	<i>SunVTS User's Guide</i>
	<i>SunVTS Quick Reference Card</i>
	<i>SunVTS Test Reference Manual</i>
	<i>Solstice SyMON User's Guide</i>
System and network administration	<i>Solaris System Administrator AnswerBook</i>
	<i>SPARC: Installing Solaris Software</i>
Using operating system software	<i>Solaris User's Guide</i>
Miscellaneous	<i>Solaris on Sun Hardware AnswerBook</i>
	<i>Solaris 2.x Handbook for SMCC Peripherals</i>
	<i>SMCC SPARC Hardware Platform Guide</i>

---

## Cautions




---

**Caution** - This equipment contains lethal voltage. Accidental contact can result in serious injury or death.

---




---

**Caution** - Improper handling by unqualified personnel can cause serious damage to this equipment. Unqualified personnel who tamper with this equipment may be held liable for any resultant damage to the equipment.

---



---

**Caution** - Use proper electrostatic discharge (ESD) grounding techniques when handling components. Wear an antistatic wrist strap and use an ESD-protected mat. Store ESD-sensitive components in antistatic bags before placing them on any surface.

---



---

**Caution** - Individuals servicing this equipment must observe all safety precautions and ensure compliance with skill level requirements, certification, and all applicable local and national laws. For additional details, see Appendix C.

---

Some procedures in this document must be performed by trained maintenance providers. Only people who have been trained at the Sun Microsystems™ training facilities (or by Sun Microsystems affiliates) and have been certified as required by local and national laws are considered qualified.

---

## Ordering Sun Documents

SunDocsSM is a distribution program for Sun Microsystems technical documentation. Contact SunExpress for easy ordering and quick delivery. You can find a listing of available Sun documentation on the Web.

TABLE P-5

Country	Telephone	Fax
Belgium	02-720-09-09	02-725-88-50
Canada	1-800-873-7869	1-800-944-0661
France	0800-90-61-57	0800-90-61-58
Germany	01-30-81-61-91	01-30-81-61-92
Holland	06-022-34-45	06-022-34-46
Japan	0120-33-9096	0120-33-9097
Luxembourg	32-2-720-09-09	32-2-725-88-50
Sweden	020-79-57-26	020-79-57-27
Switzerland	0800-55-19-26	0800-55-19-27

TABLE P-5 (continued)

United Kingdom	0800-89-88-88	0800-89-88-87
United States	1-800-873-7869	1-800-944-0661

---

World Wide Web: <http://www.sun.com/sunexpress/>

---

---

## Sun Documentation on the Web

The `docs.sun.com` web site enables you to access Sun technical documentation on the Web. You can browse the `docs.sun.com` archive or search for a specific book title or subject at:

<http://docs.sun.com>.

---

## Sun Welcomes Your Comments

We are interested in improving our documentation and welcome your comments and suggestions. You can email your comments to us at:

[smcc-docs@sun.com](mailto:smcc-docs@sun.com).

Please include the part number of your document in the subject line of your email.

## System Overview

---

This chapter introduces you to the Sun Enterprise 250 server and explains some of its features. Information covered in this chapter includes:

- “About the Sun Enterprise 250 Server” on page 1
- “Locating Front Panel Features” on page 3
- “Locating Rear Panel Features” on page 5
- “About the Status and Control Panel” on page 6

---

## About the Sun Enterprise 250 Server

The Sun Enterprise 250 server is a high-performance, shared memory, symmetric-multiprocessing server system. It is designed around Sun’s high-speed Ultra Port Architecture (UPA) cross-bar system interconnect and Sun’s UltraSPARC™ II processors to deliver outstanding overall system performance.

The system is housed in a roll-around tower enclosure, which measures 20.4 inches high, 10.3 inches wide, and 27.1 inches deep (51.7 cm x 26.2 cm x 68.8 cm). The system has a maximum weight of 118 lb (53 kg).

Processing power is provided by up to two modular UltraSPARC II CPUs, each of which comes with 1 Mbyte or 2 Mbytes of local high-speed external cache memory. The system UPA’s clock rate synchronizes automatically to the clock rate of the installed CPUs, and the UPA bus operates at a clock rate that is one third or one fourth that of the CPU modules. For more information about CPU modules, see “About CPU Modules” on page 78.

System main memory is provided by up to sixteen memory DIMM modules, each of which is capable of storing 32, 64, or 128 Mbytes of data. Total main memory is

expandable up to 2 gigabytes. To enhance memory I/O performance, the system transfers 64 bytes of data into or from memory on each memory transfer. For more information about system memory, see “About Memory” on page 76.

System I/O is handled by two separate Peripheral Component Interconnect (PCI) buses. These industry-standard buses support all main logic board I/O and up to four PCI interface cards. One PCI bus operates at a 33-MHz clock rate and supports up to three PCI cards, while the other bus can operate at either 33-MHz or 66-MHz and supports one PCI card. All PCI cards plug into slots provided on the system’s main logic board. For more information about PCI buses, see “About Peripheral Component Interconnect (PCI) Buses” on page 80.

Internal disk storage is provided by up to six hot-swappable 1-inch or 1.6-inch high, 3.5-inch wide, UltraSCSI disk drives. All six drives are supported by a 40-Mbyte per second UltraSCSI interface provided directly on the system’s main logic board. For more information about disk storage, see “About Internal Disk Drives” on page 83.

External multi-disk storage subsystems and RAID storage arrays can be supported by installing single-channel or multi-channel PCI host adapter cards along with the appropriate system software. Software drivers supporting SCSI and other types of devices are included in the Solaris operating environment.

An internal CD-ROM drive is standard on the Enterprise 250 server. The CD-ROM drive has multimedia features, which include multi-session capability and fast access for image and video data. An optional 1.44-Mbyte, 3.5-inch diskette drive is also available.

A 5.25-inch half-height (1.6-inch) bay is provided at the front of the system, which may be used to house a removable media SCSI device—such as an 8-mm tape drive, a 4-mm DDS-2 or DDS-3 tape drive, or a quarter-inch cassette tape drive. For additional details, see “About the SCSI Removable Media Bays and the External SCSI Port” on page 95.

Up to four external tape devices can be attached to the standard 68-pin Fast/Wide SCSI port provided on the system’s rear panel. Additional external tape devices can be supported with appropriate PCI host adapter cards.

The Enterprise 250 server can easily be connected to either a 10-Mbps or a 100-Mbps Ethernet by means of an auto-sensing Ethernet interface provided on the system’s main logic board. Additional Ethernet interfaces or connections to other networks, such as FDDI, ATM, or token ring, can be provided by installing the appropriate PCI interface cards. For more information, see Chapter 10.

The system console device can be either a standard ASCII character terminal or a local windowing subsystem. The ASCII terminal connects to the one of the system’s two serial ports, while a local graphics console requires installation of a PCI frame buffer card, monitor, keyboard, and mouse. System administration can also be performed from a remote workstation connected to the Ethernet.

The Enterprise 250 server provides two serial communications ports through a pair of DB-25 connectors located on the rear panel. It also provides one external, 2-Mbyte

per second, bidirectional, Centronics-compatible, EPP parallel port for connecting the system to a local printer or other compatible parallel device.

Power is provided by one or two 360-watt power supplies. System configurations with two power supplies provide both N+1 redundancy and full hot swap capability. For more information about the power supplies, see “About Power Supplies” on page 87.

The Enterprise 250 server can easily be installed in a standard 19-inch rack. An optional rackmounting kit is available for installing the server into any 29- to 34-inch deep EIA 19-inch rack with at least 6 rack units (10.5 inches) of vertical mounting space and sufficient load-bearing capacity.

System reliability, availability, and serviceability are enhanced by features that include:


- Error correcting code on memory and all data paths
- Parity checking on all address buses
- Front panel status indicator lights
- Disk drive health indicator lights
- Hot-pluggable disk drives with easy front access
- Support for RAID 0, 1, and 5 implementations
- Thermal sensing and over-temperature protection
- Power system monitoring and fault protection
- N+1 power supply redundancy
- Hot-swap power supplies with easy rear access
- Automatic system recovery
- Four levels of system diagnostics
- Easy front or side access to all internal replaceable components
- Remote System Control (RSC)

For additional details, see “About Reliability, Availability, and Serviceability Features” on page 69.

---

## Locating Front Panel Features

The illustration below shows the system features that are accessible from the front panel with the disk access door open.

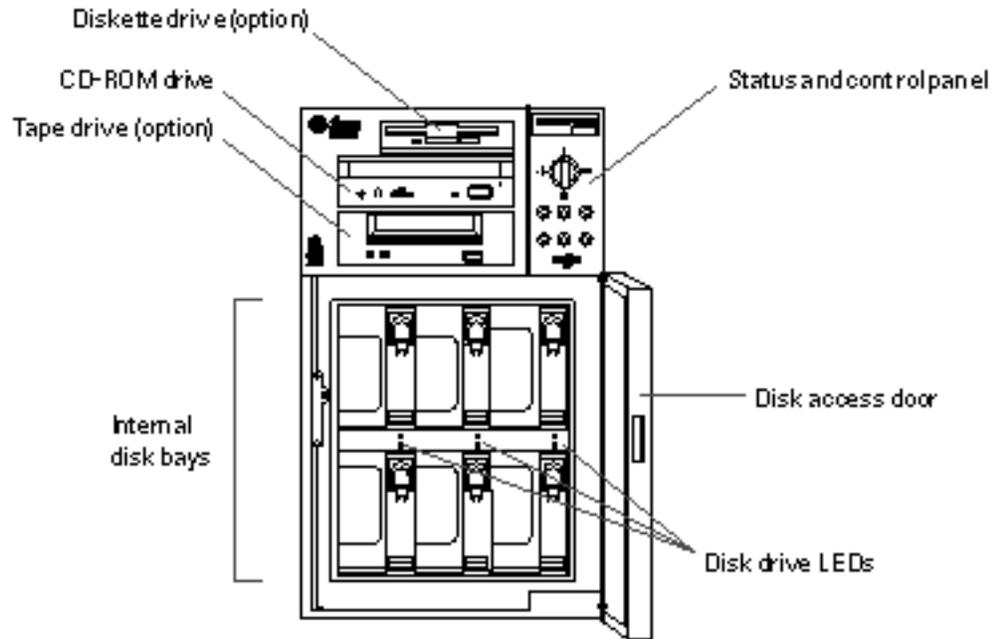

*Figure 1-1*

For more information about front panel controls and indicators, see “About the Status and Control Panel” on page 6.

Access to the system’s internal disk drives is through a large hinged door at the front of the system. The disk access door features a key lock for added security.

When the key is in the vertical position, the door is unlocked. Make sure that the key is in this position before you close the door. To lock the door, simply turn the key 90 degrees counterclockwise and remove the key. This same key also controls the front panel keyswitch.

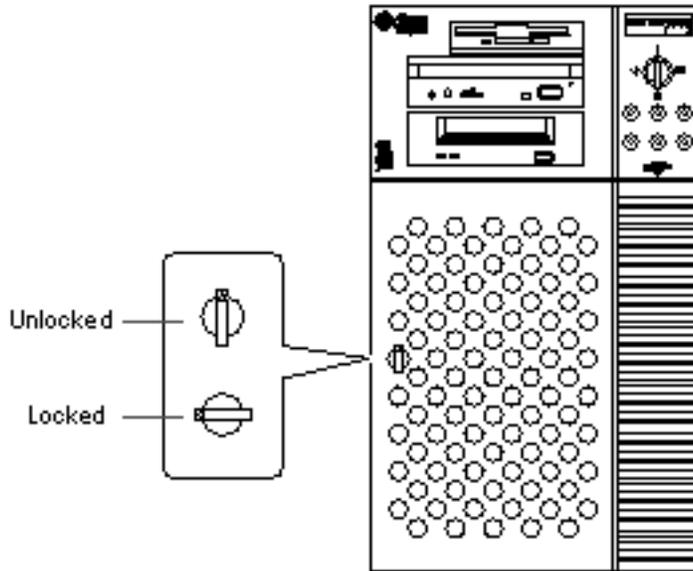


Figure 1-2

---

## Locating Rear Panel Features

The illustration below shows the system features that are accessible from the rear panel.

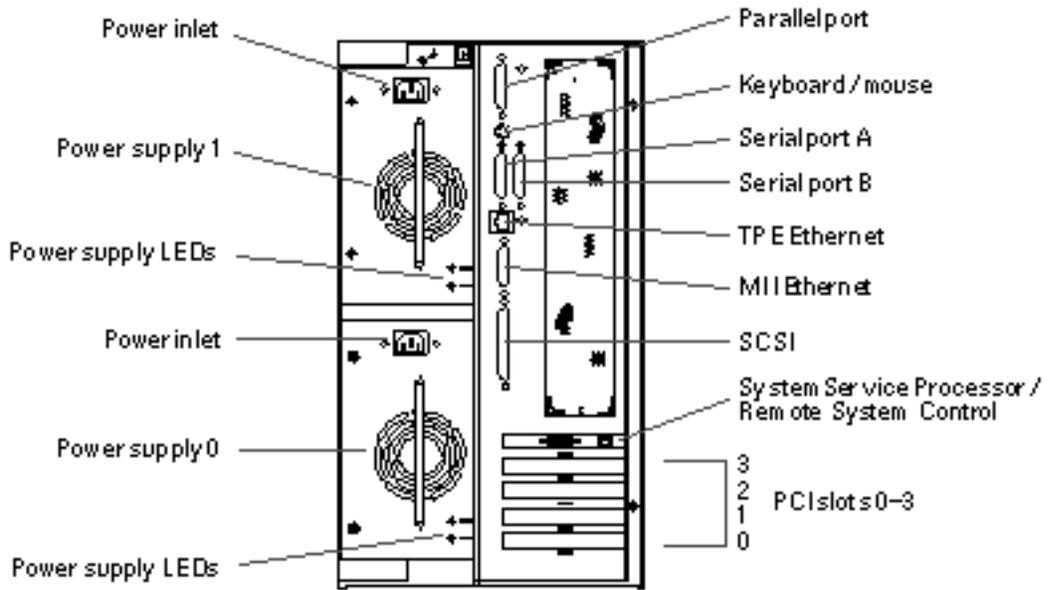


Figure 1-3

Systems may be configured with one or two power supplies, which are accessible from the system rear panel. Each power supply has two LED indicators for displaying power status and fault conditions. See "Power Supply LEDs" on page 259 for additional details.

A grounding screw is located in the upper-left corner of the rear panel. When connecting a desktop Enterprise 250 server to any rack-mounted peripheral, be sure to connect an appropriate grounding strap between the server's grounding screw and the rack enclosure. A grounding strap prevents ground loops between the two systems and guards against possible data loss.

## About the Status and Control Panel

The status and control panel includes six LED indicators and a security keyswitch. The panel is located in the top-right corner of the system front panel, as shown in "Locating Front Panel Features" on page 3.

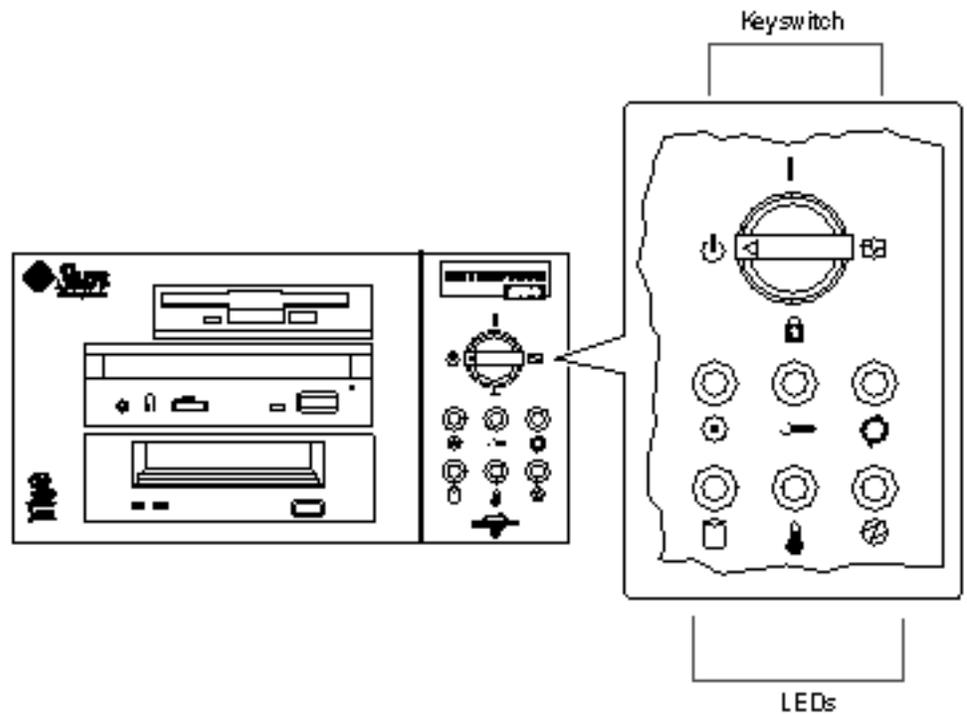


Figure 1-4

The front panel keyswitch controls the power-on mode of the system. The following table describes the function of each switch setting.

TABLE 1-1

Name	Icon	Description
Power-On		Turns the system power on.
Diagnostics		Turns the system power on and runs power-on self-test (POST) and OpenBoot™ diagnostics (OBDiag).  Turn the switch to this setting when you want to run POST and OBDiag at power-up. For more information on POST and OBDiag, see “About Diagnostic Tools” on page 234.

TABLE 1-1 (continued)

Name	Icon	Description
Locked		<p>Turns the system power on and disables the keyboard <code>Stop-a</code> command and terminal <code>Break</code> key command. This prevents users from suspending system operation and accessing the system <code>ok</code> prompt in order to modify OpenBoot configuration parameters stored in the system's nonvolatile memory.</p> <p>This setting also prevents unauthorized programming of the system flash PROM. For additional details, see "About Flash PROM Jumpers" on page 93.</p> <p>This is the recommended setting for normal day-to-day operation of the system.</p>
Standby		<p>Places the system in standby mode by turning off power to all internal system components and placing the power supplies in standby mode. When the keyswitch is in this position, the keyboard power switch is disabled.</p>

The LEDs consist of two types: system health indicators and fault indicators. The system health indicators light to show you that the system is functioning normally. The fault indicators light when a problem is detected in the system. Because it is important for you to know that a fault exists in the system, the fault indicators remain lit when the system is reset or switched to standby mode using the keyswitch.

When you first power on the system, the LEDs are individually toggled on and off to verify that each one is working correctly. After that, the LEDs operate as described in the following table.

TABLE 1-2

Name	Icon	Description
Power-on		<p>This green LED lights steadily when the system power is on and the keyswitch is in the On, Diagnostics, or Locked position.</p>
General fault		<p>This yellow LED blinks slowly while the system runs its power-on self-test (POST) diagnostics and blinks rapidly during OpenBoot diagnostic (OBDiag) tests. It lights steadily when any fault is detected (including a fault also reported by any other LED).</p>

TABLE 1-2 (continued)

Name	Icon	Description
Activity		This green LED blinks continuously to indicate that the system is operating normally.
Disk fault		This yellow LED lights steadily to indicate a fault in one of the hard disk drives. When this LED is lit, one or more disk LEDs may also be lit, indicating the source of the fault.
Temperature fault		This yellow LED lights steadily to indicate an over-temperature condition in the system.
Power supply fault		This yellow LED lights steadily to indicate a power supply fault. LEDs on the rear of the power supply indicate the nature of the fault (and identify which supply is faulty in a system with two supplies).



## Photographic Tour of System

---

### System View



*Figure 2-1*

1. "Side Access Panel" on page 19


2. “Internal System Components” on page 13
3. “Disk Drives” on page 20
4. “Removable Media Components” on page 15
5. “LED/Keyswitch Assembly” on page 41

For additional information, see:

- Appendix D
- Appendix B

---

## Internal System Components

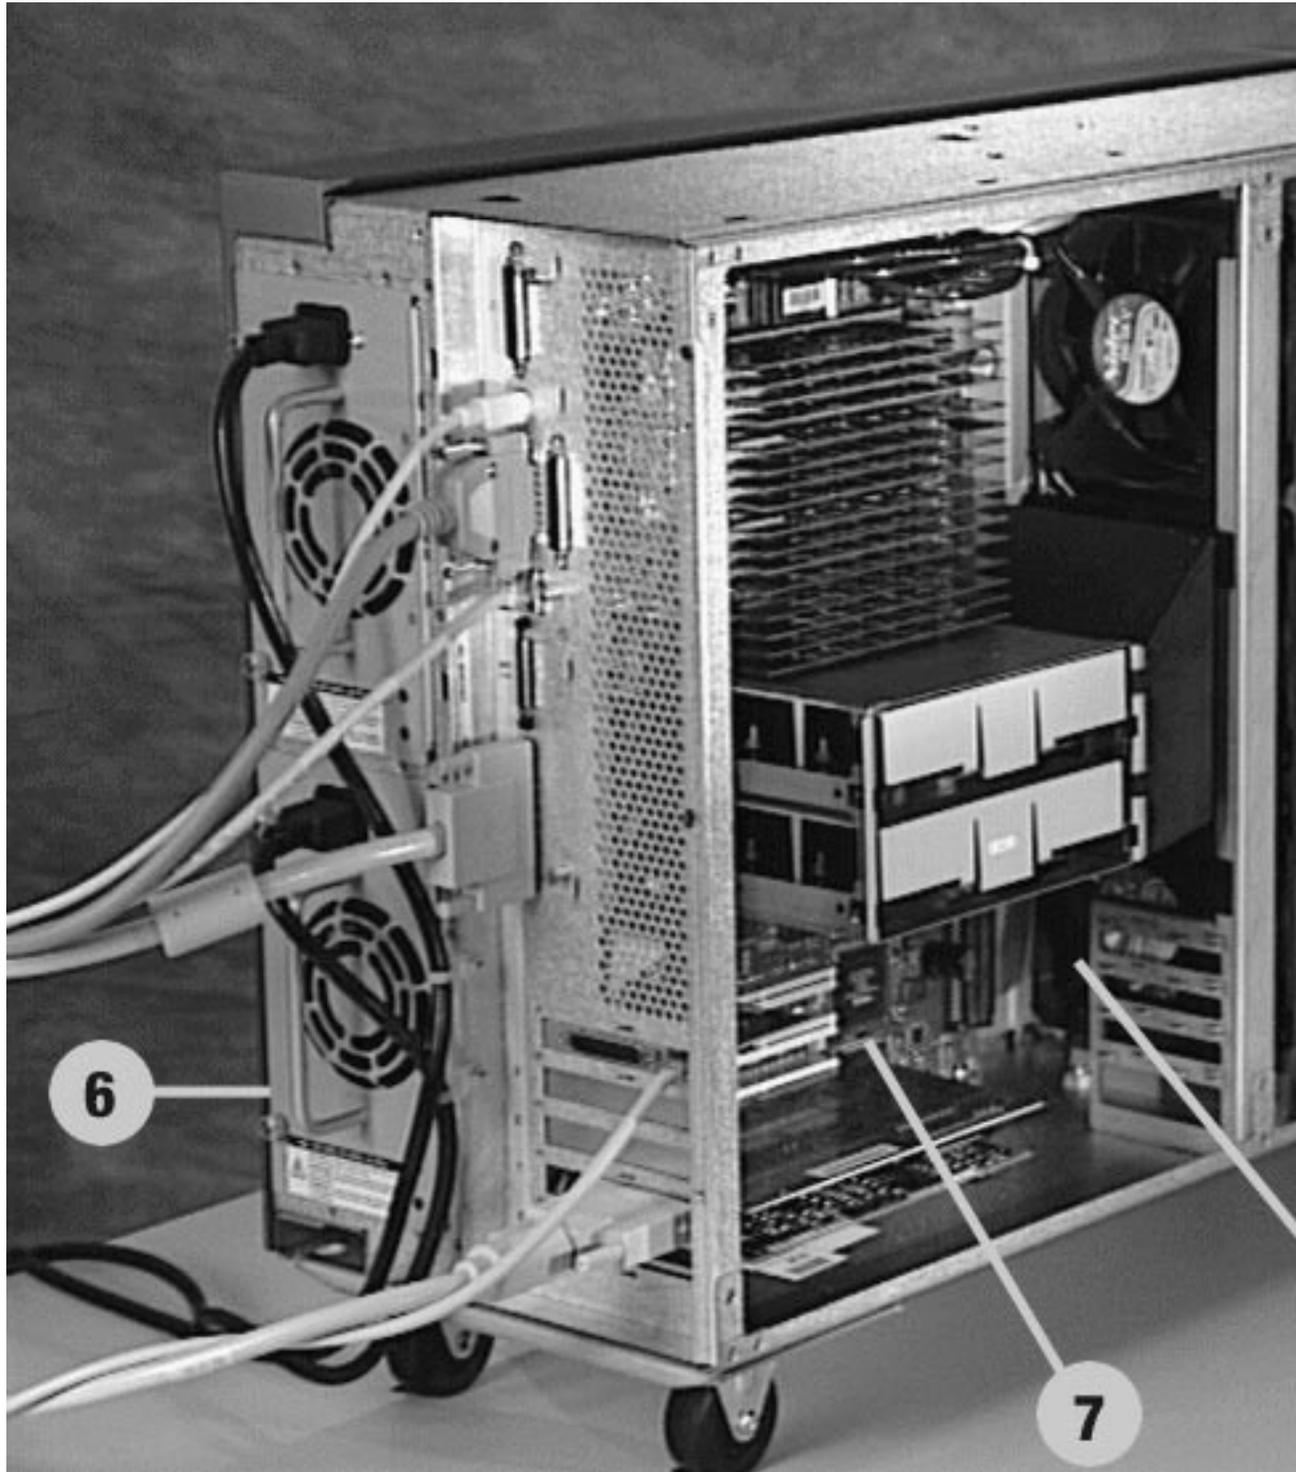


14 Sun Enterprise Server Owner's Guide ♦ Revision A, June 1998

6. "Power Supply" on page 33
7. "Main Logic Board Components" on page 17
8. "Power Distribution Board" on page 35
9. "Fan Tray Assembly" on page 40
10. "Disk Cage Assembly" on page 37
11. "UltraSCSI Backplane" on page 39

---

## Removable Media Components

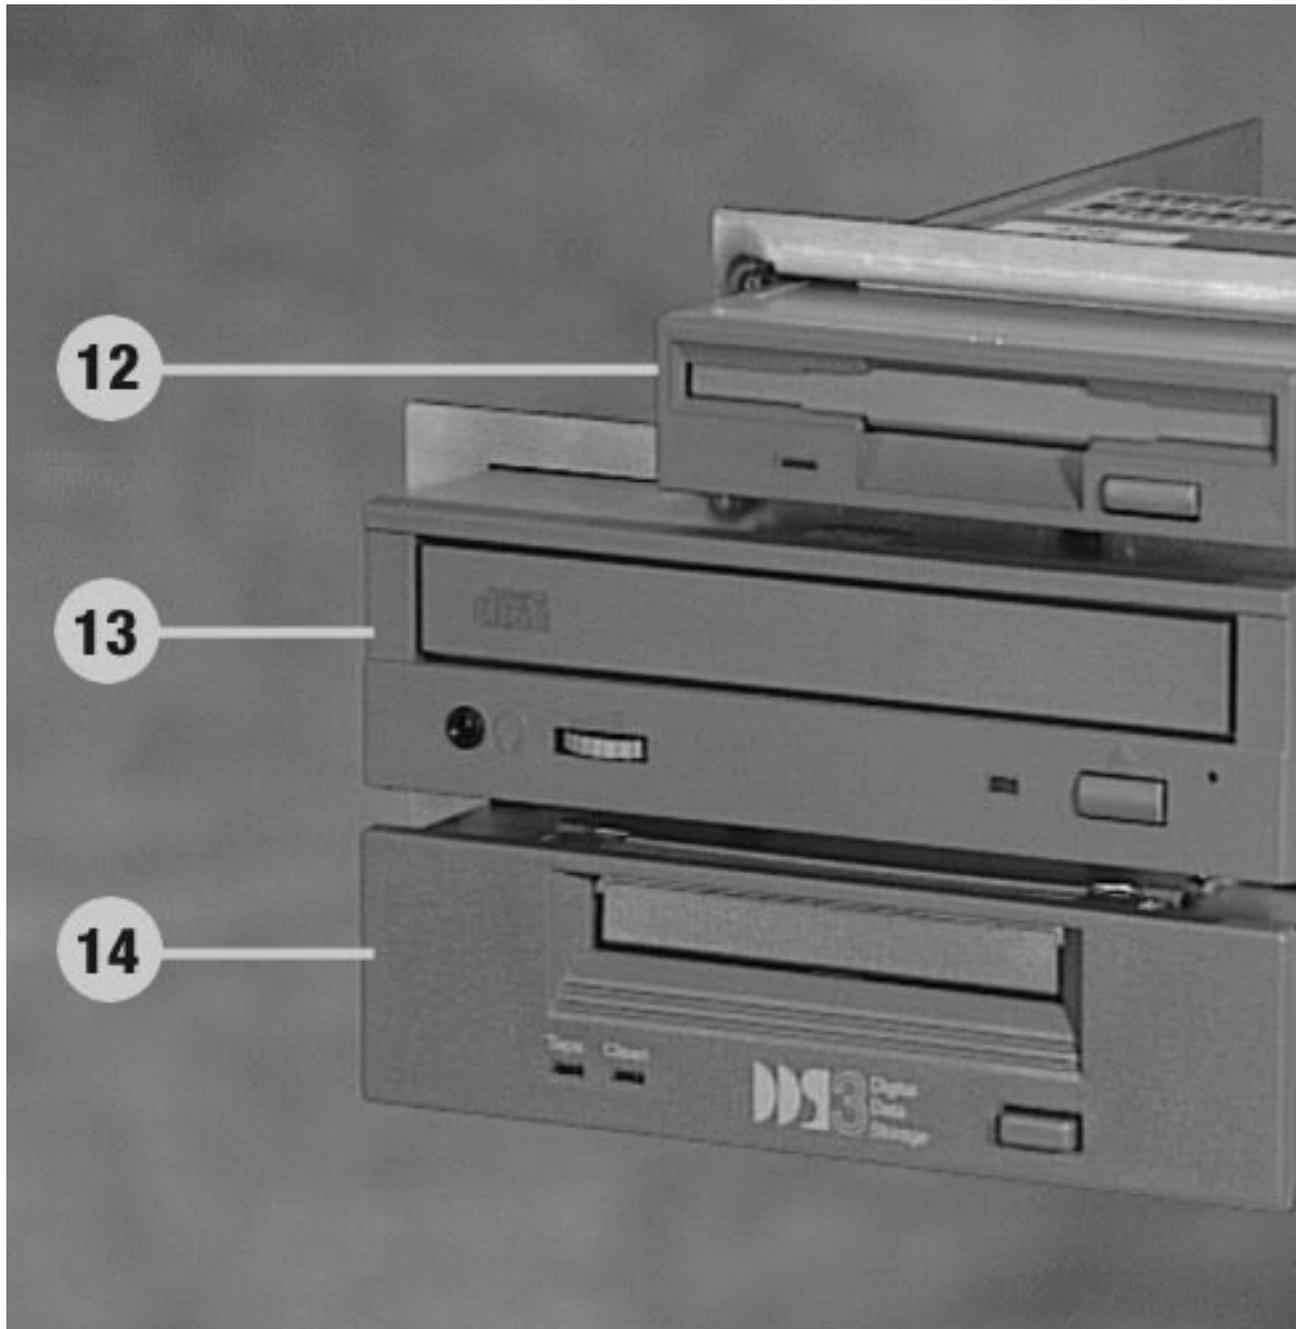


*Figure 2-3*

12. "Diskette Drive" on page 22

13. "CD-ROM Drive" on page 23
14. "Tape Drive" on page 25
15. "Removable Media Assembly" on page 21

---

## Main Logic Board Components

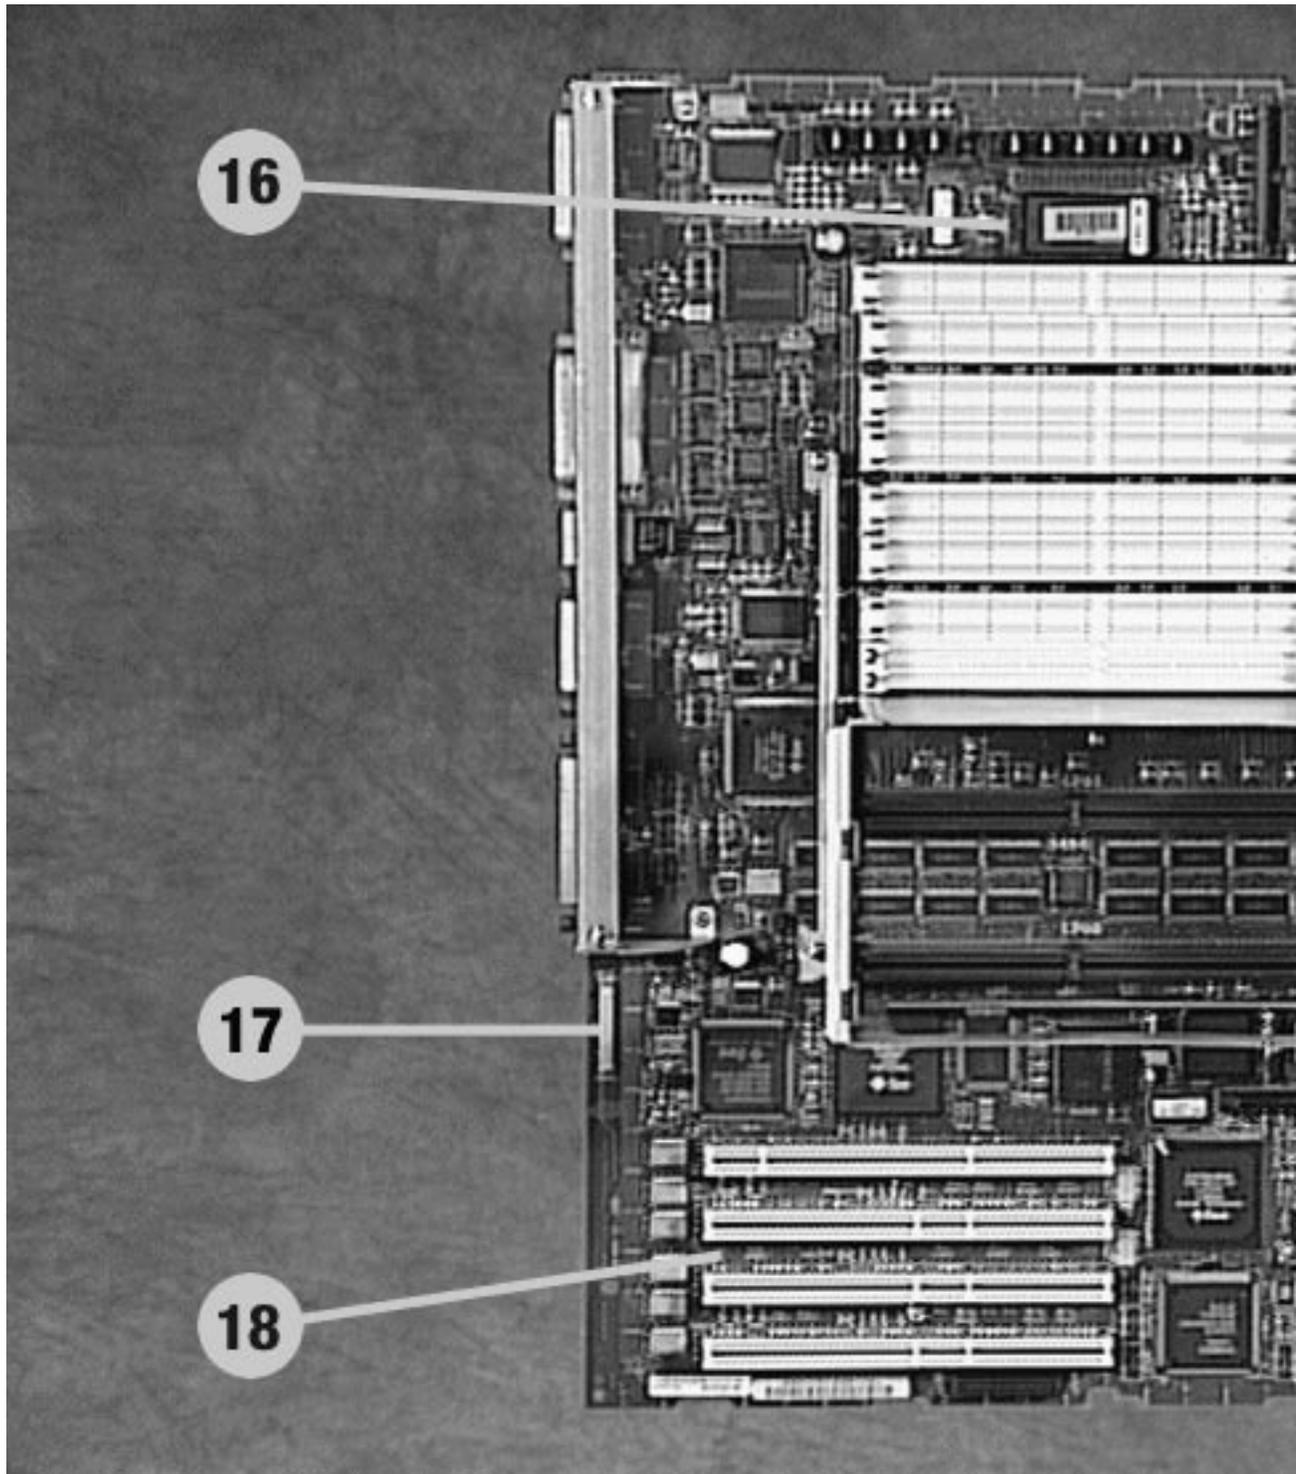

18 Sun Enterprise Server Owner's Guide ♦ Revision A, June 1998

16. "NVRAM/TOD Module" on page 32
17. "SSP Paddle Card and Cable" on page 31
18. "PCI Cards" on page 30
19. "Main Logic Board" on page 26
20. "CPU Modules" on page 28
21. "Memory Modules" on page 29

---

## Side Access Panel




*Figure 2-5*

For information related to this part, see:

- “How to Remove the Side Access Panel” on page 60
- “How to Install the Side Access Panel” on page 62

---

## Disk Drives

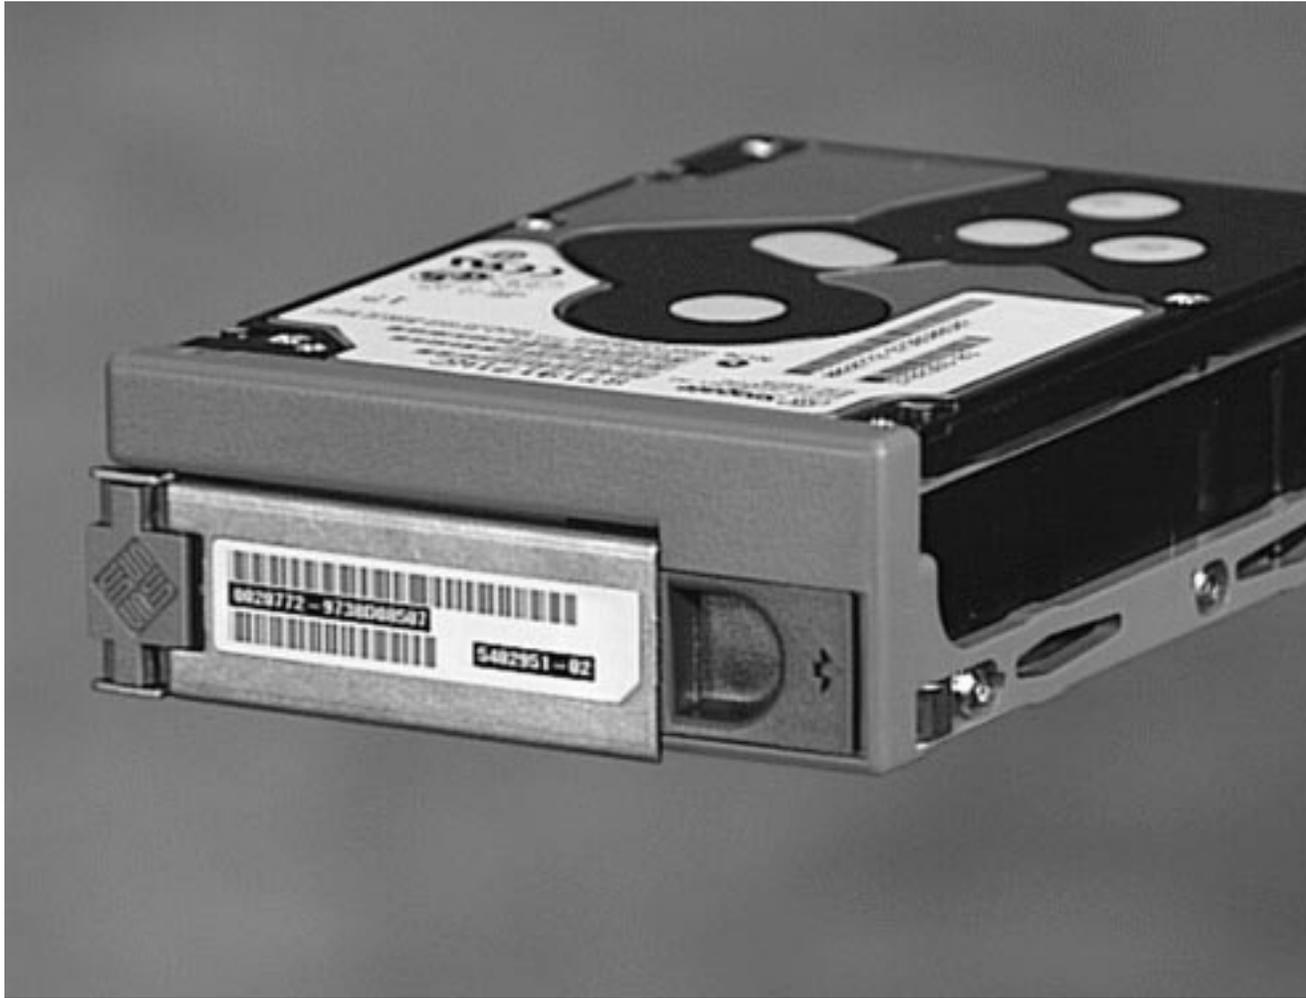


*Figure 2-6*

For information related to this part, see:

- “About Internal Disk Drives” on page 83
- “How to Remove a Disk Drive” on page 135
- “How to Install a Disk Drive” on page 137

---

## Removable Media Assembly

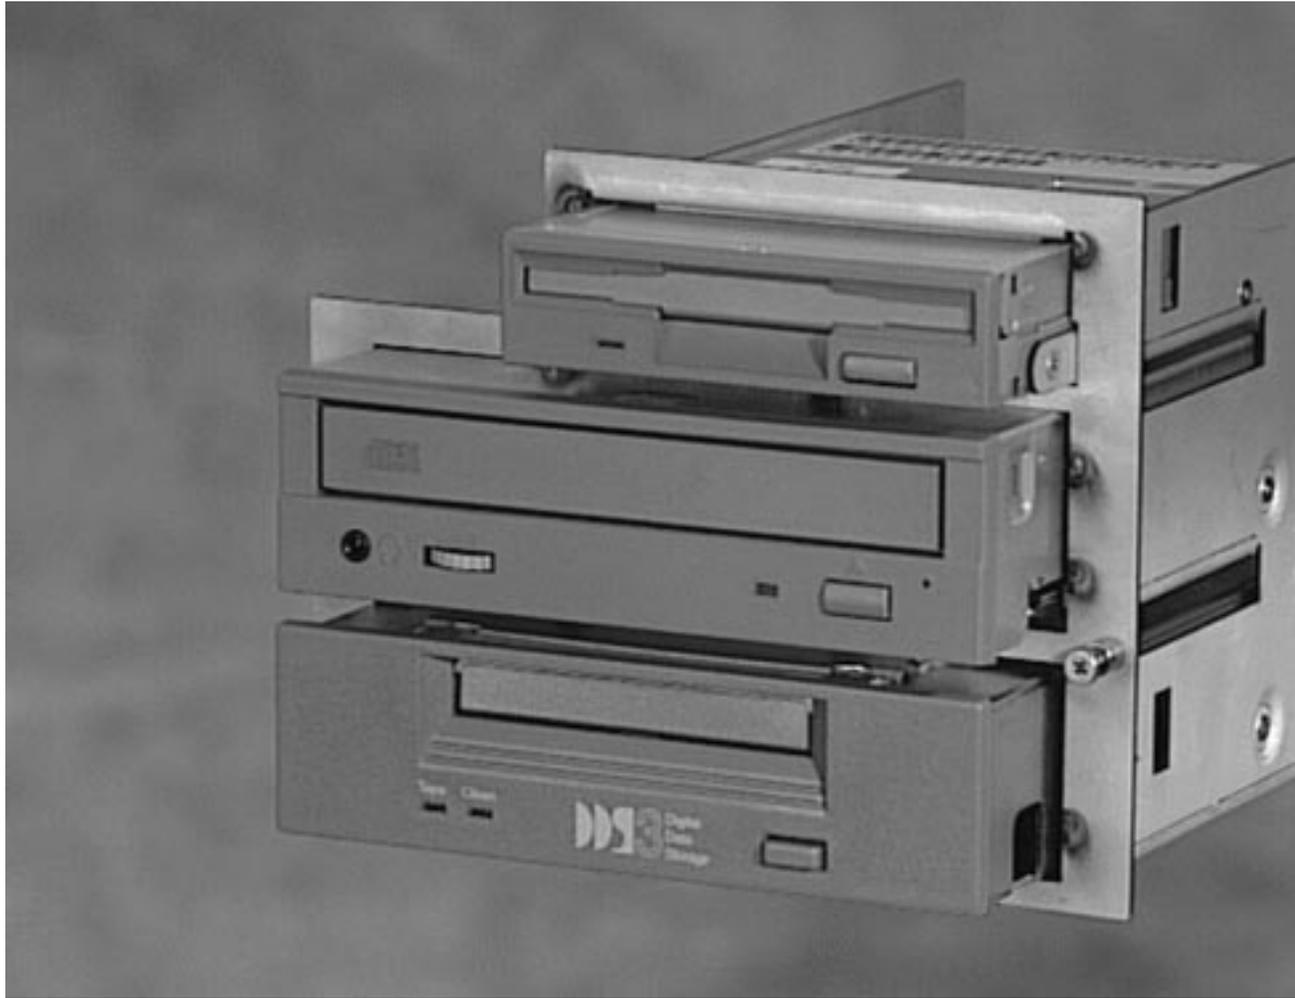

*Figure 2-7*

For information related to this part, see:

- “About the SCSI Removable Media Bays and the External SCSI Port” on page 95
- “How to Remove the Removable Media Assembly (RMA)” on page 128
- “How to Install the Removable Media Assembly (RMA)” on page 132

---

## Diskette Drive



*Figure 2-8*

For information related to this part, see:

- Chapter 11
- “How to Remove the Diskette Drive” on page 144
- “How to Install the Diskette Drive” on page 146

---

## CD-ROM Drive



*Figure 2-9*

For information related to this part, see:

- “About the SCSI Removable Media Bays and the External SCSI Port” on page 95
- Chapter 11
- “How to Remove a CD-ROM Drive or Tape Drive” on page 139
- “How to Install a CD-ROM Drive or Tape Drive” on page 141

---

# Tape Drive



*Figure 2-10*


For information related to this part, see:

- “About the SCSI Removable Media Bays and the External SCSI Port” on page 95
- Chapter 11
- “How to Remove a CD-ROM Drive or Tape Drive” on page 139

- “How to Install a CD-ROM Drive or Tape Drive” on page 141

---

## Main Logic Board

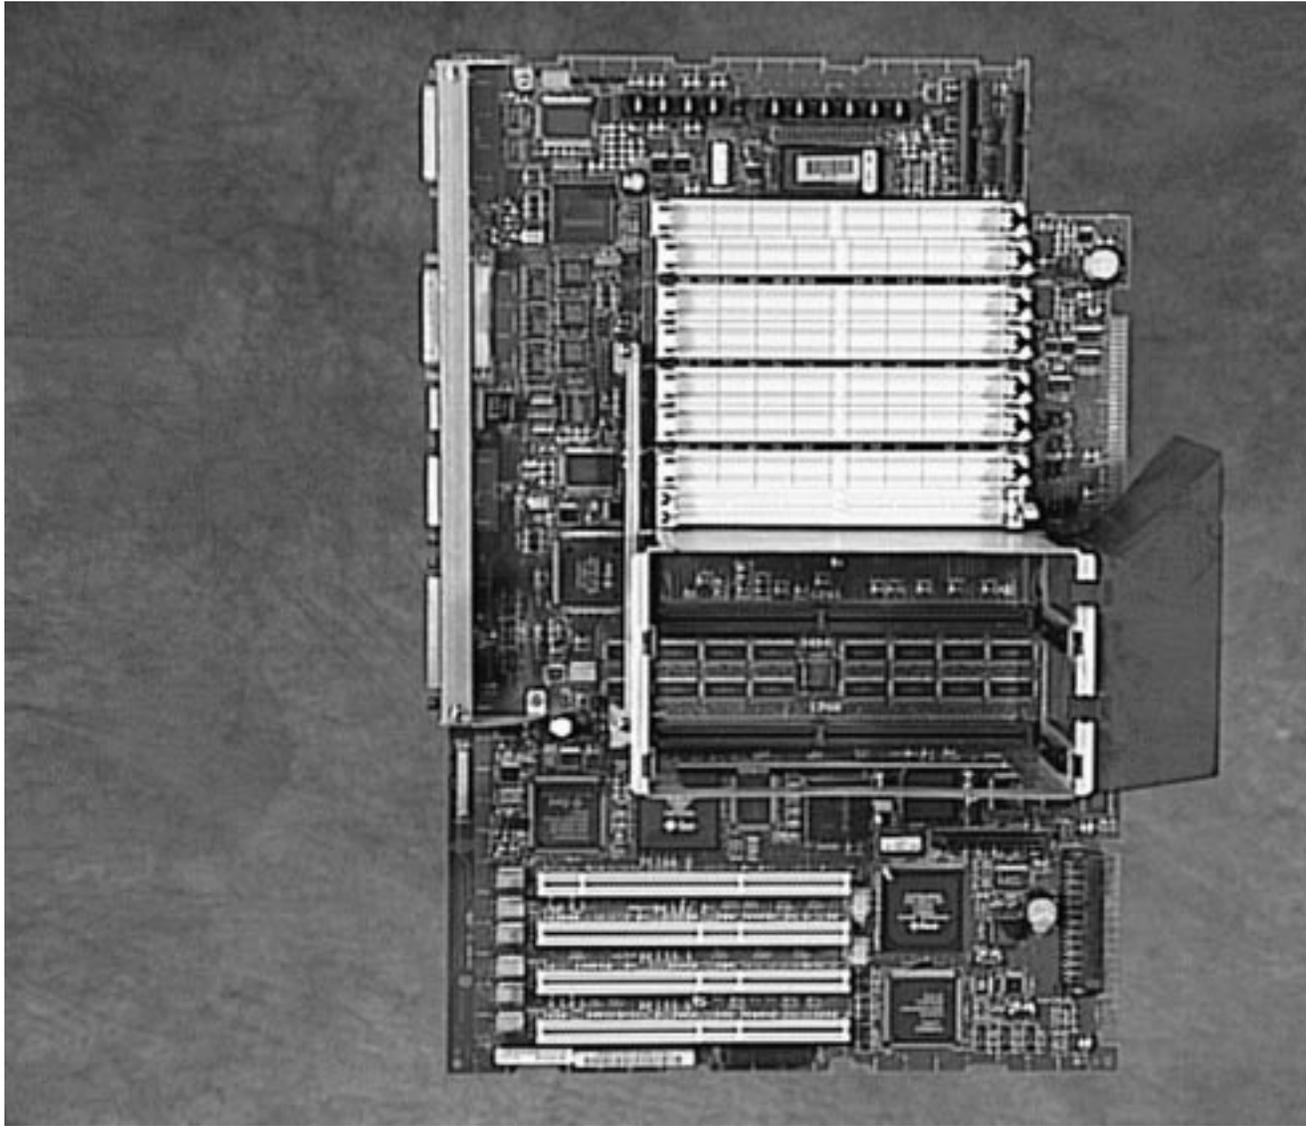

*Figure 2-11*


For information related to this part, see:

- “How to Remove the Main Logic Board” on page 100
- “How to Install the Main Logic Board” on page 102
- “About the Standard Ethernet Port” on page 89
- “About the Serial Ports” on page 90
- “About the Parallel Port” on page 90

- “About the Main Logic Board Jumpers” on page 90
- “About Serial Port Jumpers” on page 92
- “About Flash PROM Jumpers” on page 93
- Appendix A

---

## CPU Modules

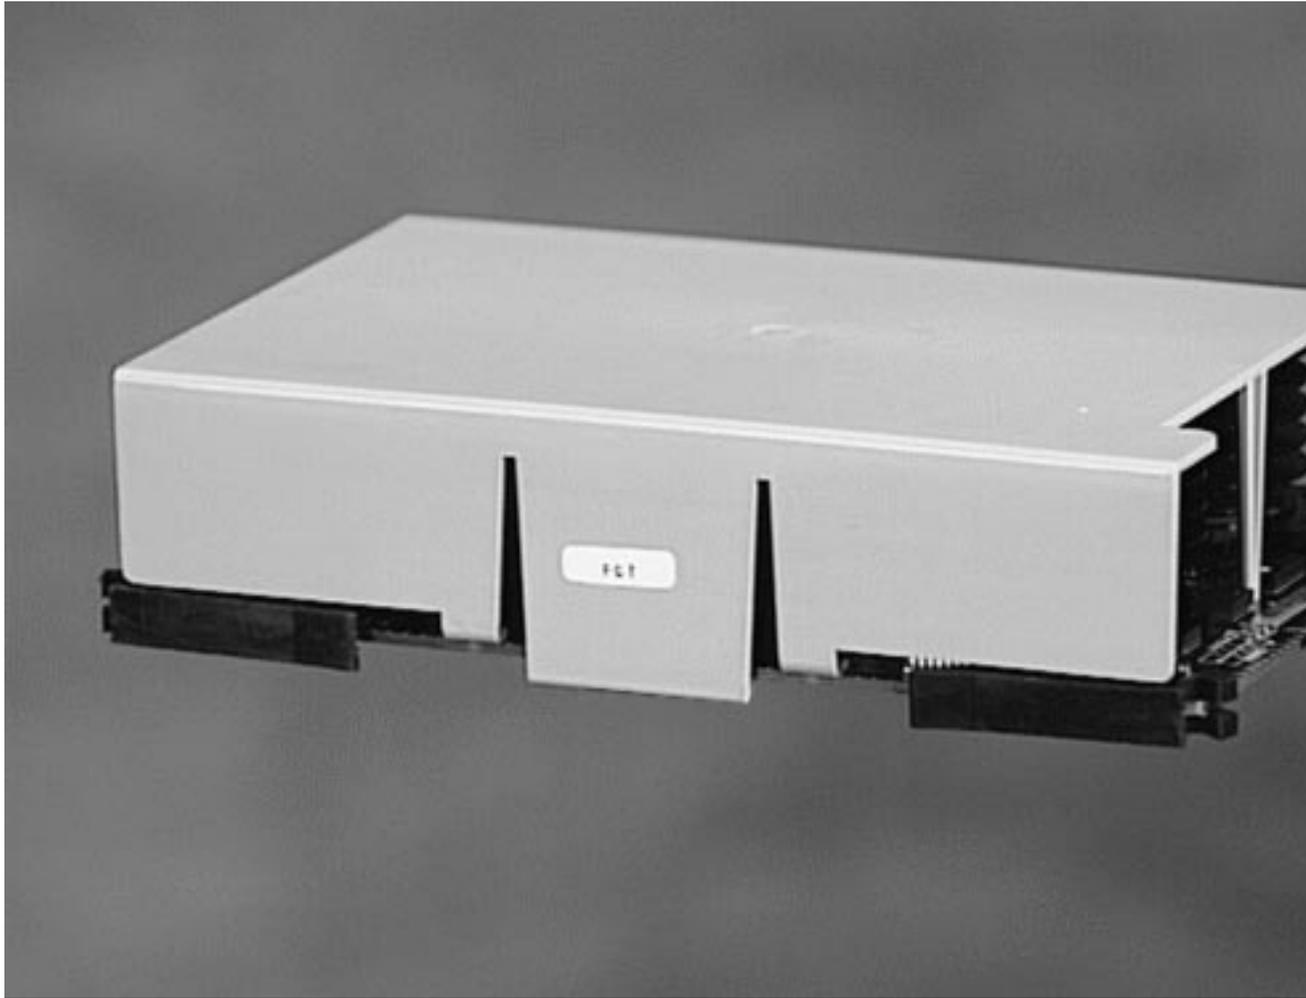


*Figure 2-12*

For information related to this part, see:

- “About CPU Modules” on page 78
- “How to Remove a CPU Module” on page 109
- “How to Install a CPU Module” on page 110

---

## Memory Modules

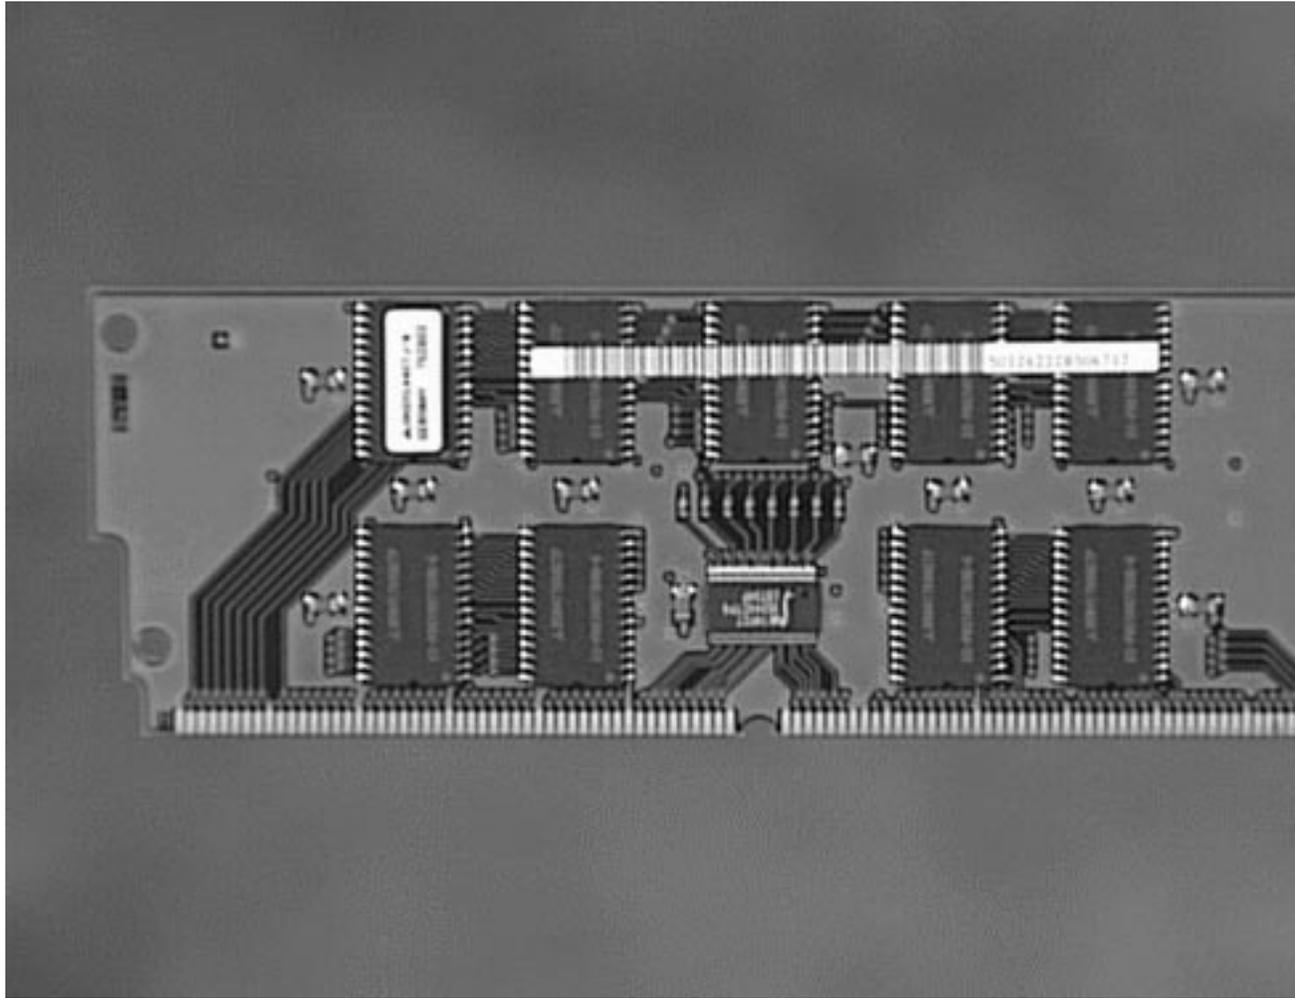

*Figure 2-13*

For information related to this part, see:

- “About Memory” on page 76
- “How to Remove a Memory Module” on page 105
- “How to Install a Memory Module” on page 107

---

## PCI Cards

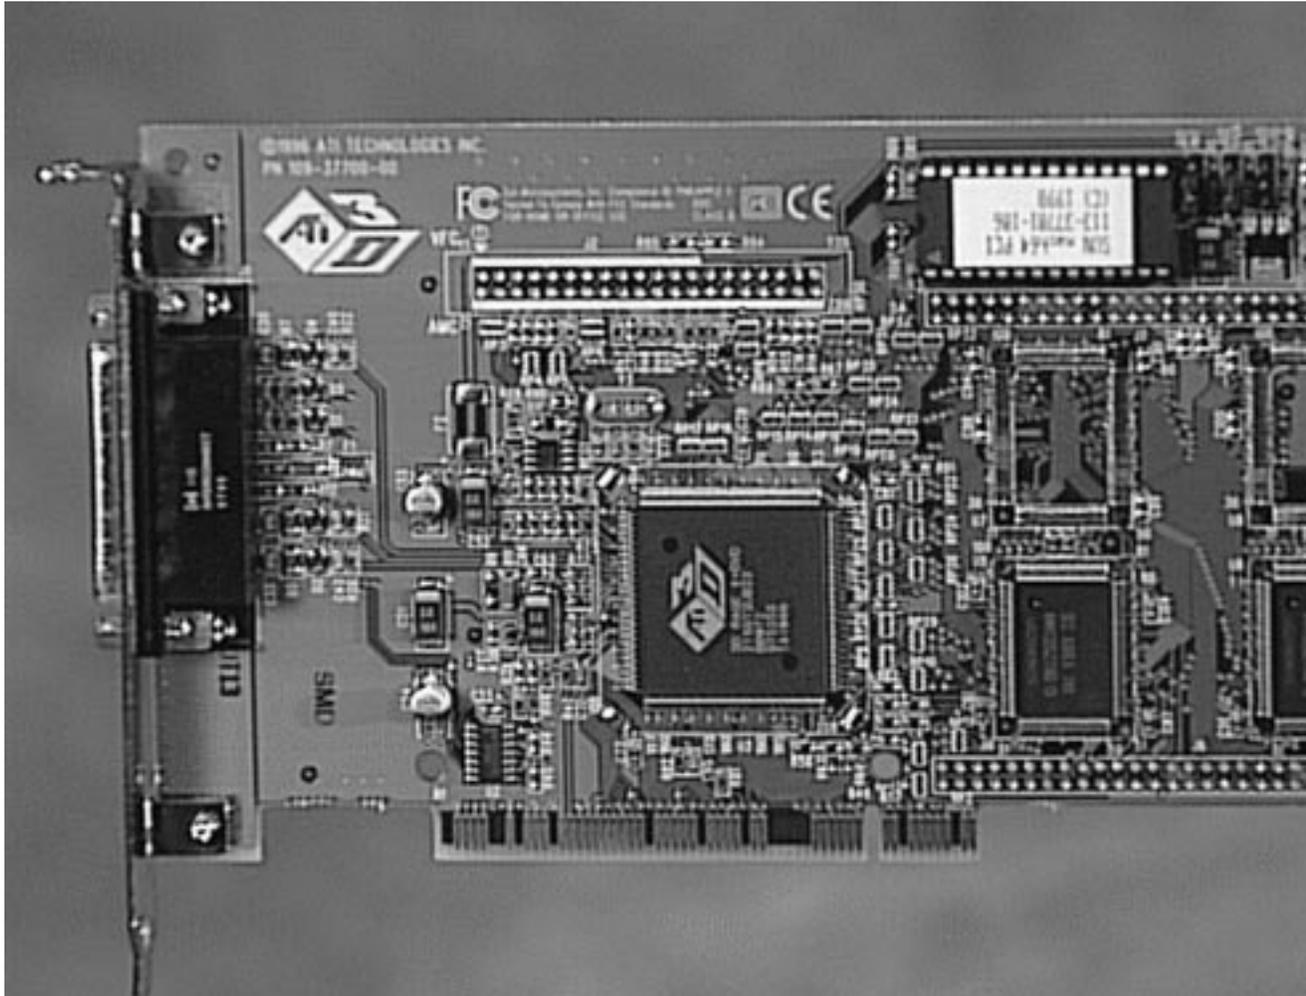



Figure 2-14

For information related to this part, see:

- “About Peripheral Component Interconnect (PCI) Buses” on page 80
- “How to Remove a PCI Card” on page 112
- “How to Install a PCI Card” on page 114

---

## SSP Paddle Card and Cable

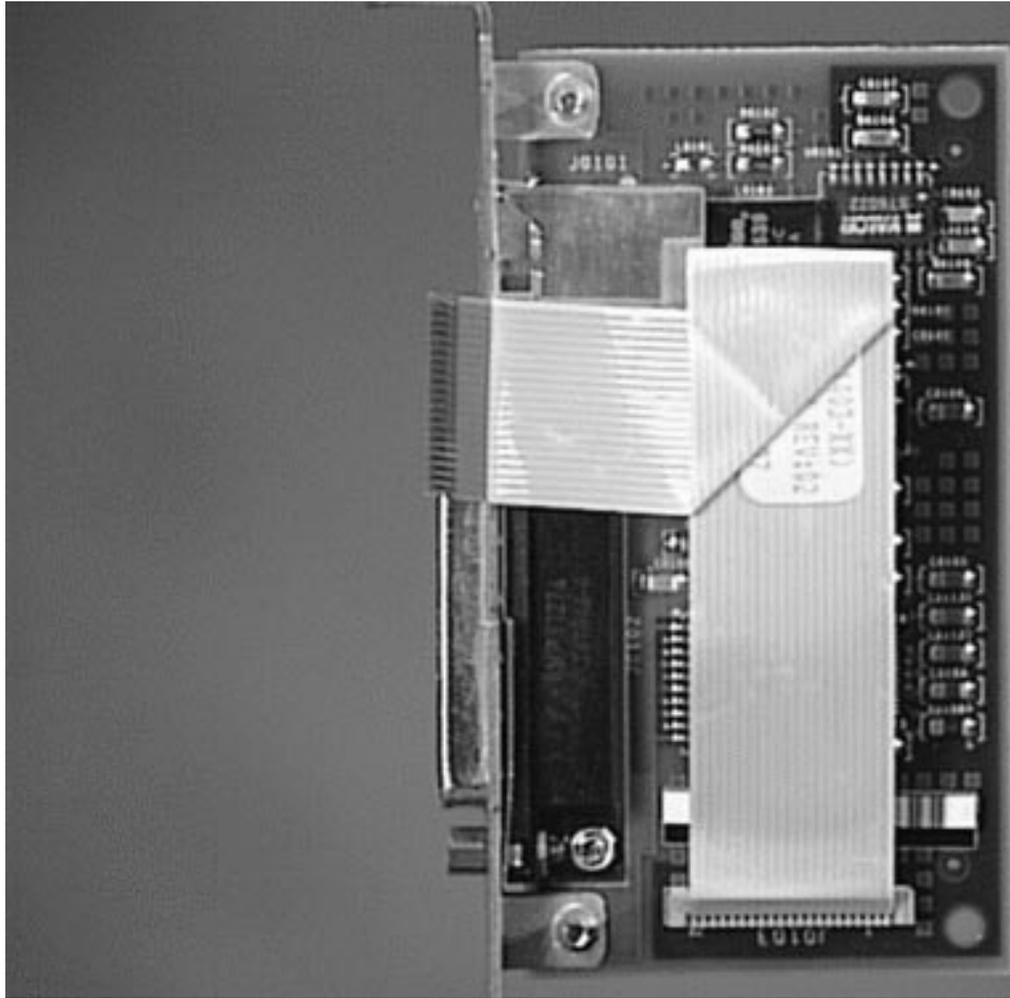

*Figure 2-15*

For information related to this part, see:

- “How to Remove the SSP Paddle Card” on page 117
- “How to Install the SSP Paddle Card” on page 120
- “About Remote System Control (RSC)” on page 256

---

## NVRAM/TOD Module



*Figure 2-16*

For information related to this part, see:

- “How to Remove the NVRAM/TOD Module” on page 123
- “How to Install the NVRAM/TOD Module” on page 124

---

## Power Supply




*Figure 2-17*

For information related to this part, see:

- “About Power Supplies” on page 87
- “How to Remove a Power Supply” on page 153
- “How to Install a Power Supply” on page 155

---

# Power Distribution Board

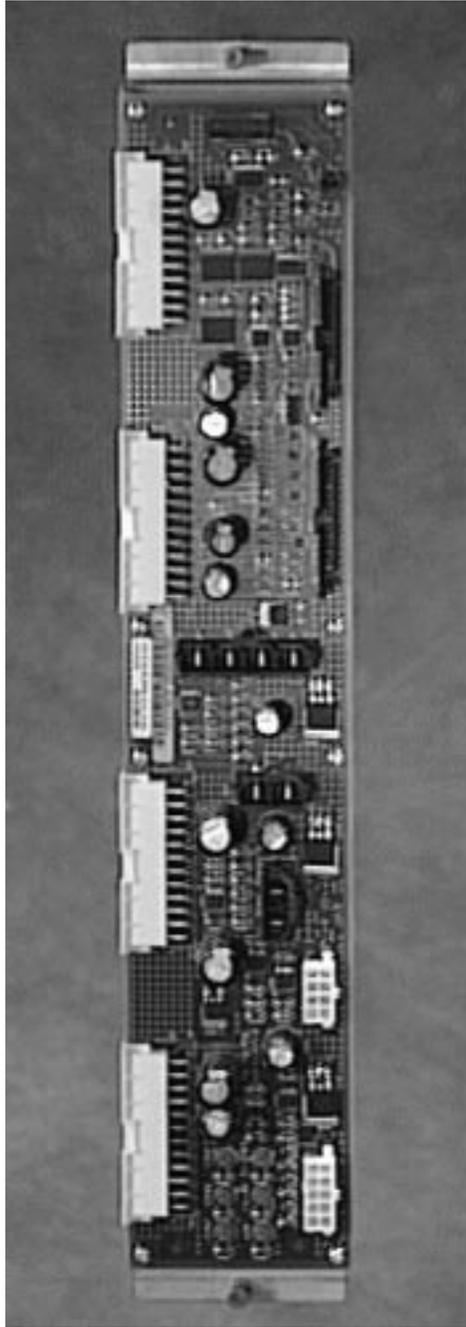


*Figure 2-18*

For information related to this part, see:

- “How to Remove the Power Distribution Board” on page 184
- “How to Install the Power Distribution Board” on page 185

---

## Disk Cage Assembly

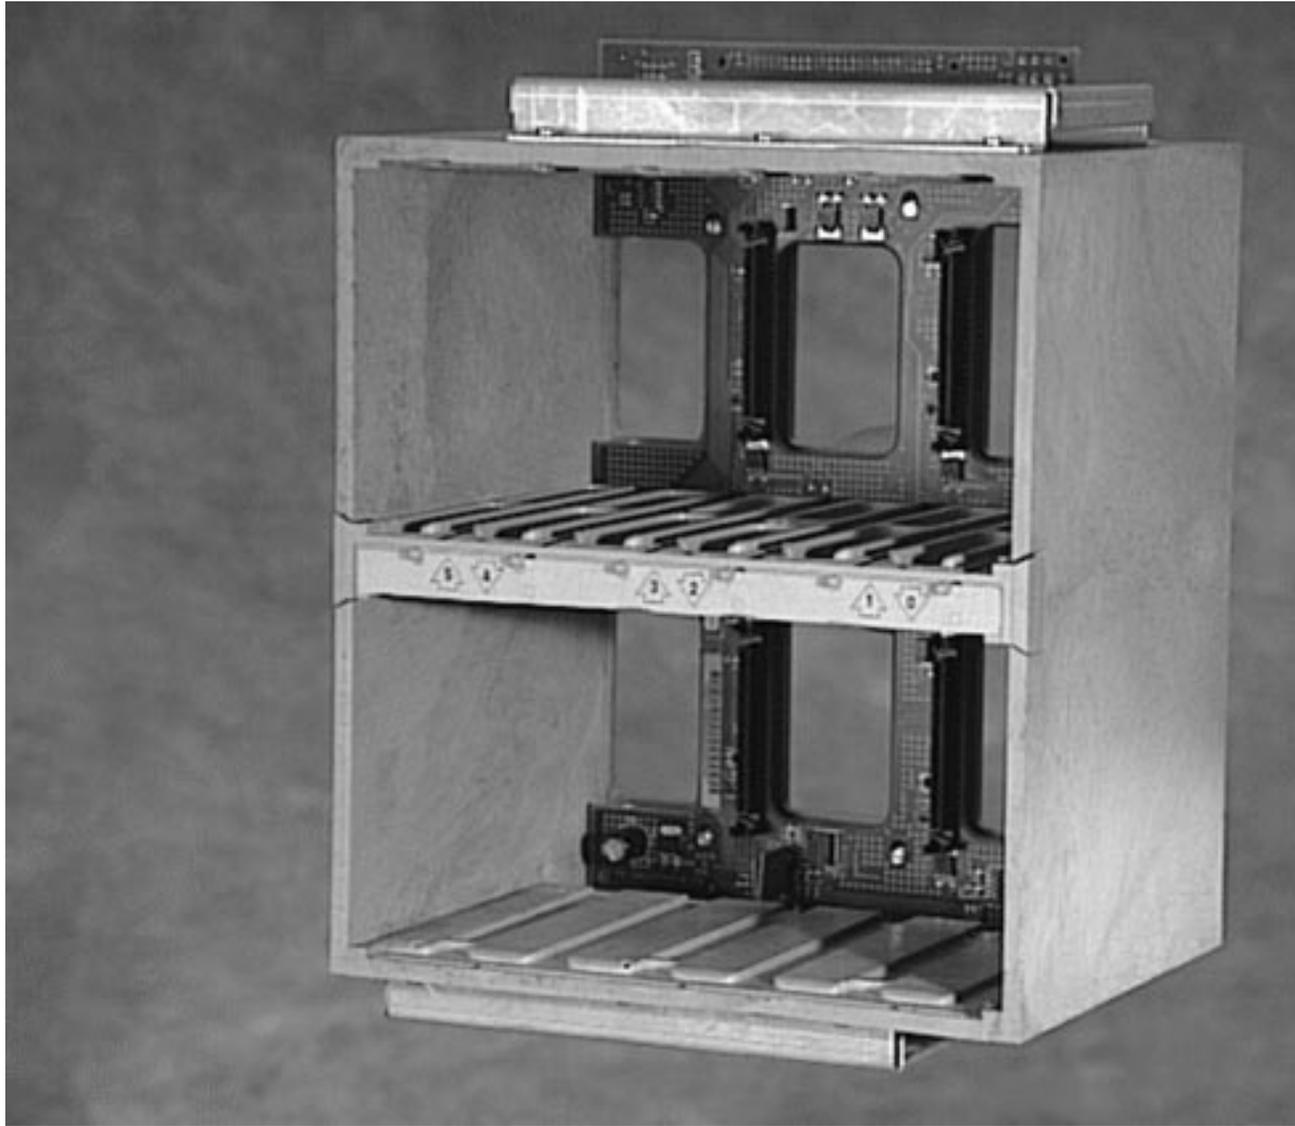


*Figure 2-19*

For information related to this part, see:

- “How to Remove the Disk Cage Assembly” on page 163
- “How to Install the Disk Cage Assembly” on page 167

---

## UltraSCSI Backplane

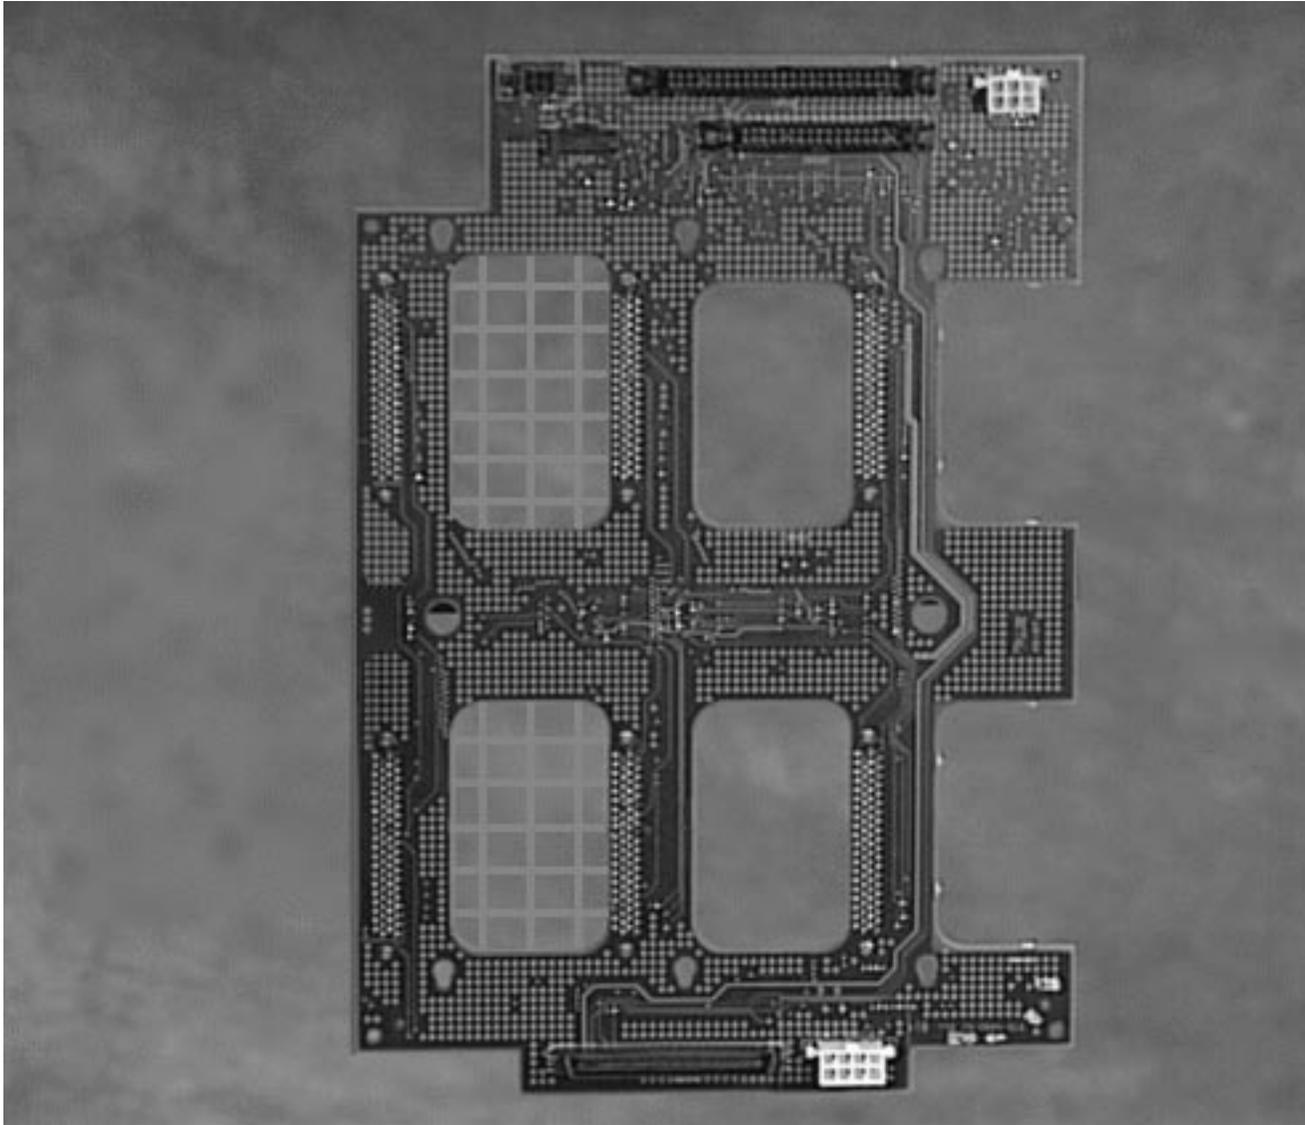


*Figure 2-20*

For information related to this part, see:

- “How to Remove the UltraSCSI Backplane” on page 179
- “How to Install the UltraSCSI Backplane” on page 182

---

## Fan Tray Assembly

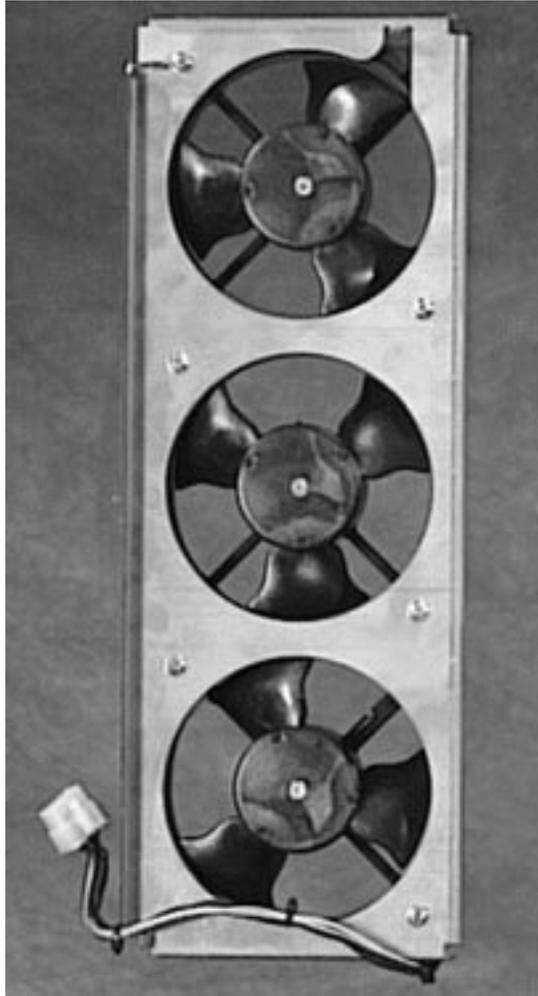


*Figure 2-21*

For information related to this part, see:

- “How to Remove the Fan Tray Assembly” on page 150
- “How to Install the Fan Tray Assembly” on page 151

---

## LED/Keyswitch Assembly

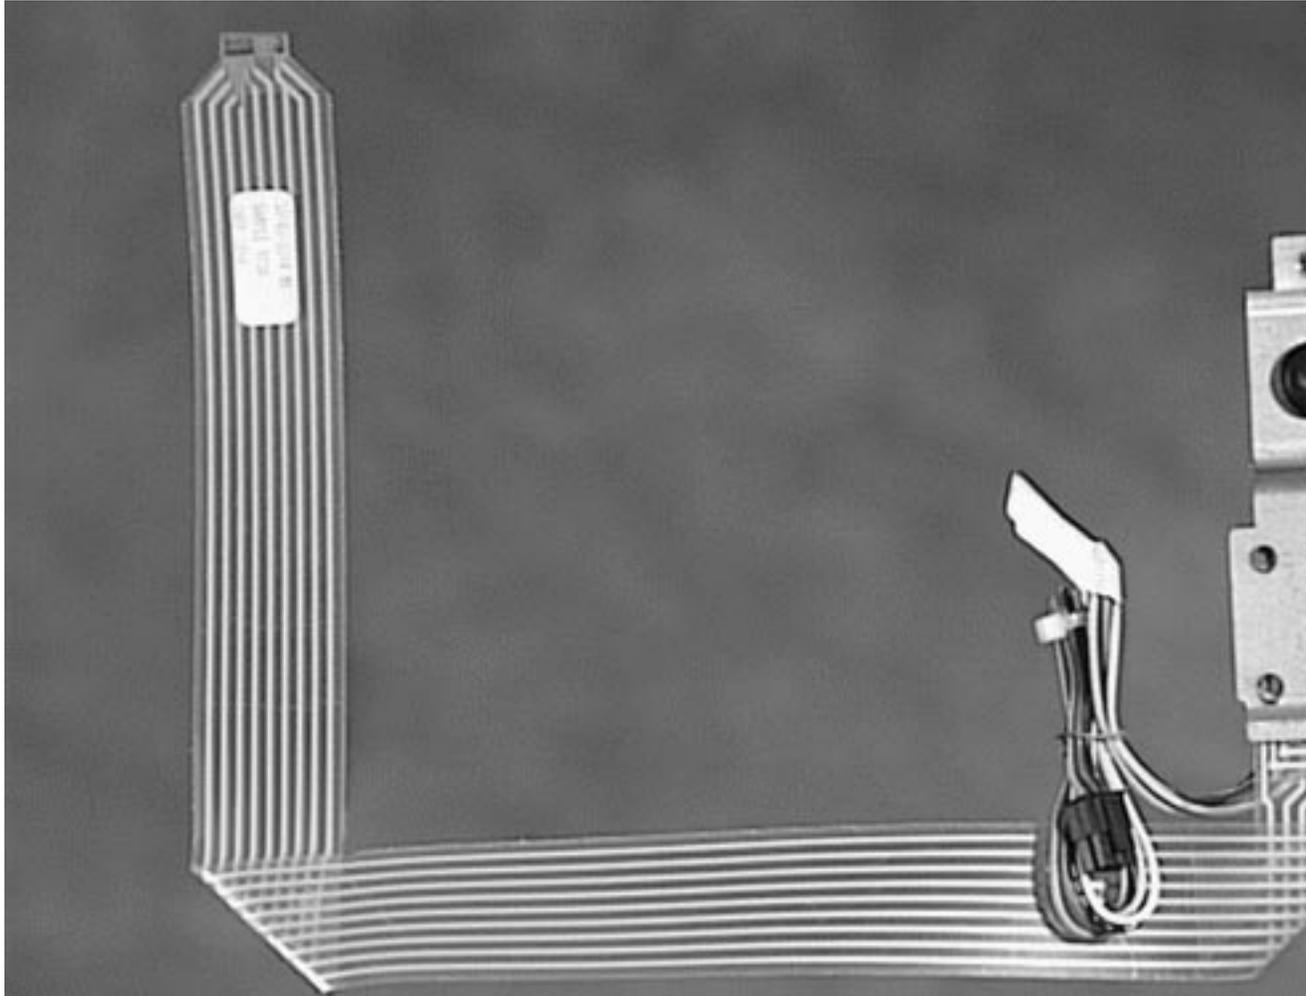

*Figure 2-22*

For information related to this part, see:

- “How to Remove the LED/Keyswitch Assembly” on page 157
- “How to Install the LED/Keyswitch Assembly” on page 160

## System Setup

---

This chapter explains how to attach all cords and cables needed to get the Sun Enterprise 250 server up and running. Where software is involved, this chapter explains some of what you need to do, and points you to the appropriate software manuals for the rest.

*Tasks covered in this chapter include:*

- “How to Install the Enterprise 250 Server” on page 44
- “How to Install the Security Lock Block” on page 48
- “How to Attach an Alphanumeric Terminal” on page 50
- “How to Configure a Local Graphics Console” on page 51

*Other information covered in this chapter includes:*

- “About the Parts Shipped to You” on page 43
- “About Setting Up a Console” on page 49

---

## About the Parts Shipped to You

Your system is “configured-to-order,” which means that most internal options that you order are pre-installed at the factory. However, if you ordered options that are not factory-installed (such as a monitor), these will be shipped to you separately.

In addition, you should have received the media and documentation for all appropriate system software (ordered separately). Check that you’ve received everything you ordered.

---

**Note** - Inspect all shipping cartons for evidence of physical damage. If a shipping carton is damaged, request that the carrier's agent be present when the carton is opened. Keep all contents and packing material for the agent's inspection.

---

Unpacking instructions are printed on the outside of the shipping carton.

Save the original shipping containers and packing materials in case you need to store or ship your system. If you cannot store the shipping materials, recycle or dispose of the materials properly. Consult your local recycling authority for information.

---

## How to Install the Enterprise 250 Server

### Before You Begin

The Sun Enterprise 250 server is a general-purpose server, which you can use for many types of applications. Exactly how you set up your machine depends in some measure upon what you want it to do.

This procedure is intended to be as “generic” as possible, so as to cover the needs of most sites. Even so, you will need to make certain decisions to complete the procedure:

- On which network or networks do you intend your machine to operate?

For background information about network support, see “About Network Interface Options” on page 195.

- How do you want to use/configure your machine's internal disk array?

For background information about internal disk array use, see “About Disk Array Configurations and Concepts” on page 209.

- What software do you intend to load?

Software included in the server media kit or other software products may impose certain disk space or disk partitioning requirements. Refer to the documentation accompanying this software to determine those requirements.

Once you've answered these questions, you're ready to begin.

### What to Do

1. **Verify that you've received all the parts of your system.**

See “About the Parts Shipped to You” on page 43.

2. **Ensure that the system's front panel keyswitch is in the Standby position.**

See "About the Status and Control Panel" on page 6.

3. **Connect the AC power cord to the power inlet at the rear of the power supply. Connect the other end to a grounded AC power outlet.**

The outlet must connect the system to a 15A circuit for North America and Japan, and to a 10A circuit for Europe. See your local electrical codes.

Insert the female end of the power cord through the plastic tie-wrap loop located to the right of the supply. Tighten the tie-wrap to secure the connection.

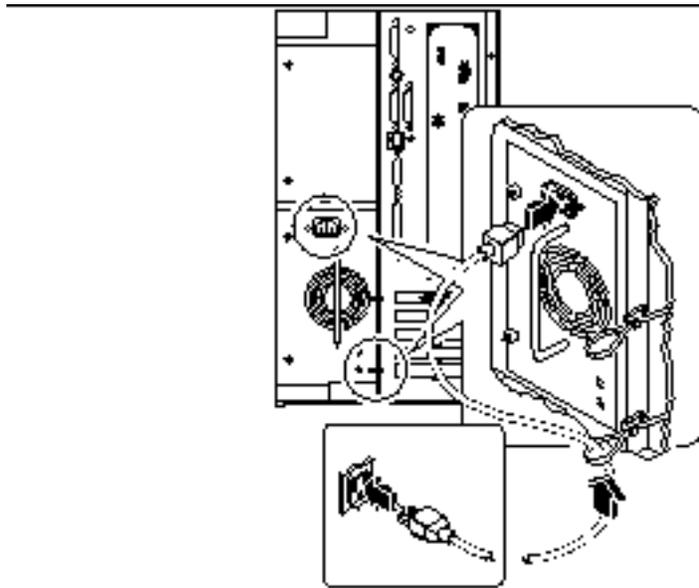


Figure 3-1

---

**Note** - If your server includes a second power supply, connect its AC power cord in the same manner. You may connect the second power supply to the same circuit as the first supply. However, for increased system redundancy, you should connect the two power supplies to separate circuits.

---

4. **Install any optional components shipped with your system.**

Many of the options ordered with your system may have been pre-installed at the factory. However, if you ordered options that were not factory-installed, see the following sections for installation instructions:

- “How to Install a Memory Module” on page 107
- “How to Install a CPU Module” on page 110
- “How to Install a PCI Card” on page 114
- “How to Install a Disk Drive” on page 137
- “How to Install a CD-ROM Drive or Tape Drive” on page 141
- “How to Install the Diskette Drive” on page 146
- “How to Install a Power Supply” on page 155
- “How to Install the Floor Casters Assembly” on page 172
- “How to Install the Chassis Foot Glides” on page 176

**5. Set up a console for your server.**

You must either attach an ASCII terminal to serial port A or else install a graphics card and attach a monitor, mouse, and keyboard. For more information, see “About Setting Up a Console” on page 49.

**6. Configure the serial port jumpers, if necessary.**

Two serial port jumpers located on the main logic board are used to configure the system’s serial ports A and B for either EIA-423 or EIA-232D signal levels. The jumpers are factory-set for EIA-423 levels, which is the default standard for North American users. EIA-232D levels are required for digital telecommunication in nations of the European Community. If you require EIA-232D signal levels, see the following sections for configuration instructions:

- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “About the Main Logic Board Jumpers” on page 90
- “About Serial Port Jumpers” on page 92
- “How to Install the Side Access Panel” on page 62

**7. Configure the network interface.**

The system’s standard network interface is a switchable 10BASE-T/100BASE-TX Ethernet interface conforming to the IEEE 802.3u Ethernet standard. The interface configures itself automatically for either 10-Mbps or 100-Mbps operation, depending on network characteristics.

Supported PCI cards allow connection to additional Ethernet networks, or to token ring, FDDI, or other network types.

- If you’re using the standard Ethernet interface, see “How to Configure the Standard Ethernet Interface” on page 196.
- If you’re using a PCI network interface, see the documentation accompanying the PCI network card.

**8. Install the security lock block to prevent unauthorized removal of the side access panel, if required.**

See “How to Install the Security Lock Block” on page 48.

**9. Turn on power to your server.**

See “How to Power On the System” on page 56. For information about the LED status indicators that appear during power-up, see “About the Status and Control Panel” on page 6.

**10. Install and boot the operating system software.**

See the installation manual accompanying your Solaris software. Also read the *SMCC SPARC Hardware Platform Guide*, which contains platform-specific information about software installation. The operating system software is ordered separately from your system hardware.

**11. Load additional software from the server media kit.**

The server media kit (sold separately) includes several CD-ROM discs containing software to help you operate, configure, and administer your server. This software may include:

- Solaris 2.x
- Updates for Solaris Operating Environment for Sun Microsystems Computer Company
- Solaris Desktop
- Solstice<sup>™</sup> DiskSuite<sup>™</sup>
- Solstice<sup>™</sup> AdminSuite<sup>™</sup>
- Solstice<sup>™</sup> AutoClient<sup>™</sup>
- Solstice<sup>™</sup> Backup<sup>™</sup>

See the appropriate documents provided in the server media kit for a complete listing of included software and detailed installation instructions.

**12. Load the Sun Enterprise 250 Server Hardware AnswerBook<sup>™</sup> online documentation.**

See the installation instructions that accompany this CD-ROM disc in the Sun Enterprise 250 documentation set.

**13. Decide on your internal disk array configuration.**

For information about possible configurations, see “About Disk Array Configurations and Concepts” on page 209.

---


# How to Install the Security Lock Block

The security lock block supplied with the system is designed to prevent unauthorized removal of the system's side access panel.

## What to Do

1. **Attach the lock block to the side access panel at the top center of the system rear panel.**

Use the captive Phillips screw and washer provided with the lock block.

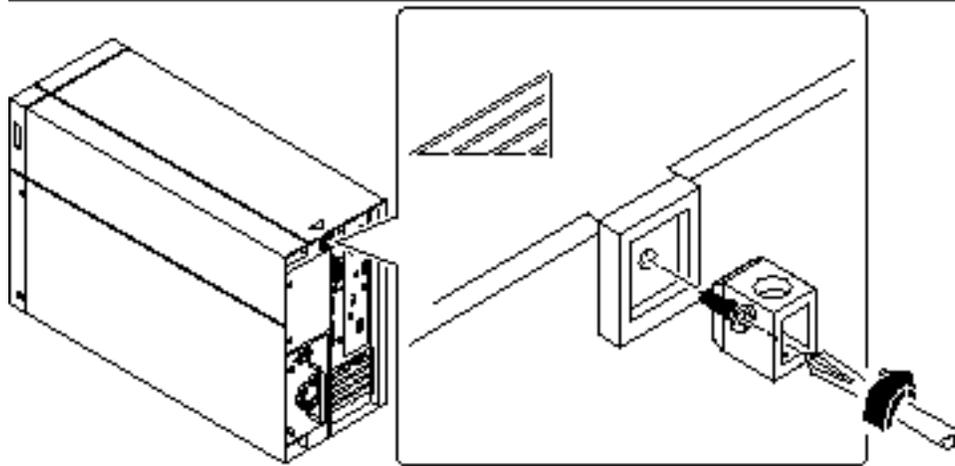

*Figure 3-2*

2. **Install a padlock or combination lock through the lock block to prevent unauthorized removal of the side access panel.**

To secure the power supplies as well, loop a cable through the lock block and through each power supply handle. Secure the cable with a padlock or combination lock.

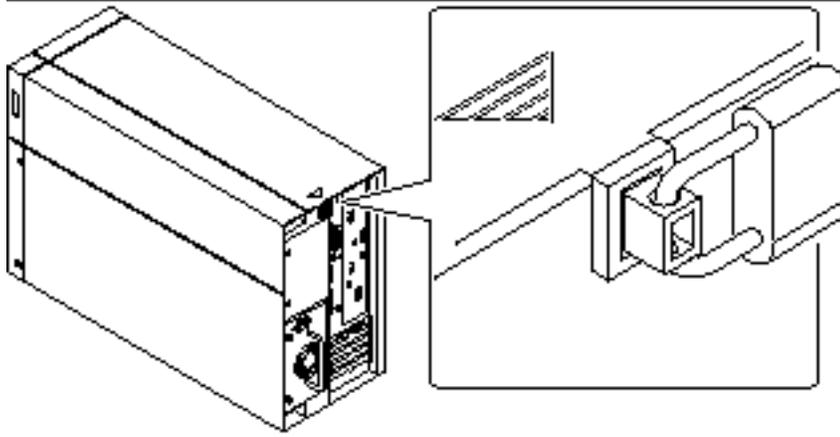


Figure 3-3

---

## About Setting Up a Console

To install your server or to diagnose problems, you need some way to enter system commands and view system output. There are four ways to do this.

1. Attach an ACSII character terminal to serial port A.

You can attach a simple terminal to serial port A. The terminal can be capable of displaying and entering alphanumeric but not graphical data. For instructions, see “How to Attach an Alphanumeric Terminal” on page 50.

2. Establish a `tip` connection from another Sun system.

For information about establishing a `tip` connection, see the *OpenBoot 3.x Command Reference Manual*, an online version of which is included with the *Solaris System Administrator AnswerBook* that ships with Solaris software.

3. Install a local graphics console on your server.

The server is often shipped without a mouse, keyboard, monitor, or frame buffer for the display of graphics. To install a local graphics console on a server, you must install a graphics frame buffer card in a PCI slot, and attach a monitor, mouse, and keyboard to the appropriate back panel ports. For detailed instructions, see “How to Configure a Local Graphics Console” on page 51.

4. Set up a Remote System Control (RSC) console.

Remote System Control (RSC) is a secure server management tool that lets you monitor and control your server over modem lines or over a network. RSC provides remote system administration for geographically distributed or physically inaccessible systems. For additional details, see “Remote System Control (RSC)” on page 75.

---

## How to Attach an Alphanumeric Terminal

### Before You Begin

If your server is configured without a local graphics console, you need to attach an alphanumeric terminal (or establish a `tip` connection) to the server in order to install the system and to run diagnostic tests. For background information, see “About Setting Up a Console” on page 49.

Alternatively, you can install a local graphics console on the server; see “How to Configure a Local Graphics Console” on page 51.

For information about establishing a `tip` connection, see the *OpenBoot 3.x Command Reference Manual*, an online version of which is included with the *Solaris System Administrator AnswerBook* that ships with Solaris software.

### What to Do

1. **Connect the terminal’s data cable to serial port A on the server’s rear panel.**

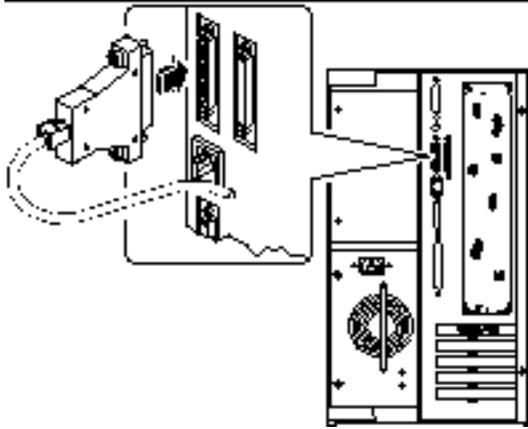


Figure 3-4

2. **Connect the terminal's power cable to an AC outlet.**
3. **Set the terminal to receive:**
  - At 9600 baud
  - An 8-bit signal with no parity and 1 stop bit

See the documentation accompanying your terminal for more information.

## What Next

You can now issue system commands and view system messages. Continue with your installation or diagnostic procedure as needed.

---

# How to Configure a Local Graphics Console

## Before You Begin

If your server is configured without a local graphics console, you need to install one in order to install the system and to run diagnostic tests. For background information, see "About Setting Up a Console" on page 49.


Alternatively, you can attach an ASCII terminal (or modem line) to the system's serial port; see "How to Attach an Alphanumeric Terminal" on page 50.

To install a local graphics console, you must have:

- A supported PCI-based graphics card
- A monitor (CRT) with appropriate resolution
- A Sun-compatible keyboard
- A Sun-compatible mouse and mouse pad


## What to Do

1. **Install the graphics card in a vacant PCI slot.**  
See "How to Install a PCI Card" on page 114.
2. **Attach the monitor video cable to the graphic card's video port.**  
Tighten the thumbscrews to secure the connection.

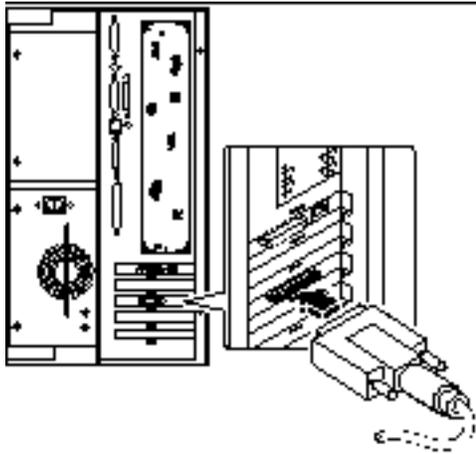

*Figure 3-5*

3. **Connect the monitor's power cord to an appropriate AC power outlet.**
4. **Attach the keyboard cable to the server's keyboard/mouse port.**

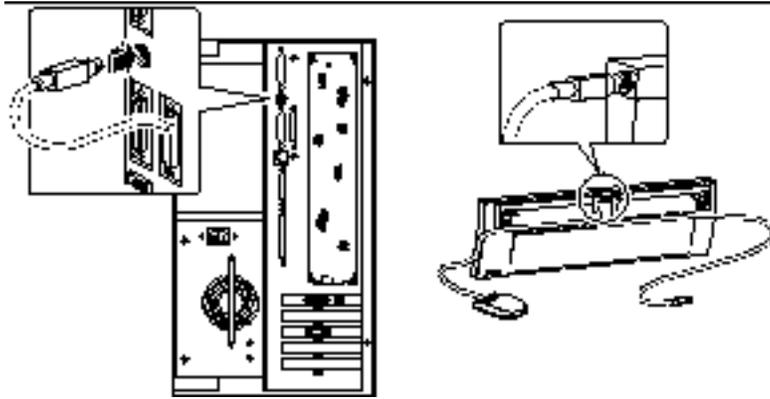

*Figure 3-6*

5. **Attach the mouse cable to the appropriate receptacle on the keyboard.**

## What Next

You can now issue system commands and view system messages. Continue with your installation or diagnostic procedure as needed.



## Preparing to Install or Replace Parts

---

This chapter tells you what you need to know, and need to do, before opening the system to install, remove, or replace parts.

*Tasks* covered in this chapter include:

- “How to Power Off the System” on page 55
- “How to Power On the System” on page 56
- “How to Initiate a Reconfiguration Boot” on page 58
- “How to Remove the Side Access Panel” on page 60
- “How to Install the Side Access Panel” on page 62
- “How to Avoid Electrostatic Discharge” on page 64

*Other information* covered in this chapter includes:

- “Reference for Installation and Service: Tools Required” on page 66

---

### How to Power Off the System

---



**Caution** - Before turning off system power, halt the operating system as described below. Failure to halt the operating system properly can result in loss of disk drive data.

---

#### What to Do

1. **Notify users that the system will be powered down.**

2. **Back up the system files and data, if necessary.**
3. **Halt the operating system using the appropriate commands.**  
Refer to the *Solaris Handbook for SMCC Peripherals* that corresponds to your operating system.
4. **Wait for the system halt messages and the `ok` prompt.**
5. **Turn the keyswitch on the front panel of the system to the Standby position, which is fully counterclockwise.**

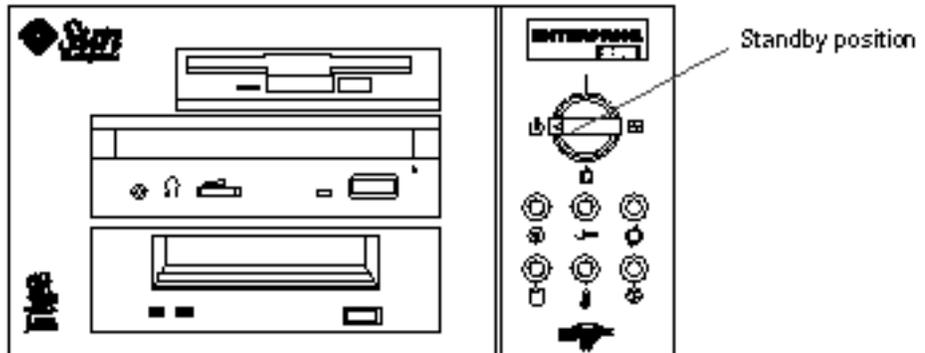


Figure 4-1

---

## How to Power On the System

### Before You Begin

If a terminal or local console is not already connected to the system, you need to install one before continuing the startup procedure.

- See "About Setting Up a Console" on page 49.

---

**Note** - Do not use this power-on procedure if you have just installed an internal or external storage device, or any new part that plugs into the main logic board. To power on the system after adding any of these options, see “How to Initiate a Reconfiguration Boot” on page 58.

---

## What to Do

---



**Caution** - Never move the system when system power is on. Movement can cause catastrophic disk drive failure. Always power off the system before moving it.

---



**Caution** - Before you power on the system, make sure that the side access panel and all plastic outer panels and doors are properly installed.

---



**Caution** - Removing the side access panel or removable media assembly activates the system power interlock switches. This safety mechanism prevents all DC voltages (except 5V standby power) from reaching any internal component when the side panel or removable media assembly is removed and the front panel keyswitch is in the Power-on position.

---

**1. Turn on power to any peripherals and external storage devices.**

Read the documentation supplied with the device for specific instructions.

**2. Turn on power to the monitor or terminal.**

A terminal or monitor is required for viewing system messages. For setup instructions, see “How to Attach an Alphanumeric Terminal” on page 50 or “How to Configure a Local Graphics Console” on page 51.

**3. Turn the front panel keyswitch to the Power-on, Diagnostics, or Locked position.**

See “About the Status and Control Panel” on page 6 for information about each keyswitch setting.

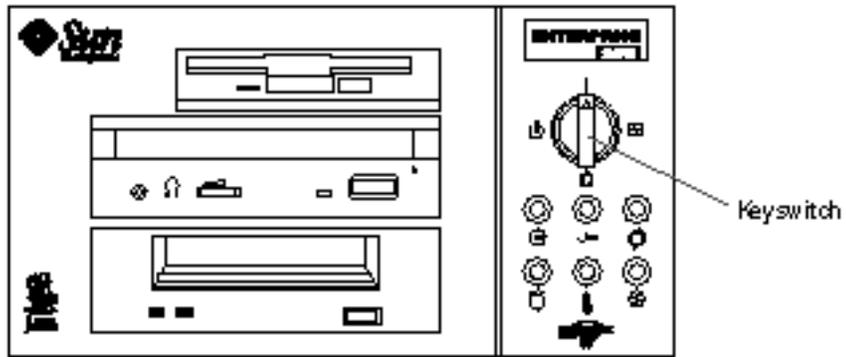


Figure 4-2

---

**Note** - The system may take anywhere from 30 seconds to two minutes before video is displayed on the system monitor or the `ok` prompt appears on an attached terminal. This time depends on the level of power-on self-test (POST) diagnostics being performed.

---

---

## How to Initiate a Reconfiguration Boot

### Before You Begin

After installing any new part that plugs into the main logic board or any internal or external storage device, you must perform a reconfiguration boot so that your system is able to recognize the newly installed option(s).



---

**Caution** - Before you power on the system, make sure that the side access panel and all plastic outer panels and doors are properly installed.

---



---

**Caution** - Removing the side access panel or removable media assembly activates the system power interlock switches. This safety mechanism prevents all DC voltages (except 5V standby power) from reaching any internal component when the side panel or removable media assembly is removed and the front panel keyswitch is in the Power-on position.

---

## What to Do

**1. Turn on power to any peripherals and external storage devices.**

Read the documentation supplied with the device for specific instructions.

**2. Turn on power to the monitor or terminal.**

A terminal or monitor is required for viewing system messages. For setup instructions, see “How to Attach an Alphanumeric Terminal” on page 50 or “How to Configure a Local Graphics Console” on page 51.

**3. Turn the front panel keyswitch to the Power-on position or to the Diagnostics position.**

See “About the Status and Control Panel” on page 6.

Use the Diagnostics position to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new part(s) you have just installed. For additional information, see Chapter 12.

**4. When the system banner is displayed on the monitor or terminal, immediately enter the `Stop-a` sequence on the Sun keyboard or press the `Break` key on the terminal keyboard.**

The system banner contains the Ethernet address and host ID. To enter the `Stop-a` sequence, hold down the `Stop` key and press the `a` key.

---

**Note** - The system may take anywhere from 30 seconds to two minutes before the system banner appears. This time depends on the level of power-on self-test diagnostics being performed.

---

**5. When the `ok` prompt is displayed, enter the following command:**

```
ok boot -r
```

This command rebuilds the device trees for the system, incorporating any newly installed options. After a device has been added to a device tree, it can be

recognized by the system. After the reconfiguration reboot has successfully completed, the system prompt should be displayed.



---

**Caution** - Never move the system when system power is on. Movement can cause catastrophic disk drive failure. Always power off the system before moving it.

---

## What Next

The system's front panel LED indicators provide power-on status information. For more information about the system LEDs, see:

- "About the Status and Control Panel" on page 6.

---

## How to Remove the Side Access Panel



---

**Caution** - Do not operate the system while any of its plastic outer panels or doors are removed.

---



---

**Caution** - Removing the side access panel or removable media assembly activates the system power interlock switches. This safety mechanism prevents all DC voltages (except 5V standby power) from reaching any internal component when the side panel or removable media assembly is removed and the front panel keyswitch is left on. Do not remove the side access panel or removable media assembly while the system is operating or the system will power off abruptly.

---

## Before You Begin

Complete this task:

- "How to Power Off the System" on page 55

## Video Demonstration


*Figure 4-3*

Click on the icon above for a video demonstration.

Click here for Appendix E.


## What to Do

1. **Remove the security lock block (if present).**  
See “How to Install the Security Lock Block” on page 48.
2. **Loosen the two captive screws securing the side panel to the rear of the chassis.**

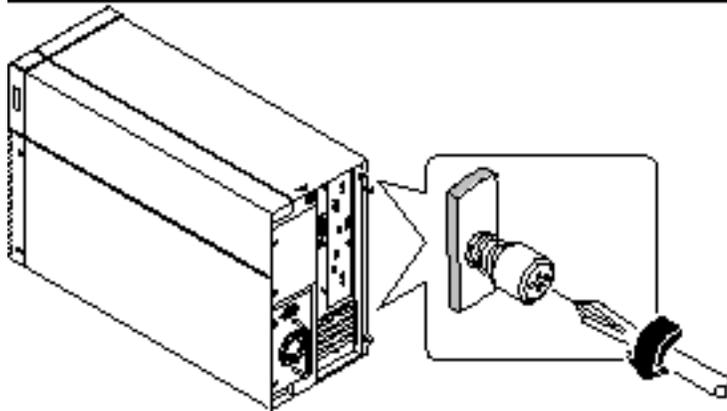

*Figure 4-4*

3. **Pull the side panel toward the back of the system.**  
Carefully disengage the hooks securing the side panel to the top of the chassis.

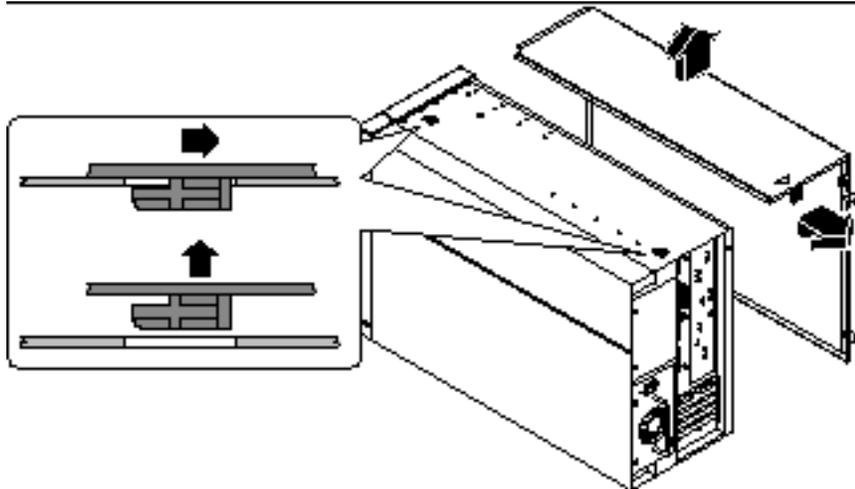

*Figure 4-5*

4. Lift the side panel up and away from the system, and set the panel aside.

## What Next

You are now ready to install, remove, or replace components inside the system chassis.

---

# How to Install the Side Access Panel

## Before You Begin

Remember to detach the antistatic wrist or foot strap from the system chassis sheet metal.

## Video Demonstration


*Figure 4-6*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

1. **Locate the hooks beneath the top surface of the side panel and insert them into the slots in the top of the system chassis.**

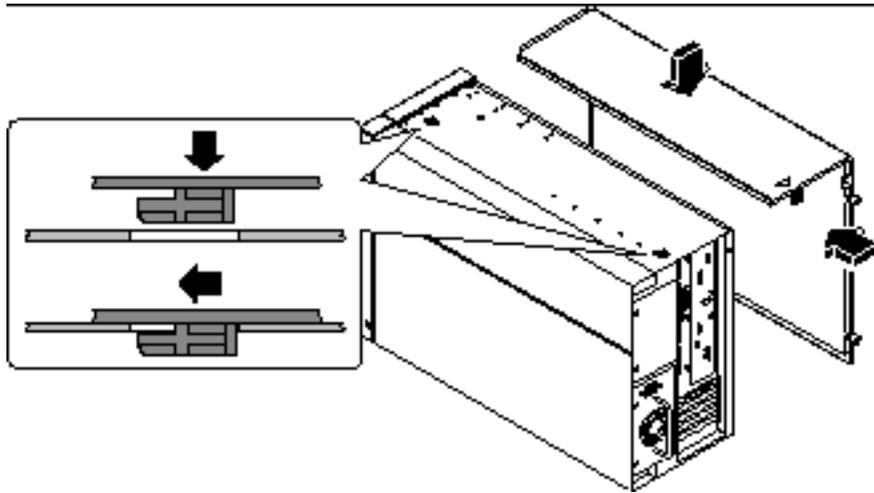

*Figure 4-7*

2. **Slide the panel toward the front of the system until it contacts the system's plastic front panel.**
3. **Tighten the two captive Phillips screws that secure the side panel to the rear of the chassis.**

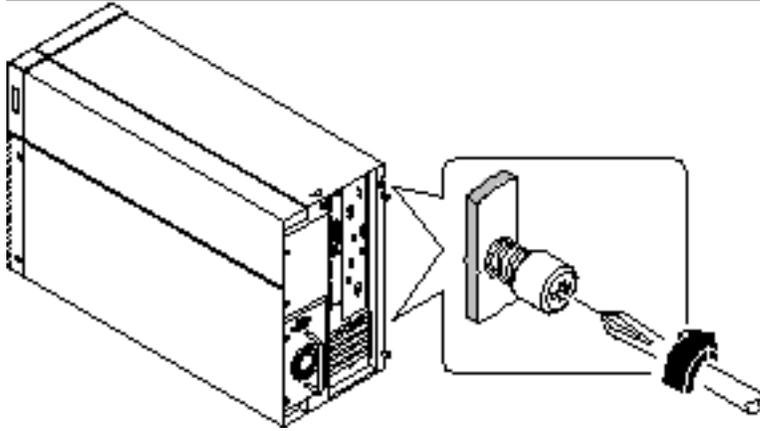


Figure 4-8

**4. Replace the security lock block (if required).**

See “How to Install the Security Lock Block” on page 48.

## What Next

When you're ready to restart the system, see:

- “How to Power On the System” on page 56; or
- “How to Initiate a Reconfiguration Boot” on page 58

---

## How to Avoid Electrostatic Discharge

Use the following procedure to prevent static damage whenever you are accessing any of the internal components of the system.

### Before You Begin

Complete this task:

- “How to Power Off the System” on page 55

You must have the following items:

- Antistatic wrist or foot strap

- Antistatic mat (or the equivalent)

## What to Do

---



**Caution** - Printed circuit boards and hard disk drives contain electronic components that are extremely sensitive to static electricity. Ordinary amounts of static from your clothes or the work environment can destroy components. Do not touch the components themselves or any metal parts without taking proper antistatic precautions.

---

**1. Disconnect the AC power cord from the wall power outlet *only if you will be handling the power distribution board.***

The AC power cord provides a discharge path for static electricity, so you generally want to leave it plugged in during installation and repair procedures. The only time you should unplug the cord is when you service the power distribution board.

**2. Use an antistatic mat or similar surface.**

When performing any option installation or service procedure, place static-sensitive parts, such as boards, cards, and disk drives, on an antistatic surface. The following items can be used as an antistatic surface:

- The bag used to wrap a Sun<sup>™</sup> replacement part
- The shipping container used to package a Sun replacement part
- Sun electrostatic discharge (ESD) mat, PN 250-1088 (available through your Sun sales representatives)
- Disposable ESD mat, shipped with replacement parts or options

**3. Use an antistatic wrist strap.**

Attach the appropriate end to the system chassis sheet metal, and attach the other end of the strap to your wrist. Refer to the instructions that come with the strap.

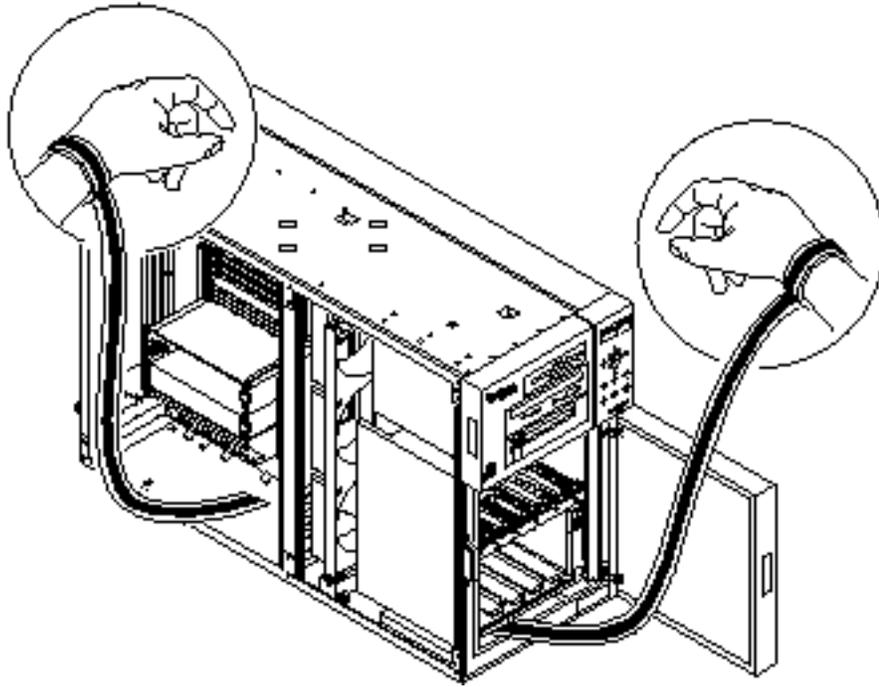


Figure 4-9

4. Detach both ends of the strap after you have completed the installation or service procedure.

---

## Reference for Installation and Service: Tools Required

The following tools are required to install and service the system:

- Screwdriver, Phillips #1
- Screwdriver, Phillips #2
- Screwdriver, long flat-blade #2
- ESD mat, Sun PN 250-1088, or equivalent

- Grounding wrist or foot strap

The latter two items help protect the server against damage due to electrostatic discharge. For more information, see “How to Avoid Electrostatic Discharge” on page 64.



## Hardware Configuration

---

This chapter describes the hardware configuration of the system. Topics covered in this chapter include:

- “About Reliability, Availability, and Serviceability Features” on page 69
- “About Memory” on page 76
- “About CPU Modules” on page 78
- “About Peripheral Component Interconnect (PCI) Buses” on page 80
- “About Internal Disk Drives” on page 83
- “About Power Supplies” on page 87
- “About the Standard Ethernet Port” on page 89
- “About the Serial Ports” on page 90
- “About the Parallel Port” on page 90
- “About the Main Logic Board Jumpers” on page 90
- “About Serial Port Jumpers” on page 92
- “About Flash PROM Jumpers” on page 93
- “About the SCSI Removable Media Bays and the External SCSI Port” on page 95

---

### About Reliability, Availability, and Serviceability Features

Reliability, availability, and serviceability are aspects of a system’s design that affect its ability to operate continuously and minimize the time necessary to service the

system. Reliability refers to a system's ability to operate continuously without failures and to maintain data integrity. System availability refers to the percentage of time that a system remains accessible and usable. Serviceability relates to the time it takes to restore a system to service following a system failure. Together, reliability, availability, and serviceability provide for near continuous system operation.

To deliver high levels of reliability, availability and serviceability, the system offers the following features:

- Error correction and parity checking for improved data integrity
- Easily accessible status indicators
- Hot-pluggable disk drives
- Support for RAID 0, 1, and 5 storage configurations
- Environmental monitoring and fault protection
- N+1 power supply redundancy
- Hot-swappable power supplies
- Automatic system recovery (ASR)
- Hardware watchdog mechanism
- Four different levels of system diagnostics
- Remote System Control (RSC)

## Error Correction and Parity Checking

Error correcting code (ECC) is used on all internal system data paths to ensure high levels of data integrity. All data that moves between processors, I/O, and memory have end-to-end ECC protection.

The system reports and logs correctable ECC errors. A correctable ECC error is any single-bit error in a 64-bit field. Such errors are corrected as soon as they are detected. The ECC implementation can also detect double-bit errors in the same 64-bit field and multiple-bit errors in the same nibble (4 bits).

In addition to providing ECC protection for data, the system offers parity protection on all system address buses. Parity protection is also used on the PCI and SCSI buses, and in the UltraSPARC CPU's internal and external cache.

## Status LEDs

The system provides easily accessible light-emitting diode (LED) indicators on the system front panel, internal disk bays, and power supplies to provide a visual indication of system and component status. Status LEDs eliminate guesswork and simplify problem diagnosis for enhanced serviceability.

Status and control panel LEDs are described in “About the Status and Control Panel” on page 6. Disk drive and power supply LEDs are described in “Error Indications” on page 257.

## Hot-Pluggable Disk Drives

The “hot-plug” feature of the system’s internal disk drives permits the removal and installation of drives while the system is operational. All drives are easily accessed from the front of the system. Hot-plug technology significantly increases the system’s serviceability and availability, by providing the ability to:

- Increase storage capacity dynamically to handle larger work loads and improve system performance.
- Replace disk drives without service disruption.

For more information about hot-pluggable disk drives, see “About Internal Disk Drives” on page 83 and “About Disk Array Configurations and Concepts” on page 209.

## Support for RAID 0, RAID 1, and RAID 5 Disk Configurations

The Solstice DiskSuite software designed for use with the system provides the ability to configure system disk storage in a variety of different RAID levels. You choose the appropriate RAID configuration based on the price, performance, and reliability/availability goals for your system.

RAID 0 (striping), RAID 1 (mirroring), RAID 0+1 (striping plus mirroring) and RAID 5 configurations (striping with interleaved parity) can all be implemented using Solstice DiskSuite. You can also configure one or more drives to serve as “hot spares” to fill in automatically for a defective drive in the event of a disk failure.

For more information about RAID configurations, see “About Disk Array Configurations and Concepts” on page 209.

## Environmental Monitoring and Control

The system features an environmental monitoring subsystem designed to protect against:

- Extreme temperatures
- Lack of air flow through the system
- Power supply problems

Monitoring and control capabilities reside at the operating system level as well as in the system's flash PROM firmware. This ensures that monitoring capabilities are operational even if the system has halted or is unable to boot.

The environmental monitoring subsystem uses an industry standard I<sup>2</sup>C bus implemented on the main logic board. The I<sup>2</sup>C bus is a simple two-wire serial bus, used throughout the system to allow the monitoring and control of temperature sensors, fans, power supplies, and status LEDs.

Temperature sensors are located throughout the system to monitor the ambient temperature of the system and the temperature of each CPU module. The monitoring subsystem frequently polls each sensor and uses the sampled temperatures to:

- Regulate fan speeds for maintaining an optimum balance between proper cooling and noise levels.
- Report and respond to any over-temperature conditions.

To indicate an over-temperature condition, the monitoring subsystem generates a warning message, and depending on the nature of the condition, may even shut down the system. If a CPU module reaches 60 degrees C or the ambient temperature reaches 53 degrees C, the system generates a warning message and illuminates the temperature fault LED on the status and control panel. If a CPU module reaches 65 degrees C or the ambient temperature reaches 58 degrees C, the system is automatically shut down.

This thermal shutdown capability is also built into the main logic board circuitry as a fail-safe measure. This feature provides backup thermal protection in the unlikely event that the environmental monitoring subsystem becomes disabled at both the software and firmware levels.

All error and warning messages are displayed on the system console (if one is attached) and are logged in the `/var/adm/messages` file. Front panel fault LEDs remain lit after an automatic system shutdown to aid in problem diagnosis.

The monitoring subsystem is also designed to detect fan failures. The system includes three fans, part of a single assembly called the fan tray assembly. Any fan failure causes the monitoring subsystem to generate an error message and light the general fault LED on the status and control panel.

The power subsystem is monitored in a similar fashion. The monitoring subsystem periodically polls the power supply status registers for a power supply OK status, indicating the status of each supply's +2.5V, +3.3V, +5V, +12V, and -12V DC outputs.

If a power supply problem is detected, an error message is displayed on the console (if one is attached) and logged in the `/var/adm/messages` file. The power supply LED on the status and control panel is also lit. The LEDs located on the power supply itself will indicate the type of fault, and if two power supplies are installed, will indicate which supply is the source of the fault.

For more information about error messages generated by the environmental monitoring subsystem, see "Environmental Failures" on page 273. For additional

details about the status and control panel LEDs, see “About the Status and Control Panel” on page 6.

## N+1 Power Supply Redundancy

The system can accommodate one or two power supplies. All system configurations can operate with only one power supply installed. A second supply can be used to provide N+1 redundancy, allowing the system to continue operating should one of the power supplies fail.

For more information about power supplies, redundancy, and configuration rules, see “About Power Supplies” on page 87.

## Hot-Swappable Power Supplies

Power supplies in a redundant configuration feature a “hot-swap” capability. You can remove and replace a faulty power supply without turning off the system power or even shutting down the operating system. The power supplies are easily accessed from the rear of the system, without the need to remove system covers.

## Automatic System Recovery (ASR)

The system provides for automatic system recovery (ASR) from the following types of hardware component failures:

- CPU modules
- Memory modules
- PCI buses
- System I/O interfaces

The automatic system recovery feature allows the system to resume operation after experiencing certain hardware faults or failures. Automatic self-test features enable the system to detect failed hardware components and an auto-configuring capability designed into the system’s boot firmware allows the system to deconfigure failed components and restore system operation. As long as the system is capable of operating without the failed component, the ASR features will enable the system to reboot automatically, without operator intervention.

During the power-on sequence, if a faulty component is detected, the component is effectively disabled and, if the system remains capable of functioning, the boot sequence continues. In a running system, some types of failures (such as a processor failure) will usually bring the system down. If this happens, the ASR functionality enables the system to reboot immediately if it is possible for the system to function

without the failed component. This prevents a faulty hardware component from keeping the entire system down or causing the system to crash again.

Control over the system's ASR functionality is provided by a number of OpenBoot PROM commands. These are described in the document *Platform Notes: Sun Enterprise 250 Server*, available on the *Solaris on Sun Hardware AnswerBook*. This AnswerBook documentation is provided on the SMCC Supplement CD for the Solaris release you are running.

## Hardware Watchdog Mechanism

To detect and respond to system hang conditions, the Enterprise 250 server features a hardware watchdog mechanism—a hardware timer that is continually reset as long as the operating system is running. In the event of a system hang, the operating system is no longer able to reset the timer. The timer will then expire and cause an automatic system reset, eliminating the need for operator intervention.

---

**Note** - The hardware watchdog mechanism is not activated until you enable it.

---

To enable this feature, you must edit the `/etc/system` file to include the following entry:

```
set watchdog_enable = 1
```

This change does not take effect until you reboot the system.

## Four Levels of Diagnostics

For enhanced serviceability and availability, the system provides four different levels of diagnostic testing: power-on self-test (POST), OpenBoot diagnostics (OBDiag), SunVTS™, and Solstice™ SyMON™.

POST and OBDiag are firmware-resident diagnostics that can run even if the server is unable to boot the operating system. Application-level diagnostics, such as SunVTS and Solstice SyMON, offer additional troubleshooting capabilities once the operating system is running.

POST diagnostics provide a quick but thorough check of the most basic hardware functions of the system. For more information about POST, see “About Power-On Self-Test (POST) Diagnostics” on page 235 and “How to Use POST Diagnostics” on page 236.

OBDiag provides a more comprehensive test of the system, including external interfaces. OBDiag is described in “About OpenBoot Diagnostics (OBDiag)” on page 239 and “How to Use OpenBoot Diagnostics (OBDiag)” on page 248.

At the application level, you have access to SunVTS diagnostics. Like OBDiag, SunVTS provides a comprehensive test of the system, including its external interfaces. SunVTS also allows you to run tests remotely over a network connection. You can only use SunVTS if the operating system is running. For more information about SunVTS, see “About SunVTS Software” on page 251, “How to Use SunVTS Software” on page 253, and “How to Check Whether SunVTS Software Is Installed” on page 252.

Another application-level program, called Solstice SyMON, provides you with a variety of continuous system monitoring capabilities. It allows you to monitor system hardware status and operating system performance of your server. For more information about SyMON, see “About Solstice SyMON Software” on page 255.

## Remote System Control (RSC)

Remote System Control (RSC) is a secure server management tool that lets you monitor and control your server over modem lines or over a network. RSC provides remote system administration for geographically distributed or physically inaccessible systems. The RSC software works with the System Service Processor (SSP) on the Enterprise 250 main logic board. The RSC and SSP support both serial and Ethernet connections to a remote console.

Once RSC is configured to manage your server, you can use it to run diagnostic tests, view diagnostic and error messages, reboot your server, and display environmental status information from a remote console. If the operating system is down, RSC will notify a central host of any power failures, hardware failures, or other important events that may be occurring on your server.


The RSC provides the following features:

- Remote system monitoring and error reporting (including diagnostic output)
- Remote reboot on demand
- Ability to monitor system environmental conditions remotely
- Ability to run diagnostic tests from a remote console
- Remote event notification for over-temperature conditions, power supply failures, fatal system errors, or system crashes
- Remote access to detailed event logs
- Remote console functions on serial and ethernet ports

For information about configuring and using RSC, see the *Remote System Control (RSC) User's Guide*, provided with the RSC software.

---

## About Memory

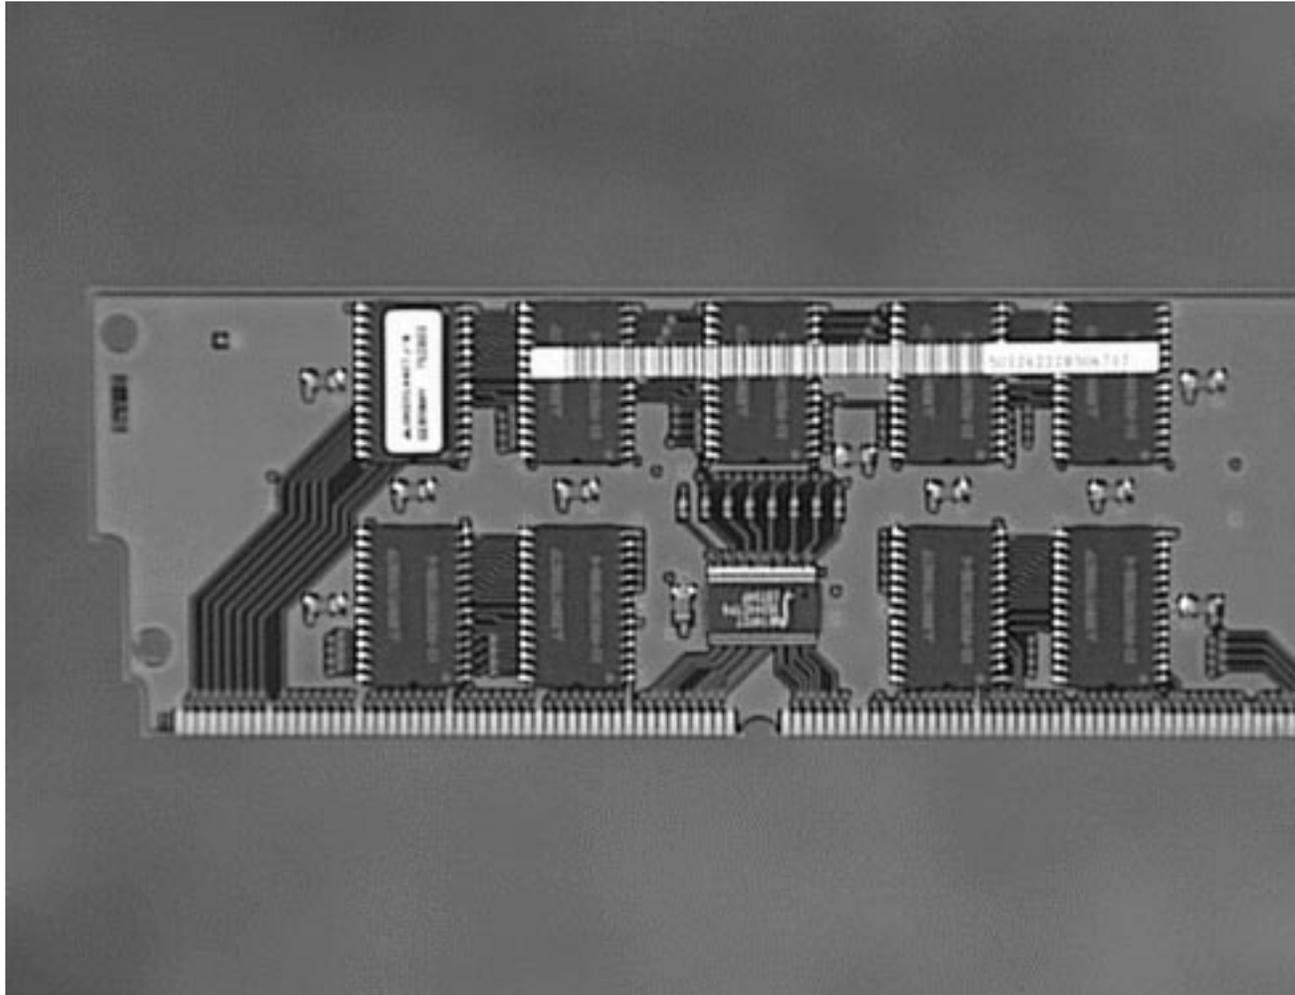

*Figure 5-1*

The system's main logic board provides sixteen slots for high-capacity dual in-line memory modules (DIMMs). The system supports Sun standard 200-pin, 5-volt, 60-nanosecond memory modules. Modules of 32-, 64-, and 128-Mbyte capacities can be installed in the system. Total system memory capacity ranges from 128 Mbytes to 2 Gbytes.

Memory slots are organized into four banks, with each bank comprising four slots. The system reads from, or writes to, all four DIMMs in a bank at the same time.

DIMMs, therefore, must be added four at a time in the same bank. The following figure shows the memory banks on the main logic board.

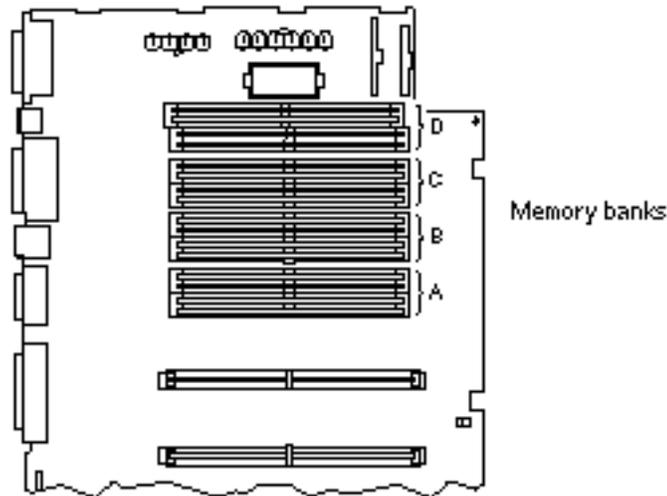


Figure 5-2

## Configuration Rules

Memory DIMMs must be added four at a time within the same bank, and each bank used must have four identical capacity DIMMs installed (for example, four 32-Mbyte DIMMs, or four 64-Mbyte DIMMs).

Memory bank A must always be filled.

DIMM capacities can differ from one bank to the next—for example, four 32-Mbyte DIMMs installed in bank A and four 64-Mbyte DIMMs installed in bank B.

Memory modules are delicate. Be sure to take appropriate precautions to avoid damaging them through electrostatic discharge. For more information, see “How to Avoid Electrostatic Discharge” on page 64.




---

**Caution** - Dual inline memory modules (DIMMs) are made of electronic components that are extremely sensitive to static electricity. Static from your clothes or work environment can destroy the modules. Do not remove any DIMM from its antistatic packaging until you are ready to install it on the system board. Handle the modules only by their edges. Do not touch the components or any metal parts. Always wear a grounding strap when you handle the modules.

---

---

## About CPU Modules

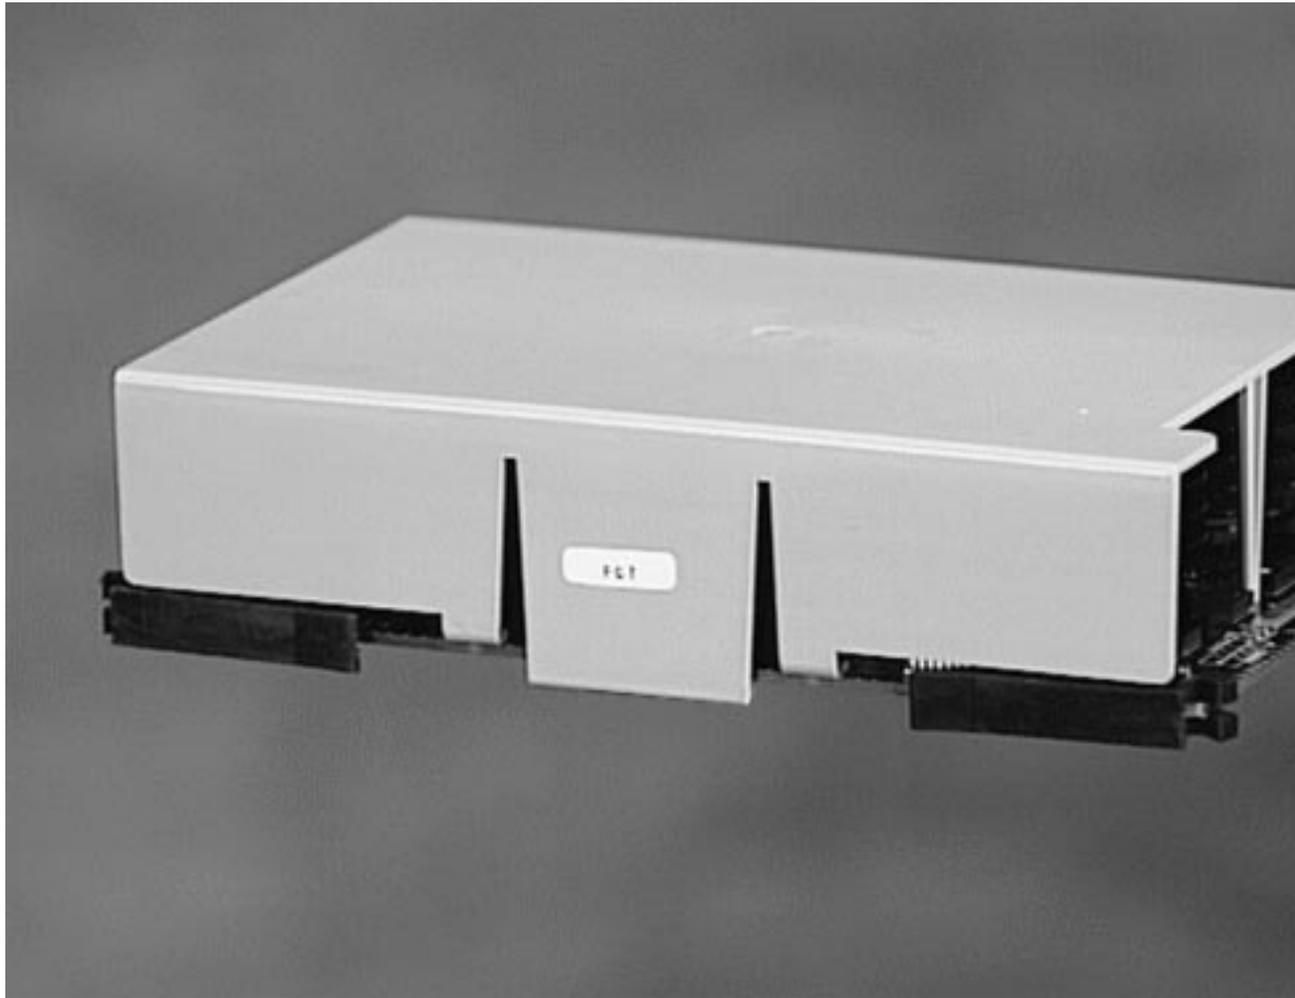

*Figure 5-3*

The UltraSPARC II CPU module is a high-performance, highly-integrated superscalar processor implementing the SPARC-V9 64-bit RISC architecture. The UltraSPARC II processor supports both 2-D and 3-D graphics, as well as image processing, video compression and decompression, and video effects through the sophisticated visual instruction set (VIS). VIS provides high levels of multimedia performance, including real-time video compression/decompression and two streams of MPEG-2 decompression at full broadcast quality with no additional hardware support.

The system's main logic board provides slots for two UltraSPARC II CPU modules. Each processor module includes one CPU chip with integrated cache memory for data and instructions, as well as 1 Mbyte or more of external SRAM cache memory.

Processor modules communicate with the system's main memory and I/O subsystem via the system's high-speed Ultra Port Architecture (UPA) data bus. The UPA's clock rate is automatically synchronized with the clock speed of the CPU modules, and the UPA clock operates at either one third or one fourth the clock rate of the CPUs. For example, if the CPUs operate at 300 MHz, the UPA will operate at a clock rate of 100 MHz.

For information on installing CPU modules, see "How to Install a CPU Module" on page 110.

## Configuration Rules

One or two CPU modules can be installed. Only UltraSPARC II processors are supported.

The first CPU module must be installed in the slot labeled CPU0—the one closest to the system's four PCI slots.

If you install two CPU modules, the two must operate at identical clock speeds (300 MHz, for example) and they must have the same size cache memory. This generally means the two CPU modules must have the same part number.

The following figure shows the CPU slot locations on the main logic board.

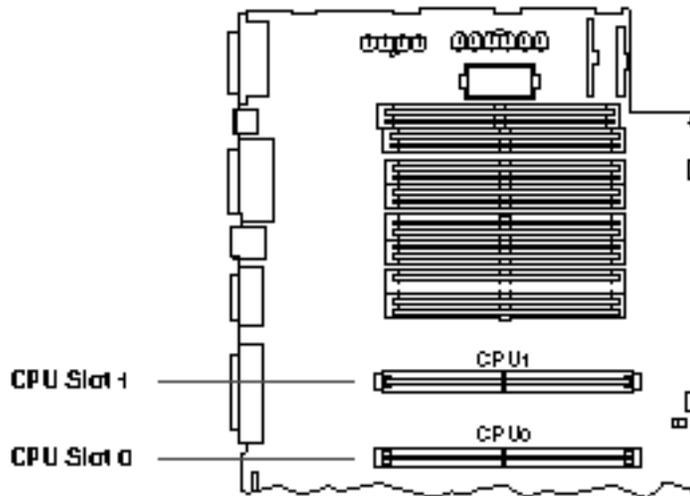


Figure 5-4

## About Peripheral Component Interconnect (PCI) Buses

All system communication with storage peripherals and network interface devices is mediated by a UPA-to-PCI bridge, located on the system's main logic board. This bridge chip manages communication between the UPA bus and the system's two PCI buses. These PCI buses support slots for up to four PCI interface cards. One PCI bus (bus 0) also handles communication between the system and devices connected to the main logic board's SCSI, FastEthernet, serial, parallel, and keyboard/mouse ports.

PCI cards come in a variety of configurations. Not all cards will fit or operate in all PCI slots, so it is important to know the specifications of your PCI cards and the types of cards supported by each PCI slot in the system.

Some PCI cards are as short as 6.875 inches (17.46 cm) in length (called "short" cards), while the maximum length of PCI cards is 12.28 inches (31.19 cm, called "long" cards). Each slot in the system can accommodate either a long or a short card.

Older PCI cards communicate over 32-bit PCI buses, while many newer cards communicate over wider 64-bit buses. All four PCI slots will accept either 32-bit or 64-bit wide cards.

Older PCI cards operate at 5 VDC, while newer cards are designed to operate on 3.3 VDC. Cards that require 5 volts will not operate in 3.3-volt slots, and 3.3-volt cards will not operate in 5-volt slots. “Universal” PCI cards are designed to operate on either 3.3 volts or 5 volts, so these cards can be inserted into either type of slot. The system provides three slots for 5-volt cards and one slot for a 3.3-volt card. All four PCI slots accept universal cards.

Most PCI cards operate at clock speeds of 33 MHz, while some newer cards operate at 66 MHz. All four PCI slots can accept 33-MHz cards. 66-MHz cards are restricted to the slot labelled PCI66-0.

The table below shows the mapping of the PCI slots to the two PCI buses, and the type of PCI cards supported in each slot.

TABLE 5-1

Rear Panel Slot Number	Connector Label	PCI Bus	Slot Width (bits)/		DC Voltage/ Card Type
			Card Type (bits)	Clock Rates (MHz)	
3	PCI66-0	1	64 / 32 or 64	33 and 66	3.3 V & Univ
2	PCI33-2	0	64 / 32 or 64	33	5 V & Univ
1	PCI33-1	0	64 / 32 or 64	33	5 V & Univ
0	PCI33-0	0	64 / 32 or 64	33	5 V & Univ

The following figure shows the PCI slots on the main logic board.

---

66 MHz, 3.3 V, 32/64 bit PCI/66  
33 MHz, 5 V, 32/64 bit PCI  
33 MHz, 5 V, 32/64 bit PCI  
33 MHz, 5 V, 32/64 bit PCI

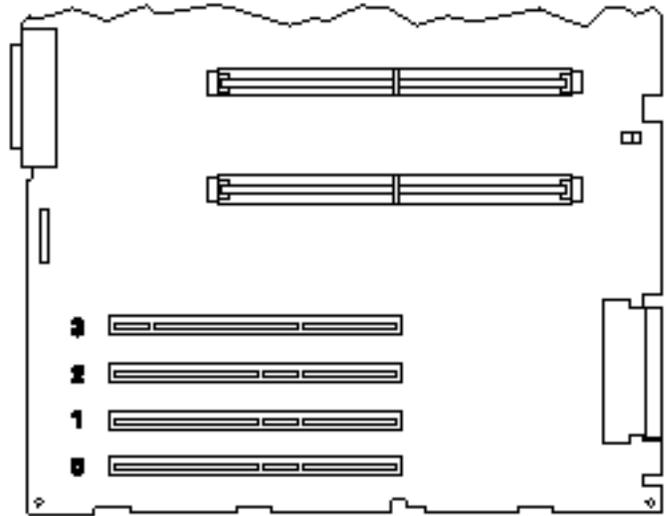


Figure 5-5

## Configuration Rules

All slots support PCI universal cards.

All slots support PCI long or short cards.


Each slot can supply up to 16 watts of power. The total power used for all four slots must not exceed 64 watts.

PCI cards may be freely installed in any compatible PCI slots. Slots need not be filled in any particular order. In most cases, the system's I/O performance will be unaffected by placement of PCI cards in the slots. Heavily loaded systems, however, will deliver better overall performance by installing high-throughput interface cards on separate buses. Examples of high-throughput interfaces are dual-channel UltraSCSI host adapters and ATM-622 interfaces.

Overall system availability may also be improved by installing redundant storage or network interfaces on separate PCI buses.

---

## About Internal Disk Drives

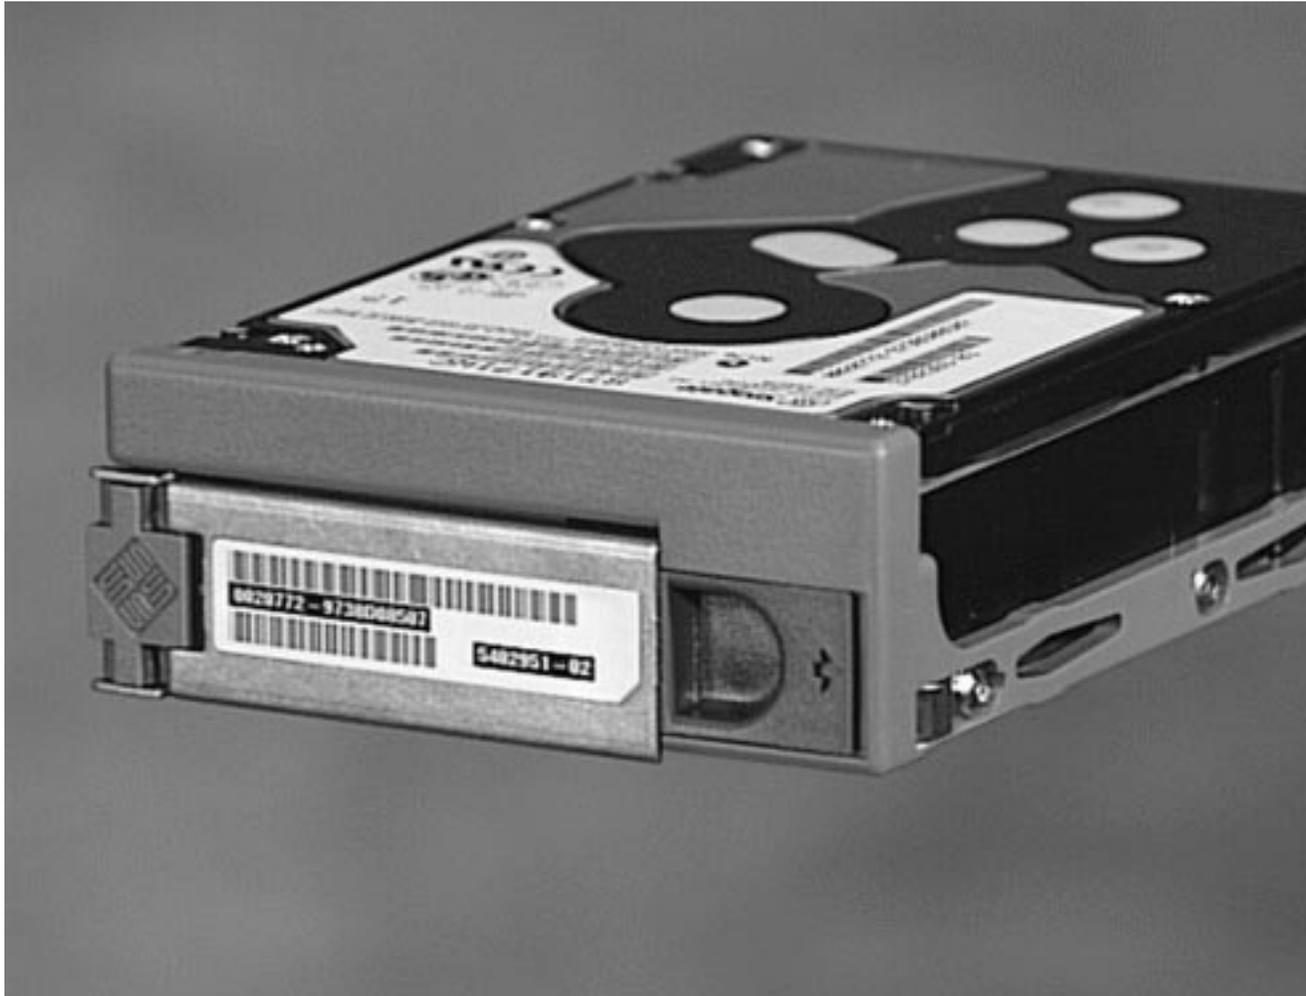

*Figure 5-6*

The Enterprise 250 server supports up to six internal, hot-pluggable UltraSCSI disk drives. Drives are 3.5-inches wide and either 1-inch or 1.6-inches high.

All internal drives are supported by the 40-Mbyte per second UltraSCSI interface on the system's main logic board. All drives plug in to a six-disk backplane, which mounts to the rear of the system's disk cage.

The system's disk cage features six green/yellow LED lights, each one located adjacent to a disk bay. These LEDs indicate the operating status and any fault conditions associated with each disk drive. This diagnostic feature helps the administrator to quickly identify drives requiring service. For additional information about disk drive LEDs, see "Disk LEDs" on page 260.

The following figure shows the system's six internal disk slots and LEDs. Disk slots are numbered from 0 to 5.

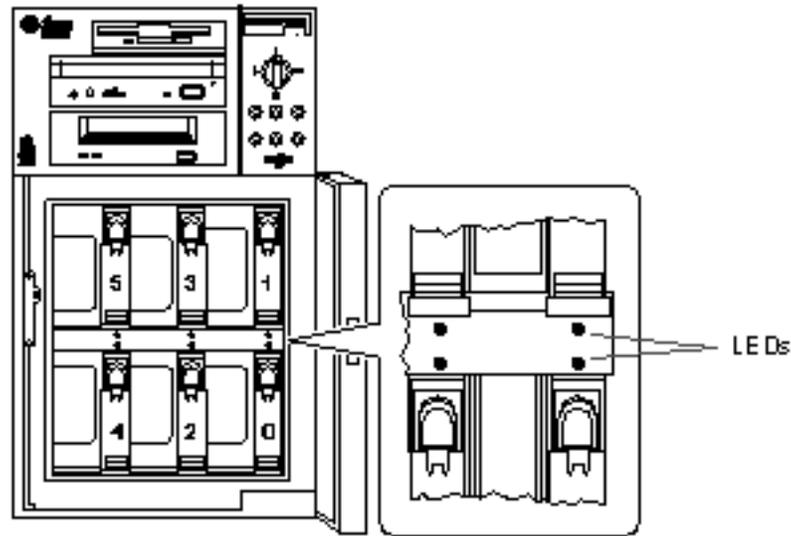


Figure 5-7

The Solstice DiskSuite software supplied with the Solaris server media kit lets you use internal disk drives in a variety of RAID configurations. RAID 0 (striping), RAID 1 (mirroring), RAID 0+1 (striping plus mirroring), and RAID 5 (striping with interleaved parity) are all supported. You can also configure drives as "hot spares." For more information on RAID configurations, see "About Disk Array Configurations and Concepts" on page 209.

The "hot-plug" feature of the system's internal disk drives allows the removal and installation of drives while the system is operational. This capability significantly reduces system down-time associated with disk drive replacement.

The hot-plug procedure involves software commands for preparing the system prior to removing a disk drive and for reconfiguring the operating environment after installing the replacement drive. The exact hot-plug procedure depends on which version of the Solaris operating environment you are using. For the complete procedure, please refer to *Platform Notes: Sun Enterprise 250 Server*, available on the

*Solaris on Sun Hardware AnswerBook*. This AnswerBook documentation is provided on the SMCC Supplement CD for the Solaris release you are running.

In order to perform a disk hot-plug procedure, you must know the physical or logical device name for the drive that you want to install or remove. If your system encounters a disk error, often you can find messages about failing or failed disks in your system console. This information is also logged in the `/var/adm/messages` file(s). These error messages typically refer to a failed disk drive by its physical device name (such as `/devices/pci@1f,4000/scsi@3/sd@b,0`) or by its logical device name (such as `c0t11d0`). In addition, some applications may report a disk slot number (0 through 5) or activate an LED located next to the disk drive itself.

You can use the following table to associate a disk slot number with the logical and physical device names for each disk drive.

TABLE 5-2

Disk Slot Number	Logical Device Name	Physical Device Name
Slot 0	c0t0d0	<code>/devices/pci@1f,4000/scsi@3/sd@0,0</code>
Slot 1	c0t8d0	<code>/devices/pci@1f,4000/scsi@3/sd@8,0</code>
Slot 2	c0t9d0	<code>/devices/pci@1f,4000/scsi@3/sd@9,0</code>
Slot 3	c0t10d0	<code>/devices/pci@1f,4000/scsi@3/sd@a,0</code>
Slot 4	c0t11d0	<code>/devices/pci@1f,4000/scsi@3/sd@b,0</code>
Slot 5	c0t12d0	<code>/devices/pci@1f,4000/scsi@3/sd@c,0</code>

## Configuration Rules

Disk drives must be Sun standard 3.5-inch wide UltraSCSI-compatible drives, either 1 inch or 1.6 inches high. UltraSCSI-compatible 1-inch and 1.6-inch high drives can be mixed in the same system.

The SCSI IDs for the disks are hardwired on the disk backplanes. There is no need to set any SCSI ID jumpers on the disk drives themselves. The SCSI target address (SCSI ID) of each disk drive is determined by the slot location where the drive is connected to its UltraSCSI backplane.

The disk drives share the internal SCSI bus with the SCSI removable media devices in the removable media assembly (RMA). The removable media SCSI cable provides the termination for the internal SCSI bus.

For information about implementing RAID configurations, see “About Disk Array Configurations and Concepts” on page 209.

---

## About Power Supplies




*Figure 5-8*

A central power distribution board delivers DC power for all internal system components. The system's power supplies plug in to connectors on this board, and

when both supplies are installed, they share equally in satisfying the power demands of the system.

Power supplies are modular units, designed for fast, easy installation or removal, even while the system is fully operational. Supplies are installed in bays at the rear of the system, as shown in the following figure.

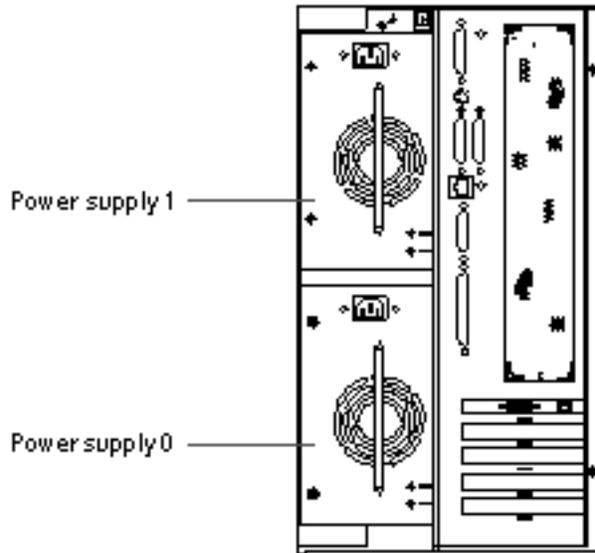

*Figure 5-9*

The system can accommodate one or two power supplies. Each supply provides up to 360 watts of DC power. All system configurations can operate with only one power supply installed. A second supply can be used to provide N+1 redundancy, allowing the system to continue operating should one of the power supplies fail.

Power supplies in a redundant configuration feature a “hot swap” capability. You can remove and replace a faulty power supply without turning off the system power or even shutting down the operating system.

---

**Note** - When removing a hot-swappable power supply, do not disengage and reengage the supply in rapid succession. Always remove a supply completely before reinserting the same supply or a replacement supply. Rapid seating and unseating of power supplies may result in false error conditions.

---

For information about removing and installing power supplies, see “How to Remove a Power Supply” on page 153 and “How to Install a Power Supply” on page 155.

Two LED indicators on the rear of the power supply display power status and fault conditions. For additional details, see “Power Supply LEDs” on page 259.

---

**Note** - Enterprise 250 power supplies will shut down automatically in response to certain over-temperature and power fault conditions (see “Environmental Monitoring and Control” on page 71). To recover from an automatic shutdown, you must disconnect the AC power cord, wait roughly 10 seconds, and then reconnect the power cord.

---

---

## About the Standard Ethernet Port

The system's main logic board provides an auto-sensing, switchable 10BASE-T/100BASE-TX Ethernet interface conforming to the IEEE 802.3u Ethernet standard. The interface configures itself automatically for either 10-Mbps or 100-Mbps operation, depending on network characteristics.

Two rear panel connectors provide access to the Ethernet interface:

- One RJ-45 connector for connecting a category-5 twisted-pair Ethernet (TPE) cable
- One Media Independent Interface (MII) connector for connecting an external MII transceiver

---

**Note** - You can use only one of the main logic board Ethernet connectors; you cannot connect to the TPE and MII connectors at the same time.

---

The Media Independent Interface lets you connect the system to a variety of external 100BASE-TX (Fast) Ethernet transceivers, providing compatibility with different Ethernet wiring types. When an external transceiver is connected to the MII, the system automatically activates the MII port and disables the TPE port.

Sun Microsystems offers an MII-to-AUI transceiver as a separately orderable option (order number X467A). A number of third-party MII transceivers are also available for connecting to TX, T4, FX, and AUI-type Ethernet networks.

For instructions on configuring the main logic board Ethernet interface, see “How to Configure the Standard Ethernet Interface” on page 196.

For connector diagrams and pin assignments, see “Reference for the Twisted-Pair Ethernet (TPE) Connector” on page 283 and “Reference for the Media Independent Interface (MII) Ethernet Connector” on page 284.

For information about operating characteristics and configuration parameters for the hme Fast Ethernet device driver, please see *Platform Notes: The hme Fast Ethernet Device Driver*. This document is available on *Solaris on Sun Hardware AnswerBook*, which is provided on the SMCC Supplement CD for the Solaris release you are running.

---

## About the Serial Ports

The system provides two serial communication ports through a pair of DB-25 connectors located on the rear panel. Both ports are capable of synchronous and asynchronous communication. In synchronous mode, each port operates at any rate from 50 Kbaud to 256 Kbaud when the clock is generated internally. When the clock is generated from an external source, synchronous communication occurs at rates up to 384 Kbaud. In asynchronous mode, either port supports baud rates of 50, 75, 110, 200, 300, 600, 1200, 1800, 2400, 4800, 9600, 19200, 38400, 57600, 76800, 115200, 153600, 230400, 307200, and 460800 baud.

Both serial ports can be configured to provide EIA-423 or EIA-232D signal levels. Signal levels are controlled by jumpers located on the system's main logic board. The default setting is EIA-423. For more information about configuring the serial port jumpers, see "About Serial Port Jumpers" on page 92.

See "Reference for the Serial Port A and B Connectors" on page 277 for the connector diagram, rear panel icon, and pin assignments.

---

## About the Parallel Port

The system provides one IEEE 1284-compatible, bidirectional parallel port for connecting the system to a local printer or other compatible parallel device. Connectivity is provided by a standard 25-pin DB-25 connector on the rear panel of the system. The parallel port operates at a 2-megabytes per second data transfer rate and supports the EPP protocol modes as well as standard Centronics, Nibble, and Byte modes.

See "Reference for the Parallel Connector" on page 279 for the connector diagram, rear panel icon, and pin assignments.

---

## About the Main Logic Board Jumpers

The jumpers on the main logic board have the following functions:

- J2604 and J2605 are used to configure the serial ports for either EIA-423 or EIA-232D operation. For information about the EIA-423/232D jumper settings, see "About Serial Port Jumpers" on page 92.

- J2702, J2704, and J2804 are used to affect the operation of the flash PROM located on the main logic board. For information about the flash PROM jumper settings, see “About Flash PROM Jumpers” on page 93.

The illustration below shows the jumper locations on the main logic board.


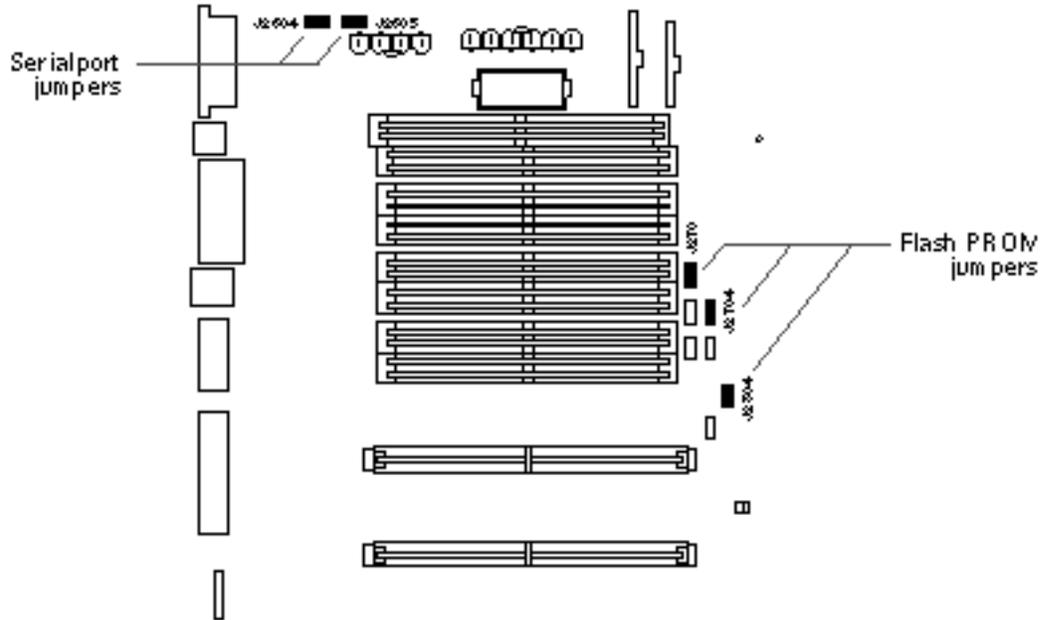


Figure 5-10

Jumpers are marked on the main logic board with identification numbers. For example, the serial port jumpers are marked J2604 and J2605. Jumper pins are located immediately adjacent to the identification number. Pin 1 is marked with an asterisk (\*) in any of the positions shown below.

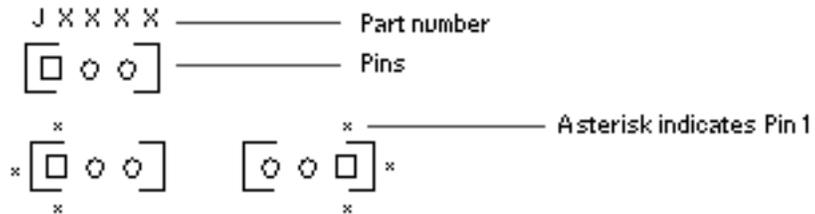

---

# About Serial Port Jumpers

The serial port jumpers on the main logic board (J2604 and J2605) permit the configuration of the system's two serial ports for either EIA-423 or EIA-232D signal levels. EIA-423 levels are the default standard for North American users. EIA-232D levels are required for digital telecommunication in nations of the European Community.

The figure below shows the jumper locations, and the table describes their function.

---

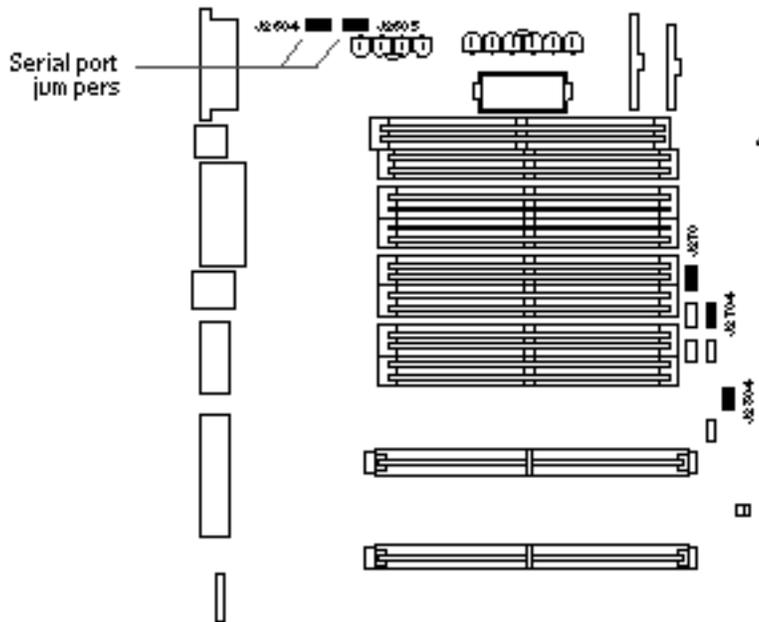


Figure 5-11

TABLE 5-3

<b>Jumper</b>	<b>Shunt on Pins 1 + 2 Selects</b>	<b>Shunt on Pins 2 + 3 Selects</b>	<b>Default Shunt on Pins</b>
J2604	EIA-232D	EIA-423	2 + 3
J2605	EIA-232D	EIA-423	2 + 3

---

## About Flash PROM Jumpers

The system uses flash PROMs to permit the reprogramming of specific code blocks that are held in non-volatile system memory, and to permit remote reprogramming of that code by an authorized system administrator over a local area network.

Three jumpers on the main logic board affect flash PROM operation. The figure below shows the jumper locations, and the table describes their function.

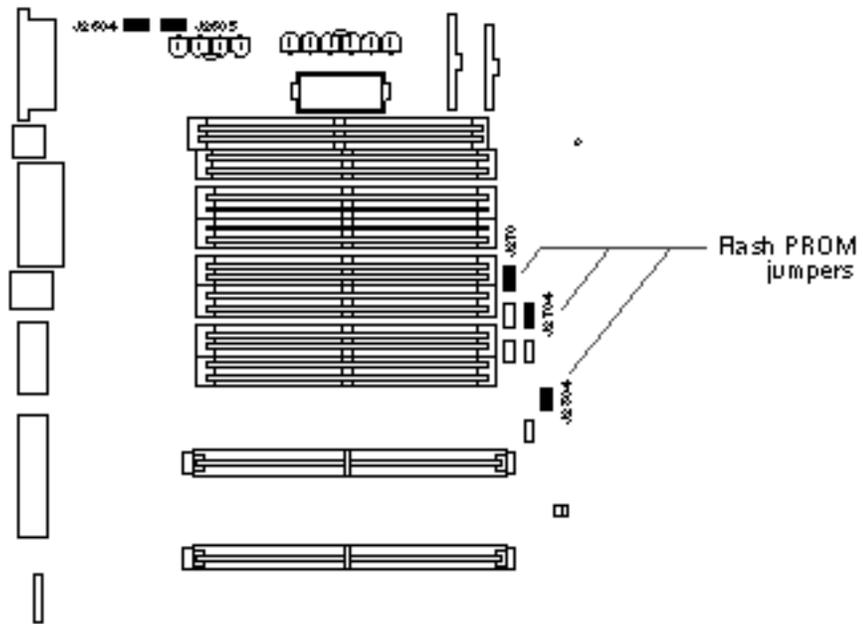


Figure 5-12

TABLE 5-4

Jumper	Shunt on Pins 1 + 2 Selects	Shunt on Pins 2 + 3 Selects	Default Shunt on Pins
J2702	Flash PROM	Not To Be Used	1 + 2
J2704	Write Protect	Write Enable	2 + 3
J2804	High Half Booting	Normal Booting	2 + 3

**Note** - Jumper J2704 is factory-set so that the flash PROM is write-enabled. You use the keyswitch located on the front panel to write protect the flash PROM. When the switch is set to the Locked position, the flash PROM is write-protected. When the switch is set to the Power-on position or to the Diagnostics position, the flash PROM is write-enabled. For descriptions of the various keyswitch settings, see “About the Status and Control Panel” on page 6.

For descriptions of the various keyswitch settings, see “About the Status and Control Panel” on page 6.

For more information about flash PROM programming, see the documentation supplied with the flash PROM update CD-ROM.

---

## About the SCSI Removable Media Bays and the External SCSI Port

The removable media assembly located at the top front of the system provides mounting bays for two 5.25-inch, half-height (1.6-inch) SCSI devices. The upper SCSI bay (directly below the diskette drive bay) houses a CD-ROM drive. The lower bay accommodates a second SCSI device, such as an 8-mm tape, a 4-mm DDS-2 or DDS-3 tape, or a quarter-inch cassette tape drive. Both SCSI removable media bays are connected to the same SCSI bus as the internal disk drives. While this bus supports wide SCSI operation for the internal disk drives, the removable media portion of the bus operates in narrow SCSI mode only. The removable media assembly can accommodate wide SCSI (68-pin) devices, however these devices require a 50-to-68-pin adapter cable, and operate in narrow SCSI mode only.

External SCSI devices are supported via a 68-pin SCSI connector located on the system's rear panel. This bus is UltraSCSI-capable (40 Mbytes per second) and can support additional external, single-ended, wide or narrow SCSI devices. The external SCSI bus is separate from the internal SCSI bus for removable media devices and internal disk drives. See “Reference for the SCSI Connector” on page 280 for a diagram and pinout of the external SCSI connector.

The external SCSI bus will support up to four external SCSI tape devices if the bus is used exclusively for tape devices. When other types of SCSI devices are present on the bus, a maximum of two SCSI tape devices are supported on the external SCSI bus. Additional external tape devices can be supported by installing appropriate PCI host adapter cards.





### Target Devices

Up to 15 devices can operate on the external SCSI bus at 20 Mbytes/sec. For UltraSCSI performance of 40 Mbytes/sec, no more than seven devices may be connected. Target addresses for the external SCSI bus (also known as SCSI IDs) are available in a range of 0 through 15. Target address 7 is reserved for the SCSI host adapter located on the main logic board. All devices on the bus must have unique target addresses.

The addresses for the internal CD-ROM and tape drives are determined by jumpers located on the drives. If the CD-ROM and tape drives have been factory-installed, they are configured with the correct addresses for the system.

When installing an internal CD-ROM or tape drive as an option, you should verify the address settings on these devices. The settings usually involve three sets of pins that determine the address in binary. Attaching a jumper across a set of pins creates a binary 1 in that position.

TABLE 5-5

	000 <sub>2</sub> = SCSI ID 0		001 <sub>2</sub> = SCSI ID 1		010 <sub>2</sub> = SCSI ID 2
	011 <sub>2</sub> = SCSI ID 3		100 <sub>2</sub> = SCSI ID 4		101 <sub>2</sub> = SCSI ID 5
	110 <sub>2</sub> = SCSI ID 6		111 <sub>2</sub> = SCSI ID 7		

See the documentation accompanying the drive for device-specific information about checking and setting jumpers.

## Bus Length

For UltraSCSI performance on the external SCSI bus, you must adhere to the following bus length restrictions for daisy-chained SCSI devices:

- For 1 to 3 devices, the maximum bus length is 3 meters (9.84 feet)
- For 4 to 7 devices, the maximum bus length is 1.5 meters (4.92 feet)

You must include the Enterprise 250 internal bus length (0.5 meter/1.7 feet) in your bus length calculations.

If you exceed these bus length restrictions, UltraSCSI devices may operate at less than 40 Mbytes/sec. Under such conditions, an UltraSCSI device may experience errors that eventually cause it to reset and operate at 20 Mbytes/sec.

For Fast/Wide performance on the external SCSI bus, the maximum SCSI bus length for daisy-chained SCSI devices is 6 meters (19.7 feet), including the Enterprise 250 internal bus length (0.5 meter/1.7 feet).

# External SCSI Cabling and Termination

Use the following cabling guidelines to ensure proper device cabling and termination on the external SCSI bus:

- In order to maintain UltraSCSI performance, all cables used must be UltraSCSI-compliant.
- The external SCSI bus must be correctly terminated. Most Sun devices use autotermination. See the documentation supplied with the device.
- If all external mass storage devices use 68-pin connectors, connect all non-Sun devices to the system first and connect a Sun autoterminating device to the end of the chain.
- If external mass storage devices consist of 68-pin devices and 50-pin devices, connect the Sun 68-pin devices to the system first and terminate the chain with a 50-pin device and its terminator. The 68-pin device connected to the 68-50 pin adapter cable must be autoterminating in order to terminate the high-order bits.



**Caution** - Do not connect 68-pin devices after 50-pin devices; SCSI bus errors will occur.

The following figures provide a summary of the cabling guidelines.

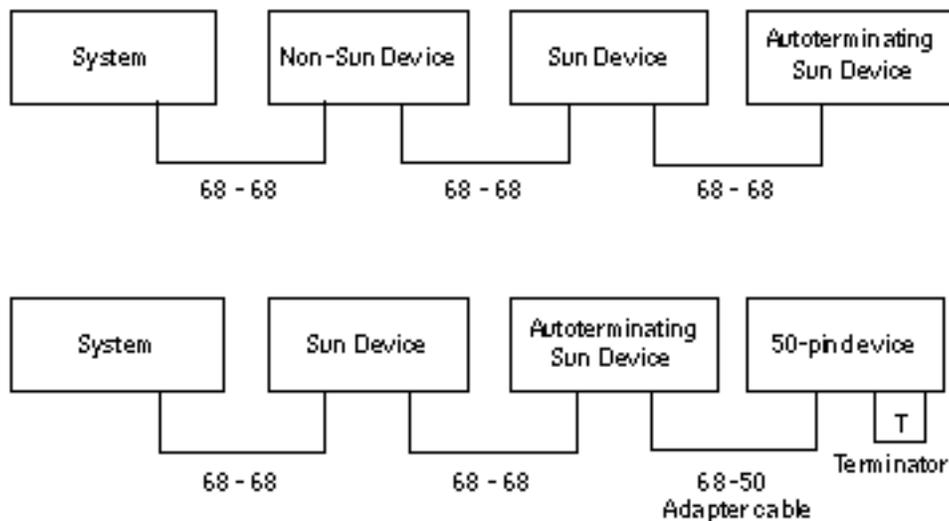


Figure 5-13

# Multi-initiator Support

The SCSI implementation of the system includes multi-initiator support: any external host adapter on the bus can drive Termpower. This means that if the system should lose power, the devices on the SCSI bus (except those powered by the system) can continue to operate.

## Configuration Rules

For Fast/Wide performance, you can connect up to 15 devices to the external SCSI bus. For UltraSCSI performance, no more than seven devices may be connected. Each device must have a unique target address (SCSI ID) in the range from 0 to 15.

You cannot assign target address 7 to any device; it is reserved for the host adapter on the main logic board.

For UltraSCSI performance on the external SCSI bus, all cables used must be UltraSCSI-compliant, and you must adhere to the following bus length restrictions:

- For 1 to 3 devices, the maximum bus length is 3 meters (9.84 feet)
- For 4 to 7 devices, the maximum bus length is 1.5 meters (4.92 feet)

You must include the Enterprise 250 internal bus length (0.5 meter/1.7 feet) in your bus length calculations.

For Fast/Wide performance on the external SCSI bus, the maximum SCSI bus length for daisy-chained SCSI devices is 6 meters (19.7 feet), including the Enterprise 250 internal bus length (0.5 meter/1.7 feet).

UltraSCSI devices can be mixed with non-UltraSCSI devices on the same bus. The UltraSCSI devices will still operate at UltraSCSI speeds (40 Mbytes/sec), provided that the rules for UltraSCSI cabling, bus length, termination, and target devices are followed.

If all external SCSI devices use 68-pin connectors, connect all non-Sun devices to the system first and connect a Sun autoterminating device to the end the chain.

If external mass storage devices consist of 68-pin devices and 50-pin devices, connect the Sun 68-pin devices to the system first and terminate the chain with a 50-pin device and its terminator. The 68-pin device connected to the 68-50 pin adapter cable must be autoterminating in order to terminate the high-order bits.

If you install an internal tape drive in the system, you should assign it target address 4 or 5. If you install an internal CD-ROM in the system, you should assign it target address 6. If these drives have been factory-installed, they are configured with the correct addresses for the system.

The removable media SCSI cable provides the termination for the internal SCSI bus.

## Removing and Installing Main Logic Board Components

---

This chapter describes how to remove and install the main logic board components within the system. For a list of part numbers for field-replaceable units and optional equipment, see “Illustrated Parts Breakdown” on page 313.

*Tasks* covered in this chapter include:

- “How to Remove the Main Logic Board” on page 100
- “How to Install the Main Logic Board” on page 102
- “How to Remove a Memory Module” on page 105
- “How to Install a Memory Module” on page 107
- “How to Remove a CPU Module” on page 109
- “How to Install a CPU Module” on page 110
- “How to Remove a PCI Card” on page 112
- “How to Install a PCI Card” on page 114
- “How to Remove the SSP Paddle Card” on page 117
- “How to Install the SSP Paddle Card” on page 120
- “How to Remove the NVRAM/TOD Module” on page 123
- “How to Install the NVRAM/TOD Module” on page 124

---

# How to Remove the Main Logic Board

---



**Caution** - This procedure must be performed by a qualified service-trained maintenance provider. Persons who remove any of the outer panels to access this equipment must observe all safety precautions and comply with skill level requirements, certification, and all applicable local and national laws.

---

## Before You Begin

Before you remove the main logic board, you must remove all removable components from it, so that you can transfer them to the new main logic board after you install it. Complete these tasks to remove the necessary components:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove a Memory Module” on page 105
- “How to Remove the NVRAM/TOD Module” on page 123
- “How to Remove a CPU Module” on page 109
- “How to Remove a PCI Card” on page 112
- “How to Remove the SSP Paddle Card” on page 117

## Video Demonstration

*Figure 6-1*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

1. **Disconnect any external cables attached to the rear panel of the system.**

Be sure to note where each cable attaches to the rear panel. See “Locating Rear Panel Features” on page 5.

2. **Disconnect the internal cables from the main logic board.**  
Press the tab on the cable connector to detach each cable.
  - a. **Disconnect the two power cables at connectors J2902 and J2903.**
  - b. **Disconnect the two power sense cables at connectors J2901 and J4501.**
  - c. **Disconnect the SCSI backplane data cable at connector J1801.**
  
3. **Loosen the three captive screws securing the main logic board to the rear panel.**

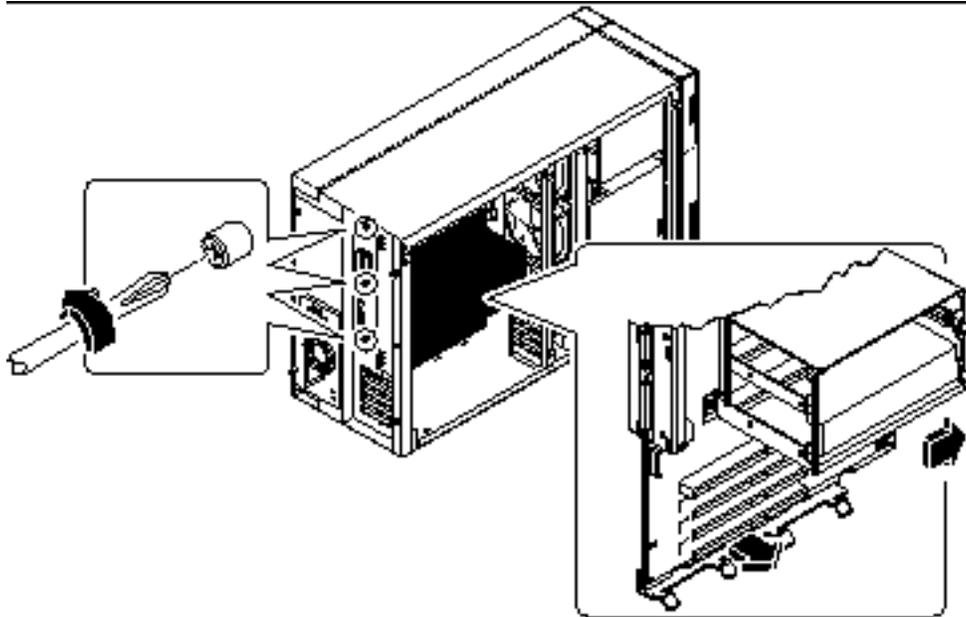


Figure 6-2

---

**Note** - Be sure to remove the SSP paddle card and all PCI cards prior to removing the main logic board. See “Before You Begin” on page 100.

---

4. **Slide the main logic board away from the rear panel until it is free.**
5. **Pull the bottom edge of the main logic board away from the machine, and lift the board out of the system.**

Place the main logic board on an antistatic mat.

## What Next

To replace the main logic board, complete this task:

- “How to Install the Main Logic Board” on page 102



## How to Install the Main Logic Board

---

**Caution** - This procedure must be performed by a qualified service-trained maintenance provider. Persons who remove any of the outer panels to access this equipment must observe all safety precautions and comply with skill level requirements, certification, and all applicable local and national laws.

---

## Before You Begin

You must remove all removable components from the old main logic board so that you can transfer them to the replacement board. For more information, see:

- “How to Remove the Main Logic Board” on page 100

**Note** - Be sure to remove the NVRAM/TOD module from the old main logic board so that you can transfer it to the replacement board.

---

## Video Demonstration

*Figure 6-3*

Click on the icon above for a video demonstration.

Click here for Appendix E.

## What to Do

1. **Remove the main logic board from its antistatic packaging and place it on an antistatic mat.**

Retain the packaging and use it to pack and return the defective board.

2. **Set the jumpers on the replacement main logic board so that they are the same as the settings on the old board.**

See “About the Main Logic Board Jumpers” on page 90 for more information about jumper locations and settings.

3. **Position the board inside the chassis.**

Align the notches at the top and bottom edges of the board with the corresponding tabs on the chassis wall.

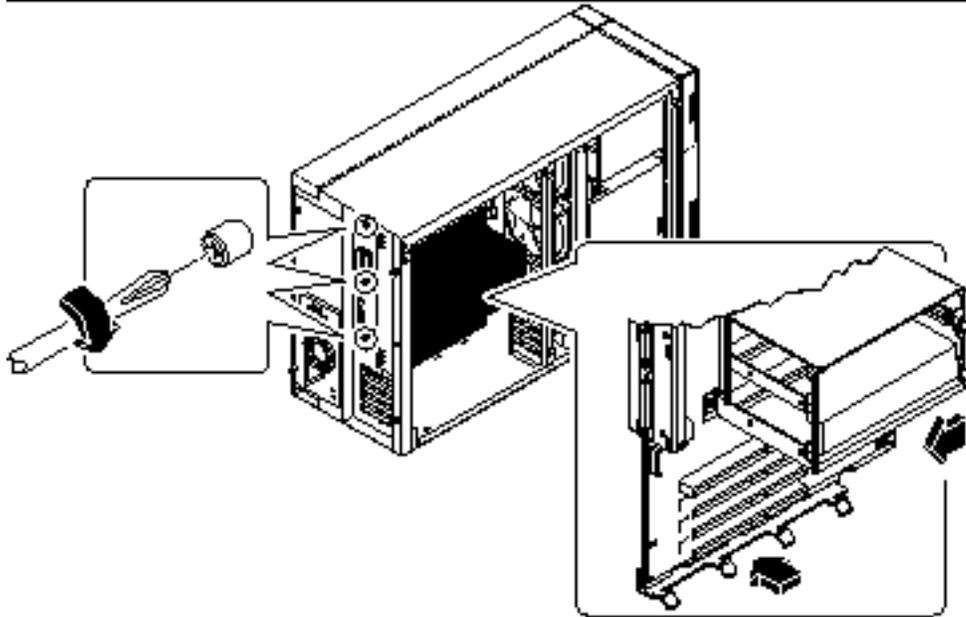


Figure 6-4

4. **Press the main logic board against the chassis wall as you slide it toward the rear panel.**
5. **Tighten the three captive screws securing the main logic board to the rear panel.**
6. **Reconnect the internal cables to the main logic board:**
  - a. **Reconnect the two power cables to connectors J2902 and J2903.**
  - b. **Reconnect the two power sense cables to connectors J2901 and J4501.**

c. **Reconnect the SCSI backplane data cable to connector J1801.**

**7. Reconnect any external cables to the rear panel of the system.**

See “Locating Rear Panel Features” on page 5.

---

**Note** - When the side access panel is removed, the system power interlock switches are activated. This safety mechanism prevents any DC voltages (except 5V standby power) from reaching the main logic board while the side access panel is removed.

---

## What Next

Remove the NVRAM module from the replacement board and install it on the old board for return to Sun Microsystems. See “How to Install the NVRAM/TOD Module” on page 124.

Complete these tasks to transfer the components that you removed from the old main logic board to the new board:

- “How to Install the SSP Paddle Card” on page 120
- “How to Install a CPU Module” on page 110
- “How to Install the NVRAM/TOD Module” on page 124
- “How to Install a Memory Module” on page 107

Complete this task to reassemble the system:

- “How to Install the Side Access Panel” on page 62

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. For additional information, see Chapter 12.

---

**Note** - After installing the new main logic board, you must restore Remote System Control (RSC) configuration parameters before you can use RSC. During RSC configuration, RSC parameters are typically backed up to a hard disk drive. You must restore those parameters to the RSC SEEPROM on the new main logic board. For additional details, see the *Remote System Control (RSC) User's Guide*.

---

---

# How to Remove a Memory Module

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64



---

**Caution** - Dual inline memory modules (DIMMs) are made of electronic components that are extremely sensitive to static electricity. Static from your clothes or work environment can destroy the modules. Do not remove any DIMM from its antistatic packaging until you are ready to install it on the main logic board. Handle the modules only by their edges. Do not touch the components or any metal parts. Always wear a grounding strap when you handle the modules.

---

## What to Do

1. **Locate the DIMM module you want to remove on the main logic board.**  
See “About Memory” on page 76.
2. **Push the ejection lever away from the memory module and eject it from the socket.**

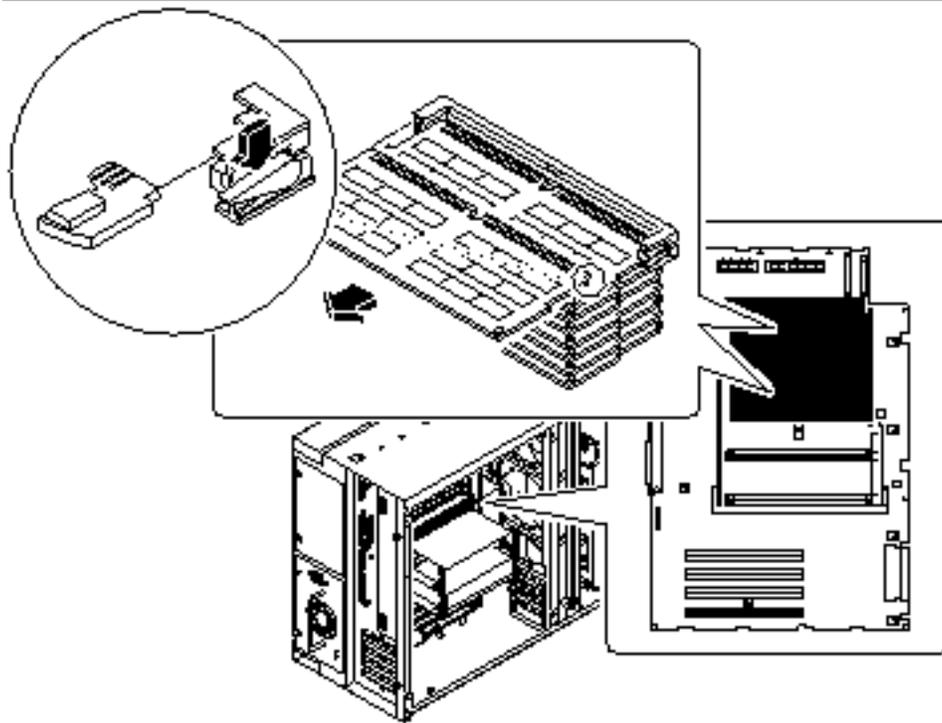


Figure 6-5

3. Grasp the top corners of the memory module and pull it out of its socket.  
Place the module on an antistatic mat.

## What Next

To replace a memory module, complete this task:

- “How to Install a Memory Module” on page 107

---

# How to Install a Memory Module

## Before You Begin



---

**Caution** - Dual inline memory modules (DIMMs) are made of electronic components that are extremely sensitive to static electricity. Static from your clothes or work environment can destroy the modules. Do not remove any DIMM from its antistatic packaging until you are ready to install it on the main logic board. Handle the modules only by their edges. Do not touch the components or any metal parts. Always wear a grounding strap when you handle the modules.

---

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64

For information about memory configuration, see “About Memory” on page 76.

## What to Do

1. **Remove the new memory module from its antistatic packaging.**
2. **Locate the socket into which you will install the module.**

See “About Memory” on page 76.

---

**Note** - Each bank used must contain four modules of equal capacity (for example, four 32-Mbyte memory modules, four 64-Mbyte modules) to function properly. Do not mix capacities within the same bank. See “About Memory” on page 76.

---

1. **Orient the module so that the small notch on the bottom corner of the module is at the same end as the socket’s ejection lever.**

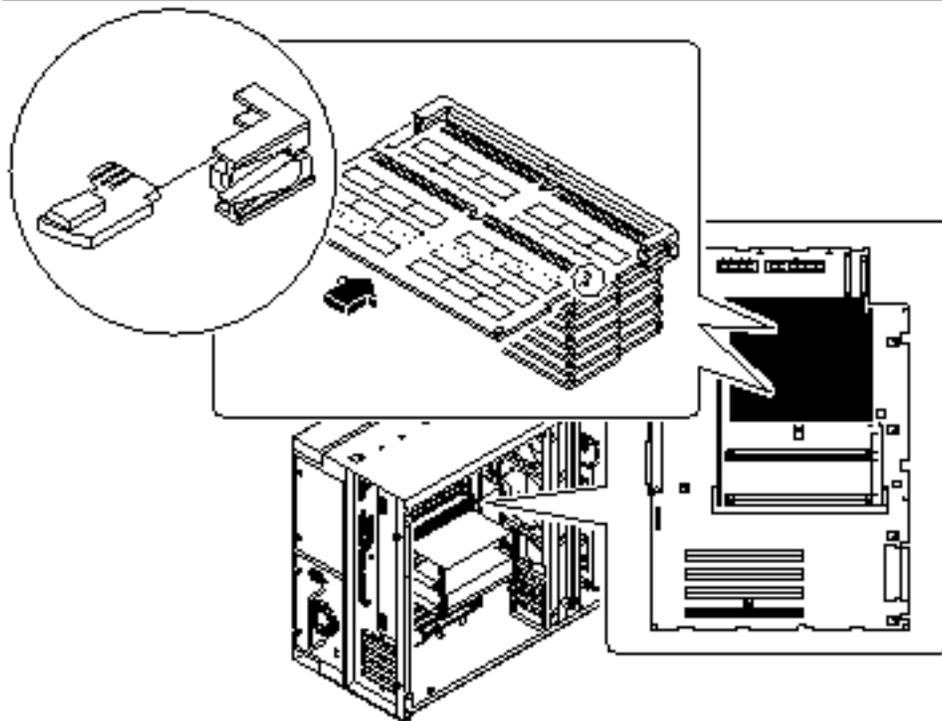


Figure 6-6

2. **Align the module with its socket until it contacts the socket evenly along the socket's length.**
3. **Push firmly down on both ends of the module until the bottom edge is firmly seated in the socket.**

Ensure that all module contacts engage in the socket.

## What Next

Complete this task to reassemble the system:

- “How to Install the Side Access Panel” on page 62

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. You must also perform a reconfiguration boot so that your system is able to recognize the new device(s). For additional information, see:

- “How to Initiate a Reconfiguration Boot” on page 58

---

# How to Remove a CPU Module

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64



---

**Caution** - CPU modules are delicate. Be sure to take appropriate precautions to avoid damaging them through electrostatic discharge. For more information, see “How to Avoid Electrostatic Discharge” on page 64.

---

## What to Do

1. **Determine which CPU module you need to remove from the CPU card cage on the main logic board.**
2. **Pull the module ejection levers out and away from the CPU module to disengage the module from its main logic board connector.**

The ejection levers are located on each side of the front of the CPU module. Using your thumbs, rotate the levers away from the center of the CPU module.

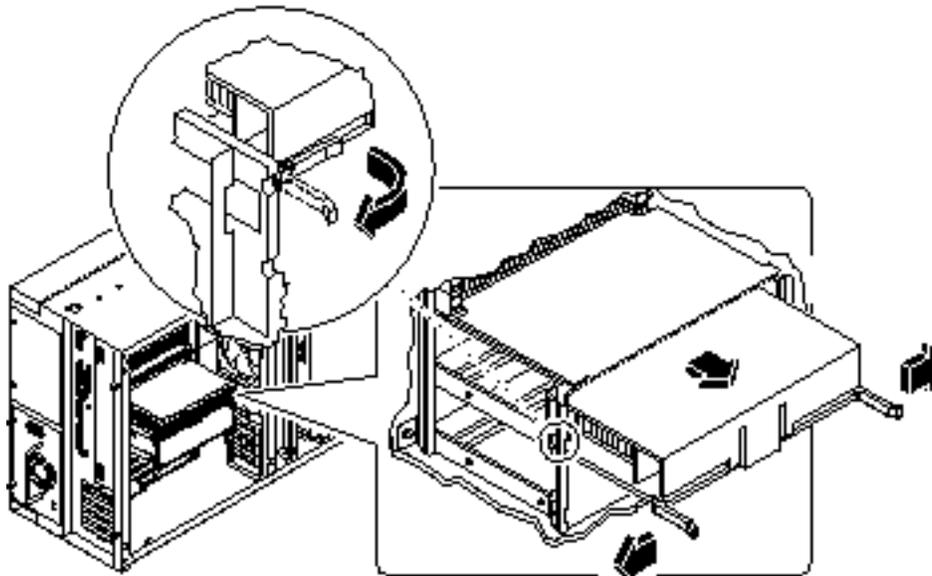


Figure 6-7

- 3. Pull evenly on the corners of the CPU module and slide it all the way out of the CPU card cage.**

Place the CPU module on an antistatic mat.

## What Next

To replace a CPU module, complete this task:

- “How to Install a CPU Module” on page 110

---

# How to Install a CPU Module

## Before You Begin

Know the configuration guidelines for installing CPU modules, see:

- “About CPU Modules” on page 78

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64

## What to Do

1. In the CPU card cage, locate the slot for the CPU module that you are installing on the main logic board.
2. Align the edges of the CPU module board with the grooves in the CPU card cage, and ensure that the ejection levers are open.
3. Slide the CPU module evenly into the grooves in the CPU card cage.  
Push until the CPU module board meets the connector at the back of the CPU card cage.

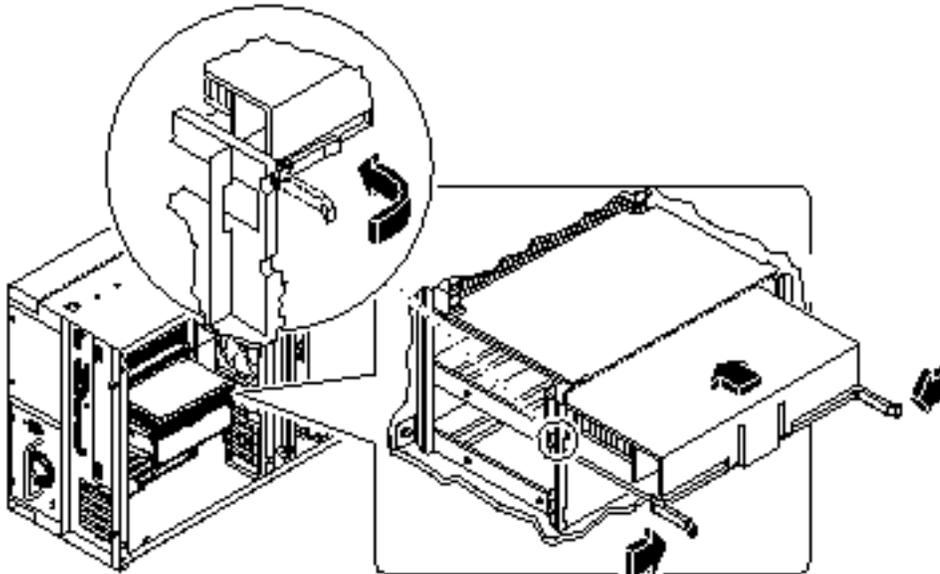


Figure 6-8

4. Engage the notch in each lever with its side of the CPU card cage.

5. **Simultaneously push both levers toward the center of the CPU module until it is fully seated in its connector.**

## What Next

Complete the following task to reassemble the system:

- “How to Install the Side Access Panel” on page 62

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. You must also perform a reconfiguration boot so that your system is able to recognize the new device(s). For additional information, see:

- “How to Initiate a Reconfiguration Boot” on page 58

---

## How to Remove a PCI Card

### Before you Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64

### Video Demonstration

*Figure 6-9*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

### What to Do

1. **Disconnect any external cable(s) from the external faceplate of the PCI card.**
2. **Disconnect all cables connected to the PCI card internal connectors.**
3. **Remove the Phillips screw that secures the faceplate to the system rear panel.**

Use a magnetized screwdriver, if possible, to prevent the screw from falling into the system chassis.

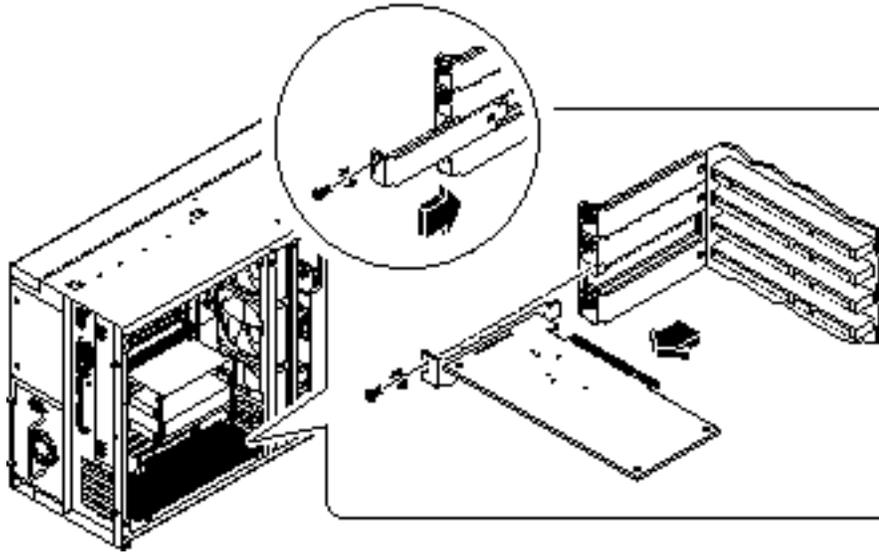


Figure 6-10

**4. Pull the PCI card out of its slot.**

Hold the card by the faceplate and its opposite edge, and pull each end in turn until the card is freed from its slot. Place the PCI card on an antistatic mat.

**5. If you are not replacing the PCI card, install a PCI filler panel into the vacated slot.**

Secure the filler panel with the screw from the PCI faceplate.

## What Next

To replace a PCI card, complete this task:

- “How to Install a PCI Card” on page 114

---

# How to Install a PCI Card

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64

Read the documentation supplied with the PCI card for information about jumper settings, PCI slot requirements, and cable connections.

Know what type of PCI card you are installing or replacing and in which slot the card belongs on the main logic board; see:

- “About Peripheral Component Interconnect (PCI) Buses” on page 80

## Video Demonstration

*Figure 6–11*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do


1. **If you are installing a new PCI card, remove the filler panel from the appropriate slot. Otherwise go to step 2.**
  - a. **Remove the Phillips screw that secures the PCI filler panel to the system rear panel.**

Use a magnetized screwdriver, if possible, to prevent the screw from falling into the system chassis.
  - b. **Lift out the filler panel.**
  
2. **Insert the PCI card into the appropriate slot on the main logic board.**

To install a PCI short card:

  - a. **Insert the faceplate end of the card into the appropriate slot opening in the rear panel.**

- b. Push the card into the corresponding connector on the main logic board.

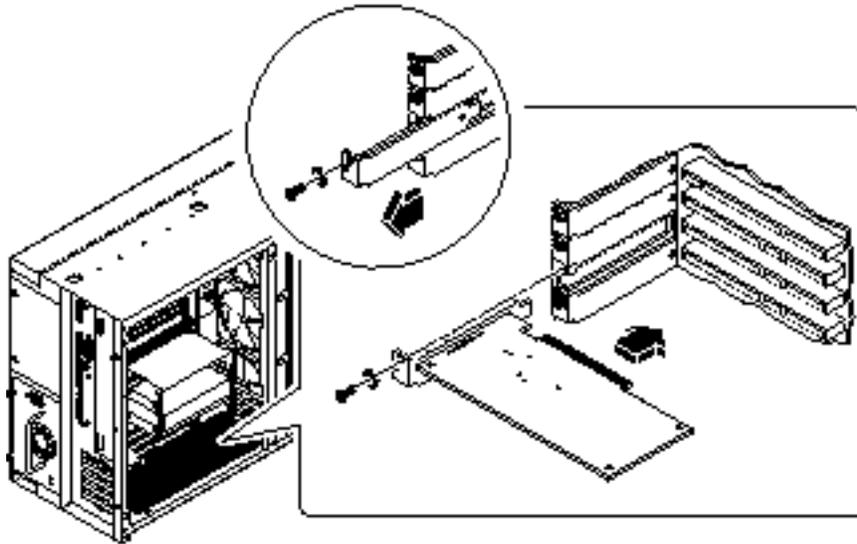

*Figure 6-12*

To install a PCI long card:

- i. Insert the faceplate end of the card into the appropriate slot opening in the rear panel, while at the same time aligning the opposite end of the card with the long card slot guide.
- ii. Push the card into the corresponding connector on the main logic board.

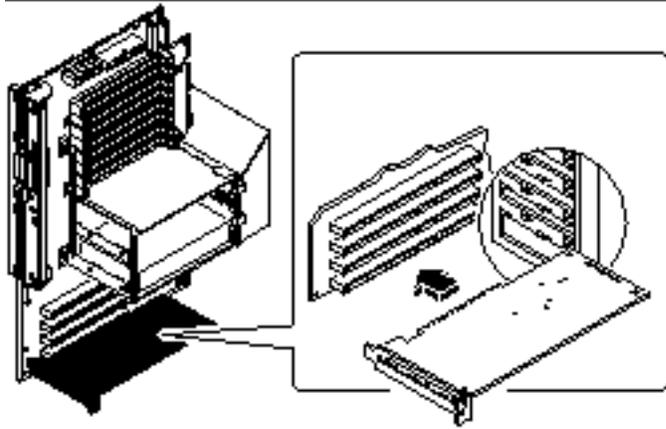


Figure 6-13

3. **Secure the PCI card faceplate to the rear panel with the Phillips screw.**
4. **If necessary, connect any internal cables to the PCI card's internal connectors.**  
Read the documentation supplied with the PCI card for information about jumper settings, PCI slot requirements, and cable connections.
5. **If necessary, connect any external cables to the PCI card.**  
Read the documentation supplied with the PCI card for information about external cable connections.

## What Next

Complete the following tasks to reassemble the system:

- “How to Install the Side Access Panel” on page 62

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. You must also perform a reconfiguration boot so that your system is able to recognize the new device(s). For additional information, see:

- “How to Initiate a Reconfiguration Boot” on page 58

---

# How to Remove the SSP Paddle Card

The System Service Processor (SSP) paddle card is mounted in the top slot opening in the system's rear panel.

## Before you Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64

## Video Demonstration


*Figure 6-14*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

- 1. Disconnect any cables from the external faceplate of the SSP card.**
- 2. Remove the Phillips screw that secures the card faceplate to the system rear panel.**  
Use a magnetized screwdriver, if possible, to prevent the screw from falling into the system chassis. Save the screw for when you install the replacement SSP card.

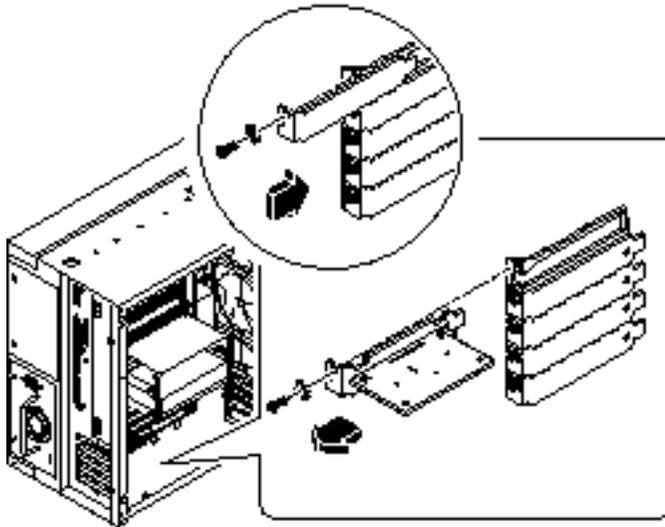

*Figure 6-15*

- 3. Remove the SSP card from its rear panel opening.**
- 4. Disconnect the SSP data cable from the main logic board at connector J4201.**
  - a. Lift up the collar on the SSP cable connector.**
  - b. Remove the SSP data cable from the connector.**

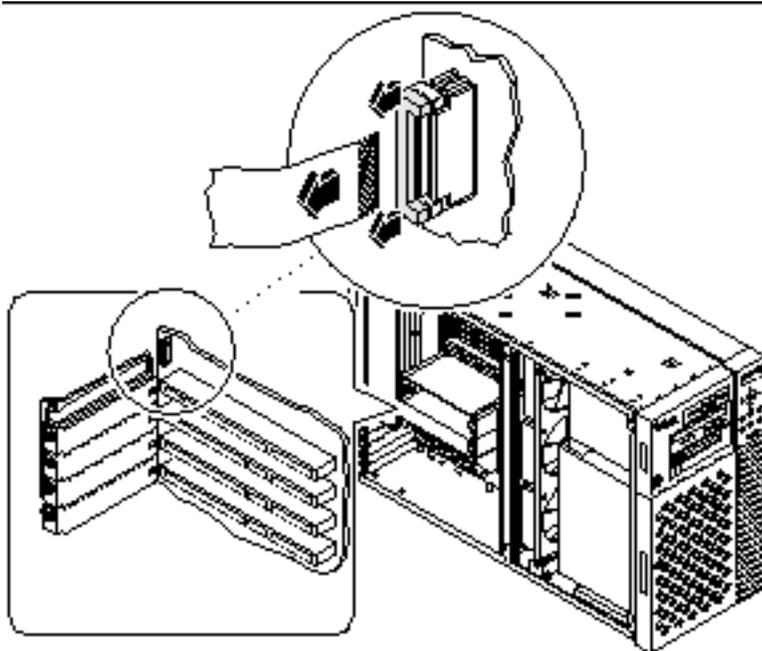


Figure 6-16

5. Place the SSP card and data cable on an antistatic mat.
6. If you are not replacing the SSP card, install a PCI filler panel into the vacated SSP slot.  
Secure the filler panel with the screw from the PCI faceplate.

## What Next

To replace an SSP card, complete this task:

- “How to Install the SSP Paddle Card” on page 120

---

# How to Install the SSP Paddle Card

## Video Demonstration

*Figure 6-17*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

1. **Connect the SSP data cable to the main logic board at connector J4201.**
  - a. **Lift the collar on the SSP cable connector.**
  - b. **Insert the cable into the connector so that the cable's exposed contacts are facing away from the system rear panel.**
  - c. **Press down on each side of the collar to secure the cable in the connector.**

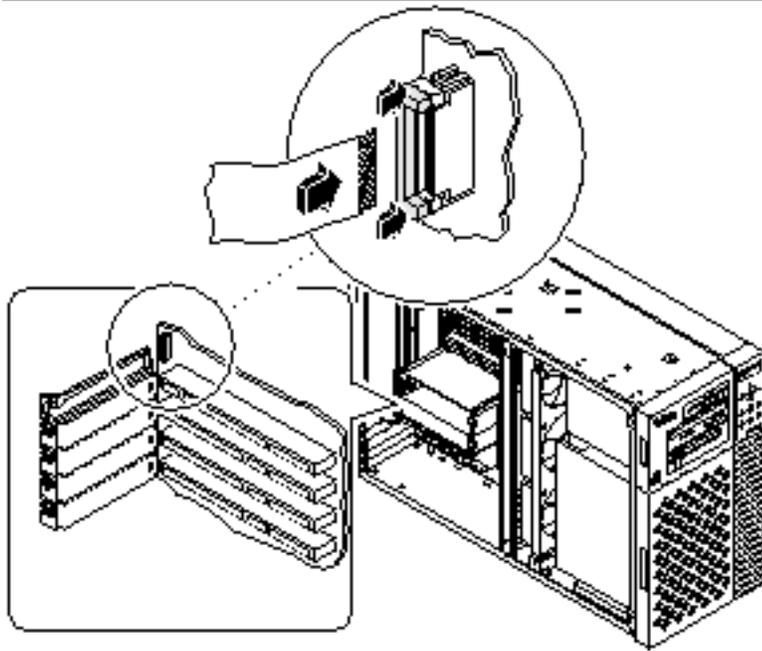


Figure 6-18

- 2. Insert the SSP card into the SSP rear panel opening.**  
The SSP paddle card mounts in the top slot opening in the system's rear panel.

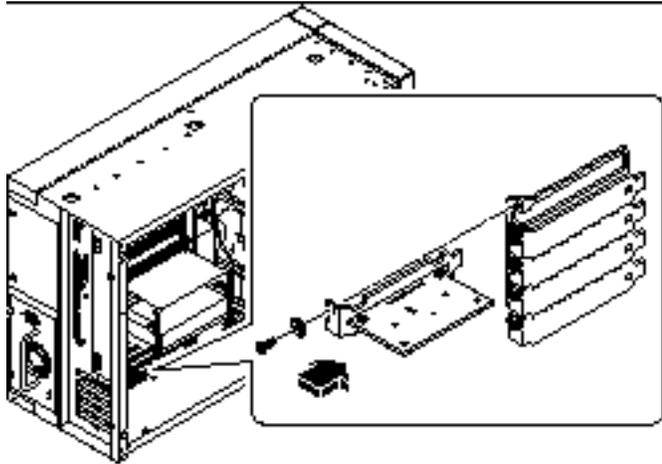


Figure 6-19

3. **Secure the SSP card faceplate to the rear panel with the Phillips screw you removed earlier.**

Use a magnetized screwdriver, if possible, to prevent the screw from falling into the system chassis.

4. **Reconnect any external cables to the SSP card's external connectors.**

## What Next

Complete the following task to reassemble the system:

- “How to Install the Side Access Panel” on page 62

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. For additional information, see Chapter 12.

---

# How to Remove the NVRAM/TOD Module

---



**Caution** - This procedure must be performed by a qualified service-trained maintenance provider. Persons who remove any of the outer panels to access this equipment must observe all safety precautions and comply with skill level requirements, certification, and all applicable local and national laws.

---

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64

## What to Do

1. **Locate the NVRAM/TOD module on the main logic board.**  
The NVRAM/TOD module is located at board address U2706.
2. **Grasp the NVRAM/TOD carrier assembly by the edges and pull out the NVRAM/TOD module.**  
Place the NVRAM/TOD module on an antistatic mat.

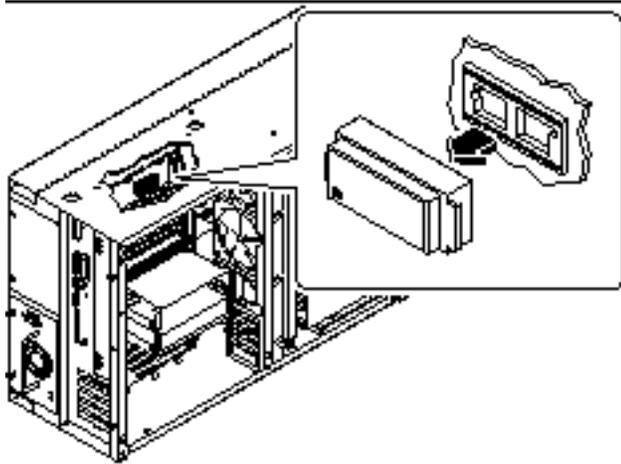


Figure 6-20

## What Next

To replace the NVRAM/TOD module complete this task:

- “How to Install the NVRAM/TOD Module” on page 124

---

# How to Install the NVRAM/TOD Module



---

**Caution** - This procedure must be performed by a qualified service-trained maintenance provider. Persons who remove any of the outer panels to access this equipment must observe all safety precautions and comply with skill level requirements, certification, and all applicable local and national laws.

---



---

**Caution** - Use only NVRAM/TOD modules that have been specifically programmed for a Sun Enterprise 250 server.

---

## What to Do

1. **Insert the NVRAM/TOD module into its socket on the main logic board.**  
The carrier is keyed so that an NVRAM/TOD module can be installed only one way.
2. **Push down on the NVRAM/TOD module until it seats firmly in the socket.**

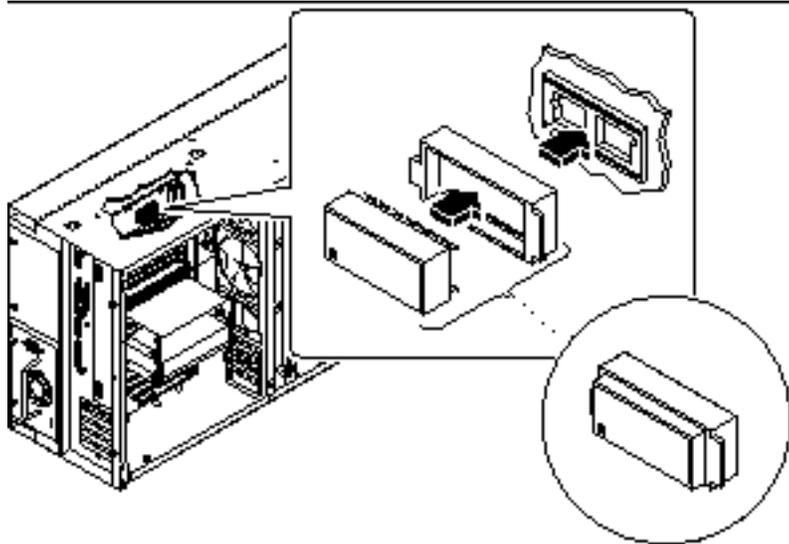


Figure 6-21

## What Next

Complete the following task to reassemble the system:

- “How to Install the Side Access Panel” on page 62

---

**Note** - If you are installing a new NVRAM/TOD module, the NVRAM/TOD must be programmed by a Sun authorized service representative before your system can resume normal operation.

---

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. For additional information, see Chapter 12.



## Removing and Installing Storage Devices

---

This chapter describes how to remove and install storage devices and removable media devices. For a list of part numbers for field-replaceable units and optional equipment, see “Illustrated Parts Breakdown” on page 313.

*Tasks* covered in this chapter include:

- “How to Remove the Removable Media Assembly (RMA)” on page 128
- “How to Install the Removable Media Assembly (RMA)” on page 132
- “How to Remove a Disk Drive” on page 135
- “How to Install a Disk Drive” on page 137
- “How to Remove a CD-ROM Drive or Tape Drive” on page 139
- “How to Install a CD-ROM Drive or Tape Drive” on page 141
- “How to Remove the Diskette Drive” on page 144
- “How to Install the Diskette Drive” on page 146

---

# How to Remove the Removable Media Assembly (RMA)

---



**Caution** - Removing the removable media assembly activates the system power interlock switches. This safety mechanism prevents all DC voltages (except 5V standby power) from reaching any internal component when the removable media assembly is removed and the front panel keyswitch is left on. Do not remove the removable media assembly while the system is operating or the system will power off abruptly.

---

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Fan Tray Assembly” on page 150

## Video Demonstration

*Figure 7-1*

Click on the icon above for a video demonstration.

Click here for Appendix E.

## What to Do

1. **Disconnect the diskette data cable (if present) from the top of the UltraSCSI backplane at connector J0502.**

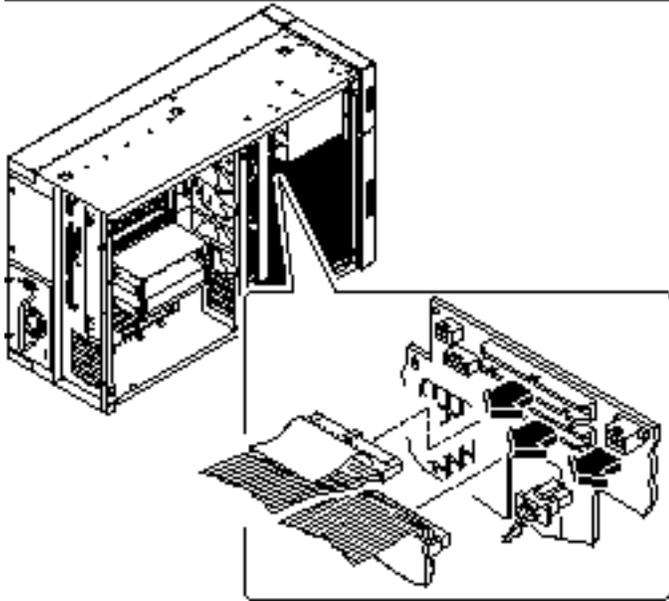


Figure 7-2

2. **Disconnect the removable media power cable from the UltraSCSI backplane at connector J0104.**
3. **Disconnect the removable media SCSI cable from the top of the UltraSCSI backplane at connector J0501.**  
Leave all other cabling connected to the rear of the drives in the removable media assembly.
4. **At the front of the system, pull off the plastic cover from the front of the removable media assembly.**  
Grasp the cover on both sides, and pull it away from the front of the system.
5. **Loosen the two captive Phillips screws securing the removable media assembly to the chassis.**

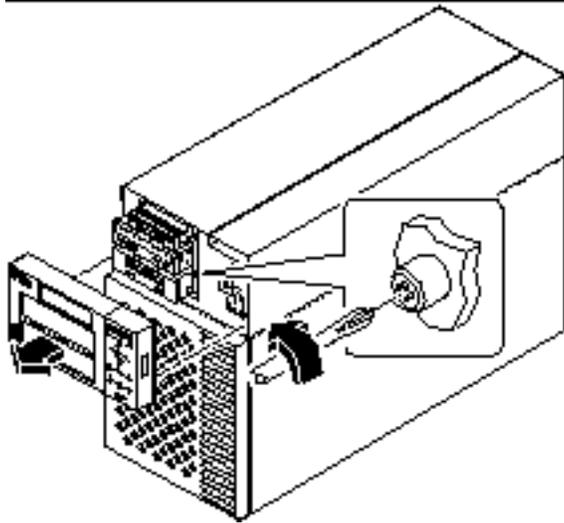


Figure 7-3


**6. Slide the removable media assembly out of the system chassis.**

Be sure that you feed all the cables carefully out of the RMA chassis opening as you remove the assembly.

---

**Note** - At this point all the power and data cables are attached to the rear of the drives installed in the assembly.

---

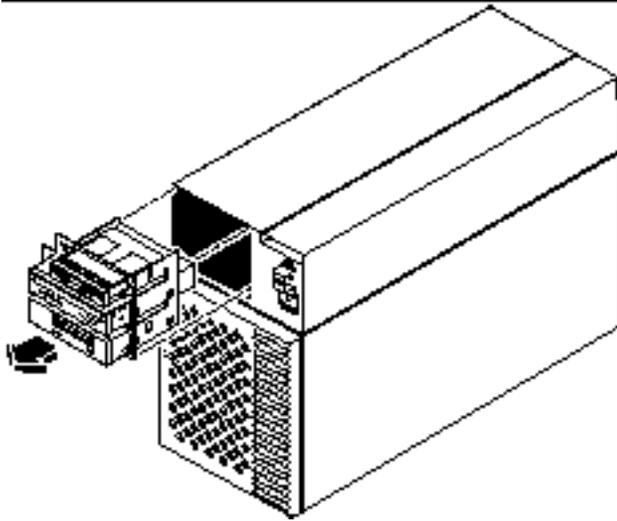

*Figure 7-4*

7. Place the assembly on an antistatic mat.

## What Next

For information about removing drives from, or installing drives in the removable media assembly, see:

- “How to Remove the Diskette Drive” on page 144
- “How to Install the Diskette Drive” on page 146
- “How to Remove a CD-ROM Drive or Tape Drive” on page 139
- “How to Install a CD-ROM Drive or Tape Drive” on page 141

To replace the removable media assembly, complete this task:

- “How to Install the Removable Media Assembly (RMA)” on page 132

---

# How to Install the Removable Media Assembly (RMA)

## Video Demonstration

*Figure 7-5*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

- 1. Install the appropriate metal filler panel into any empty RMA drive bay opening.**

Align the two metal retainer clips in the front of the drive bay, and press the filler panel into place.

- 2. Grasp any cables attached to the rear of the removable media devices and feed them into the RMA opening at the front of the chassis.**

Hold the removable media assembly in one hand and use the other hand to feed the cables into the opening.

- 3. Slide the removable media assembly into the system chassis.**

Make sure that the cables are not caught between the removable media assembly and the chassis as you slide the assembly into the chassis.

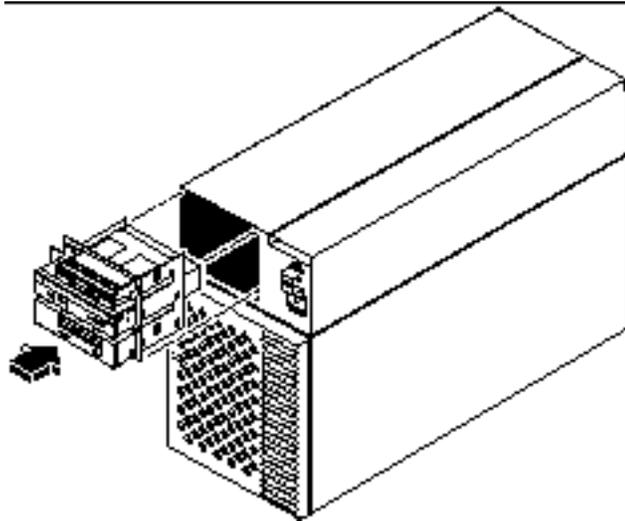


Figure 7-6

4. Tighten the two captive Phillips screws securing the removable media assembly to the system chassis.

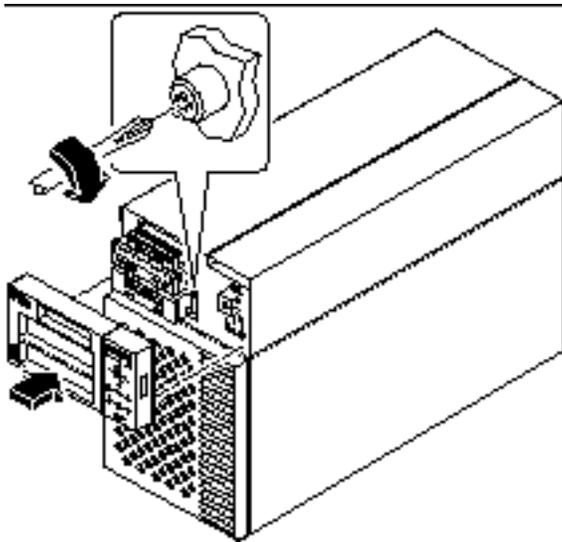


Figure 7-7

5. **If necessary, install one or more plastic filler panels in any empty drive bay openings in the RMA plastic cover.**

Align the filler panel with its opening and press it into place.

6. **Replace the RMA plastic cover.**


Align the two posts on the cover with the corresponding holes at the front of the chassis and press the cover evenly on both sides until it snaps into place.

7. **Connect the removable media SCSI cable to the UltraSCSI backplane at connector J0501.**

Each connector is keyed so that it connects in only one way.

8. **If applicable, connect the diskette data cable to the SCSI backplane at connector J0502.**

9. **Connect the removable media power cable to the UltraSCSI backplane at connector J0104.**

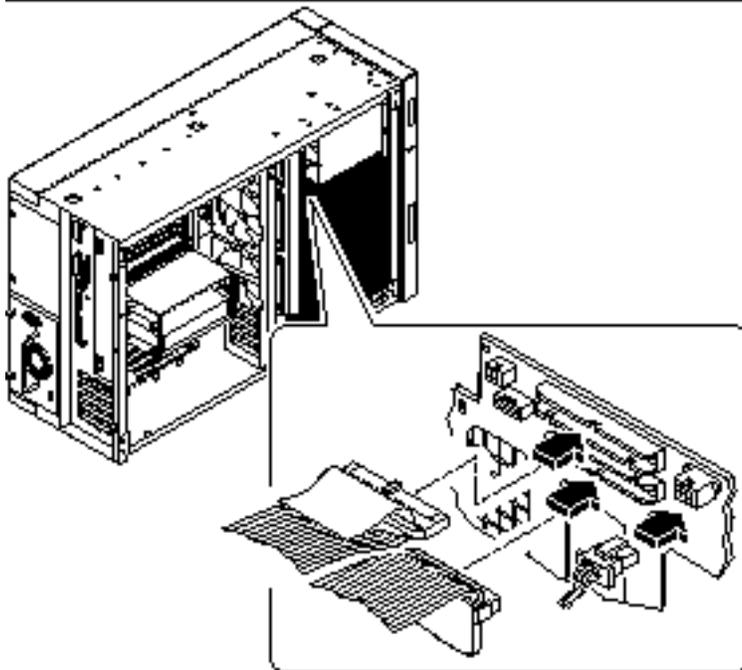

*Figure 7-8*

## What Next

To reassemble the system, complete these tasks:

- “How to Install the Fan Tray Assembly” on page 151
- “How to Install the Side Access Panel” on page 62

---

## How to Remove a Disk Drive

The system’s disk “hot-plug” feature lets you remove a disk drive without shutting down the operating system or turning off the system power. For more information, see:

- “About Internal Disk Drives” on page 83

## Before You Begin

You must follow antistatic precautions when handling a disk drive. For more information, see:

- “How to Avoid Electrostatic Discharge” on page 64

## What to Do

### 1. Prepare the system for disk removal.

The hot-plug removal procedure involves software commands for preparing the system prior to removing the disk drive. See “About Internal Disk Drives” on page 83.

---

**Note** - If the server is set up without a local graphics console, terminal, or monitor, you need to set up one of these options in order to issue software commands. See “How to Attach an Alphanumeric Terminal” on page 50, or “How to Configure a Local Graphics Console” on page 51.


---

### 2. If you are not hot-plugging the disk drive, halt the operating system and turn off the system power.

See “How to Power Off the System” on page 55.

### 3. Unlock the disk access door and swing it open.

4. **Attach the antistatic wrist strap to a metal surface inside the system chassis.**
5. **Identify the disk drive to be removed and note the bay in which it is installed.**  
For information about disk status LEDs, see “About Internal Disk Drives” on page 83.
6. **Using your thumb and forefinger, push the drive latch upward to release the drive handle.**  
Swing the handle out away from the drive until you feel the drive connector disengage from the backplane.

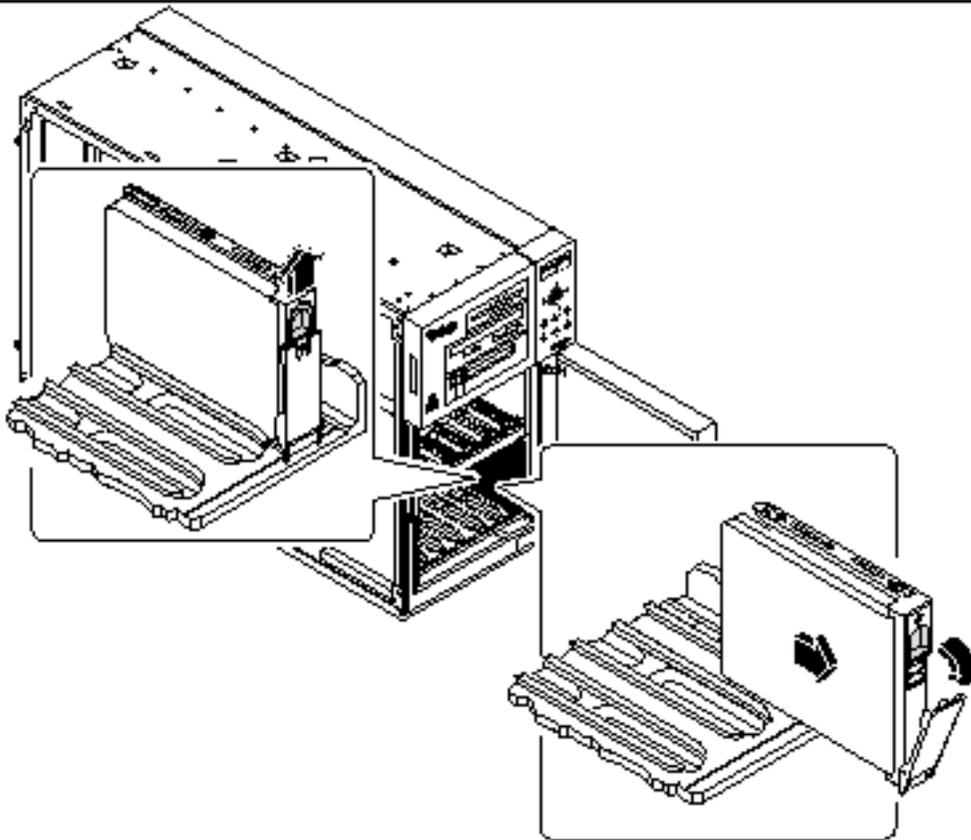

*Figure 7-9*

7. **Holding the drive by the handle, slide it out of the drive bay.**  
Place the drive on an antistatic mat.

---

**Note** - When you reinstall the drive (or a replacement drive), be sure to install it in the same drive bay as the one from which it was just removed.

---

## What Next

If you removed the drive as part of another procedure, complete the other procedure now.

To replace the disk drive, complete this task:

- “How to Install a Disk Drive” on page 137

---

## How to Install a Disk Drive

The system’s disk “hot-plug” feature lets you install a disk drive without shutting down the operating system or turning off the system power. For more information, see:

- “About Internal Disk Drives” on page 83

## Before You Begin

You must follow antistatic precautions when handling a disk drive. For more information, see:

- “How to Avoid Electrostatic Discharge” on page 64

## What to Do

### 1. Prepare the system to receive the new disk drive.

The hot-plug installation procedure involves software commands for preparing the system prior to installing the disk drive. See “About Internal Disk Drives” on page 83.

---

**Note** - If the server is set up without a local graphics console, terminal, or monitor, you need to set up one of these options in order to issue software commands. See “How to Attach an Alphanumeric Terminal” on page 50, or “How to Configure a Local Graphics Console” on page 51.

---

2. **If you are not hot-plugging the disk drive, halt the operating system and turn off system power.**

See “How to Power Off the System” on page 55.

3. **Unlock the disk access door and swing it open.**

4. **Attach the antistatic wrist strap to a metal surface inside the system chassis.**

5. **Release the drive handle on the disk drive.**

Use your thumb and forefinger to pinch the drive latch sideways to open it.


6. **Align the disk drive to its drive bay.**

Orient the drive so the drive handle's hinge faces the bottom of the drive bay (the left side of the bay in a rackmount configuration).

---

**Note** - If you are replacing a drive that you removed previously, be sure to install the drive in the same drive bay as the one you removed.

---

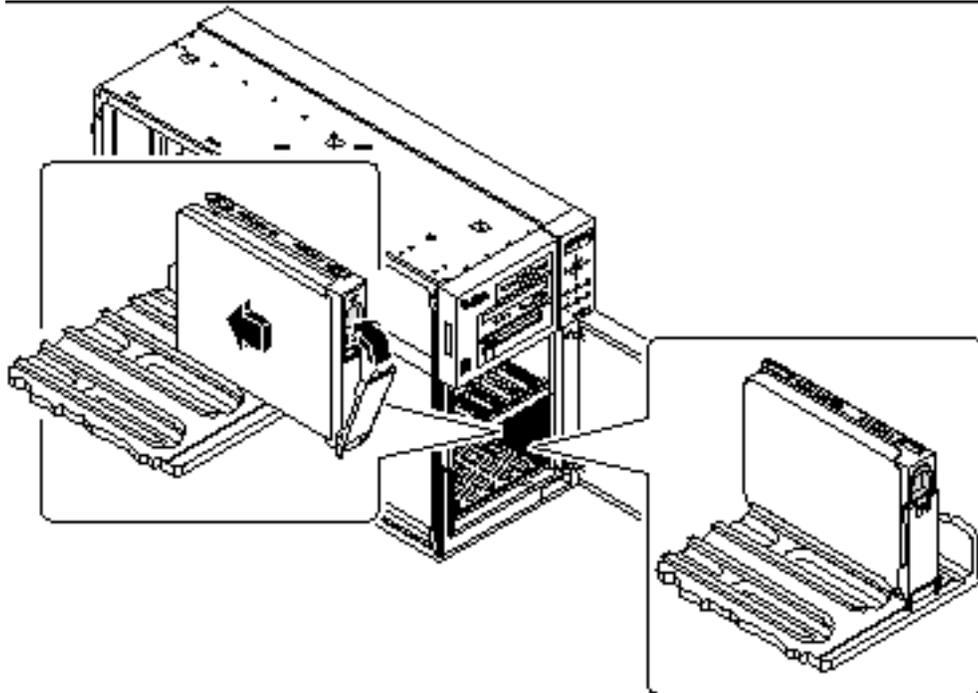

*Figure 7-10*

7. **Holding the drive by its handle, fit the drive into the guide rails at the top and bottom of the drive bay.**
8. **Slide the drive into the bay until it barely contacts the backplane.**
9. **Press carefully on the center of the drive and watch as the handle begins to close.**  
The drive handle begins to close as the drive engages its backplane connector.
10. **Press the handle toward the drive until the latch closes, securing the drive in place.**
11. **Close the disk access door and lock it if necessary.**
12. **If you are performing a hot-plug installation, complete the software part of the installation procedure.**  
See “About Internal Disk Drives” on page 83.

## What Next

If you have other parts to replace in the system, do so now.

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. You must also perform a reconfiguration boot so that your system is able to recognize the new device(s). For additional information, see:

- “How to Initiate a Reconfiguration Boot” on page 58

---

# How to Remove a CD-ROM Drive or Tape Drive

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Removable Media Assembly (RMA)” on page 128

## Video Demonstration


*Figure 7-11*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

1. **Disconnect the SCSI data and power cables from the rear of the CD-ROM or tape drive.**

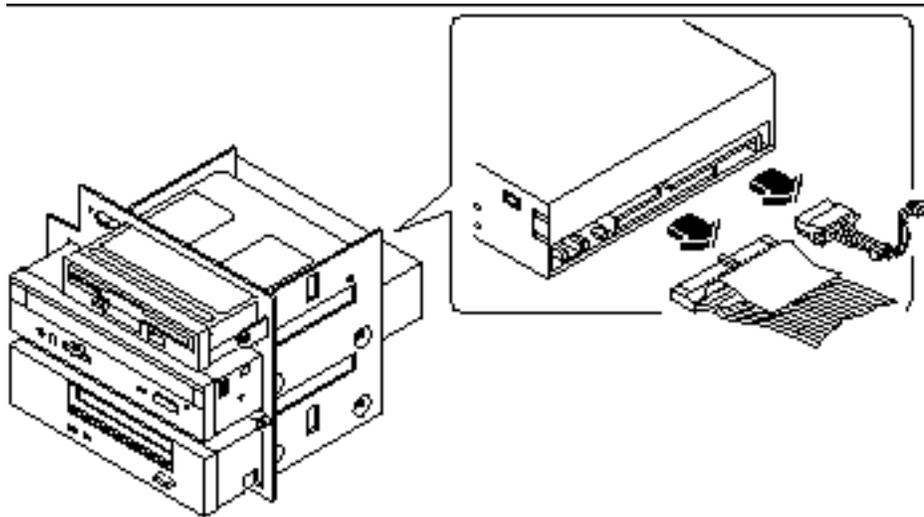

*Figure 7-12*

2. **Remove the four screws securing the drive in the removable media assembly.**  
There are two screws on each side of the drive.

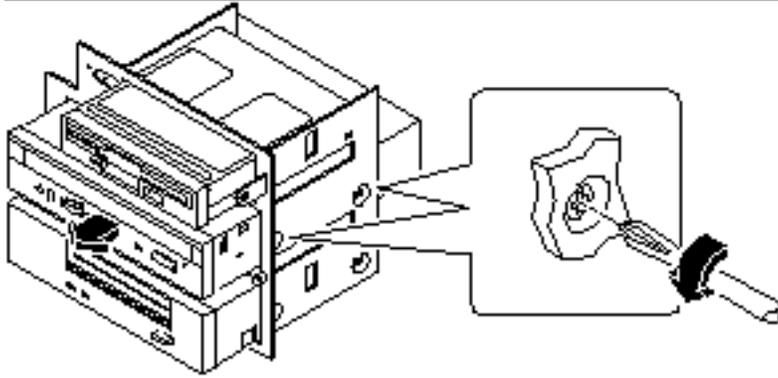


Figure 7-13

3. **Slide the drive out the front of its bay in the removable media assembly.**  
Push the drive from the rear to start the removal process.
4. **Place the drive on an antistatic mat.**

## What Next

To replace the CD-ROM or tape drive, complete this task:

- “How to Install a CD-ROM Drive or Tape Drive” on page 141

---

# How to Install a CD-ROM Drive or Tape Drive

## Before You Begin

Know the configuration guidelines for installing removable media devices, see:

- “About the SCSI Removable Media Bays and the External SCSI Port” on page 95

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64

- “How to Remove the Removable Media Assembly (RMA)” on page 128

## Video Demonstration

*Figure 7-14*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

- 1. If necessary, remove the metal filler panel from the appropriate drive bay in the removable media assembly.**

To release the panel, deflect its two retainer tabs through the small rectangular slots on each side of the RMA enclosure.

- 2. If necessary, remove the plastic filler panel from the RMA plastic cover.**

On the back side of the RMA cover, push the filler panel retainer tabs inward to disengage the filler panel.

- 3. If you are replacing a defective drive, make sure that the jumper settings on the new drive match the settings on the old drive.**

- 4. Slide the CD-ROM or tape drive into its drive bay.**

Align the two screw holes on each side of the drive with the corresponding holes in each side of the drive bay.

- 5. Insert and tighten the four flat-head Phillips screws that secure the drive in its bay.**

There are two screws on each side that secure the drive in the RMA.

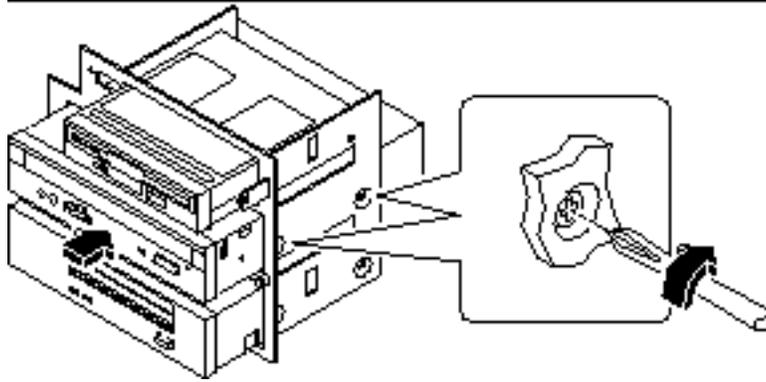


Figure 7-15

6. Connect the SCSI data and power cables to their corresponding connectors at the rear of the drive.

The connectors are keyed so that they install in only one way.

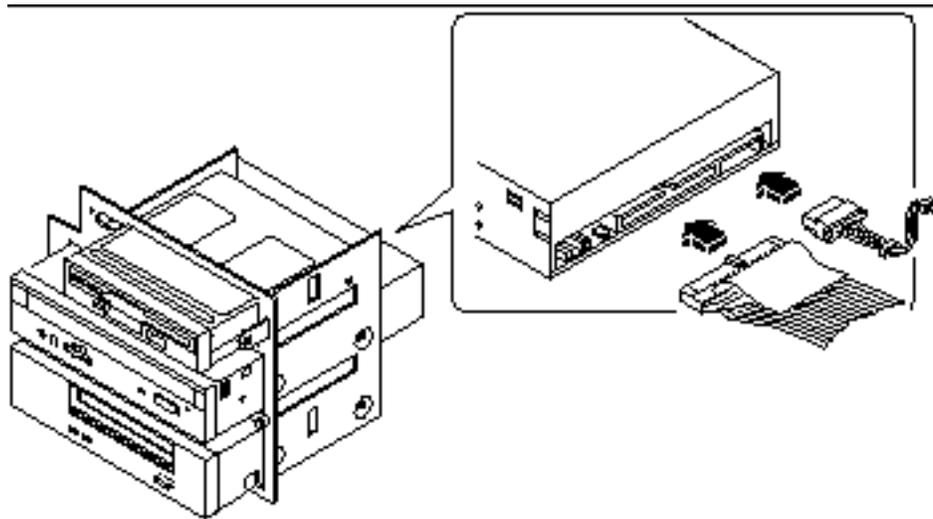


Figure 7-16

---

**Note** - Wide SCSI removable media devices require a 68-to-50 pin SCSI adapter. These devices only operate in narrow SCSI mode.

---

## What Next

To reassemble the system, complete these tasks:

- “How to Install the Removable Media Assembly (RMA)” on page 132
- “How to Install the Side Access Panel” on page 62

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. You must also perform a reconfiguration boot so that your system is able to recognize the new device(s). For additional information, see:

- “How to Initiate a Reconfiguration Boot” on page 58

---

## How to Remove the Diskette Drive

### Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Removable Media Assembly (RMA)” on page 128

### Video Demonstration

*Figure 7-17*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

### What to Do

1. **Disconnect the diskette data cable and the removable media power cable from the rear of the diskette drive.**

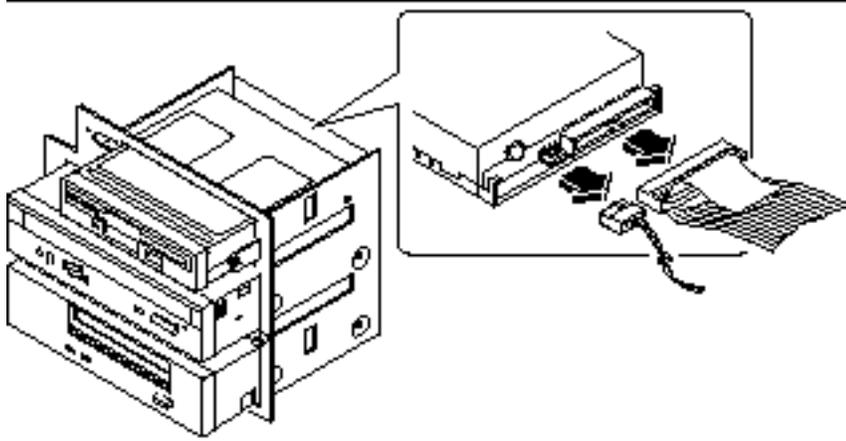


Figure 7-18

- 2. Remove the four Phillips screws securing the drive to the removable media assembly.**

There are two screws located on each side of the drive.

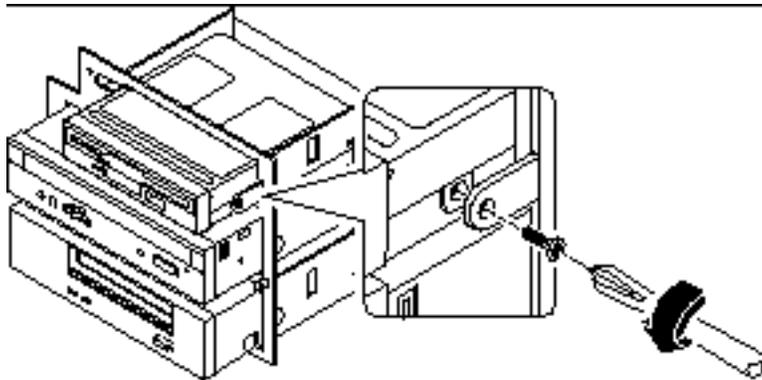


Figure 7-19

- 3. Slide the drive out the front of its bay in the removable media assembly.**  
Push the drive from the rear to start the removal process.
- 4. Place the drive on an antistatic mat.**

5. **If you are not replacing the drive right away, install a metal filler panel in the empty drive bay.**  
Align the two metal retainer clips in the front of the drive bay, and press the filler panel into place.
6. **If necessary, install a plastic filler panel in the drive bay opening in the RMA plastic cover.**  
Insert the two retainer posts into their corresponding slots and press on the filler panel until it snaps into place.

## What Next

To replace the diskette drive, complete this task:

- “How to Install the Diskette Drive” on page 146

---

# How to Install the Diskette Drive

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Removable Media Assembly (RMA)” on page 128

## Video Demonstration

*Figure 7-20*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

1. **If necessary, remove the metal filler panel from the diskette drive bay in the removable media assembly.**


Pinch the two metal retainers together to release the filler panel from the front of the RMA enclosure.

**2. If necessary, remove the plastic filler panel from the RMA plastic cover.**

Squeeze the two retainer posts together to release the filler panel from the RMA plastic cover.

**3. Slide the diskette drive into the diskette drive bay.**

Align the two screw holes on each side of the diskette drive with the corresponding holes in each side of the diskette drive bay.

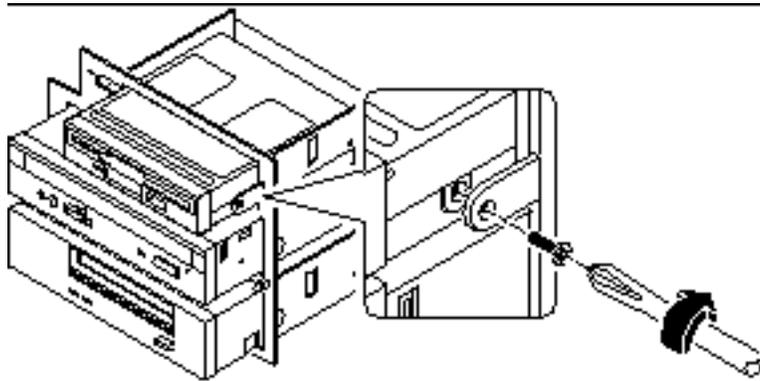

*Figure 7-21*

**4. Insert and tighten the four flat-head Phillips screws that secure the drive in its bay.**

**5. Connect the removable media power cable to the power connector at the rear of the diskette drive.**

The connector is keyed and only fits one way.

**6. Connect the diskette data cable to the data connector at the rear of the drive.**

The connector is keyed and only fits one way.

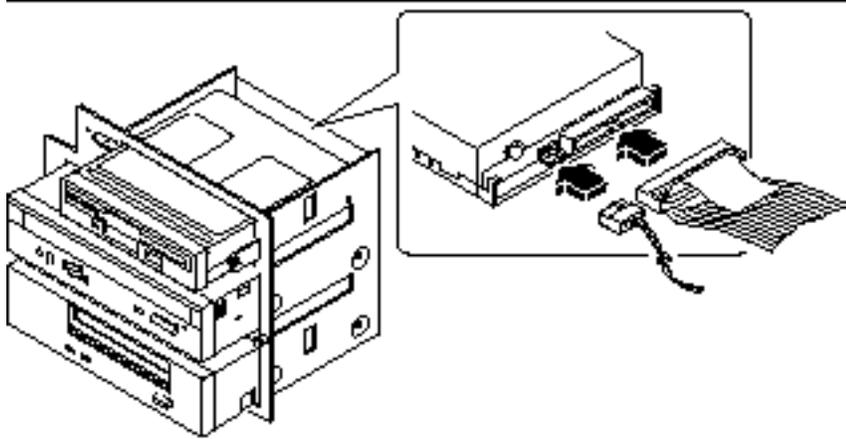


Figure 7-22

## What Next

Complete these tasks to reassemble the system:

- “How to Install the Removable Media Assembly (RMA)” on page 132
- “How to Install the Side Access Panel” on page 62

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. You must also perform a reconfiguration boot so that your system is able to recognize the new device(s). For additional information, see:

- “How to Initiate a Reconfiguration Boot” on page 58

## Removing and Installing Miscellaneous Assemblies

---

This chapter describes how to remove and install miscellaneous assemblies within the system. For a list of part numbers for field-replaceable units and optional equipment, see “Illustrated Parts Breakdown” on page 313.

*Tasks* covered in this chapter include:

- “How to Remove the Fan Tray Assembly” on page 150
- “How to Install the Fan Tray Assembly” on page 151
- “How to Remove a Power Supply” on page 153
- “How to Install a Power Supply” on page 155
- “How to Remove the LED/Keyswitch Assembly” on page 157
- “How to Install the LED/Keyswitch Assembly” on page 160
- “How to Remove the Disk Cage Assembly” on page 163
- “How to Install the Disk Cage Assembly” on page 167
- “How to Remove the Floor Casters Assembly” on page 170
- “How to Install the Floor Casters Assembly” on page 172
- “How to Remove the Chassis Foot Glides” on page 174
- “How to Install the Chassis Foot Glides” on page 176

---

# How to Remove the Fan Tray Assembly


## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64

## What to Do

1. **Disconnect the fan tray cable from the fan tray assembly.**  
Press the tab to release the connector.

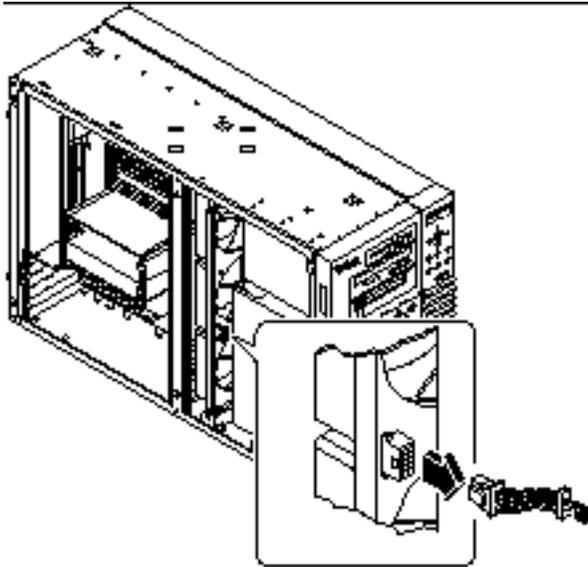

*Figure 8-1*

2. **Deflect the tab that secures the fan tray in the upper guide.**
3. **Slide the fan tray out of the system.**

Hold the tray at the center so it pulls out evenly.

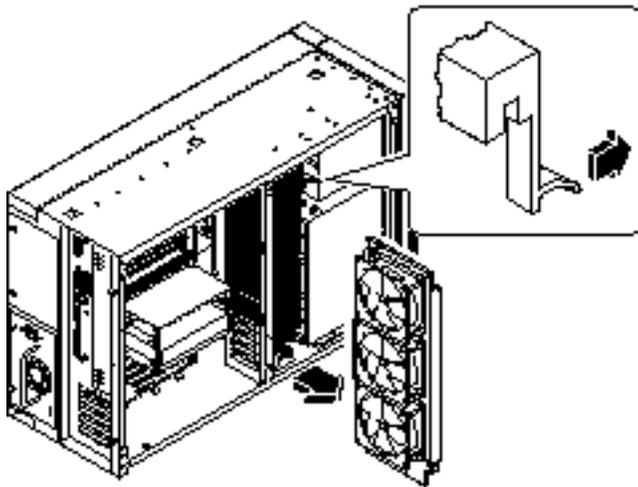


Figure 8-2

## What Next

To replace the fan tray assembly, complete this task:


- “How to Install the Fan Tray Assembly” on page 151

---

# How to Install the Fan Tray Assembly

## What to Do

1. **Align the fan tray assembly with the upper and lower fan tray guides.**  
Hold the fan tray so that the arrow on its outer edge is facing up.
2. **Slide the fan tray into the top and bottom guides.**  
Hold the tray at the center so that the tray slides into the guides evenly.

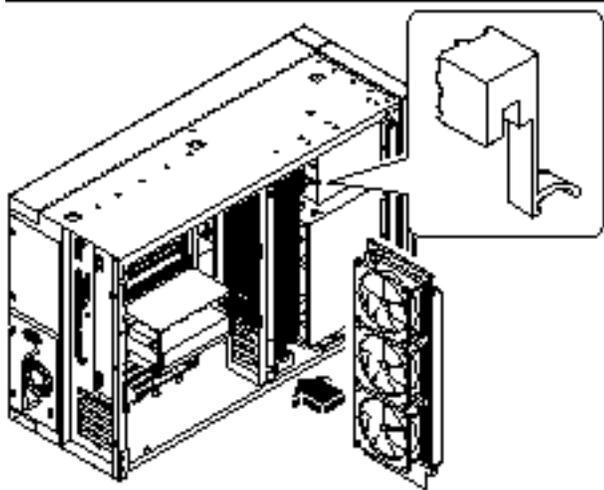

*Figure 8-3*

- 3. Continue to push the fan tray assembly until the deflecting tab locks and the assembly is held securely in the guides.**
- 4. Connect the fan tray cable to the fan tray assembly.**  
Connect the end of the cable that is labeled P2. The connector is keyed and attaches in only one way. Press the connector until the tab locks the cable in place.

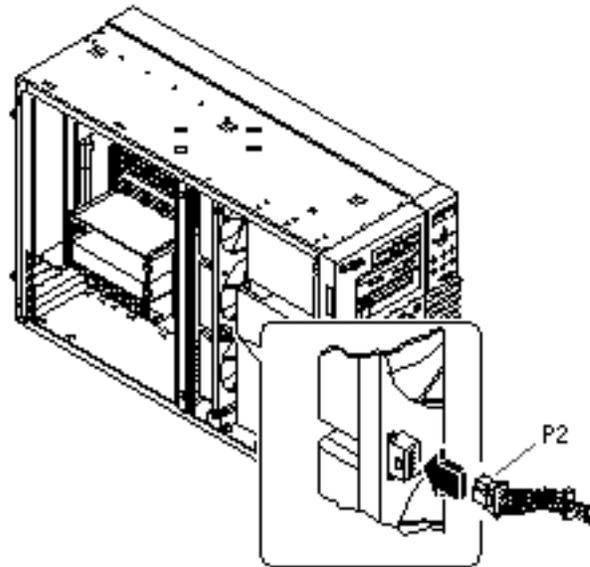


Figure 8-4

## What Next

To reassemble the system, complete this task:

- “How to Install the Side Access Panel” on page 62

---

# How to Remove a Power Supply

## Before You Begin

It is not necessary to power off the system if you are removing a redundant power supply. For more information see:

- “About Power Supplies” on page 87

If your system has only one power supply, complete this task:

- “How to Power Off the System” on page 55

## What to Do

1. **Identify the power supply to be removed.**
2. **Unplug both ends of the AC power cord.**  
There is no need to remove the power cord from the strain-relief tie-wrap attached to the system rear panel.
3. **Loosen the two captive screws securing the power supply to the chassis.**

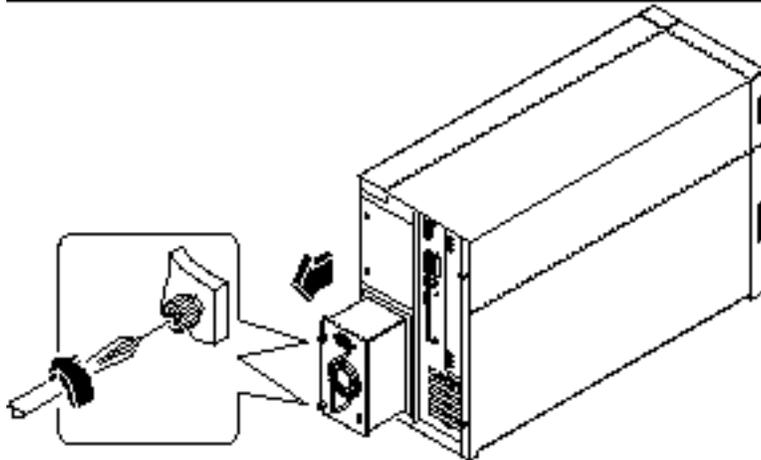


Figure 8-5

4. **Grasp the handle and carefully pull the power supply out of the chassis.**  
Be careful to disconnect the power supply in a smooth motion.

---

**Note** - When removing a “hot-pluggable” power supply, do not disengage and reengage the supply in rapid succession. Always remove a supply completely before reinserting the same supply or a replacement supply. Rapid seating and unseating of power supplies will result in false error conditions.

---

5. **If you are not replacing the power supply immediately, install a power supply filler panel.**  
The filler panel is needed to maintain proper system cooling and prevent electromagnetic interference.
  - a. **Insert the filler panel into the bay.**

- b. **Fasten the two Phillips screws that secure the filler panel to the chassis.**

## What Next

To replace a power supply, complete this task:

- “How to Install a Power Supply” on page 155

---

# How to Install a Power Supply

## Before You Begin

If you are installing a redundant power supply, it is not necessary to power off the system.

For more information, see:

- “About Power Supplies” on page 87

## What to Do

1. **If you are upgrading your system with an additional power supply, remove the filler panel covering the power supply bay:**
  - a. **Remove the two screws securing the filler panel to the chassis.**
  - b. **Partially pry the left side of the filler panel out of the bay, using a flat-blade screwdriver.**
  - c. **Lift the filler panel up and away from the bay, and set it aside.**
2. **Slide the new power supply into the power supply bay until the power supply connectors start to engage the connectors on the power distribution board.**

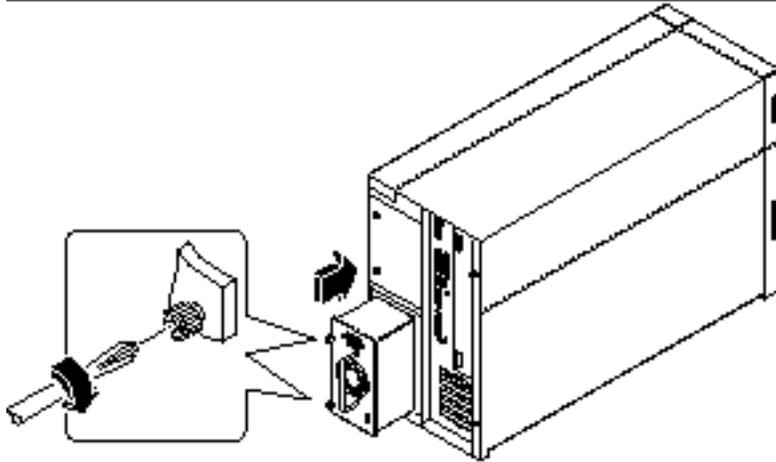


Figure 8-6

- 3. Push on the power supply handle to firmly engage the connectors with the power distribution board.**

Press firmly to engage the power supply connectors. If you are “hot-plugging” a redundant supply, take care to avoid jarring or shocking the system.

---

**Note** - When installing a “hot-pluggable” power supply, do not engage and disengage the supply in rapid succession. Always remove a supply completely before reinserting the same supply or a replacement supply. Rapid seating and unseating of power supplies will result in false error conditions.

---

- 4. Tighten the two captive screws that secure the power supply to the chassis.**
- 5. Connect the AC power cord to both the power supply and an AC power outlet.**  
Secure the cord to the rear panel with the strain-relief tie-wrap.

## What Next

Verify correct operation of the power supply by checking the fan and LED indicators on the rear of the supply. The fan should start spinning and both LEDs should light within three seconds of completing a hot-plug installation (or after restoring power to the system).

For more information, see:

- “Power Supply LEDs” on page 259

---

**Note** - The power supply retains its last power on/off state once it is removed from the system. If you remove a power supply from a system that is powered off and attempt a hot-plug installation into a system that is powered on, the power supply will remain off. To activate the power supply, turn the front panel keyswitch from the Power-On position to the Diagnostics position, and then back to the Power-On position. Alternatively, you may press the Power-On key on a Sun Type-5 keyboard attached to the system. For descriptions of the various keyswitch settings, see “About the Status and Control Panel” on page 6.

---

---

## How to Remove the LED/Keyswitch Assembly

### Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Fan Tray Assembly” on page 150

### Video Demonstration

*Figure 8-7*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)


### What to Do

1. **Disconnect the LED/keyswitch assembly cables from the UltraSCSI backplane:**
  - a. **Disconnect the keyswitch cable from connector J0601.**

This connector is located at the upper-left corner of the backplane (as viewed from the rear).



4. Remove the Phillips screw that secures the LED/keyswitch assembly to the front of the chassis.

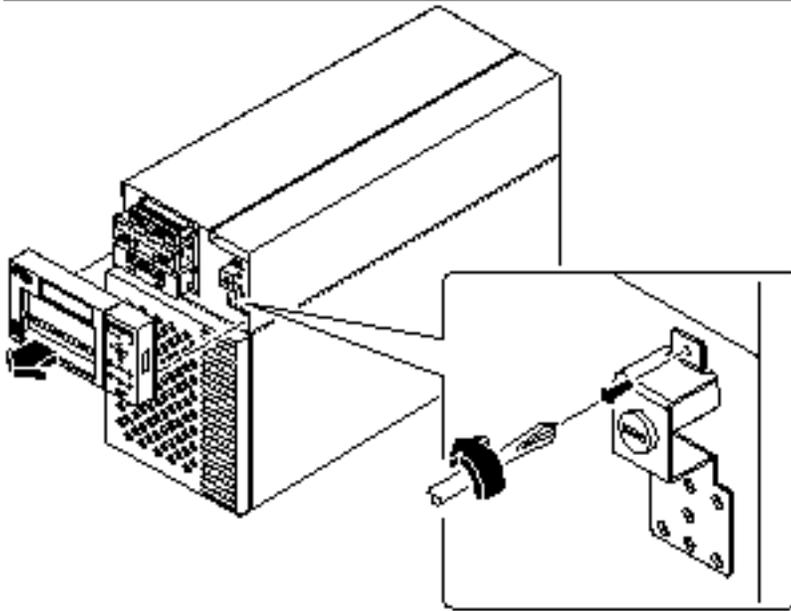

*Figure 8-9*

5. Pull the top part of the assembly away from the chassis and lift the bottom tab free from the slot in the chassis wall.
6. Carefully pull the assembly and its attached cables out through the openings in the chassis wall.  
Open the disk access door, if necessary, to gain better access to the LED ribbon cable.

## What Next

To replace the LED/keyswitch assembly, complete this task:

- “How to Install the LED/Keyswitch Assembly” on page 160

---

# How to Install the LED/Keyswitch Assembly

## Video Demonstration

*Figure 8-10*

Click on the icon above for a video demonstration.

[Click here for Appendix E.](#)

## What to Do

- 1. Unlock the disk access door and swing it open.**
- 2. Grasp the cables attached to the LED/keyswitch assembly and feed them through the appropriate openings in the front of the chassis.**

Feed the keyswitch cable through the small round opening and the LED ribbon cable through the rectangular opening below it.
- 3. Route the keyswitch cable straight back toward the UltraSCSI backplane.**
- 4. Thread the LED ribbon cable straight down behind the chassis wall and pull it out through the disk bay opening.**
- 5. Insert the bottom portion of the LED/keyswitch assembly into the rectangular opening at the front of the chassis.**

Position the assembly so that the bottom tab rests inside the chassis.
- 6. Replace the Phillips screw that secures the top portion of the assembly to the chassis wall.**
- 7. Reattach the RMA plastic cover to the front of the removable media assembly.**

Align the clips on either side of the cover with the small rectangular slots in the chassis wall. Push evenly on both sides of the cover to secure it to the chassis.

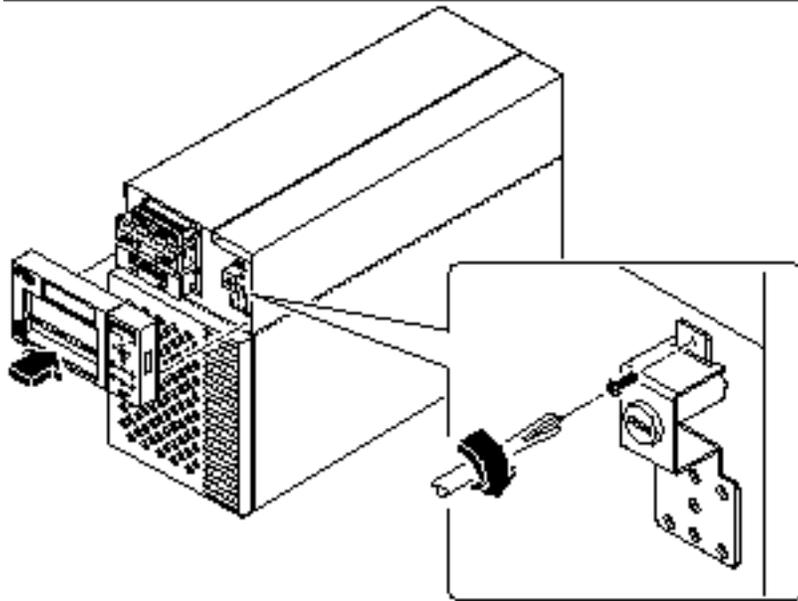


Figure 8-11

- 8. Grasp the corner of the LED ribbon cable, and fold the cable under itself, so that the label at the end is facing up.**

Make sure that the adhesive strip at the corner of the cable is also facing up.

- 9. Feed the end back into the disk bay opening and route it on top of the disk cage toward the upper-left corner of the UltraSCSI backplane.**

Arrange the middle portion of the cable so that it lies flat across the top of the disk cage at the front of the chassis.

- 10. Connect the LED ribbon cable to connector J0602 on the UltraSCSI backplane.**

This connector is located at the upper-left corner of the backplane (as viewed from the front). Make sure that the label at the end of the cable faces up. Press down the connector collar to secure the connection.

- 11. Secure the LED ribbon cable to the underside of the removable media shelf.**

At the front-left corner of the system, the LED ribbon cable should be secured to the underside of the removable media shelf. The corner of the cable has a strip of double-sided adhesive tape. Peel off the paper backing from the adhesive strip, and secure the cable to the underside of the removable media shelf.

- 12. Connect the keyswitch cable to connector J0601 on the UltraSCSI backplane.**

This connector is located in the upper-left corner of the backplane (as viewed from the rear). Reach in through the side of the chassis to make the connection.

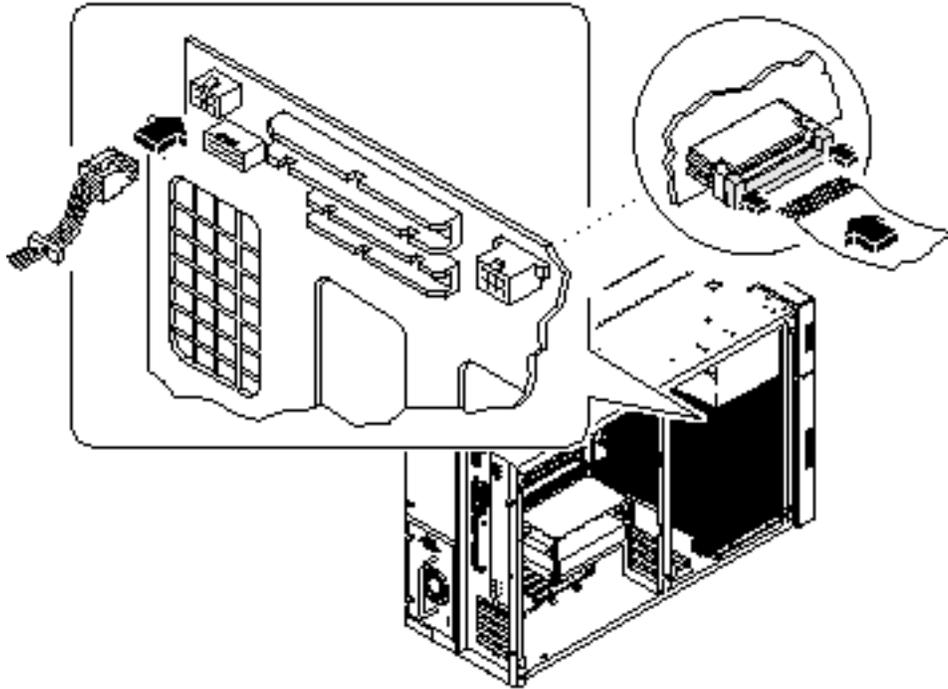


Figure 8-12

## What Next

To reassemble the system, complete these tasks:

- “How to Install the Fan Tray Assembly” on page 151
- “How to Install the Side Access Panel” on page 62

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. For additional information, see Chapter 12.

---

# How to Remove the Disk Cage Assembly

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Fan Tray Assembly” on page 150
- “How to Remove the Removable Media Assembly (RMA)” on page 128
- “How to Remove a Disk Drive” on page 135

---

**Note** - You must remove all disk drives from the disk cage assembly. Be sure to note the disk slot number associated with each drive. Later, when you reinstall the disk drives, it is important to return each drive to its original location.

---

## What to Do

1. **Disconnect the LED ribbon cable from connector J0602 at the front of the UltraSCSI backplane.**

This connector is located in the upper-left corner of the backplane (as viewed from the front). Lift the thin collar at the top of the connector to disconnect the cable.

2. **Disconnect any remaining cables from the rear of the UltraSCSI backplane:**
  - a. **Disconnect the UltraSCSI power cable from connector J0101.**
  - b. **Disconnect the UltraSCSI data cable from connector J0102.**
  - c. **Disconnect the keyswitch/LED cable from connector J0103.**
  - d. **Disconnect the keyswitch cable from connector J0601.**


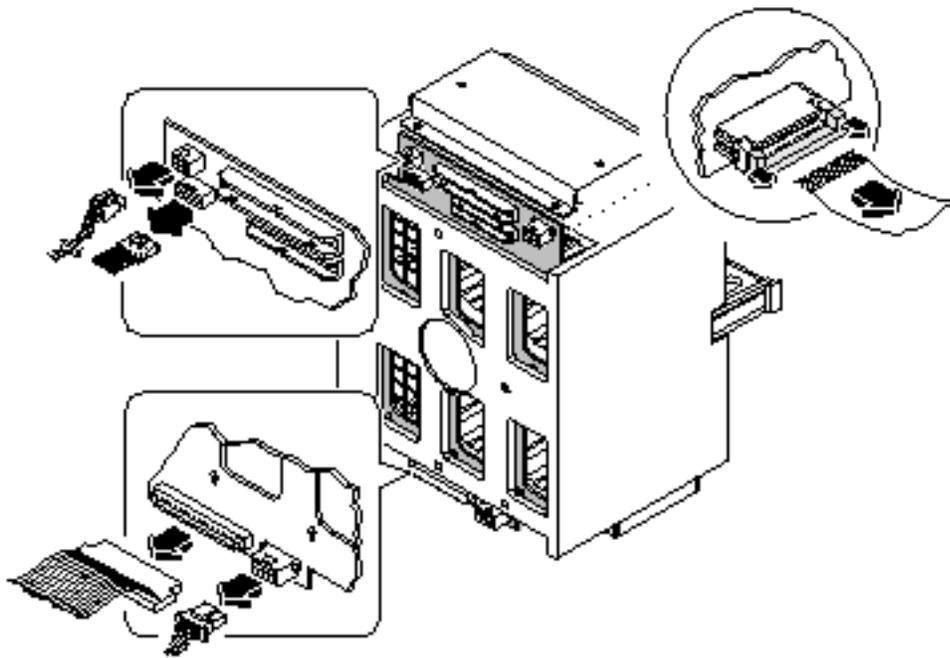


Figure 8-13

3. **Remove the plastic outer panel that partially covers the top of the chassis:**  
Only the top portion of the panel must be removed.
  - a. Using a flat-blade screwdriver as a lever, carefully flex the panel as shown below to disengage it from the chassis.
  - b. Slide the panel toward the rear of the system until the hooks beneath the panel are disengaged from the chassis.
  - c. Pull the bottom center edge of the panel outward until it disengages from the chassis.  
Lift the panel off the system and set it aside.

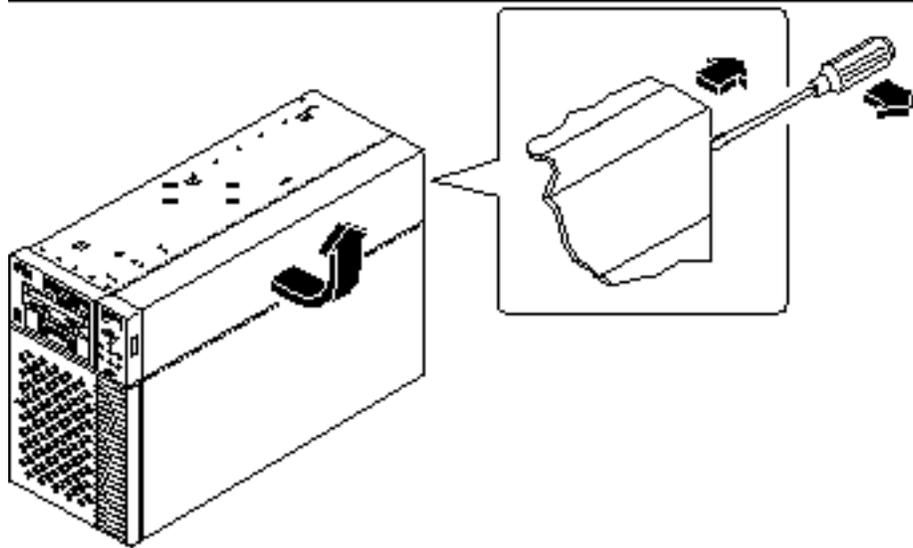

*Figure 8-14*

**4. Carefully lower the chassis onto its closed side.**

Enlist the help of another person to accomplish this safely.

Do not lift the chassis using the plastic panels at the front or the side of the chassis.

Roll the system onto a solid surface that spaces the unit about 2 inches (5 cm) off the floor; for example, use a pair of wooden boards. Do not allow any of the weight to rest on the plastic panels at the front of the chassis.

**5. From the underside of the chassis, use a large flat-blade screwdriver to loosen the two captive screws that secure the disk cage to the bottom of the chassis.**

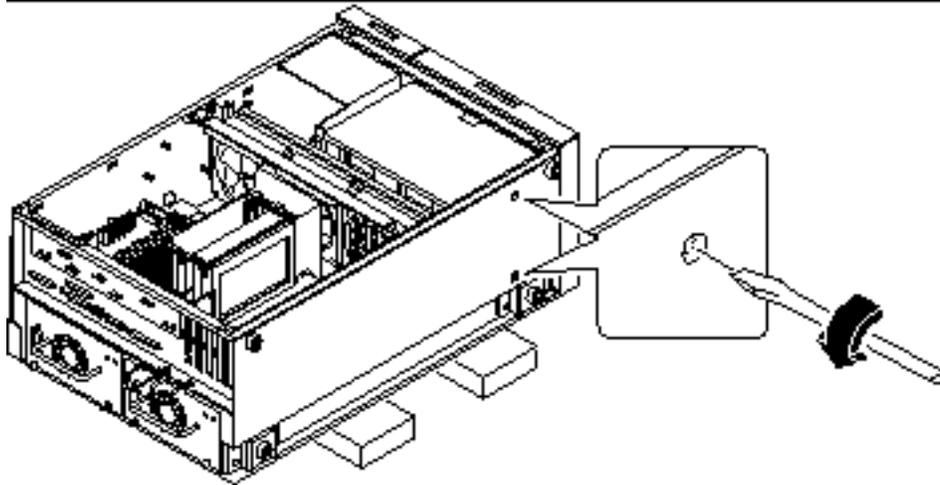


Figure 8-15

**6. Stand the chassis upright.**

Enlist the help of another person to accomplish this safely.

**7. From the top of the chassis, use a long flat-blade screwdriver to loosen the two captive screws that secure the disk cage to the upper part of the chassis.**

Insert the screwdriver through the two access holes on top of the chassis.



---

**Caution** - Take care to avoid damaging any cables that may be located near the captive screws.

---

**8. Remove the disk cage assembly through the open side of the chassis.**

Place the assembly on an antistatic mat.

## What Next

To replace the disk cage assembly, complete this task:

- “How to Install the Disk Cage Assembly” on page 167

---

# How to Install the Disk Cage Assembly

## What to Do

**1. Lift the disk cage assembly into the side of the chassis.**

Orient the disk cage so that the open drive bays are facing the front of the chassis. Grasp the free end of the LED ribbon cable (from the LED/keyswitch assembly) and pull it out the front of the disk bay opening to make room for the disk cage.

**2. Align the screw holes on top of the cage with the captive screws in the upper part of the chassis.**

**3. From the top of the chassis, use a long flat-blade screwdriver to partially tighten the two captive screws that secure the disk cage to the chassis.**

Insert the screwdriver through the two access holes on top of the chassis to tighten the screws. Before tightening the screws fully, ensure that the two bottom screws are fully tightened (see Step 5). Finish tightening the top two screws only *after* the bottom screws are tightened.



**Caution** - Take care to avoid damaging any cables that may be located near the captive screws.

---

**4. Carefully lower the chassis onto its closed side.**

Enlist the help of another person to accomplish this safely.

Do not lift the chassis using the plastic panels at the front or the side of the chassis.

Roll the system onto a solid surface that spaces the unit about 2 inches (5 cm) off the floor; for example, use a pair of wooden boards. Do not allow any of the weight to rest on the plastic panels at the front of the chassis.

**5. From the underside of the chassis, use a large flat-blade screwdriver to tighten the two captive screws that secure the disk cage to the bottom of the chassis.**

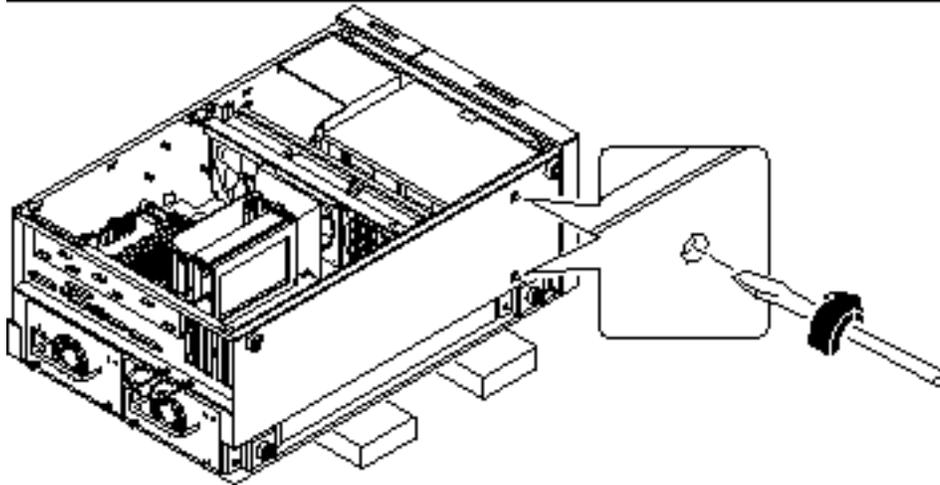


Figure 8-16

**6. Stand the whole chassis upright.**

Enlist the help of another person to accomplish this safely.

**7. Finish tightening the two captive screws at the top of the disk cage.**

**8. Grasp the corner of the LED ribbon cable (hanging in front of the disk bay opening), and fold the cable under itself, so that the label at the end is facing up.**

**9. Feed the end back into the disk bay opening and route it on top of the disk cage toward the upper-left corner of the UltraSCSI backplane.**

Arrange the middle portion of the cable so that it lies flat across the top of the disk cage at the front of the chassis.

**10. Reconnect the LED ribbon cable to connector J0602 at the front of the UltraSCSI backplane.**

This connector is located in the upper-left corner of the backplane (as viewed from the front). Make sure that the label at the end of the cable faces up. Press down the connector collar to secure the connection.

**11. Reconnect the remaining cables to the rear of the UltraSCSI backplane:**

**a. Connect the UltraSCSI data cable to connector J0102.**

**b. Connect the UltraSCSI power cable to connector J0101.**

- c. Connect the keyswitch cable (from the LED/keyswitch assembly) to connector J0601.
- d. Connect the keyswitch/LED cable to connector J0103.

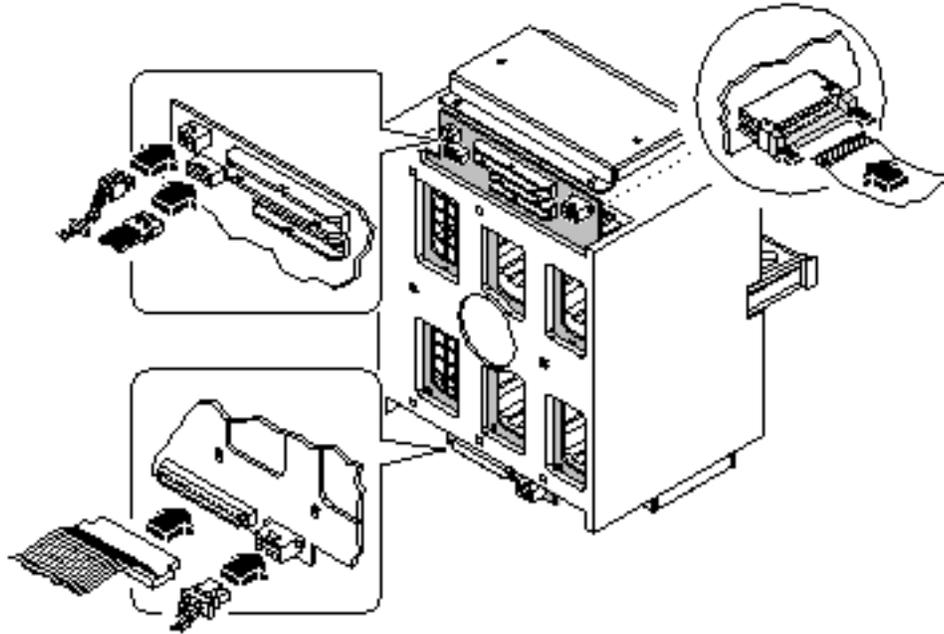


Figure 8-17

- 12. Replace the plastic outer panel that partially covers the top of the chassis:
  - a. Insert the hooks on the underside of the panel into the corresponding slots in the chassis.
  - b. Slide the panel toward the front of the system until the hooks engage the chassis, and the rear edge of the panel snaps into place.

Press along the bottom edge of the panel to guide it into place.

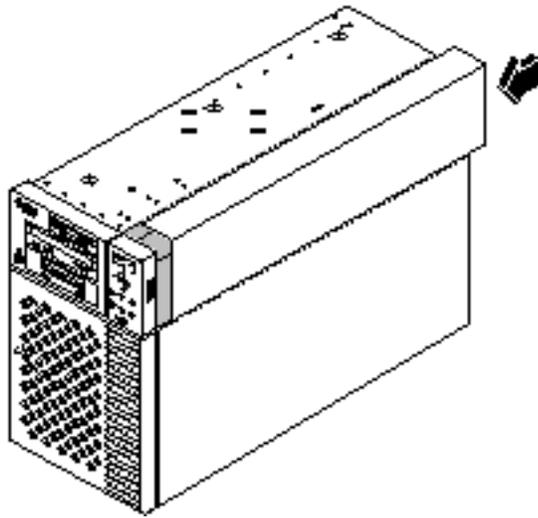


Figure 8-18

## What Next

To reassemble the system, complete these tasks:

- “How to Install the Removable Media Assembly (RMA)” on page 132
- “How to Install the Fan Tray Assembly” on page 151
- “How to Install a Disk Drive” on page 137
- “How to Install the Side Access Panel” on page 62

---

**Note** - When you reinstall the disk drives, it is important to return each drive to its original location.

---

---

## How to Remove the Floor Casters Assembly

### Before You Begin

Complete this task:

- “How to Power Off the System” on page 55

## What to Do

**1. Carefully turn the system chassis upside down.**

Enlist the help of another person to accomplish this safely.

Do not lift the chassis using the plastic panels at the front or the side of the chassis. Place the system onto a solid surface that spaces the unit about 2 inches (5 cm) off the floor; for example, use a pair of wooden boards. Do not allow any of the weight to rest on the plastic panels at the front of the chassis.

**2. Remove the eight Phillips screws that secure the floor casters assembly to the underside of the chassis.**

**3. Remove the casters assembly and set it aside.**

---

**Note** - There are two foot glide mounting brackets attached to the underside of the chassis. Do not remove these brackets unless you are converting the chassis to a rackmount configuration.

---

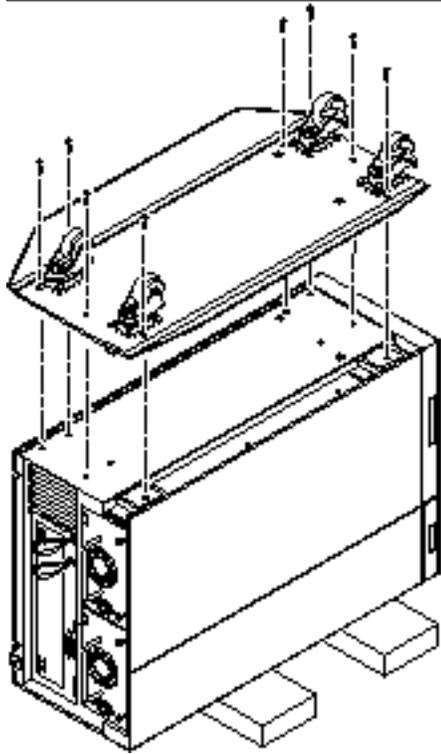


Figure 8-19

## What Next

To replace the floor casters assembly with foot glides, complete this task:

- “How to Install the Chassis Foot Glides” on page 176

---

# How to Install the Floor Casters Assembly

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Chassis Foot Glides” on page 174

## What to Do

### 1. Carefully turn the system chassis upside down.

Enlist the help of another person to accomplish this safely.

Do not lift the chassis using the plastic panels at the front or the side of the chassis. Place the system onto a solid surface that spaces the unit about 2 inches (5 cm) off the floor; for example, use a pair of wooden boards. Do not allow any of the weight to rest on the plastic panels at the front of the chassis.

---

**Note** - The right side of the casters assembly mounts to the two foot glide mounting brackets on the underside of the chassis. If you removed these brackets previously, you must reinstall them now. See “How to Install the Chassis Foot Glides” on page 176.

---

### 2. Align the holes in the floor casters assembly with the corresponding mounting holes on the underside of the chassis.

Position the casters assembly with the four casters facing up. Align the two large holes in the assembly with the large holes in the chassis bottom.

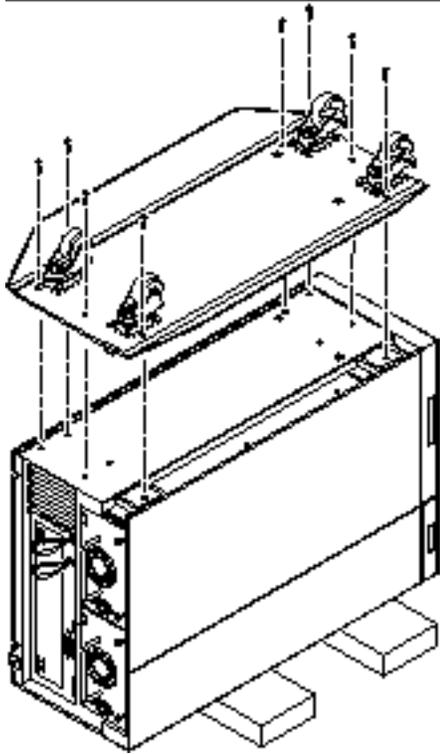


Figure 8-20

1. **Secure the casters assembly to the chassis using the eight Phillips screws provided with the assembly.**
2. **Carefully return the chassis to its upright position.**  
Enlist the help of another person to accomplish this safely. Do not lift the chassis using the plastic panels at the front or the side of the chassis.

---

## How to Remove the Chassis Foot Glides

### Before You Begin

Complete this task:

- “How to Power Off the System” on page 55

## What to Do

### 1. Carefully turn the system chassis upside down.

Enlist the help of another person to accomplish this safely.

Do not lift the chassis using the plastic panels at the front or the side of the chassis. Place the system onto a solid surface that spaces the unit about 2 inches (5 cm) off the floor; for example, use a pair of wooden boards. Do not allow any of the weight to rest on the plastic panels at the front of the chassis.

### 2. Remove the four plastic foot glides from the underside of the chassis.

Remove the Phillips screw at the center of each foot glide.

---

**Note** - Do not remove the two foot glide mounting brackets unless you are converting the chassis to a rackmount configuration.

---

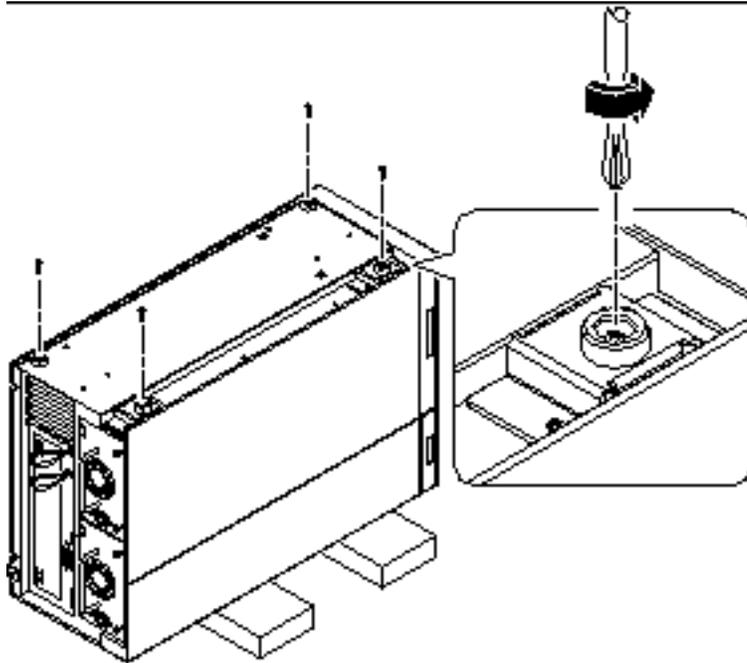


Figure 8-21

## What Next

To replace the foot glides with the optional floor casters assembly, complete this task:

- “How to Install the Floor Casters Assembly” on page 172

---

# How to Install the Chassis Foot Glides

## Before You Begin

Complete this task:

- “How to Power Off the System” on page 55
- “How to Remove the Floor Casters Assembly” on page 170

## What to Do

### 1. Carefully turn the system chassis upside down.

Enlist the help of another person to accomplish this safely.

Do not lift the chassis using the plastic panels at the front or the side of the chassis. Place the system onto a solid surface that spaces the unit about 2 inches (5 cm) off the floor; for example, use a pair of wooden boards. Do not allow any of the weight to rest on the plastic panels at the front of the chassis.

### 2. Attach the four plastic foot glides to the corresponding mounting holes on the underside of the chassis.

Insert a Phillips screw through the center of each foot glide.

---

**Note** - Two of the plastic foot glides attach directly to the chassis. The other two glides are attached using mounting brackets. These brackets should already be installed on your system. If they are missing, install the two mounting brackets provided with the foot glides. Use two Phillips screws to attach each bracket.

---

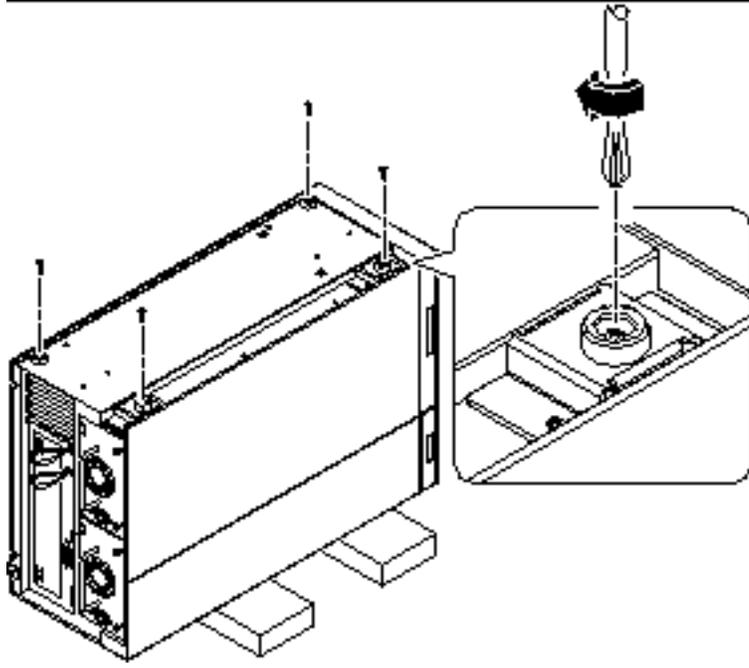


Figure 8-22

**3. Carefully return the chassis to its upright position.**

Enlist the help of another person to accomplish this safely. Do not lift the chassis using the plastic panels at the front or the side of the chassis.



## Removing and Installing Backplanes and Cables

---

This chapter describes how to remove and install system backplanes and cables. For a list of part numbers for field-replaceable units and optional equipment, see “Illustrated Parts Breakdown” on page 313.

*Tasks* covered in this chapter include:

- “How to Remove the UltraSCSI Backplane” on page 179
- “How to Install the UltraSCSI Backplane” on page 182
- “How to Remove the Power Distribution Board” on page 184
- “How to Install the Power Distribution Board” on page 185
- “How to Connect the System Cables” on page 187

---

### How to Remove the UltraSCSI Backplane

#### Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Fan Tray Assembly” on page 150

- “How to Remove the Removable Media Assembly (RMA)” on page 128
- “How to Remove a Disk Drive” on page 135
- “How to Remove the Disk Cage Assembly” on page 163


---

**Note** - You must remove all disk drives from the disk cage assembly. Be sure to note the disk slot number associated with each drive. Later, when you reinstall the disk drives, it is important to return each drive to its original location.

---

## What to Do

1. **Remove the two screws that secure the cage center divider to the disk cage.**  
Orient the cage so that the back is facing you. Remove the two screws that are located in the middle of the back.
2. **From the front of the disk cage, slide the center divider half way out of the cage.**

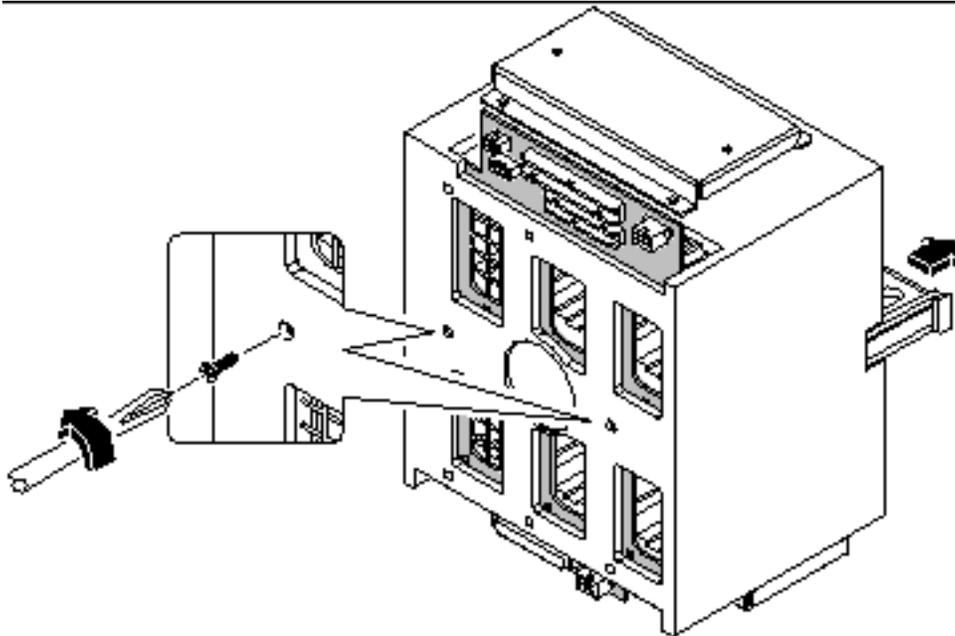


*Figure 9-1*

3. **Free the backplane from the six posts that support it at the rear of the disk cage.**

Push down on the top edge of the backplane and pull it away from the posts.

- 4. Slide the backplane out of the opening at the base of the disk cage.**  
Place the backplane on an antistatic mat.

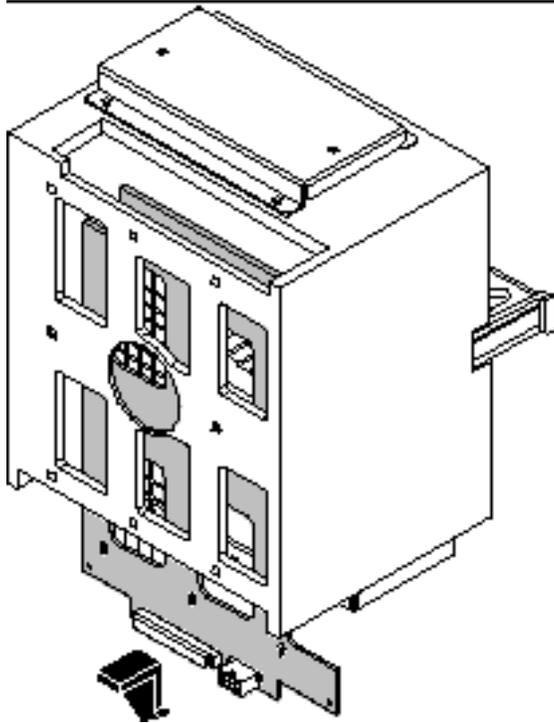

*Figure 9-2*

## What Next

To replace the UltraSCSI backplane, complete this task:


- “How to Install the UltraSCSI Backplane” on page 182

---

# How to Install the UltraSCSI Backplane

## What to Do

1. **Slide the UltraSCSI backplane into the backplane slot in the base of the disk cage assembly.**  
Orient the backplane so that the six SCSI drive connectors are facing the open drive bays.
2. **Insert the six posts at the rear of the disk cage into the corresponding keyholes in the backplane. Lift the backplane slightly so that each post rests in the narrow part of a keyhole.**

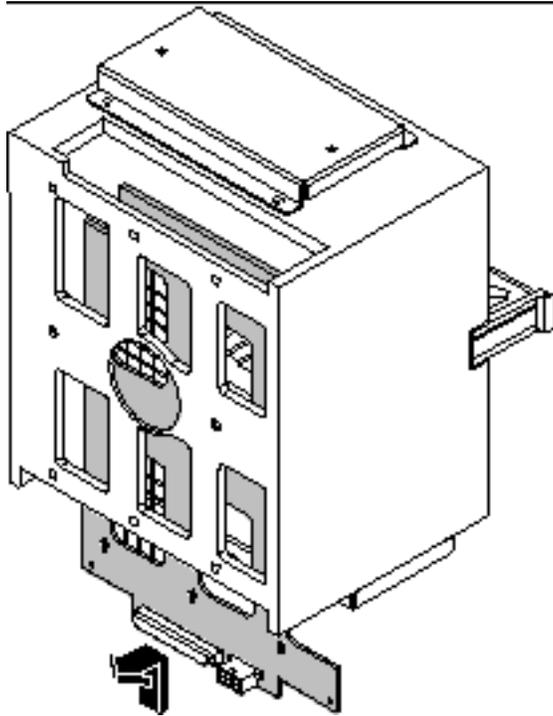

*Figure 9-3*

3. **Push the cage center divider back into the disk cage as far as it can go.**

The center divider should engage the two large holes in the center of the backplane.

4. Replace the two screws that secure the cage center divider and the backplane to the disk cage assembly.

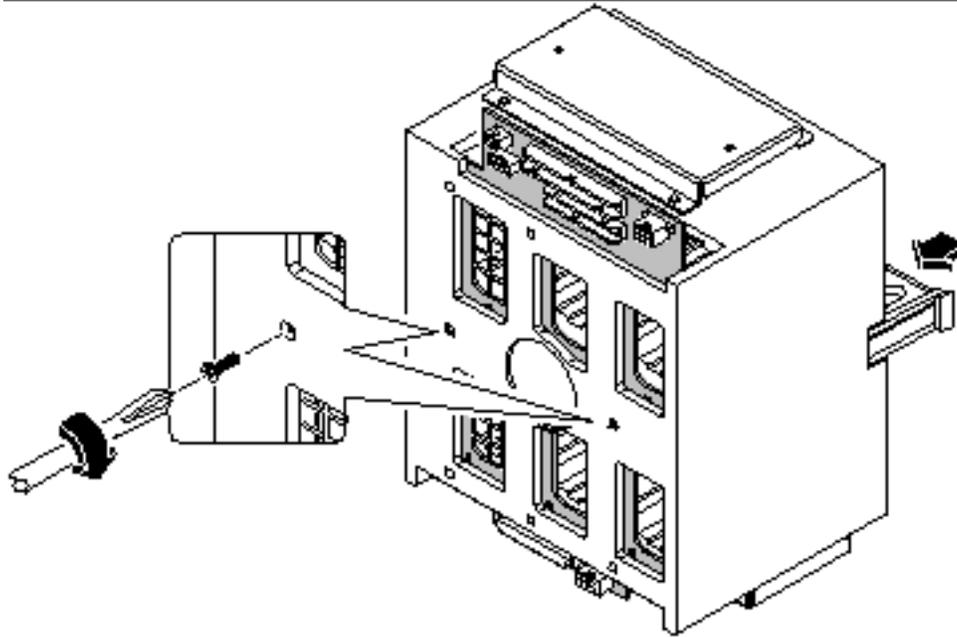


Figure 9-4

## What Next

To reassemble the system, complete these tasks:

- “How to Install the Disk Cage Assembly” on page 167
- “How to Install the Removable Media Assembly (RMA)” on page 132
- “How to Install a Disk Drive” on page 137
- “How to Install the Fan Tray Assembly” on page 151
- “How to Install the Side Access Panel” on page 62

---

**Note** - When you reinstall the disk drives, it is important to return each drive to its original location.

---

---

# How to Remove the Power Distribution Board

## Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Fan Tray Assembly” on page 150
- “How to Remove a Power Supply” on page 153

If your system has two power supplies, remove both of them.

## What to Do

**1. Disconnect all cables attached to the power distribution board.**

Start at the top of the board and work your way down.

- a. **Disconnect the keyswitch/LED cable at connector J0401.**
- b. **Disconnect the system interlock cable at connector J0501.**
- c. **Disconnect the two power sense cables at connectors J0201 and J0202.**
- d. **Disconnect the DC power cables at connectors J0204, J0205, and J0206.**
- e. **Disconnect the UltraSCSI power cable at connector J0207.**

**2. Loosen the two captive Phillips screws that secure the board to its mounting brackets.**

One screw is located at the top edge, and the other is located at the bottom edge of the power distribution board.

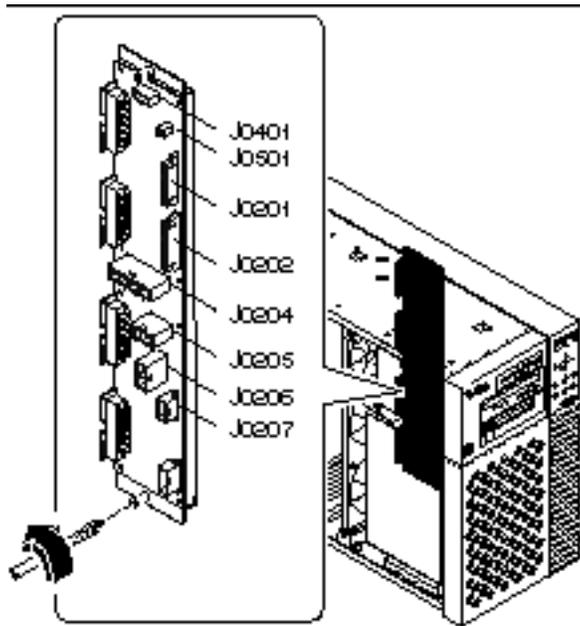


Figure 9-5

3. Remove the board from the chassis, and place it on an antistatic mat.

## What Next

To replace the power distribution board, complete this task:

- “How to Install the Power Distribution Board” on page 185

---

# How to Install the Power Distribution Board

## What to Do

1. Position the power distribution board in its mounting brackets on the chassis ceiling and floor.

Align the two captive screws at the top and bottom edges of the board with the two holes in the mounting brackets. The four large power connectors along the edge of the board should face the power supply bays.

**2. Tighten the two captive Phillips screws that secure the board to its mounting brackets.**

It helps to separate the board slightly from its mounting brackets in order to engage the screws in the screw holes.

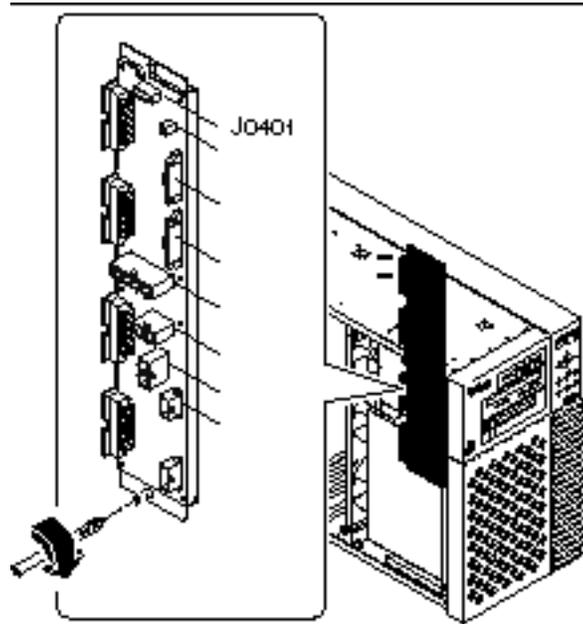


Figure 9-6

**3. Reconnect all cables that you previously detached from the power distribution board.**

Start at the top of the board and work your way down.

- a. **Connect the keyswitch/LED cable at connector J0401.**
- b. **Connect the system interlock cable at connector J0501.**
- c. **Connect the two power sense cables at connectors J0201 and J0202.**
- d. **Connect the DC power cables at connectors J0204, J0205, and J0206.**
- e. **Connect the UltraSCSI power cable at connector J0207.**

## What Next

To reassemble the system, complete these tasks:

- “How to Install the Fan Tray Assembly” on page 151
- “How to Install the Side Access Panel” on page 62
- “How to Install a Power Supply” on page 155

When you are ready to restart the system, be sure to run POST and OpenBoot Diagnostic tests to verify that the system functions correctly with the new parts you have just installed. For additional information, see Chapter 12.

---

## How to Connect the System Cables

### Before You Begin

Complete these tasks:

- “How to Power Off the System” on page 55
- “How to Remove the Side Access Panel” on page 60
- “How to Avoid Electrostatic Discharge” on page 64
- “How to Remove the Fan Tray Assembly” on page 150

### What to Do

1. **Identify the cable you wish to install or replace. Use the information in the following tables and illustrations to determine where to connect each end of the cable.**

Each cable connector is keyed so that it can be connected in only one way.

2. **Install the cable according to the routing and cable management instructions provided in the table.**

---

**Note** - Part numbers listed in this section are correct as of the manual publication date but are subject to change without notice. Consult your authorized Sun sales representative or service provider to confirm a part number prior to ordering a replacement part.

---

TABLE 9-1

Cable Name	Connections	Routing and Management
CPU 3.3V Power Cable	<i>From:</i> Power Distribution Board (J0205, J0206) <i>To:</i> Main Logic Board (J2903)	Tie-wrapped with other cables to chassis ceiling in two locations near fan tray assembly.
CPU 5V/Core Voltage Power Cable	<i>From:</i> Power Distribution Board (J0204) <i>To:</i> Main Logic Board (J2902)	Tie-wrapped with other cables to chassis ceiling in two locations near fan tray assembly.
System Interlock Cable	<i>From:</i> Power Distribution Board (J0501) <i>To:</i> Chassis rear wall <i>To:</i> Chassis front wall near removable media assembly	Tie-wrapped with other cables to chassis ceiling in two locations near fan tray assembly. Tie-wrapped alone to chassis ceiling and rear wall in four more locations. Switch at one end of cable is attached to rear chassis wall with two small Phillips screws. Switch at front end of cable is attached to the front chassis wall with two small Phillips screws.
14-pin Power Sense/ I <sup>2</sup> C Cable	<i>From:</i> Power Distribution Board (J0202) <i>To:</i> Main Logic Board (J4501)	Tie-wrapped with other cables to chassis ceiling in two locations near fan tray assembly.
16-pin Power Sense/Control Cable	<i>From:</i> Power Distribution Board (J0201) <i>To:</i> Main Logic Board (J2901)	Tie-wrapped with other cables to chassis ceiling in two locations near fan tray assembly.
UltraSCSI Power Cable	<i>From:</i> Power Distribution Board (J0207) <i>To:</i> UltraSCSI Backplane (J0101)	Routed behind fan tray assembly.
UltraSCSI Data Cable	<i>From:</i> Main Logic Board (J1801) <i>To:</i> UltraSCSI Backplane (J0102)	Routed behind fan tray assembly.
Keypress/LED Cable	<i>From:</i> Power Distribution Board (J0401) <i>To:</i> UltraSCSI Backplane (J0103)	Routed behind fan tray assembly.

TABLE 9-1 (continued)

Cable Name	Connections	Routing and Management
Removable Media SCSI Cable	<i>From:</i> UltraSCSI Backplane (J0501) <i>To:</i> CD-ROM/Tape Drive SCSI Connector	Includes connectors for two RMA SCSI devices.
Removable Media Power Cable	<i>From:</i> UltraSCSI Backplane (J0104) <i>To:</i> CD-ROM/Tape/Diskette Drive Power Connectors	Includes connectors for two RMA SCSI devices and one optional diskette drive.
Diskette Data Cable	<i>From:</i> UltraSCSI Backplane (J0502) <i>To:</i> Diskette Drive Data Connector	
Fan Tray Cable	<i>From:</i> Power Distribution Board (J0303) <i>To:</i> Fan Tray Connector	Cable end labeled P1 connects to power distribution board.

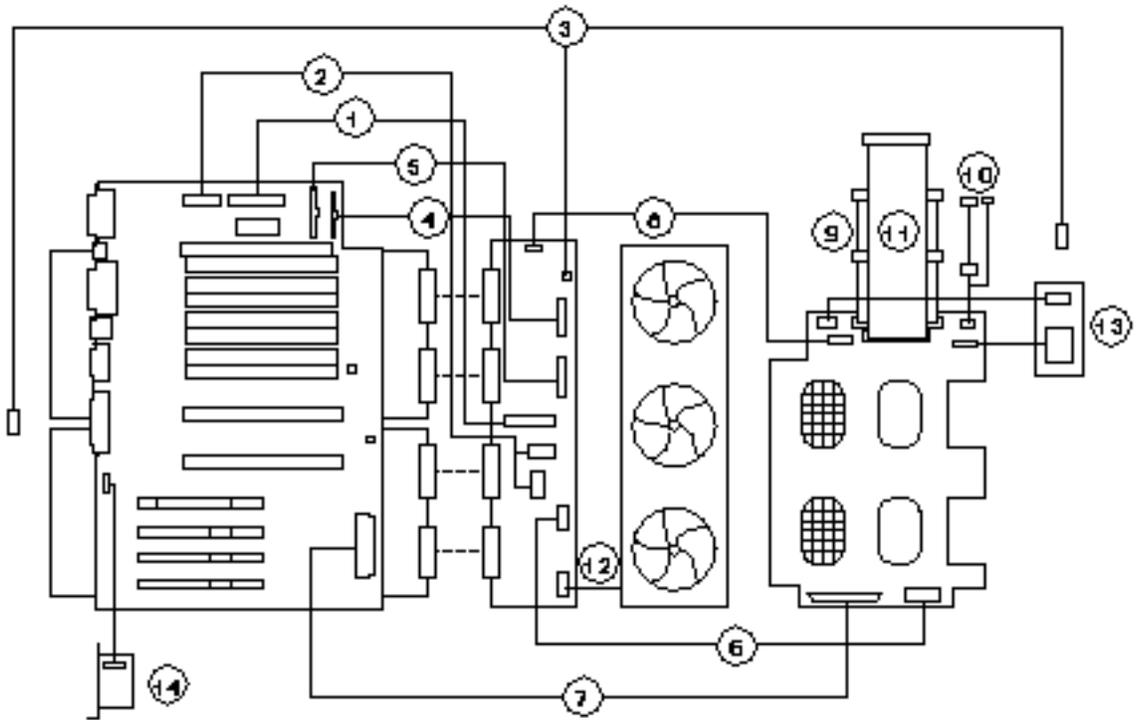


Figure 9-7

TABLE 9-2

Description	Key Number
CPU 3.3V Power Cable — 530-2444	Keypress/LED Cable — 530-2525
CPU 5V/Core Voltage Power Cable — 530-2441	Removable Media SCSI Cable — 530-2445
System Interlock Cable — 530-2482	Removable Media Power Cable — 530-2440
44-pin Power Sense/I <sup>2</sup> C Cable — 530-2480	Diskette Data Cable — 530-2439
56-pin Power Sense/Control Cable — 530-2481	Fan Tray Cable — 530-2685

**TABLE 9-2** (continued)

<b>Description</b>	<b>Part Number</b>
UltraSCSI Power Cable — 530-2443	LED/Keyswitch Assembly <sup>1</sup> — 540-3604
UltraSCSI Data Cable — 530-2446	SSP Paddle Card and Cable <sup>2</sup> — 501-4818

1. To install this part, see “How to Install the LED/Keyswitch Assembly” on page 160.
2. To install this part, see “How to Install the SSP Paddle Card” on page 120.

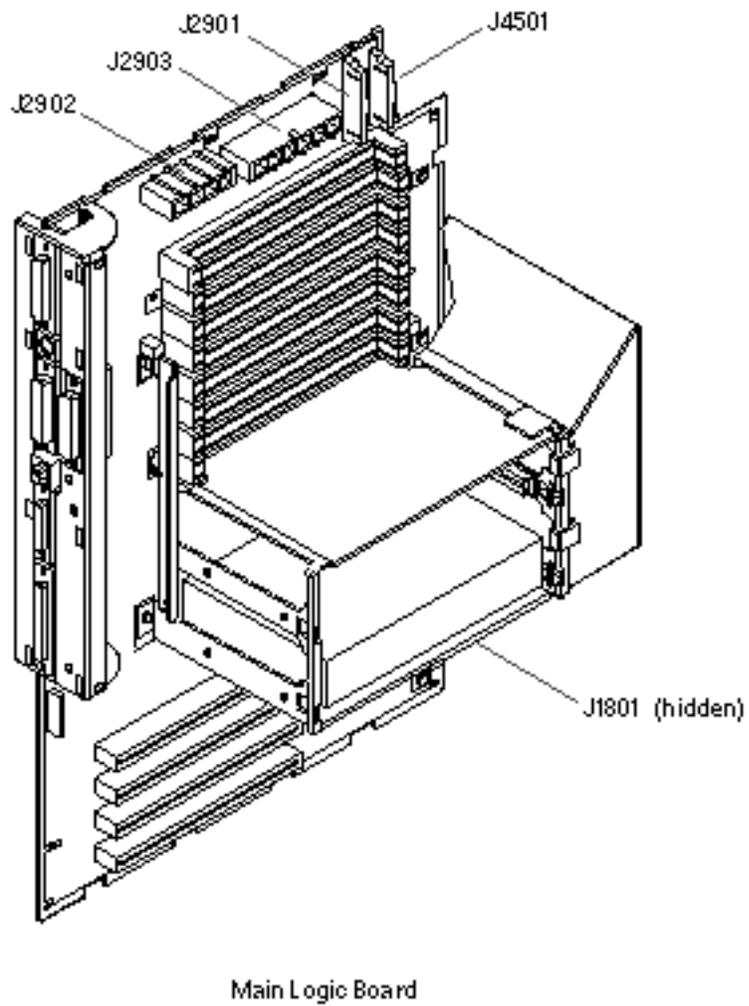


Figure 9-8

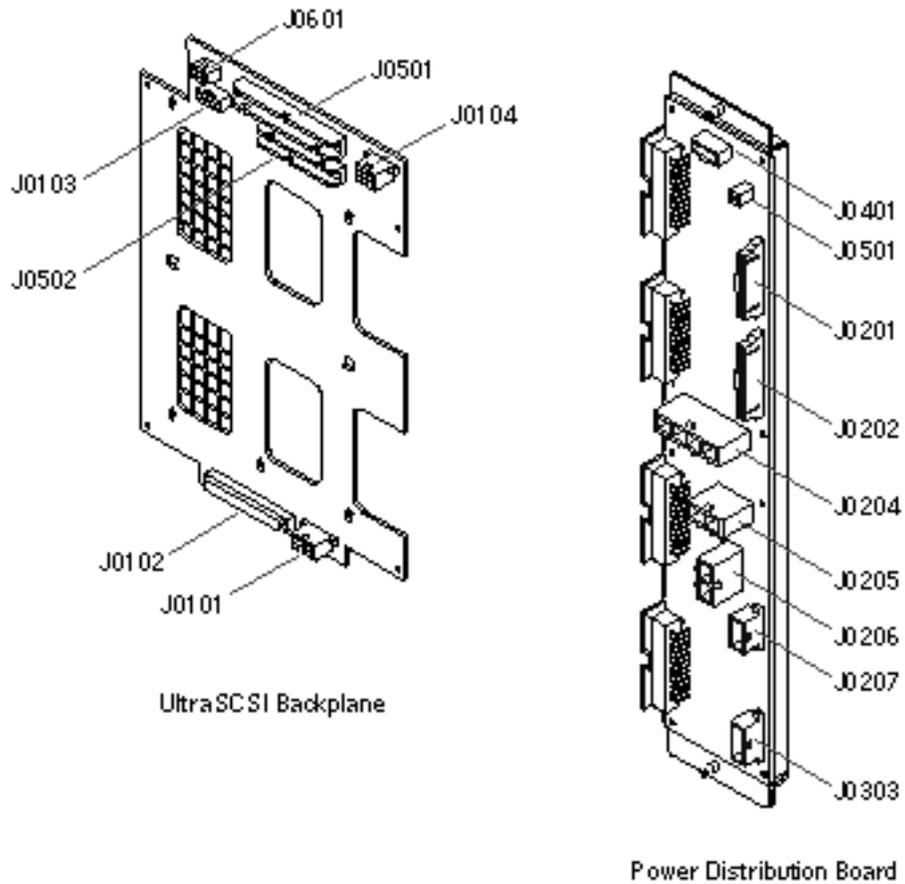


Figure 9-9

## What Next

To reassemble the system, complete these tasks:

- “How to Install the Fan Tray Assembly” on page 151
- “How to Install the Side Access Panel” on page 62



## Administration and Networking

---

This chapter focuses on administrative tasks associated with Ethernet interfaces and the disk array.

*Tasks covered in this chapter include:*

- “How to Configure the Standard Ethernet Interface” on page 196
- “How to Add an Ethernet Interface” on page 198
- “How to Attach a Twisted-Pair Ethernet (TPE) Cable” on page 200
- “How to Attach an MII Ethernet Transceiver” on page 202
- “How to Boot the System Using the Standard Ethernet Interface” on page 204
- “How to Boot the System Using a PCI-Based Ethernet Interface” on page 205
- “How to Select the Boot Device” on page 207

*Other information covered in this chapter includes:*

- “About Network Interface Options” on page 195
- “About Disk Array Configurations and Concepts” on page 209

---

### About Network Interface Options

The system’s main logic board provides an auto-sensing, switchable 10BASE-T/100BASE-TX Ethernet interface conforming to the IEEE 802.3u Ethernet standard. The interface configures itself automatically for either 10-Mbps or 100-Mbps operation, depending on network characteristics.

Two rear panel connectors provide access to the Ethernet interface:

- One RJ-45 connector for connecting a twisted-pair Ethernet (TPE) cable

- One Media Independent Interface (MII) connector for connecting an external MII transceiver

---

**Note** - You can use only one of the main logic board Ethernet connectors; you cannot connect to the TPE and MII connectors at the same time.

---

The Media Independent Interface lets you connect the system to a variety of external Ethernet transceivers, providing compatibility with different Ethernet wiring types. When an external transceiver is connected to the MII, the system automatically activates the MII port and disables the TPE port.

Sun Microsystems offers an MII-to-AUI transceiver as a separately orderable option (order number X467A). A number of third-party MII transceivers are also available for connecting to TX, T4, FX, and AUI-type Ethernet networks.

For instructions on configuring the main logic board Ethernet interface, see “How to Configure the Standard Ethernet Interface” on page 196. For information about operating characteristics and configuration parameters for the `hme` Fast Ethernet device driver, please see *Platform Notes: The Fast Ethernet Device Driver*. This document is available on *Solaris on Sun Hardware AnswerBook*, which is provided on the SMCC Supplement CD for the Solaris release you are running.

Additional network interfaces are available through PCI cards, providing connection to Ethernet, token ring, FDDI, and other network types. For more information, see “How to Add an Ethernet Interface” on page 198 and the documentation supplied with the PCI network interface card.

---

## How to Configure the Standard Ethernet Interface

### Before You Begin

You must perform the following tasks:

- Complete the prerequisite steps in “How to Install the Enterprise 250 Server” on page 44.
- Determine which of the two Ethernet ports you want to use; see “About Network Interface Options” on page 195.
- Attach a cable to the appropriate Ethernet port; see “How to Attach a Twisted-Pair Ethernet (TPE) Cable” on page 200 or “How to Attach an MII Ethernet Transceiver” on page 202.

---

**Note** - You can configure only one Ethernet interface during installation of the operating system. To configure additional interfaces, see “How to Add an Ethernet Interface” on page 198.

---

## What to Do

### 1. Assign a host name to the machine.

The host name must be unique within the network. It can be made up of characters and numbers. Do not use a dot in the host name. Do not begin the name with a number or a special character.

### 2. Determine the IP address for the interface.

Your network administrator must assign an IP address. Each network device or interface must have a unique IP address.

### 3. Resume the installation of the system.

See “How to Install the Enterprise 250 Server” on page 44. When installing the operating system, you may be prompted to enter the host name and IP address of the machine.

---

**Note** - If you have installed a PCI card as a second Ethernet interface, the operating system asks you to select a primary network interface and then prompts you for its host name and IP address. You must configure the second interface separately, after the operating system is installed. See “How to Add an Ethernet Interface” on page 198.

---

---

**Note** - This system conforms to the Ethernet 10/100BASE-T standard, which states that the Ethernet 10BASE-T link integrity test function should always be enabled on both the host system and the Ethernet hub. If you have problems verifying connection between this system and your hub, verify that the Ethernet hub also has the link test function enabled. See “Network Communications Failure” on page 267 and refer to the manual provided with your hub for more information about the link integrity test function.

---

## What Next

After completing this procedure, the Ethernet interface is ready for operation. However, in order for other network devices to communicate with the system, your

network administrator must enter the system's IP address and host name into the namespace on the network name server. For information about setting up a network name service, consult the *Solaris System Administrator AnswerBook* for your specific Solaris release.

The `hme` Fast Ethernet device driver for the system's standard Ethernet interface is automatically installed with the Solaris release. For information about operating characteristics and configuration parameters for the `hme` driver, please see *Platform Notes: The hme Fast Ethernet Device Driver*. This document is available on *Solaris on Sun Hardware AnswerBook*, which is provided on the SMCC Supplement CD for the Solaris release you are running.

If you want to install an additional network interface by means of a PCI card, you must configure it separately, after installing the operating system; see:

- "How to Add an Ethernet Interface" on page 198

---

## How to Add an Ethernet Interface

### Before You Begin

Follow this procedure to add a PCI card that provides an additional Ethernet interface.

You must perform the following tasks:

- Install the system; see "How to Install the Enterprise 250 Server" on page 44.
- Install any additional PCI Ethernet interface cards that you wish to configure; see "How to Install a PCI Card" on page 114.
- Attach a cable to the new Ethernet port and to the network; see "How to Attach a Twisted-Pair Ethernet (TPE) Cable" on page 200 or "How to Attach an MII Ethernet Transceiver" on page 202.

### What to Do

#### 1. Assign a network host name to the interface.

The host name must be unique within the network. It can be made up of characters and numbers. Do not use a dot in the host name. Do not begin the name with a number or a special character.

Usually an interface host name is based on the machine host name. For example, if the machine is assigned the host name `zardo`, then the additional Ethernet interface could be named `zardo-1`. The machine's host name is assigned when

the operating system software is installed. For more information, see the installation instructions accompanying the Solaris software.

**2. Determine the IP address for the interface.**

An IP address must be assigned by your network administrator. Each interface on a network must have a unique IP address.

**3. Boot the operating system and log on to the system as superuser.**

Enter the following command at the system prompt, and the superuser password:

```
zardoz # su
Password:
```

**4. Create an appropriate `/etc/hostname` file for the new interface.**

The name of the file you create should be of the form `/etc/hostname.typenum`, where *type* is the Ethernet type identifier (some common types are `hme`, `le`, `nf`, and `ie`) and *num* is the logical number of the interface according to the order in which it was installed in the system.

For example, the standard interface provided on the system's main logic board is `hme0` (*type* = `hme`, *num* = 0). If you add a SunSwift<sup>™</sup> PCI Ethernet adapter card as a second `hme` interface, the file name should be `hostname.hme1`.

---

**Note** - The documentation accompanying the Ethernet interface should identify its type. Alternatively, you can enter the `show-devs` command from the `ok` prompt to obtain a list of all installed devices.

---

The host name has an associated IP address that you enter in the `/etc/hosts` file. See Step 6.

**5. Enter the host name, assigned in Step 1, to the `/etc/hostname` file for the new interface.**

Following is an example of the `/etc/hostname` files required for a machine called `zardoz`, which has two Ethernet interfaces—the standard on-board Ethernet interface (`hme0`) and a second interface provided by a PCI Ethernet adapter card (`hme1`). The host name will be `zardoz` to a network connected to the standard `hme0` interface, and `zardoz-1` to a network connected to the `hme1` interface.

```
zardoz # cat /etc/hostname.hme0
zardoz
zardoz # cat /etc/hostname.hme1
zardoz-1
```

**6. Create an entry in the `/etc/hosts` file for each active Ethernet interface.**

An entry consists of the IP address and the host name for each interface.

The following example shows the entries in the `/etc/hosts` file for the interfaces identified in the `/etc/hostname` file created in Step 4 and Step 5.

```
zardoz # cat /etc/hosts
...
127.0.0.1    localhost
129.144.10.57 zardoz    loghost
129.144.11.83 zardoz-1
```

#### 7. Reboot the system; enter:

```
zardoz # reboot -- -r
```

This command rebuilds the device trees so that the system will recognize the newly installed PCI Ethernet adapter card.

## What Next

After completing this procedure, the Ethernet interface is ready for operation. However, in order for other network devices to communicate with the system through this interface, the interface information (its IP address and host name) must be entered into the namespace on the network name server. For information about setting up a network name service, consult the *Solaris System Administrator AnswerBook* for your specific Solaris release.

---

# How to Attach a Twisted-Pair Ethernet (TPE) Cable

## Before You Begin

If you are attaching a twisted-pair Ethernet (TPE) cable to the system's standard Ethernet interface, you must perform the following task:

- Complete prerequisite steps in "How to Install the Enterprise 250 Server" on page 44.

If you are installing an additional Ethernet interface, you must perform the following tasks:

- Install the system; see "How to Install the Enterprise 250 Server" on page 44.
- Install a PCI Ethernet interface card; see "How to Install a PCI Card" on page 114.

## What to Do

**1. Locate the RJ-45 connector for the appropriate Ethernet interface.**

The system comes with one TPE connector on the rear panel. Your system may also include one or more additional TPE connectors provided via PCI Ethernet interface cards.

**2. Plug in the TPE cable to the appropriate RJ-45 connector.**

You should hear the connector tab snap into place.

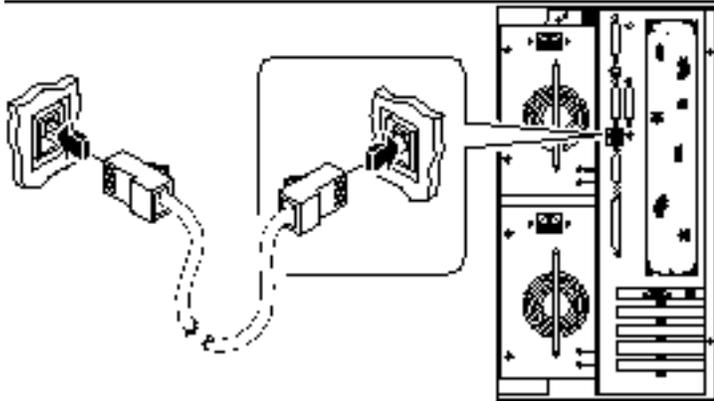


Figure 10-1

**3. Plug in the other end of the cable to the TPE outlet in the wall or the floor.**

You should hear the connector tab snap into place.

See your network administrator if you need more information about how to connect to your network.

---

**Note** - You can use only one of the main logic board Ethernet ports. You cannot connect to the main logic board's TPE and MII ports at the same time. For information about connecting to the MII port, see "How to Attach an MII Ethernet Transceiver" on page 202.

---

## What Next

If you are installing your system, complete the installation procedure. Return to:

- "How to Install the Enterprise 250 Server" on page 44

If you are adding additional interfaces to the system, then you need to configure those interfaces; see:

- “How to Add an Ethernet Interface” on page 198

---

## How to Attach an MII Ethernet Transceiver

The Media Independent Interface (MII) lets you connect the system to a variety of external Ethernet transceivers, providing compatibility with different Ethernet wiring types.

You can order an MII-to-AUI transceiver from Sun Microsystems as a separate option (order number X467A). A number of third-party MII transceivers are also available for connecting to TX, T4, FX, and AUI-type Ethernet networks.

The procedure below assumes you are connecting the Sun MII-to-AUI transceiver. For third-party transceivers, see the documentation supplied with the transceiver.

### Before You Begin

If you are attaching an Ethernet Media Independent Interface (MII) transceiver to the system's standard Ethernet interface, you must have already performed the following task:

- Completed prerequisite steps in “How to Install the Enterprise 250 Server” on page 44

If you are adding an Ethernet interface, you must have already performed the following tasks:

- Installed the system; see “How to Install the Enterprise 250 Server” on page 44
- Installed a PCI Ethernet interface card; see “How to Install a PCI Card” on page 114

### What to Do

#### 1. **Locate the appropriate MII Ethernet connector.**

The system comes with one MII Ethernet connector on the rear panel. Your system may also include one or more additional TPE connectors provided via PCI Ethernet interface cards.

2. Plug the MII Ethernet transceiver into the MII Ethernet connector on the system rear panel.

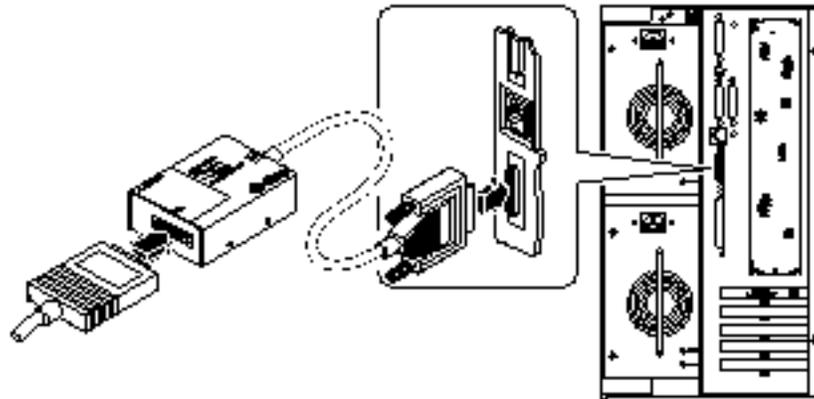


Figure 10-2

3. Attach the network AUI cable to the AUI connector on the MII-to-AUI transceiver.

4. Lock the AUI connector.

As viewed from the top, slide the latch to the right to lock the AUI cable to the MII-to-AUI transceiver. Use a flat-blade screwdriver, if necessary.

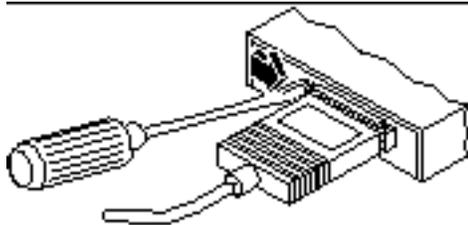


Figure 10-3

5. **Connect the other end of the cable to the appropriate network device.**

There are a variety of connector and cabling options available for the AUI connection. See your network administrator if you need more information about how to connect to your network.

---

**Note** - You can use only one of the main logic board Ethernet ports. You cannot connect to the main logic board's TPE and MII ports at the same time. For information about connecting to the TPE port, see "How to Attach a Twisted-Pair Ethernet (TPE) Cable" on page 200.

---

## What Next

If you are installing your system, then complete the installation procedure. Return to:

- "How to Install the Enterprise 250 Server" on page 44

If you are adding an additional interface to your system, then you need to configure that interface; see:

- "How to Add an Ethernet Interface" on page 198

---

# How to Boot the System Using the Standard Ethernet Interface

## Before You Begin

Before you can boot the system over a network interface, you must complete the installation procedure; see:

- "How to Install the Enterprise 250 Server" on page 44

Specifically, you must perform the following tasks:

- Set up a system console; see "About Setting Up a Console" on page 49
- Configure the Ethernet port; see "How to Configure the Standard Ethernet Interface" on page 196
- Attach the Ethernet port to a network; see "How to Attach a Twisted-Pair Ethernet (TPE) Cable" on page 200 or "How to Attach an MII Ethernet Transceiver" on page 202
- Power on the system; see "How to Power On the System" on page 56

---

**Note** - To boot the system over an Ethernet network, it is necessary that there be a bootable image for Sun4u architecture somewhere on the network. For details, see the installation instructions accompanying your Solaris software.

---

## What to Do

1. At the `ok` prompt, enter either of the following commands:

a. To load the operating system into the server's volatile memory, enter:

```
ok boot net
```

---

**Note** - Because the operating system is only in volatile memory, it is not retained across power cycles.

---

b. To install the operating system onto the server's internal system disk, enter:

```
ok boot net - install
```

Both commands boot the system, and the system console displays the system prompt.

## What Next

If you want to use the main logic board Ethernet interface as the default boot device, you must change the value of certain OpenBoot parameters. For more information, see *OpenBoot 3.x Command Reference Manual* in the *Solaris System Administrator AnswerBook* for your specific Solaris release.

---

# How to Boot the System Using a PCI-Based Ethernet Interface

## Before You Begin

Before you can boot the system over a network interface, you must complete the installation procedure; see:

- “How to Install the Enterprise 250 Server” on page 44

Specifically, you must perform the following tasks:

- Set up a system console; see “About Setting Up a Console” on page 49
- Configure the PCI-based Ethernet port; see “How to Add an Ethernet Interface” on page 198
- Attach the Ethernet port to a network; see “How to Attach a Twisted-Pair Ethernet (TPE) Cable” on page 200 or “How to Attach an MII Ethernet Transceiver” on page 202
- Power on the system; see “How to Power On the System” on page 56

---

**Note** - To boot the system over an Ethernet network, it is necessary that there be a bootable image for Sun4u architecture somewhere on the network. For details, see the installation instructions accompanying your Solaris software.

---

## What to Do

1. At the `ok` prompt, enter:

```
ok show-devs
```

The `show-devs` command lists the system devices. It displays the full path name of the `hme` device, similar to the example below:

```
/pci@1f,4000/pci@5/SUNW,hme@0,1
```

2. Change the default net device. At the `ok` prompt, enter:

```
ok nvalias net
   hme_path
ok nvstore
```

where `hme_path` is the full path name of the `hme` device—in this example, `/pci@1f,4000/pci@5/SUNW,hme@0,1`.

3. Load and boot the operating system over the network interface. Enter either of the following commands:

- a. To load the operating system into the server’s volatile memory, enter:

```
ok boot net
```

---

**Note** - Because the operating system is only in volatile memory, it is not retained across power cycles.

---

- b. To install the operating system onto the server's internal system hard drive, enter:

```
ok boot net - install
```

Both commands boot the system, and the system console displays the system prompt.

## What Next

If you want to use this Ethernet interface as the default boot device, you must permanently change the value of the `boot-device` parameter. For more information, see:

- “How to Select the Boot Device” on page 207
- *OpenBoot 3.x Command Reference Manual* in the *Solaris System Administrator AnswerBook* for your specific Solaris release

---

# How to Select the Boot Device

## Before You Begin

Before you can select a boot device, you must complete the installation procedure; see:

- “How to Install the Enterprise 250 Server” on page 44

Specifically, you must perform the following tasks:

- Set up a system console; see “About Setting Up a Console” on page 49
- Power on the system; see “How to Power On the System” on page 56

If you want to boot across a network interface, then you must also perform the following tasks:

- Configure the Ethernet port; see “How to Configure the Standard Ethernet Interface” on page 196
- Attach the Ethernet port to a network; see “How to Attach a Twisted-Pair Ethernet (TPE) Cable” on page 200 or “How to Attach an MII Ethernet Transceiver” on page 202

The device that is used to boot the system is determined by the setting of an OpenBoot firmware configuration parameter called `boot-device`. The default setting of this parameter is `disk net`. Because of this setting, the firmware first

attempts to boot from the system hard drive, and if that fails, then from the main logic board Ethernet interface.

This procedure assumes that you are familiar with the OpenBoot firmware and that you know how to enter the OpenBoot environment. For more information about the OpenBoot firmware, see *OpenBoot 3.x Command Reference Manual* in the *Solaris System Administrator AnswerBook* for your specific Solaris release.

## What to Do

### 1. At the `ok` prompt, enter:

```
ok setenv boot-device  
   device-specifier
```

where the *device-specifier* is one of the following:

- `cdrom` – Selects the CD-ROM drive
- `disk` – Selects the hard disk
- `floppy` – Selects the 3.5-inch diskette drive
- `tape` – Selects the SCSI tape drive
- `net` – Selects the Ethernet interface on the main logic board
- *full path name* – Selects the Ethernet interface specified by the path name

---

**Note** - You can also specify the name of the program to be booted as well as the way the boot program operates. For more information, see *OpenBoot 3.x Command Reference Manual* in the *Solaris System Administrator AnswerBook* for your specific Solaris release.

---

If you want to select a network interface other than the system board Ethernet interface as the default boot device, you can determine the full path name of each interface, by entering:

```
ok show-devs
```

The `show-devs` command lists the system devices. It displays the full path name of each PCI device. An example of a path name is shown below:

```
/pci@1f,4000/pci@5/SUNW,hme@0,1
```

### 2. To reboot the system from the new boot device, enter:

```
ok reset
```

---

**Note** - You can also power cycle the system using the front panel keyswitch.

---

## What Next

For more information about using the OpenBoot firmware, see *OpenBoot 3.x Command Reference Manual* in the *Solaris System Administrator AnswerBook* for your specific Solaris release.

---

# About Disk Array Configurations and Concepts

The Solstice DiskSuite software designed for use with the system lets you configure the machine's internal disks in several configurations called *disk arrays*, which improve performance, capacity, and availability.

---

**Note** - Solstice DiskSuite and other software must be ordered separately.

---

This section describes some of the most popular and useful of those configurations, including:

- Disk concatenation
- Disk mirroring (RAID 1)
- Disk striping (RAID 0)
- Disk striping with parity (RAID 5)
- Hot spares
- Hot plug

The DiskSuite software creates *metadevices*—logical disk devices consisting of one or more physical disks or partitions from several disks. Once you use Solstice DiskSuite to create a metadevice, the operating system uses and maintains the metadevice as if it were a single device.

For instance, you can combine the three disks `c1t2d0s2`, `c1t3d0s2`, and `c1t4d0s2` into the metadevice `/dev/md/rdisk/d0`.

## Disk Concatenation

Disk concatenation is a method for increasing logical volume size beyond the capacity of one disk drive by creating one large metadvice from two or more smaller drives. This lets you create arbitrarily large partitions.

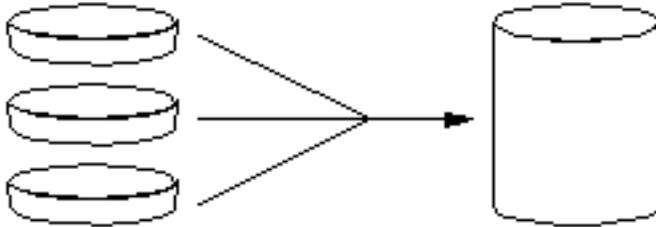


Figure 10-4

Using this method, the concatenated disks are filled with data sequentially, with the second disk being written to when no space remains on the first, the third when no room remains on the second, and so on.

## RAID 1: Disk Mirroring

Disk mirroring is a technique that uses data redundancy—two complete copies of all data stored on two separate disks—to protect against loss of data due to disk failure. One metadvice is created from two disks.



Figure 10-5

Whenever the operating system needs to write to the mirrored metadvice, both disks are updated. The disks are maintained at all times with exactly the same information. When the operating system needs to read from the mirrored metadvice, it reads from whichever disk is more readily accessible at the moment. The scheme is sometimes called *RAID 1*, where RAID stands for *Redundant Arrays of Inexpensive Disks*.

RAID 1 offers the highest level of data protection, but storage costs are high, since all data is stored twice.

## RAID 0: Disk Striping

Disk striping (sometimes called *RAID 0*) is a technique for increasing system throughput by using several disk drives in parallel. Whereas in non-striped disks the operating system writes a single block to a single disk, in a striped arrangement each block is divided and portions of the data are written to different disks.

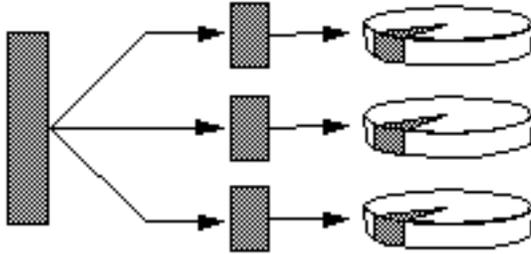


Figure 10-6

System performance using RAID 0 will be better than using RAID 1 or 5, but the possibility of data loss is greater because there is no way to retrieve or reconstruct data stored on a failed drive.

## RAID 5: Disk Striping With Parity

RAID Level 5 is an implementation of disk striping in which parity information is included with each disk write. The advantage of the technique is that if any one disk in a RAID 5 array fails, all the information on the failed drive can be reconstructed from the data and parity on the remaining disks.

System performance using RAID 5 will fall between that of RAID 0 and RAID 1, and all data loss is fully protected.

## Hot Spares

In a “hot spares” arrangement, one or more disk drives are installed in the system but are unused during normal operation. Should one of the active drives fail, disk write operations are automatically redirected to a hot spare disk and the failed disk drive is retired from operation.

## Hot Plug

The system's disk bays are designed to permit disk drive removal and insertion while the system is powered on. Hot-plug technology significantly increases the system's serviceability and availability, by providing the ability to:

- Add additional hardware dynamically to enable the system to handle an increasingly larger work load, perform load balancing, and improve performance of a running system.
- Remove/replace faulty hardware with minimal system service disruption.

For more information about hot-pluggable disk drives, see "About Internal Disk Drives" on page 83.

## For More Information

See the documentation supplied with the Solstice DiskSuite software.

## Using Storage Devices

---

Your system accommodates one internally mounted diskette drive and up to two internal CD-ROM or tape drives. This chapter contains basic information about how to use these devices.

*Tasks* covered in this chapter include:

- “How to Prevent Overwriting of a Diskette” on page 214
- “How to Allow Writing to a Diskette” on page 215
- “How to Insert a Diskette Into Its Drive” on page 216
- “How to Remove a Diskette From Its Drive” on page 217
- “How to Use `fdformat` to Format a New Diskette” on page 217
- “How to Use `fdformat` to Reformat a Used Diskette” on page 218
- “How to Copy Files To and From a Diskette” on page 220
- “How to Insert a Compact Disc Into the Drive” on page 220
- “How to Eject a Compact Disc With Software Commands” on page 222
- “How to Eject a Compact Disc Manually” on page 223
- “How to Eject a Compact Disc in an Emergency” on page 224
- “How to Remove a Tape Cartridge” on page 228
- “How to Control the Tape Drive” on page 229
- “How to Clean the Tape Drive ” on page 229

*Other information* covered in this chapter includes:

- “About the Tape Drive and Tape Cartridges” on page 225
- “What If Your CD Drive Can’t Read a CD?” on page 230


---

# How to Prevent Overwriting of a Diskette

You can physically protect a diskette (write-protect it) so that data cannot be erased or overwritten. Once you have write-protected a diskette, additional information cannot be saved on it. When you no longer want to protect the information on a diskette, you can change it back to write-enable status and once again write and store information on it.

## What to Do

1. Turn the diskette upside-down and find the write-protect tab.
2. Move the tab toward the diskette's edge until you can see through the notch.  
Use a ballpoint pen or other implement. When you can see through the notch, the diskette is write-protected.

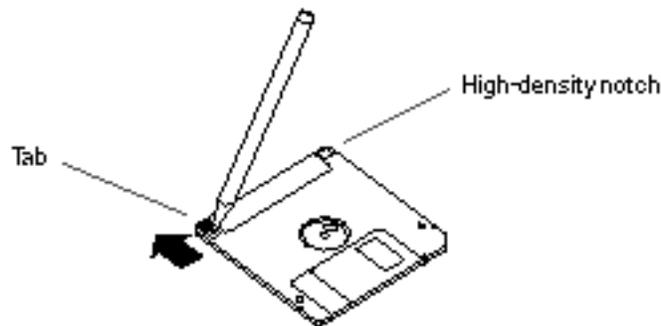

*Figure 11-1*

## What Next

If you want to change the diskette to write-enable status, see:

- “How to Allow Writing to a Diskette” on page 215


---

# How to Allow Writing to a Diskette

You can physically protect a diskette (write-protect it) so that data cannot be erased or overwritten. Once you have write-protected a diskette, additional information cannot be saved on it. When you no longer want to protect the information on a diskette, you can change it back to write-enable status and once again write and store information on it.

## What to Do

1. **Turn the diskette upside-down and find the write-protect tab.**
2. **Push the tab away from the diskette's edge as far as it will go.**  
Use a ballpoint pen or other implement. When the notch is covered, the diskette is write-enabled.

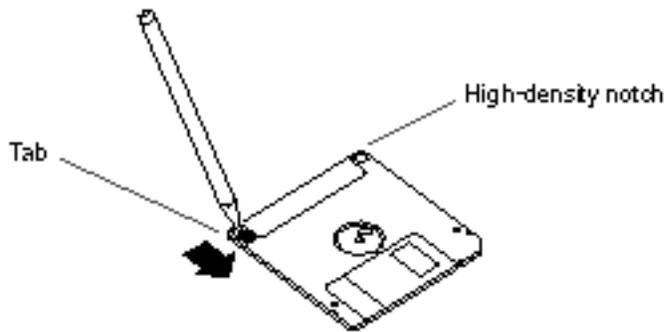

*Figure 11-2*

## What Next

You can now write to the diskette. If the diskette hasn't been formatted, see:

- “How to Use `fdformat` to Format a New Diskette” on page 217

If you want to change the diskette to write-protect status, see:


- “How to Prevent Overwriting of a Diskette” on page 214

---

# How to Insert a Diskette Into Its Drive

## What to Do

1. Insert the diskette, with the label side up, into the drive.
2. Push firmly until you feel the diskette click into position.

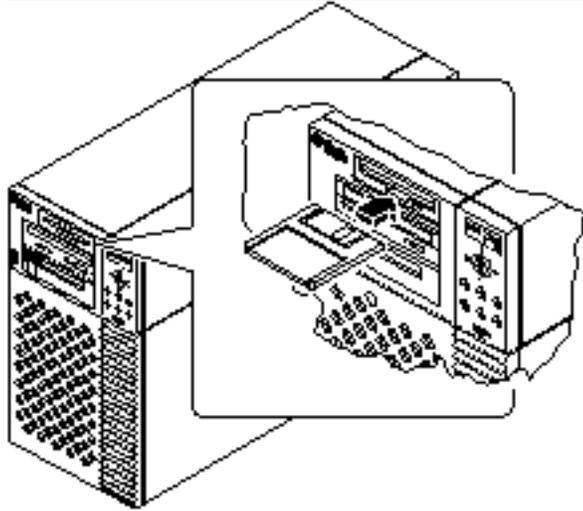

*Figure 11-3*

## What Next

For instructions on removing a diskette from the drive, see:

- “How to Remove a Diskette From Its Drive” on page 217.

---

# How to Remove a Diskette From Its Drive

## Before You Begin

If your system is a server set up without a local console, you need to set up a console on it in order to issue software commands. See “About Setting Up a Console” on page 49.

## What to Do

1. **From the console device, type `eject`**

The operating system unmounts the file system on the diskette.

2. **Press the Eject button on the front of the diskette drive.**

The diskette unseats itself and pops halfway out of the drive. Pull it from the diskette drive.

---

# How to Use `fdformat` to Format a New Diskette

## Before You Begin

You must format new diskettes before you use them. The simplest way to format, list the contents of, read, copy, or eject a diskette is to use the File Manager tool. Refer to *Solaris User's Guide* for information about File Manager.

If the server is set up without a local console, you need to set up a console on it in order to issue software commands; see:

- “About Setting Up a Console” on page 49

If the diskette is write-protected, you need to remove the write protection; see:

- “How to Allow Writing to a Diskette” on page 215

# What to Do

1. Insert the diskette into the diskette drive.

2. From the console device, enter the `fdformat` command.

Type the appropriate command, as listed for your diskette. It takes a minute or two for the system to format the diskette.

TABLE 11-1

Diskette Density	Storage Capacity (Formatted)	Command
High Density (HD)	1.44 Mbytes	<code>fdformat</code>
Medium Density (MD)	1.2 Mbytes	<code>fdformat -m</code>
Low Density (2DD)	720 Kbytes	<code>fdformat -l</code>

You can now write to and read from the diskette.

---

## How to Use `fdformat` to Reformat a Used Diskette

### Before You Begin

The simplest way to format, list the contents of, read, copy, or eject a diskette is to use the File Manager tool. Refer to *Solaris User's Guide* for information about File Manager.



---

**Caution** - Formatting erases everything on a diskette. Do not format a used diskette unless you want to erase its contents.

---

If the server is set up without a local console, you need to set up a console on it in order to issue software commands; see:

- “About Setting Up a Console” on page 49

If the diskette is write-protected, you have to remove the write protection; see:

- “How to Allow Writing to a Diskette” on page 215

## What to Do

1. **Insert a diskette into the diskette drive.**

2. **From the console device, enter the `fdformat` command.**

Type the appropriate command, as listed for your diskette. It takes a minute or two for the system to format the diskette.

TABLE 11-2

Diskette Density	Storage Capacity (Formatted)	Command
High Density (HD)	1.44 Mbytes	<code>fdformat -U</code>
Medium Density (MD)	1.2 Mbytes	<code>fdformat -mU</code>
Low Density (2DD)	720 Kbytes	<code>fdformat -lU</code>

You can now write to and read from the diskette.

---

## How to Copy Files To and From a Diskette

### What to Do

For instructions on how to copy files and file systems to and from a diskette, see *Solaris 2.x Handbook for SMCC Peripherals* and *Solaris User's Guide*.

---

## How to Insert a Compact Disc Into the Drive

### What to Do

1. **Push the Eject button on the CD-ROM drive to release the drive tray.**
2. **Place a CD into the drive tray, label side up.**

A compact disc is a single-sided storage medium. Place it into the tray with the label side up, as shown.

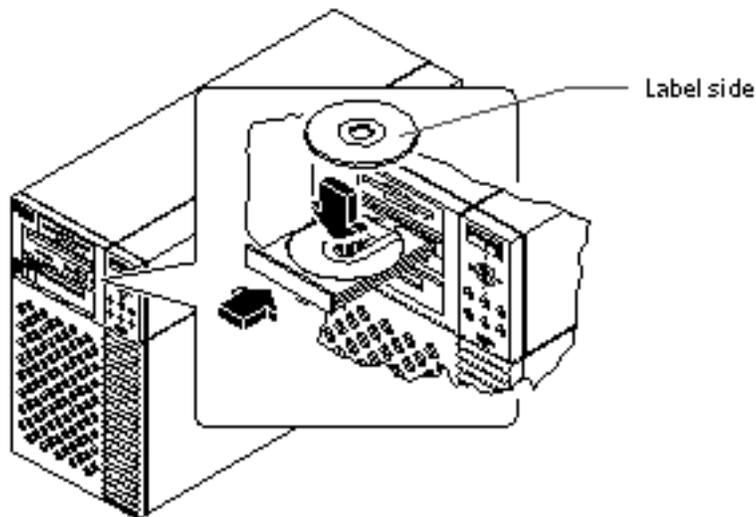


Figure 11-4

**3. Gently push the tray back into the drive.**

The CD drive has an automated closing mechanism that retracts the tray into the drive.

## What Next

You can eject a compact disc from the drive by using one of three methods:

- With software commands; see “How to Eject a Compact Disc With Software Commands” on page 222
- Manually; see “How to Eject a Compact Disc Manually” on page 223
- Using an emergency procedure; see “How to Eject a Compact Disc in an Emergency” on page 224

---

# How to Eject a Compact Disc With Software Commands

## Before You Begin

If the server is set up without a local console, you need to set up a console on it in order to issue software commands; see:

- “About Setting Up a Console” on page 49

## What to Do

### 1. Kill processes accessing the CD-ROM drive, if necessary.

The disc will not eject while the drive is in use. To kill any processes accessing the CD-ROM drive, become superuser and type the following:

```
% su
Password:
# fuser -k /cdrom/cdrom0
```

---

**Note** - You should warn users before abruptly halting processes. The command `fuser -u /cdrom/cdrom0` helps you identify who's accessing the CD-ROM drive. Refer to the *Solaris 2.x System Administrator's Guide* for more information about the `fuser` command.

---

### 2. From the console device, enter:

```
% eject cdrom0
```

The CD-ROM disc should eject.

## What Next

You can also eject a compact disc by using one of these methods:

- Manually; see “How to Eject a Compact Disc Manually” on page 223
- Using an emergency procedure; see “How to Eject a Compact Disc in an Emergency” on page 224

---

# How to Eject a Compact Disc Manually

## What to Do

### 1. Kill processes accessing the CD-ROM drive, if necessary.

The front panel Eject button will not eject a disc while the disc is in use. To kill any processes accessing the CD-ROM drive, become superuser and type the following:

```
% su
Password:
# fuser -k /cdrom/cdrom0
```

---

**Note** - You should warn users before abruptly halting processes. The command `fuser -u /cdrom/cdrom0` helps you identify who's accessing the CD-ROM drive. Refer to the *Solaris 2.x System Administrator's Guide* for more information about the `fuser` command.

---

### 2. Press the Eject button on the front panel.

The drive ejects the CD tray and you can remove the disc.

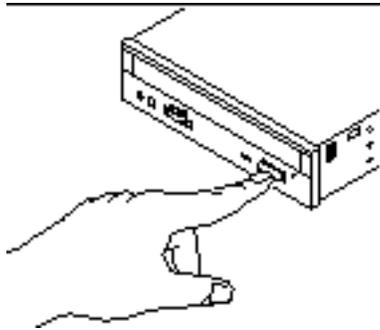


Figure 11-5

## What Next

You can also eject a compact disc by using one of these methods:

- With software commands; see “How to Eject a Compact Disc With Software Commands” on page 222

- Using an emergency procedure; see “How to Eject a Compact Disc in an Emergency” on page 224

---

# How to Eject a Compact Disc in an Emergency

## Before You Begin

Use the emergency ejection procedure *only in emergency situations*, for instance, if you unmounted the disc and the Eject button does not function.

## What to Do

---



**Caution** - If this procedure is used while a disc is mounted, you can degrade or destroy data in your system.

---

- 1. Turn off the power to your system.**  
See “How to Power Off the System” on page 55.
- 2. Unfold and straighten one end of a large wire paper clip.**
- 3. Insert the straightened end of the clip into the emergency eject hole and press firmly.**  
Pull the tray from the drive after the clip is inserted into the hole.

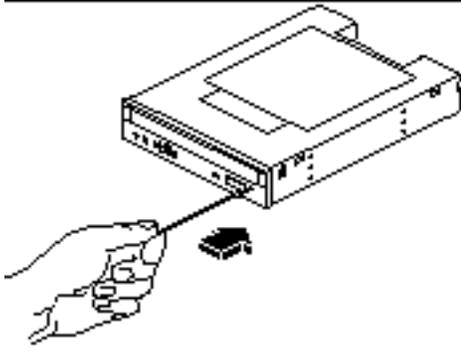


Figure 11-6

## What Next

You can also eject a compact disc by using one of these methods:

- With software commands; see “How to Eject a Compact Disc With Software Commands” on page 222
- Manually; see “How to Eject a Compact Disc Manually” on page 223

---

## About the Tape Drive and Tape Cartridges

There are a number of different tape drives offered by Sun Microsystems for your system. Each tape drive is shipped with a specification sheet that contains the following information:

- Type of cartridges that can be used with the drive
- Cartridge storage capacity
- Handling and storage information
- Physical characteristics
- Power requirements
- Cleaning instructions
- Description of controls, indicators, and jumper setting

## Handling and Storing Tape Cartridges

The following general handling and storage information applies to cartridges for any of the tape drives offered for your system:

- Keep cartridges away from anything magnetic.
- Store cartridges in a dust-free environment.
- Keep cartridges away from direct sunlight and sources of heat, cold, or humidity. Constant room temperature and 50% humidity is recommended.
- Do not touch the surface of the tape.

## Thermal Conditioning


To ensure proper thermal conditioning, keep the tape cartridge at the same temperature as the drive for 24 hours. (This applies to cartridges for any of the tape drives offered for your system.)

---

## How to Insert a Tape Cartridge

### What to Do

1. **Verify that the tape cartridge write-protect switch is set correctly.**  
If the lock window is open, the tape is write-protected.

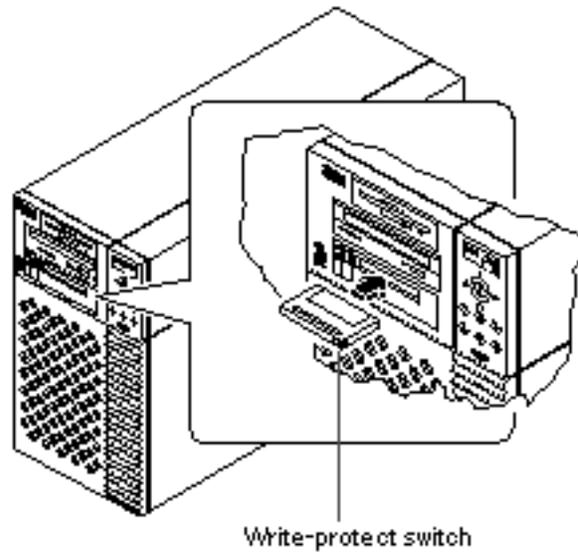

*Figure 11-7*

2. **Insert the cartridge into the drive label side up.**
3. **Push gently on the cartridge until it is pulled into the drive.**

## What Next

To remove a tape cartridge from the drive, see:

- “How to Remove a Tape Cartridge” on page 228.

---

# How to Remove a Tape Cartridge

## Before You Begin

---

**Note** - The information in this section applies to a DDS-3 tape drive. If you have a different type of tape drive installed, see the specifications shipped with the drive for information.

---

## What to Do

**1. Check that there is no drive activity.**


The green activity LED should be unlit. A flashing LED indicates drive activity.

---



**Caution** - Do not eject the tape cartridge when the drive is active, or you may incur data loss or equipment damage.

---

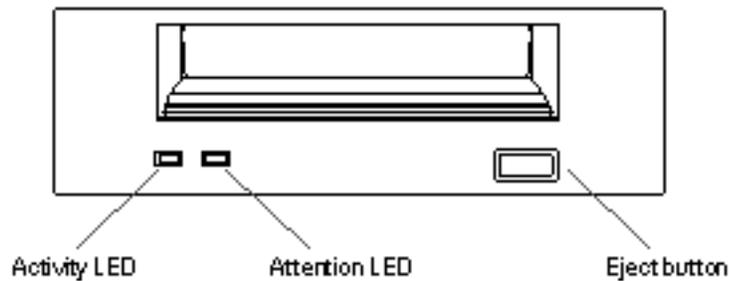

*Figure 11-8*

**2. Push the Eject button and remove the tape cartridge.**

## What Next

To insert a cartridge into the drive, see:

- “How to Insert a Tape Cartridge” on page 226

---

## How to Control the Tape Drive

### What to Do

For information about software commands needed to read and write data with your tape drive, refer to the *Solaris 2.x Handbook for SMCC Peripherals* or the *Solaris User's Guide*.

---

## How to Clean the Tape Drive

### Before You Begin

Observe these rules about *when* to clean a tape drive:

1. Clean the drive after the first four hours of use with a new tape.
2. After that, clean the tape drive after every 25 hours of use to maintain reliable operation.
3. Clean the drive twice as often if you use it in a dusty environment or operate it infrequently.

### What to Do

1. **Insert a cleaning cartridge into the drive.**

The tape should play for a short while, and then eject automatically.

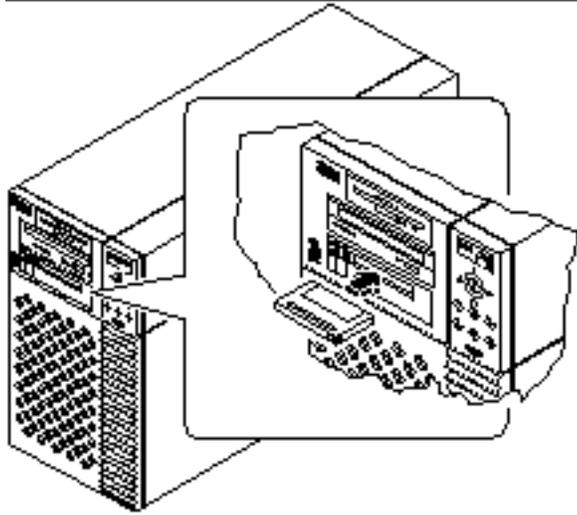


Figure 11-9

Do not use any cartridge other than a DDS-approved cleaning tape cartridge to clean your tape drive.

---

## What If Your CD Drive Can't Read a CD?

### Before You Begin

Eject the compact disc and remove it from the tray; see "How to Eject a Compact Disc With Software Commands" on page 222.

---

**Note** - If the drive cannot read a disc, you may have a dusty or dirty disc.

---

### What to Do

1. **Clean the disc with compressed air.**

Compressed air can remove most accumulations of dust and large dirt particles.

2. If spraying with compressed air *fails* to remove the dirt on a disc, wipe the disc using a soft, clean, lint-free, *dry* cloth.
  - Wipe the non-labeled side of the disc *radially* from the center to the outside.
  - Do *not* wipe in a circular motion.
  - Wipe only the affected areas of the disc.

The figure below shows the correct and incorrect ways to clean a compact disc.

---

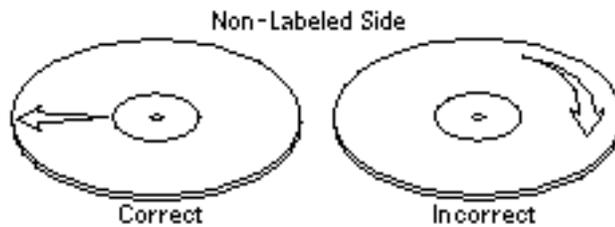


Figure 11-10

## What Next

To insert the compact disc into the drive, see:

- “How to Insert a Compact Disc Into the Drive” on page 220.



## Diagnostics and Troubleshooting

---

This chapter covers the diagnostic tools available for the system, and how to use these tools. It also provides information about error indications and software commands to help determine what component of the system needs to be replaced.

*Tasks* covered in this chapter include:

- “How to Use POST Diagnostics” on page 236
- “How to Use OpenBoot Diagnostics (OBDiag)” on page 248
- “How to Set the Diagnostic Level for POST and OBDiag” on page 250
- “How to Check Whether SunVTS Software Is Installed” on page 252
- “How to Use SunVTS Software” on page 253

*Other information* covered in this chapter includes:

- “About Diagnostic Tools” on page 234
- “About Power-On Self-Test (POST) Diagnostics” on page 235
- “About OpenBoot Diagnostics (OBDiag)” on page 239
- “About SunVTS Software” on page 251
- “About Solstice SyMON Software” on page 255
- “About Remote System Control (RSC)” on page 256
- “About Troubleshooting Your System” on page 257
- “About Diagnosing Specific Problems” on page 267

---

# About Diagnostic Tools

The system provides both firmware-based and software-based diagnostic tools to help you identify and isolate hardware problems. These tools include:

- Power-on self-test (POST) diagnostics
- OpenBoot Diagnostics (OBDiag)
- SunVTS™ software
- Solstice SyMON software
- Remote System Control (RSC) software

POST diagnostics verify the core functionality of the system, including the main logic board, system memory, and any on-board I/O devices. You can run POST even if the system is unable to boot. For more information about POST, see “About Power-On Self-Test (POST) Diagnostics” on page 235 and “How to Use POST Diagnostics” on page 236.

OBDiag tests focus on system I/O and peripheral devices. Like POST, you can run OBDiag even if the system is unable to boot. For more information about OBDiag, see “About OpenBoot Diagnostics (OBDiag)” on page 239 and “How to Use OpenBoot Diagnostics (OBDiag)” on page 248.

The SunVTS system exerciser is a graphics-oriented UNIX application that permits the continuous exercising of system resources and internal and external peripheral equipment. For more information about SunVTS, see “About SunVTS Software” on page 251.

Solstice SyMON allows you to monitor system hardware status and operating system performance of your server. For information about SyMON, see “About Solstice SyMON Software” on page 255.

Remote System Control (RSC) is a server management tool that provides remote system administration for geographically distributed or physically inaccessible systems. The RSC software works with the System Service Processor (SSP) on the Enterprise 250 main logic board. For more information about RSC and SSP, see “About Remote System Control (RSC)” on page 256.

Which method or tool you use to diagnose system problems depends on the nature of those problems:

- If your machine isn't able to boot its operating system software, you need to run POST and OBDiag tests.
- If your machine is “healthy” enough to start up and load its operating system software, you can use Solstice SyMON software and SunVTS software to diagnose system problems.
- If your machine is at a remote location, use RSC to diagnose problems remotely.

The following chart provides an overview of when to use the various diagnostic tools to diagnose hardware problems.

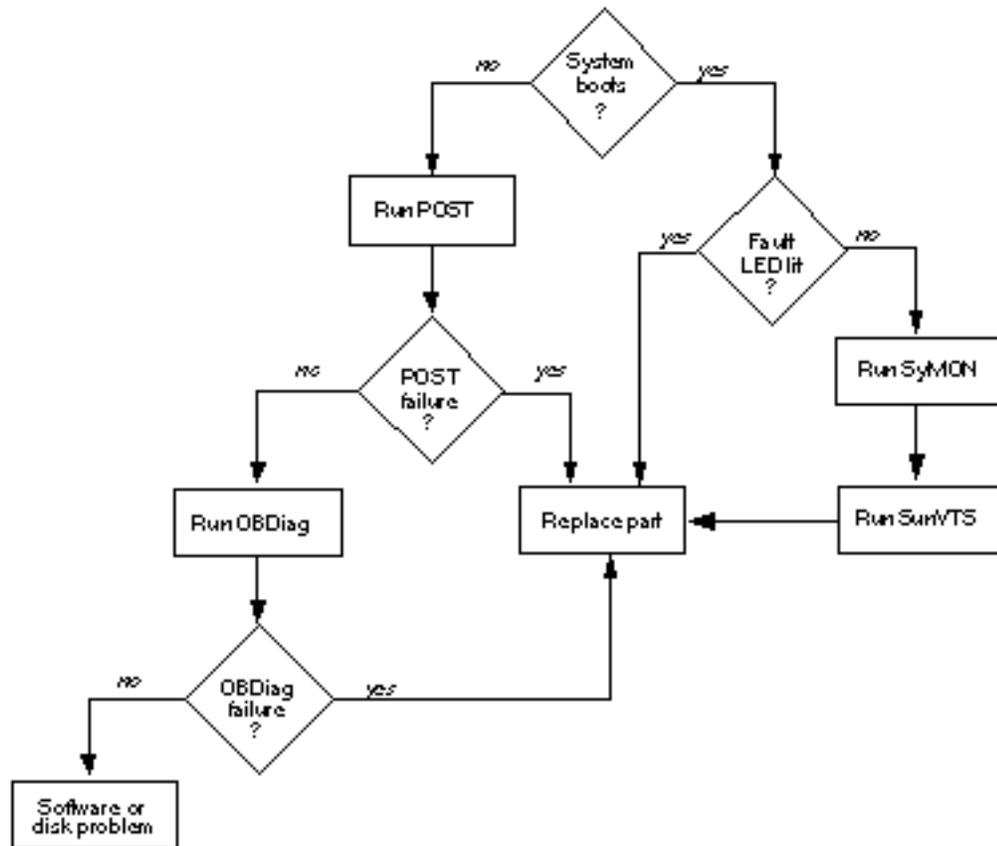


Figure 12-1

---

## About Power-On Self-Test (POST) Diagnostics

The POST diagnostic code resides in flash PROM on the main logic board. It runs whenever the system is turned on or when a system reset is issued. POST tests the following system components:

- CPU modules
- Memory modules
- NVRAM
- Main logic board

POST reports its test results via LEDs located on the system keyboard and on the system front panel. See “Error Indications” on page 257 for more information about LEDs and error messages.

POST displays detailed diagnostic and error messages on a local terminal, if one is attached to the system’s serial port A. You can also choose to display POST output remotely on a Remote System Control (RSC) console.

The System Service Processor (SSP) runs its own POST diagnostics, separate from the main POST diagnostics. To view detailed diagnostic and error messages from SSP POST, you must attach a local terminal to the SSP (RSC) serial port prior to running SSP POST.

For more information about RSC and the System Service Processor, see “About Remote System Control (RSC)” on page 256. For information about running POST, see “How to Use POST Diagnostics” on page 236.

---

## How to Use POST Diagnostics

When you turn on the system power, POST diagnostics run automatically if any of the following conditions apply:

- The OpenBoot PROM variable `diag-switch?` is set to `true` when you power on the system.
- You hold down the keyboard’s Stop and D keys as you power on the system.
- You power on the system by turning the front panel keyswitch to the Diagnostics position.

In the event of an automatic system reset, POST diagnostics run under either of the following conditions:

- The `diag-switch?` variable is set to `true` and the `diag-trigger` variable is set to `error-reset` or `soft-reset`.
- The front panel keyswitch is in the Diagnostics position and the `diag-trigger` variable is set to `error-reset` or `soft-reset`.

For information about the various keyswitch positions, see “About the Status and Control Panel” on page 6.

## Before You Begin

You can choose to view POST diagnostic and error messages locally on an attached terminal or remotely on an RSC console.

To view POST diagnostic messages on the local system, you need to connect an alphanumeric terminal or establish a `tip` connection to another Sun system. For more information, see “About Setting Up a Console” on page 49.

To view POST diagnostic messages remotely on an RSC console, you need to configure the RSC software before starting POST. For information about using the RSC software, see the *Remote System Control (RSC) User's Guide*.

---

**Note** - By default, POST output is displayed locally on an attached terminal or through a `tip` connection. If your server has been reconfigured to display POST output on an RSC console, POST results will not display locally. To redirect POST output to the local system, you must issue the OpenBoot PROM command `diag-output-to ttya` from the RSC console. See the *Remote System Control (RSC) User's Guide* for additional details.

---

You can choose to run an abbreviated POST with concise error and status reporting or run an extensive POST with more detailed messages. For more information, see “How to Set the Diagnostic Level for POST and OBdiag” on page 250.

## What to Do

### 1. Ensure that the front panel keyswitch is in the Standby position.

For descriptions of the various keyswitch settings, see “About the Status and Control Panel” on page 6.

### 2. Turn the keyswitch to the Diagnostics position.

The system runs the POST diagnostics. POST displays status and error messages on the system console or on an RSC console, if the RSC software is configured to display POST output. For more information, see the “Results” section below.

Upon successful completion of POST, the system will run OBdiag. For more information about OBdiag, see “About OpenBoot Diagnostics (OBdiag)” on page 239 and “How to Use OpenBoot Diagnostics (OBdiag)” on page 248.

## Results

While POST is running, you can observe its progress and any error indications in the following locations:

- System console or Remote System Control (RSC) console
- Front panel fault LEDs

- Keyboard LEDs (if a keyboard is present)

You can also obtain a summary of POST results by using the `.post` and `.rsc` commands.

## Observing POST in Progress

As POST runs, it displays detailed diagnostic status messages on the system console (or on an RSC console, if POST output has been redirected to an RSC console). If POST detects an error, it displays an error message on either the system console or the RSC console that indicates the failing part. A sample error message is provided below:

```
Power On Self Test Failed. Cause: DIMM U0702 or System Board
ok
```

POST status and error conditions are indicated by the general fault LED on the system front panel. The LED blinks slowly to indicate that POST is running. It remains lit if POST detects a fault.

If a Sun Type-5 keyboard is attached, POST status and error indications are also displayed via the four LEDs on the keyboard. When POST starts, all four keyboard LEDs blink on and off simultaneously. After that, the Caps Lock LED blinks slowly to indicate POST is running. If an error is detected, the pattern of the lit LEDs provides an error indication. See “Error Indications” on page 257 for more information.

If POST detects an error condition that prevents the system from booting, it will halt operation and display the `ok` prompt. The last message displayed by POST prior to the `ok` prompt indicates which part you need to replace.

## Obtaining a Summary of POST Results

Use the `.post` command at the `ok` prompt to view a summary of POST results.

```
ok .post
System status: OK
CPU0:          OK
CPU1:          OK
SC-MP:         OK
Psycho@1f:     OK
Cheerio:       OK
SCSI:          OK
Mem Bank0:     OK
Mem Bank1:     OK
Mem Bank2:     OK
Mem Bank3:     OK
PROM:          OK
NVRAM:         OK
TTY:           OK
SuperIO:       OK
```

PCI Slots: OK

Use the `.rsc` command at the `ok` prompt to view a summary of SSP POST results.

```
ok .rsc
SEEPROM: OK
I2C: OK
Ethernet: OK
Ethernet (2): OK
CPU: OK
RAM: OK
Console: OK
RSC Console line: OK
RSC Control line: OK
FlashRAM Boot CRC: OK
FlashRAM Main CRC: OK
RSC Console Link: OK
Console Selection: ttya
```

---

## About OpenBoot Diagnostics (OBDiag)

OpenBoot Diagnostics (OBDiag) reside in flash PROM on the main logic board. OBDiag can isolate errors in the following system components:

- Main logic board
- Diskette drive
- CD-ROM drive
- Tape drive
- Disk drives
- Any option card that contains an on-board self-test

On the main logic board, OBDiag tests not only the main logic board but also its interfaces:

- PCI
- SCSI
- Ethernet
- Serial
- Parallel
- Keyboard/mouse
- RSC/SSP

OBDDiag reports test results via the LEDs located on the system front panel. See “Error Indications” on page 257 for more information about LEDs and error messages.

OBDDiag displays detailed diagnostic and error messages on a local console or terminal, if one is attached to system. Alternatively, you can display OBDDiag output remotely on a Remote System Control (RSC) console. For more information about RSC, see “About Remote System Control (RSC)” on page 256.

OBDDiag tests run automatically under certain conditions. You can also run OBDDiag interactively from the system ok prompt. For information about running OBDDiag, see “How to Use OpenBoot Diagnostics (OBDDiag)” on page 248.

When you run OBDDiag interactively from the ok prompt, you invoke the OBDDiag menu, which lets you select which tests you want to perform. For information about the OBDDiag menu, see “OBDDiag Menu” on page 240.

The system also provides configuration variables that you can set to affect the operation of the OBDDiag tests. For information about the configuration variables, see “OBDDiag Configuration Variables” on page 242.

## OBDDiag Menu

The OBDDiag menu is created dynamically whenever you invoke OBDDiag in interactive mode. OBDDiag determines whether any optional devices are installed in the system. If the device has an on-board self-test, OBDDiag incorporates the test name into the list of menu entries. It sorts the menu entries in alphabetical order and numbers them accordingly. Therefore, the menu entries may vary from system to system, depending on the system configuration.

The OBDDiag menu always displays the core tests that exercise parts of the basic system. These tests include `envctrltwo`, `ebus`, `ecpp`, `eeprom`, `fdthree`, `network`, `scsi@3`, `scsi@3,1`, `se`, `su`, and `rsc`. For information about each test, see “OBDDiag Test Descriptions” on page 244. For a description of the interactive commands for running OBDDiag, see “OBDDiag Commands” on page 241.

Once you invoke OBDDiag as described in “How to Use OpenBoot Diagnostics (OBDDiag)” on page 248, the OBDDiag menu is displayed.

OBDDiag - Version X.X		
1 <code>SUNW,envctrl:ltwo&amp;14,60</code>	2 <code>ebus&amp;1</code>	3 <code>ecpp&amp;14,3043bc</code>
4 <code>eepram&amp;14,0</code>	5 <code>fdthree&amp;14,3023f0</code>	6 <code>network&amp;1,1</code>
7 <code>sasi&amp;2</code>	8 <code>sasi&amp;2,1</code>	9 <code>se&amp;14,400000</code>
10 <code>se&amp;14,306f8</code>	11 <code>su&amp;14,3083f8</code>	12 <code>rsc</code>
Commands: test test-all except help what printenvs setenv exit		

command>

Figure 12-2

## OBDDiag Commands

The following table provides information about the OBDDiag interactive commands that are available at the OBDDiag `command` prompt:

TABLE 12-1

Command	Description
<code>exit</code>	Exits the OBDDiag tool and returns to the <code>ok</code> prompt.
<code>help</code>	Displays a brief description of each command and OpenBoot PROM variable used to run OBDDiag.
<code>printenvs</code>	Displays the value of all of the OBDDiag variables. (See “OBDDiag Configuration Variables” on page 242 for information about settings.)
<code>setenv variable value</code>	Sets the value for an OpenBoot PROM configuration variable. (See “OBDDiag Configuration Variables” on page 242 for information about settings.)
<code>test-all</code>	Runs all of the tests displayed in the menu.
<code>test #, #,</code>	Runs only the test(s) identified by menu entry number (#) in the command line.

**TABLE 12-1** (continued)

Command	Description
<code>except #,#,</code>	Run all test(s) except those identified by menu entry number (#) in the command line.
<code>what #,#,</code>	Displays selected properties of the device(s) identified by menu entry number (#) in the command line. The exact information provided varies according to device type.

## OBDiag Configuration Variables

The following table provides information about OpenBoot PROM configuration variables that affect the operation of OBDiag. Use the `printenvs` command to show current values and the `setenv` command to set or change a value. Both commands are described in “OBDiag Commands” on page 241.

**TABLE 12-2**

Variable	Setting	Description	Default
<code>diag-level</code>	<code>off</code>	No tests are run at power up.	
	<code>min</code>	Performs minimal testing of core functionality.	<code>min</code>
	<code>med</code>	Performs functional tests for all system functions.	
	<code>max</code>	Runs exhaustive tests for all functions except external loopbacks. External loopback tests are run only if <code>diag-targets</code> is set to <code>loopback</code> , <code>loopback3</code> , <code>device&amp;loopback</code> , or <code>device&amp;loopback,3</code> .	
<code>diag-continue?</code>	<code>false</code>	Stops testing within a test routine and prints a message as soon as an error is detected. OBDiag then skips to the next test routine in the sequence.	<code>false</code>

TABLE 12-2 (continued)

Variable	Setting	Description	Default
	true	Causes OBDiag to run all subtests within a test, even if an error is detected.	
diag-passes	<i>n</i>	Repeats each test the number of times specified by <i>n</i> . Works with the test, except, and test-all commands.	1
diag-targets	none	Runs internal tests only, no I/O testing.	none
	iopath	Extends testing to external device interfaces (connectors/cables).	
	media	Extends testing to external devices and media, if present.	
	device	Invokes built-in self-test (BIST) on PCI cards and external devices.	
	loopback	Runs external loopback tests on the parallel, serial, keyboard, mouse, TPE, and RSC serial ports.	
	loopbacks	Not for use on Enterprise 250 servers.	
	loopback2	Not for use on Enterprise 250 servers.	
	loopback3	Runs external loopback tests on the RSC Ethernet port	
	nomem	Performs tests without testing system memory.	
	device&loopback	Runs built-in self-test (BIST) on PCI cards and external devices, then runs external loopback tests on the parallel, serial, keyboard, mouse, TPE, and RSC serial ports.	
	device&loopbacks	Not for use on Enterprise 250 servers.	

TABLE 12-2 (continued)

Variable	Setting	Description	Default
	device&loopback	Runs built-in self-test (BIST) on PCI cards and external devices, then runs external loopback tests on the parallel, serial, keyboard, mouse, TPE, RSC serial, and RSC Ethernet ports.	
diag-trigger	power-reset	Runs diagnostics only on power-on resets.	power-reset
	error-reset	Runs diagnostics only on power-on resets, fatal hardware errors, and watchdog reset events.	
	soft-reset	Runs diagnostics on all resets (except XIR).	
diag-verbosity	0	Prints one line that indicates the device being tested and its pass/fail status.	0
	1	Prints more detailed test status, which varies in content from test to test.	
	2	Prints subtest names.	
	4	Prints debug messages.	
	8	Prints back trace of callers on error.	

## OBDiag Test Descriptions

The following table provides information about the tests available through OBDiag. It provides the test name, a brief description of the test, and any special considerations involved in running the test.

TABLE 12-3

Test Name	Description	Special Considerations
SUNW,envctrltwo @14,60000	Verifies that the fans are operational. Checks that the temperature in the enclosure and at the CPUs does not exceed the maximum allowable range. Also tests the disk and front panel LEDs.	
ebus@1	Tests the on-board ASIC that interfaces the following devices with the PCI bus: parallel port, serial port, keyboard, mouse, diskette drive, NVRAM, and the environmental monitoring and control system.	
ecpp @14,3043bc	Tests parallel port I/O logic, including internal and external loopback tests.	To run external loopback tests, you must have a special passive loopback connector attached to the parallel port. The variable <code>diag-targets</code> must be set to <code>loopback, device&amp;loopback, or device&amp;loopback, 3</code> .  The Sun part number for the parallel port loopback connector is 501-2965-01.
eprom@14,0	Tests the NVRAM functionality.	
fdthree @14,3023f0	Tests diskette drive control logic and the operation of the drive. The test does not differentiate among a drive, media, or main logic board error; if any of these fail, it reports the diskette drive as the FRU.	A formatted diskette must be inserted into the drive.
network@1,1	Tests the on-board Ethernet logic, including internal and external loopback tests.	To run external loopback tests on the TPE port, you must have a TPE loopback connector attached to the TPE port. The variable <code>diag-targets</code> must be set to <code>loopback, device&amp;loopback, or device&amp;loopback, 3</code> .  The Sun part number for the TPE loopback connector is 501-4689-01.

TABLE 12-3 (continued)

Test Name	Description	Special Considerations
scsi@3 <sup>1</sup>	Tests the on-board SCSI controller and SCSI bus subsystem for internal disk drives and removable media devices. Checks associated registers and performs a DMA transfer.	
scsi@3,1	Tests the main logic board external SCSI interface. Checks associated registers and performs a DMA transfer.	
se@14,40000	Tests serial port control and I/O logic, including internal and external loopback tests. The test checks I/O logic only if the external loopback test is enabled.	<p>Port A tests are not run if ttya is being used as the input/output device.</p> <p>To run external loopback tests, you must have a special passive loopback connector attached to each serial port, and the variable <code>diag-targets</code> must be set to <code>loopback, device&amp;loopback, or device&amp;loopback, 3</code>.</p> <p>There is one passive connector available for this test: Sun part number 501-4205-01. Use 501-4205-01 when ports A and B are not attached to external devices.</p>
su@14,3062f8	Tests keyboard control and input logic, including internal and external loopback tests.	<p>Keyboard tests run only when a keyboard is used as the input device.</p> <p>To run external loopback tests, you must have a special passive loopback connector attached to the keyboard/mouse port. The variable <code>diag-targets</code> must be set to <code>loopback, device&amp;loopback, or device&amp;loopback, 3</code>.</p> <p>The Sun part number for the loopback connector is 501-4690-01.</p>

TABLE 12-3 (continued)

Test Name	Description	Special Considerations
su@14,3083f8	Tests mouse control and input logic, including internal and external loopback tests.	<p>Mouse tests are not run if a keyboard is used as an input device.</p> <p>To run external loopback tests, you must have a special passive loopback connector attached to the keyboard/mouse port, the variable <code>diag-targets</code> must be set to <code>loopback</code>, <code>device&amp;loopback</code>, or <code>device&amp;loopback,3</code>.</p> <p>The Sun part number for the loopback connector is 501-4690-01.</p>
rsc	Tests RSC (SSP) hardware, including RSC serial and Ethernet ports. For additional details, see "About Remote System Control (RSC)" on page 256.	<p>This test is not run if RSC is being used as the console device.</p> <p>To run external loopback tests on the RSC Ethernet port, the port must be connected to a 10-Mbps Ethernet network. The variable <code>diag-targets</code> must also be set to <code>loopback3</code> or <code>device&amp;loopback,3</code>.</p> <p>To run external loopback tests on the RSC serial port, a special passive serial loopback connector must be attached to the port. The variable <code>diag-targets</code> must also be set to <code>loopback</code>, <code>device&amp;loopback</code>, or <code>device&amp;loopback,3</code>.</p> <p>The Sun part number for the passive serial loopback connector is 501-4205-01.</p>

1. Depending on your system configuration, the OBDiag menu may include tests for additional SCSI interfaces, such as `scsi@4`, `scsi@4,1`, `scsi@5`, `scsi@5,1`, etc.

---

# How to Use OpenBoot Diagnostics (OBDiag)

When you turn on the system power, OBDiag runs automatically if any of the following conditions apply:

- The OpenBoot PROM variable `diag-switch?` is set to `true`.
- You hold down the keyboard's Stop and D keys as you power on the system.
- You power on the system by turning the front panel keyswitch to the Diagnostics position.

In the event of an automatic system reset, POST diagnostics run under either of the following conditions:

- The `diag-switch?` variable is set to `true` and the `diag-trigger` variable is set to `error-reset` or `soft-reset`.
- The front panel keyswitch is in the Diagnostics position and the `diag-trigger` variable is set to `error-reset` or `soft-reset`.

For information about the various keyswitch positions, see "About the Status and Control Panel" on page 6.

OBdiag tests run automatically, without operator intervention, under the conditions described above. However, you can also run OBDiag in an interactive mode and select which tests you want to perform. The following procedure describes how to run OBDiag interactively from the system `ok` prompt.

## What to Do

---

**Note** - Perform this procedure with the power *on* and the keyswitch in the Power-on position.

---

- 1. With the keyswitch in the Power-on position, press the Break key on your alphanumeric terminal's keyboard, or enter the `Stop-a` sequence on a Sun keyboard.**

To enter the `Stop-a` sequence, press the Stop key and the `a` key simultaneously. The `ok` prompt is displayed.

- 2. (Optional) Select a diagnostic level.**

Four different levels of diagnostic testing are available for OBDiag; see "How to Set the Diagnostic Level for POST and OBDiag" on page 250.

**3. (Optional) Select a diagnostic target.**

You can choose to run OBDiag with or without external loopback tests by using the OpenBoot PROM variable `diag-targets`. For more information, see “OBDiag Configuration Variables” on page 242.

**4. Enter `obdiag` at the `ok` prompt:**

```
ok obdiag
```

**5. When the OBDiag menu appears, enter the appropriate command and test name/number at the `command` prompt.**

For command usage and descriptions, see “OBDiag Commands” on page 241.

OBDiag - Version X.X		
1 <code>SUNW,execctrltwo@14,60</code>	2 <code>obus@1</code>	3 <code>ecpp@14,3043bc</code>
4 <code>ecpram@14,0</code>	5 <code>folthree@14,3023f0</code>	6 <code>network@1.1</code>
7 <code>sasi@2</code>	8 <code>sasi@2,1</code>	9 <code>sasi@14,400000</code>
10 <code>su@14,3062f</code>	11 <code>su@14,3082f8</code>	12 <code>rtc</code>
Commands: <code>test-all</code> <code>except</code> <code>help</code> <code>what</code> <code>printenvs</code> <code>setenv</code> <code>exit</code>		

```
command>
```

Figure 12-3

---

**Note** - For more information about OBDiag tests, see “About OpenBoot Diagnostics (OBDiag)” on page 239.

---

---

# How to Set the Diagnostic Level for POST and OBDDiag

## Before You Begin

Four different levels of diagnostic testing are available for power-on self-test (POST) and OpenBoot Diagnostics (OBDDiag): *max* (maximum level), *med* (medium level), *min* (minimum level), and *off* (no testing). The system runs the appropriate level of diagnostics based on the setting of the OpenBoot PROM variable called `diag-level`.

The default setting for `diag-level` is `min`.

If your server is set up without a local console, you'll need to set up a monitor or console before setting the diagnostic level. See "About Setting Up a Console" on page 49.

## What to Do

---

**Note** - Perform this procedure with the power on and the keyswitch set to the Power-on position.

---

- 1. With the keyswitch in the Power-on position, press the Break key on your alphanumeric terminal's keyboard, or enter the `Stop-a` sequence on a Sun keyboard.**

To enter the `Stop-a` sequence, press the Stop key and the a key simultaneously. The `ok` prompt is displayed.

- 2. To set the `diag-level` variable, enter the following:**

```
ok setenv diag-level  
value
```

The *value* can be `off`, `min`, `med`, or `max`. See "OBDDiag Configuration Variables" on page 242 for information about each setting.

---

# About SunVTS Software

SunVTS, the Sun Validation and Test Suite, is an online diagnostics tool and system exerciser for verifying the configuration and functionality of hardware controllers, devices, and platforms. You can run SunVTS using any of these interfaces: a command line interface, a `tty` interface, or a graphical interface that runs within a windowed desktop environment.

SunVTS software lets you view and control a testing session over modem lines or over a network. Using a remote system, you can view the progress of a SunVTS testing session, change testing options, and control all testing features of another system on the network.

Useful tests to run on your system include:

TABLE 12-4

SunVTS Test	Description
<code>ecpptest</code>	Verifies the ECP1284 parallel port printer functionality
<code>cdtest</code>	Tests the CD-ROM drive by reading the disc and verifying the CD table of contents (TOC), if it exists
<code>disktest</code>	Verifies local disk drives
<code>env2test</code>	Tests the I <sup>2</sup> C environment control system including all fans, front panel LEDs and keyswitch, disk backplane LEDs, power supplies, and thermistor readings
<code>fpptest</code>	Checks the floating-point unit
<code>fstest</code>	Tests the integrity of the software's file systems
<code>m64test</code>	Tests the PGX frame buffer card
<code>mpptest</code>	Verifies multiprocessor features (for systems with more than one processor)
<code>nettest</code>	Checks all the hardware associated with networking (for example, Ethernet, token ring, quad Ethernet, fiber optic, 100-Mbit per second Ethernet devices)
<code>pmem</code>	Tests the physical memory (read only)

TABLE 12-4 (continued)

SunVTS Test	Description
sptest	Tests the system's on-board serial ports
tapetest	Tests the various Sun tape devices
rsctest	Verifies the RSC/SSP functionality, including SSP Ethernet and serial ports, I <sup>2</sup> C, and SSP Flash RAM.
vmem	Tests the virtual memory (a combination of the swap partition and the physical memory)

## For More Information

The following documents provide information about SunVTS software. They are available on *Solaris on Sun Hardware AnswerBook*. This AnswerBook documentation is provided on the SMCC Updates CD for the Solaris release you are running.

- *SunVTS User's Guide*

This document describes the SunVTS environment, including how to start and control the various user interfaces. SunVTS features are described in this document.

- *SunVTS Test Reference Manual*

This document contains descriptions of each test SunVTS software runs in the SunVTS environment. Each test description explains the various test options and gives command line arguments.

- *SunVTS Quick Reference Card*

This card gives an overview of the main features of the SunVTS Open Look interface.

---

## How to Check Whether SunVTS Software Is Installed

SunVTS software is an optional package that may or may not have been loaded when your system software was installed.

To check whether SunVTS is installed, you must access your system either from a console (see “About Setting Up a Console” on page 49), or from a remote machine logged in to the system.

## What to Do

### 1. Enter the following:

```
% pkginfo -l SUNWvts
```

- If SunVTS software is loaded, information about the package will be displayed.
- If SunVTS software is not loaded, you’ll see an error message:

```
ERROR: information for "SUNWvts" was not found
```

### 2. If necessary, use the `pkgadd` utility to load the `SUNWvts` package onto your system from the SMCC Update CD.

Note that `/opt/SUNWvts` is the default directory for installing SunVTS software.

## What Next

For more information, refer to the appropriate Solaris documentation, as well as the `pkgadd` reference manual page.

---

# How to Use SunVTS Software

## Before You Begin

If your system passes the firmware-based diagnostics and boots the operating system, yet does not function correctly, you can use SunVTS, the Sun Validation and Test Suite, to run additional tests. These tests verify the configuration and functionality of most hardware controllers and devices.

You’ll need root or superuser access to run SunVTS tests.

## What to Do

This procedure assumes you'll test your Enterprise 250 server remotely by running a SunVTS session from a workstation using the SunVTS graphical interface. For information about other SunVTS interfaces and options, see "About Diagnostic Tools" on page 234.

You can also run SunVTS remotely from a Remote System Control (RSC) console. For information about using the RSC with SunVTS, see the *Remote System Control (RSC) User's Guide*.

**1. Use `xhost` to give the remote server access to the workstation display.**

On the workstation from which you will be running the SunVTS graphical interface, enter:

```
% /usr/openwin/bin/xhost +
remote_hostname
```

Substitute the name of the Enterprise 250 server for *remote\_hostname*. Among other things, this command gives the server display permissions to run the SunVTS graphical interface in the OpenWindows™ environment of the workstation.

**2. Remotely log in to the server as superuser (root).**

**3. Check whether SunVTS software is loaded on the server.**

SunVTS is an optional package that may or may not have been loaded when the server software was installed. For more information, see "How to Check Whether SunVTS Software Is Installed" on page 252.

**4. To start the SunVTS software, enter:**

```
# cd /opt/SUNWvts/bin
# ./sunvts -display local_hostname:0
```

Substitute the name of the workstation you are using for *local\_hostname*. Note that `/opt/SUNWvts/bin` is the default `/bin` directory for SunVTS software. If you've installed SunVTS software in a different directory, use the appropriate path instead.

When you start SunVTS software, the SunVTS kernel probes the test system devices. The results of this probe are displayed on the Test Selection panel. For each hardware device on your system, there is an associated SunVTS test.

**5. Fine-tune your testing session by selecting only the tests you want to run.**

Click to select and deselect tests. (A check mark in the box indicates the item is selected.)

---

To select or deselect all the tests in the Memory group



To select or deselect individual memory tests

Figure 12-4

## Results

If SunVTS tests indicate an impaired or defective part, see the replacement procedures in Chapter 6 through Chapter 9 to replace the defective part.

---

## About Solstice SyMON Software

Solstice SyMON is a GUI-based diagnostic tool designed to monitor system hardware status and operating system performance. It offers simple, yet powerful monitoring capabilities that allow you to:

- Diagnose and address potential problems such as capacity problems or bottlenecks
- Display physical and logical views of your exact server configuration
- Monitor your server remotely from any location in the network
- Isolate potential problems or failed components
- Access SunVTS diagnostics to diagnose hardware problems

Solstice SyMON software is included on the SMCC Updates CD for the Solaris release you are running. For instructions on installing and using Solstice SyMON software, see the *Solstice SyMON User's Guide* included in the *Solaris on Sun Hardware AnswerBook* on the SMCC Updates CD.

---

# About Remote System Control (RSC)

Remote System Control (RSC) is a secure server management tool that lets you monitor and control your server over modem lines or over a network. RSC provides remote system administration for geographically distributed or physically inaccessible systems. The RSC software works with the System Service Processor (SSP) on the Enterprise 250 main logic board. The SSP provides both serial and Ethernet ports for connections to a remote console.

Once RSC is configured to manage your server, you can use it to run diagnostic tests, view diagnostic and error messages, reboot your server, and display environmental status information from a remote console. If the operating system is down, RSC will notify a central host of any power failures, hardware failures, or other important events that may be occurring on your server.

The RSC provides the following features:

- Remote system monitoring and error reporting (including output from POST and OBDiag)
- Remote reboot on demand
- Ability to monitor system environmental conditions remotely
- Ability to run POST and OBDiag tests and use SunVTS from a remote console
- Remote event notification for over-temperature conditions, power supply failures, fatal system errors, or system crashes
- Remote access to detailed event and error logs
- Remote console functions on serial and Ethernet ports

## For More Information

For information about configuring and using RSC, see the *Remote System Control (RSC) User's Guide*, provided with the RSC software.

---

**Note** - By default, diagnostic status and error messages are displayed on the local system console or terminal. If your server has been reconfigured to display output on an RSC console, diagnostic results will not display locally. To redirect diagnostic messages to the local console, you must use the OpenBoot PROM command `diag-output-to` and modify the OpenBoot PROM variables `input-device` and `output-device`. For additional details, see the *Remote System Control (RSC) User's Guide*.

---

---

# About Troubleshooting Your System

The system provides the following features to help you identify and isolate hardware problems:

- Error indications
- Software commands
- Diagnostic tools

This section describes the error indications and software commands provided to help you troubleshoot your system. Diagnostic tools are covered in “About Diagnostic Tools” on page 234.

## Error Indications

The system provides error indications via LEDs and error messages. Using the two in combination, you can isolate a problem to a particular field-replaceable unit (FRU) with a high degree of confidence.

The system provides fault LEDs in the following places:

- Front panel
- Keyboard
- Power supplies
- Disk drives

Error messages are logged in the `/var/adm/messages` file and are also displayed on the system console by the diagnostic tools.

## Front Panel LEDs

Front panel LEDs provide your first indication if there is a problem with your system. Usually, a front panel LED is not the sole indication of a problem. Error messages and even other LEDs can help to isolate the problem further.

The front panel has a general fault indicator that lights whenever POST or OBDDiag detects any kind of fault. In addition, it has LEDs that indicate problems with the internal disk drives, power supply subsystem, or fans. See “About the Status and Control Panel” on page 6 for more information on these LEDs and their meanings.

## Keyboard LEDs

Four LEDs on the Sun Type-5 keyboard are used to indicate the progress and results of POST diagnostics. These LEDs are on the Caps Lock, Compose, Scroll Lock, and Num Lock keys, as shown below.

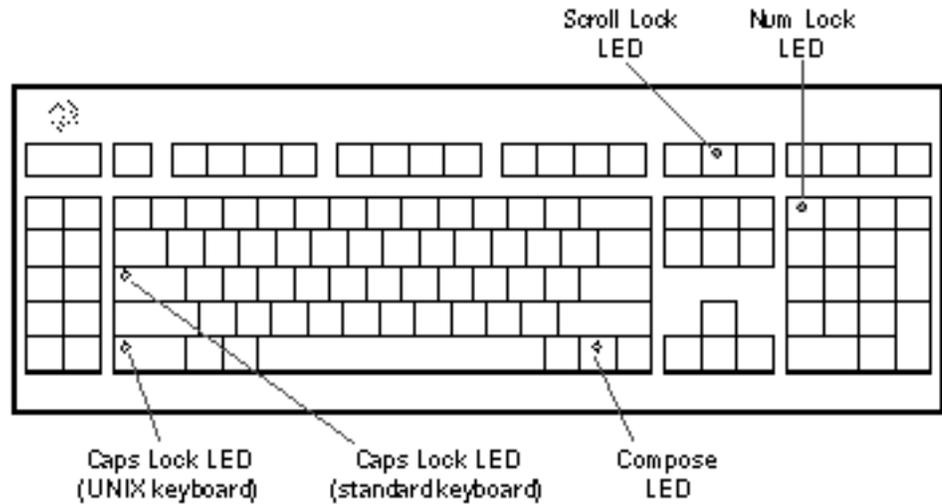


Figure 12-5

To indicate the beginning of POST diagnostics, the four LEDs briefly light all at once. The monitor screen remains blank, and the Caps Lock LED blinks for the duration of the testing.

If the system passes all POST diagnostic tests, all four LEDs light again and then go off. Once the system banner appears on the monitor screen, the keyboard LEDs assume their normal functions and should no longer be interpreted as diagnostic error indicators.

If the system fails any test, one or more LEDs will light to form an error code that indicates the nature of the problem.

---

**Note** - The LED error code may be lit continuously, or for just a few seconds, so it is important to observe the LEDs closely while POST is running.

---

The following table provides error code definitions.

TABLE 12-5

LED				
Caps Lock	Compose	Scroll Lock	Num Lock	Failing FRU
X				Main logic Board
	X			CPU 0
	X		X	CPU 1
X			X	No memory detected
X	X			Memory bank 0
X	X		X	Memory bank 1
X	X	X		Memory bank 2
X	X	X	X	Memory bank 3
			X	NVRAM

**Note** - The Caps Lock LED blinks on and off to indicate that the POST diagnostics are running. When it lights steadily, it indicates an error.

## Power Supply LEDs

Power supply LEDs are visible from the rear of the system. The following figure shows the LEDs on the power supply in bay 0.

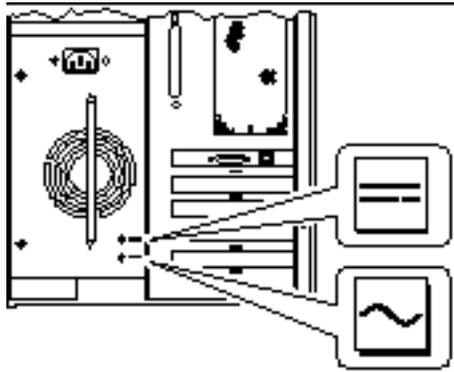


Figure 12-6

The following table provides a description of each LED.

TABLE 12-6

LED Name	Icon	Description
AC-Present-Status	————	This green LED is lit to indicate that the primary circuit has power. When this LED is lit, the power supply is providing standby power to the system.
DC Status	————	This green LED is lit to indicate that all DC outputs from the power supply are functional.

## Disk LEDs

The disk LEDs are visible from the front of the system when the bottom door is open, as shown in the following figure.

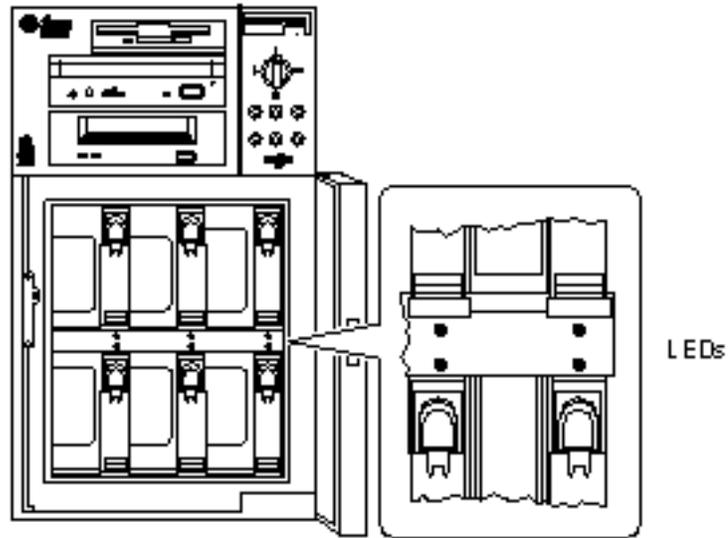


Figure 12-7

When a disk LED lights steadily and is green, it indicates that the slot is populated and that the drive is receiving power. When an LED is green and blinking, it indicates that there is activity on the disk. Some applications may use the LED to indicate a fault on the disk drive. In this case, the LED changes color to yellow and remains lit. The disk drive LEDs retain their state even when the system is powered off.

## Error Messages

Error messages and other system messages are saved in the file `/var/adm/messages`.

The two firmware-based diagnostic tools, POST and OBDDiag, provide error messages either locally on the system console or remotely on an RSC console. These error messages can help to further refine your problem diagnosis. The amount of error information displayed in diagnostic messages is determined by the value of the OpenBoot PROM variable `diag-verbosity`. See “OBDDiag Configuration Variables” on page 242 for additional details.

## Software Commands

System software provides Solaris and OBP commands that you can use to diagnose problems. For more information on Solaris commands, see the appropriate man pages. For additional information on OBP commands, see the *OpenBoot 3.x*

*Command Reference Manual.* (An online version of the manual is included with the *Solaris System Administrator AnswerBook* that ships with Solaris software.)

## Solaris `prtdiag` Command

The `prtdiag` command is a UNIX shell command used to display system configuration and diagnostic information. You can use the `prtdiag` command to display:

- System configuration, including information about clock frequencies, CPUs, memory, and I/O card types
- Diagnostic information
- Failed field-replaceable units (FRUs)

To run `prtdiag`, type:

```
% /usr/platform/sun4u/sbin/prtdiag
```

To isolate an intermittent failure, it may be helpful to maintain a `prtdiag` history log. Use `prtdiag` with the `-l` (log) option to send output to a log file in `/var/adm`.

---

**Note** - Refer to the `prtdiag` man page for additional information.

---

An example of `prtdiag` output follows. The exact format of `prtdiag` output depends on which version of the Solaris operating environment is running on your system.

`prtdiag` output:

```
ok /usr/platform/sun4u/sbin/prtdiag -v
System Configuration: Sun Microsystems sun4u Sun Ultra Enterprise 250(2 X UltraSPARC-II 248MHz)
System clock frequency: 83 MHz
Memory size: 640 Megabytes

===== CPUs =====

Run   Ecache  CPU      CPU
Brd   CPU    Module   MHz     MB     Impl.   Mask
---   ---    -
SYS   0       0        248     1.0    US-II   1.1
SYS   1       1        248     1.0    US-II   1.1

===== Memory =====

Interlv. Socket  Size
Bank   Group  Name  (MB)  Status
-----
  0     none  U0801  32    OK
  0     none  U0701  32    OK
  0     none  U1001  32    OK
  0     none  U0901  32    OK
```

```

1      none      U0802      64      OK
1      none      U0702      64      OK
1      none      U1002      64      OK
1      none      U0902      64      OK
2      none      U0803      32      OK
2      none      U0703      32      OK
2      none      U1003      32      OK
2      none      U0903      32      OK
3      none      U0804      32      OK
3      none      U0704      32      OK
3      none      U1004      32      OK
3      none      U0904      32      OK

```

===== IO Cards =====

```

Bus   Freq
Brd  Type  MHz  Slot  Name                               Model
-----
SYS  PCI   33   0     SUNW,m64B                          ATY,GT-B
SYS  PCI   33   1     pciclass,078000
SYS  PCI   33   2     pciclass,078000
SYS  PCI   33   3     glm                                 Symbios,53C875

```

No failures found in System  
=====

===== Environmental Status =====

System Temperatures (Celsius):

```

-----
CPU0   44
CPU1   52
MB0    32
MB1    26
PDB    26
SCSI   24

```

=====

Front Status Panel:

-----

Keyswitch position is in On mode.

```

System LED Status:  DISK ERROR      POWER
                   [OFF]           [ ON]
                   POWER SUPPLY ERROR  ACTIVITY
                   [OFF]           [OFF]
                   GENERAL ERROR      THERMAL ERROR
                   [OFF]           [OFF]

```

=====

```

Disk LED Status: OK = GREEN ERROR = YELLOW
DISK 5:  [OK] DISK 3:  [OK] DISK 1:  [OK]
DISK 4:  [OK] DISK 2:  [OK] DISK 0:  [OK]

```

=====

Fan Bank :

-----

```

Bank      Speed      Status
      (0-255)
-----
  SYS      140       OK

=====

Power Supplies:
-----

Supply    Status
-----
    0      OK

===== HW Revisions =====

ASIC Revisions:
-----
STP2223BGA: Rev 4
STP2003QFP: Rev 1

System PROM revisions:
-----
  OBP 3.5.145 1997/10/15 14:50   POST 5.0.5 1997/10/09 16:52

```

## OBP show-devs Command

If you are working from the OBP prompt (ok), you can use the OBP `show-devs` command to list the devices in the system configuration.

## OBP printenv Command

Use the OBP `printenv` command to display the OpenBoot PROM configuration variables stored in the system NVRAM. The display includes the current values for these variables as well as the default values.

## OBP probe-scsi and probe-scsi-all Commands

To diagnose problems with the SCSI subsystem, you can use the OBP `probe-scsi` and `probe-scsi-all` commands. Both commands require that you halt the system.

---

**Note** - When it is not practical to halt the system, you can use SunVTS as an alternate method of testing the SCSI interfaces. See “About Diagnostic Tools” on page 234 for more information.

---

The `probe-scsi` command transmits an inquiry command to all SCSI devices connected to the main logic board SCSI interfaces. This includes any tape or CD-ROM drive in the removable media assembly (RMA), any internal disk drive, and any device connected to the external SCSI connector on the system rear panel. For any SCSI device that is connected and active, its target address, unit number, device type, and manufacturer name are displayed.

The `probe-scsi-all` command transmits an inquiry command to all SCSI devices connected to the system SCSI host adapters, including any host adapters installed in PCI slots. The first identifier listed in the display is the SCSI host adapter address in the system device tree followed by the SCSI device identification data.

The first example that follows shows a `probe-scsi` output message. The second example shows a `probe-scsi-all` output message.

`probe-scsi` output:

```
ok probe-scsi
This command may hang the system if a Stop-A or halt command
has been executed. Please type reset-all to reset the system
before executing this command.
Do you wish to continue? (y/n) n
ok reset-all

ok probe-scsi
Primary UltraSCSI bus:
Target 0
  Unit 0   Disk      SEAGATE ST34371W SUN4.2G3862
Target 4
  Unit 0   Removable Tape    ARCHIVE Python 02635-XXX5962
Target 6
  Unit 0   Removable Read Only device TOSHIBA XM5701TASUN12XCD0997
Target 9
  Unit 0   Disk      SEAGATE ST34371W SUN4.2G7462
Target b
  Unit 0   Disk      SEAGATE ST34371W SUN4.2G7462
ok
```

`probe-scsi-all` output:

```
ok probe-scsi-all
This command may hang the system if a Stop-A or halt command
has been executed. Please type reset-all to reset the system
before executing this command.
Do you wish to continue? (y/n) y

/pci@1f,4000/scsi@4,1
Target 2
  Unit 0   Disk      SEAGATE ST32550W SUN2.1G0418
Target 3
  Unit 0   Disk      SEAGATE ST32550W SUN2.1G0418
Target 4
  Unit 0   Disk      SEAGATE ST32550W SUN2.1G0418
Target 5
  Unit 0   Disk      SEAGATE ST32550W SUN2.1G0418
Target 8
```

```

Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target 9
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target a
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target b
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target c
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target d
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target e
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target f
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418

```

```
/pci@1f,4000/scsi@4
```

```

Target 2
Unit 0 Disk SEAGATE ST32550W SUN2.1G0416
Target 3
Unit 0 Disk SEAGATE ST32550W SUN2.1G0416
Target 4
Unit 0 Disk SEAGATE ST32550W SUN2.1G0416
Target 5
Unit 0 Disk SEAGATE ST32430W SUN2.1G0666
Target 8
Unit 0 Disk SEAGATE ST32550W SUN2.1G0416

```

#### probe-scsi-all output continued:

```

Target 9
Unit 0 Disk SEAGATE ST32550W SUN2.1G0416
Target a
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target b
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target c
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target d
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target e
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418
Target f
Unit 0 Disk SEAGATE ST32550W SUN2.1G0418

```

```
/pci@1f,4000/scsi@3,1
```

```
/pci@1f,4000/scsi@3
```

```

Target 0
Unit 0 Disk SEAGATE ST34371W SUN4.2G3862
Target 4
Unit 0 Removable Tape ARCHIVE Python 02635-XXX5962
Target 6
Unit 0 Removable Read Only device TOSHIBA XM5701TASUN12XCD0997
Target 9
Unit 0 Disk SEAGATE ST34371W SUN4.2G7462
Target b

```

```
Unit 0 Disk SEAGATE ST34371W SUN4.2G7462
/pci@1f,4000/pci@5/SUNW,ispw@4
Target 1
Unit 0 Disk SEAGATE ST34371W SUN4.2G8246
Target 2
Unit 0 Disk SEAGATE ST34371W SUN4.2G8254
Target 3
Unit 0 Disk SEAGATE ST34371W SUN4.2G8246
Target 4
Unit 0 Disk SEAGATE ST34371W SUN4.2G8246
Target 5
Unit 0 Disk SEAGATE ST34371W SUN4.2G7462
Target 6
Unit 0 Disk SEAGATE ST34371W SUN4.2G7462
```

---

## About Diagnosing Specific Problems

### Network Communications Failure

#### Symptom

The system is unable to communicate over the network.

#### Action

Your system conforms to the Ethernet 10/100BASE-T standard, which states that the Ethernet 10BASE-T link integrity test function should always be enabled on both the host system and the Ethernet hub. The system cannot communicate with a network if this function is not set identically for both the system and the network hub (either enabled for both or disabled for both). This problem applies only to 10BASE-T network hubs, where the Ethernet link integrity test is optional. This is not a problem for 100BASE-T networks, where the test is enabled by default. Refer to the documentation provided with your Ethernet hub for more information about the link integrity test function.

If you connect the system to a network and the network does not respond, use the OpenBoot PROM command `watch-net-all` to display conditions for all network connections:

```
ok watch-net-all
```

For most PCI Ethernet cards, the link integrity test function can be enabled or disabled with a hardware jumper on the PCI card, which you must set manually. (See the documentation supplied with the card.) For the standard TPE and MII main logic board ports, the link test is enabled or disabled through software, as shown below.

Remember also that the TPE and MII ports share the same circuitry and as a result, only one port can be used at a time.

---

**Note** - Some hub designs permanently enable (or disable) the link integrity test through a hardware jumper. In this case, refer to the hub installation or user manual for details of how the test is implemented.

---

### *Determining the Device Name of the Ethernet Interface*

To enable or disable the link integrity test for the standard Ethernet interface, or for a PCI-based Ethernet interface, you must first know the device name of the desired Ethernet interface. To list the device name:

1. **Shut down the operating system and take the system to the `ok` prompt.**
2. **Determine the device name for the desired Ethernet interface:**

#### *Solution 1*

Use this method while the operating system is running:

1. **Become superuser.**

2. **Type:**

```
# eeprom nvramrc="probe-all install-console banner apply disable-link-pulse
  device-name"
  (Repeat for any additional device names.)
# eeprom "use-nvramrc?"=true
```

3. **Reboot the system (when convenient) to make the changes effective.**

#### *Solution 2*

Use this alternate method when the system is already in OpenBoot:

1. **At the `ok` prompt, type:**

```
ok
nvedit
0: probe-all install-console banner
1: apply disable-link-pulse device-name
   (Repeat this step for other device names as needed.)
   (Press CONTROL-C to exit nvedit.)
ok nvstore
ok setenv use-nvramrc? true
```

2. Reboot the system to make the changes effective.

## Power-on Failures

### Symptom

The system attempts to power up but does not boot or initialize the monitor.

### Action

1. Run POST diagnostics.

See “How to Use POST Diagnostics” on page 236.

2. Observe POST results.

The front panel general fault LED should blink slowly to indicate that POST is running. Check the POST output using a locally attached terminal, `tip` connection, or RSC console.

---

**Note** - By default, POST output is displayed locally on an attached terminal or through a `tip` connection. If your server has been reconfigured to display POST output on an RSC console, POST results will not display locally. To redirect POST output to the local system, you must execute the OpenBoot PROM command `diag-output-to ttya` from the RSC console. See the *Remote System Control (RSC) User's Guide* for additional details.

---

3. If you see no front panel LED activity, a power supply may be defective.

See “Power Supply LEDs” on page 259.

4. If the general fault LED remains lit, or the POST output contains an error message, then POST has failed.

The most probable cause for this type of failure is the main logic board. However, before replacing the main logic board you should:

- a. **Remove optional PCI cards.**
- b. **Remove optional DIMMs.**  
Leave only the four DIMMs in Bank A.
- c. **Repeat POST to determine if any of these modules caused the failure.**
- d. **If POST still fails, then replace the main logic board.**

## Video Output Failure

### Symptom

No video at the system monitor.

### Action

1. **Check that the power cord is connected to the monitor and to the wall outlet.**
2. **Verify with a volt-ohmmeter that the wall outlet is supplying AC power.**
3. **Verify that the video cable connection is secure between the monitor and the video output port.**  
Use a volt-ohmmeter to perform the continuity test on the video cable.
4. **If the cables and their connections are okay, then troubleshoot the monitor and the graphics card.**

## Disk or CD-ROM Drive Failure

### Symptom

A disk drive read, write, or parity error is reported by the operating system or a software application.

A CD-ROM drive read error or parity error is reported by the operating system or a software application.

## Action

1. Replace the drive indicated by the failure message.

## Symptom

Disk drive or CD-ROM drive fails to boot or is not responding to commands.

## Action

Test the drive response to the `probe-scsi-all` command as follows:

1. At the system `ok` prompt, enter:

```
ok reset-all
ok probe-scsi-all
```

2. If the SCSI device responds correctly to `probe-scsi-all`, a message similar to the one above is printed out.

If the device responds and a message is displayed, the system SCSI controller has successfully probed the device. This indicates that the main logic board is operating correctly.

- a. If one drive does not respond to the SCSI controller probe but the others do, replace the unresponsive drive.
- b. If only one internal disk drive is configured with the system and the `probe-scsi-all` test fails to show the device in the message, replace the drive. If the problem is still evident after replacing the drive, replace the main logic board. If replacing both the disk drive and the main logic board does not correct the problem, replace the associated UltraSCSI data cable and UltraSCSI backplane.

## SCSI Controller Failures

To check whether the main logic board SCSI controllers are defective, test the drive response to the `probe-scsi` command. To test additional SCSI host adapters added to the system, use the `probe-scsi-all` command. You can use the OBP `printenv` command to display the OpenBoot PROM configuration variables stored in the system NVRAM. The display includes the current values for these variables as well as the default values. See “OBP `printenv` Command” on page 264 for more information.

1. At the `ok` prompt, enter:

ok probe-scsi

If a message is displayed for each installed disk, the system SCSI controllers have successfully probed the devices. This indicates that the main logic board is working correctly.

2. **If a disk doesn't respond:**
3. **If the problem persists, replace the unresponsive drive.**
4. **If the problem remains after replacing the drive, replace the main logic board.**
5. **If the problem persists, replace the associated SCSI cable and backplane.**


## Power Supply Failure

If there is a problem with a power supply, POST lights the general fault indicator and the power supply fault indicator on the front panel. If you have more than one power supply, then you can use the LEDs located on the power supplies themselves to identify the faulty supply. The power supply LEDs will indicate any problem with the AC input or DC output. See "Power Supply LEDs" on page 259 for more information about the LEDs.

## DIMM Failure

SunVTS and POST diagnostics can report memory errors encountered during program execution. Memory error messages typically indicate the DIMM location number ("U" number) of the failing module.

Use the following diagram to identify the location of a failing memory module from its U number:

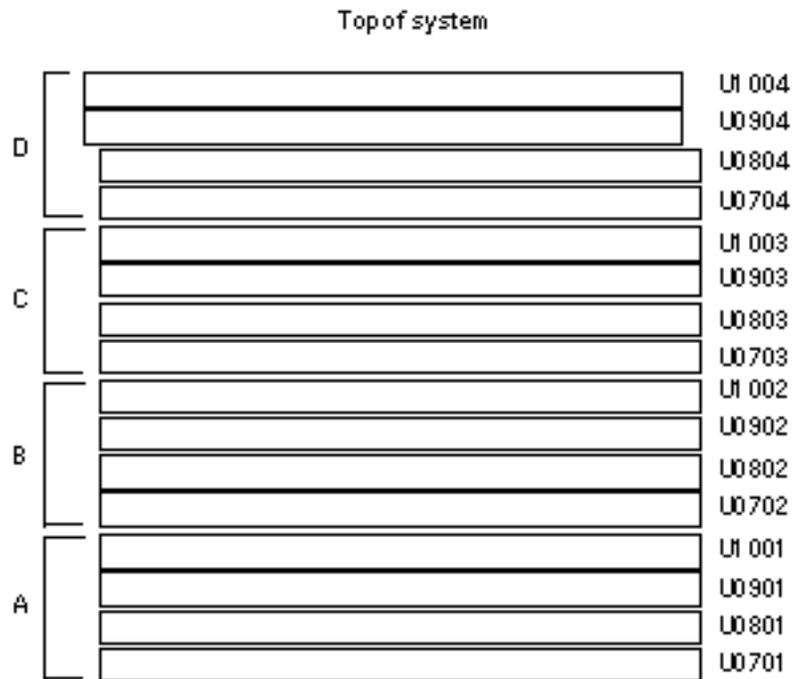

*Figure 12-8*

After you have identified the defective DIMM, remove it according to the instructions in “How to Remove a Memory Module” on page 105. Install the replacement DIMM according to the directions in “How to Install a Memory Module” on page 107.

## Environmental Failures

The environmental monitoring subsystem monitors the temperature of the system as well as the operation of the fans and power supplies. For more information on the environmental monitoring subsystem, see “Environmental Monitoring and Control” on page 71.

In response to an environmental error condition, the monitoring subsystem generates error messages that are displayed on the system console and logged in the `/var/adm/messages` file. These error messages are described in the table below.

TABLE 12-7

Message	Type	Description
TEMPERATURE WARNING: X degrees celsius at location Y.	Warning	<p>Indicates that the temperature measured at location Y has exceeded the warning threshold and if it continues to overheat the system will shutdown.</p> <p>If the value of location Y is a sensor on a CPU, (CP0 or CP1) the temperature (identified by the value X) has exceeded 60 degrees C.</p> <p>If the value of location Y is a sensor on the PDB (power distribution board), SCSI backplane, MB0 or MB1 (main logic board), the ambient temperature (identified by the value X) has exceeded 53 degrees C.</p>
TEMPERATURE CRITICAL: X degrees celsius at location Y.	Warning	<p>Indicates that the temperature measured at location Y has exceeded a critical threshold. After this warning message, the system automatically shuts down.</p> <p>If the value of location Y is a sensor on a CPU, (CP0 or CP1) the temperature (identified by the value X) has exceeded 65 degrees C.</p> <p>If the value of location Y is a sensor on the PDB (power distribution board), SCSI backplane, MB0 or MB1 (main logic board), the ambient temperature (identified by the value X) has exceeded 58 degrees C.</p>
Power Supply X NOT okay.	Warning	<p>Indicates that there is something wrong with the DC output of the supply. The system may shut down abruptly if the redundant power supply fails. The value X identifies the power supply, PS0 is the lower power supply; PS1 is the upper power supply.</p>

TABLE 12-7 (continued)

Message	Type	Description
Power supply X inserted	Advisory	A hot-swap feature to tell you that the power supply identified by X was installed without service disruption.
Power supply X removed	Advisory	A hot-swap feature to tell you that the power supply identified by X was removed without service disruption.
WARNING: Fan failure has been detected	Warning	Indicates a fan failure in the fan tray assembly.

If the environmental monitoring system detects a temperature problem, it also lights the temperature LED on the status and control panel. If it detects a power supply problem, it lights the power supply fault LED on the panel. The LEDs located on the power supplies themselves will help to further identify the problem. For information about system LEDs, see:

- “About the Status and Control Panel” on page 6
- “Front Panel LEDs” on page 257
- “Power Supply LEDs” on page 259

**Note** - Enterprise 250 power supplies will shut down automatically in response to certain over-temperature and power fault conditions (see “Environmental Monitoring and Control” on page 71). To recover from an automatic shutdown, you must disconnect the AC power cord, wait approximately 10 seconds, and then reconnect the power cord.



## Connector Pinouts

---

This appendix gives you reference information about the pins, signals, and ports built into the Sun Enterprise 250 server.

*Topics covered in this appendix include:*

- “Reference for the Serial Port A and B Connectors” on page 277
- “Reference for the Parallel Connector” on page 279
- “Reference for the SCSI Connector” on page 280
- “Reference for the Keyboard/Mouse Connector” on page 282
- “Reference for the Twisted-Pair Ethernet (TPE) Connector” on page 283
- “Reference for the Media Independent Interface (MII) Ethernet Connector” on page 284
- “Reference for the 13W3 Video Connector” on page 285
- “Reference for the RSC/SSP Serial Port Connector” on page 287
- “Reference for the RSC/SSP Twisted-Pair Ethernet (TPE) Connector” on page 288

---

## Reference for the Serial Port A and B Connectors

Both serial ports conform to RS-423/RS-232 specifications.




Figure A-1

TABLE A-1 Serial Port Signals

Pin Number	Function	I/O	Signal Description
1	none	none	N.C. <sup>1</sup>
2	TXD	O	Transmit Data
3	RXD	I	Receive Data
4	RTS	O	Ready To Send
5	CTS	I	Clear To Send
6	DSR	I	Data Set Ready
7	GND		Signal Ground
8	DCD	I	Data Carrier Detect
9	none	none	N.C.
10	none	none	N.C.
11	none	none	N.C.
12	none	none	N.C.
13	none	none	N.C.
14	none	none	N.C.
15	TRXC	I	Transmit Clock
16	none	none	N.C.
17	RXC	I	Receive Clock
18	none	none	N.C.

TABLE A-1 Serial Port Signals (continued)

Pin Number	Function	I/O	Signal Description
19	none	none	N.C.
20	DTR	O	Data Terminal Ready
21	none	none	N.C.
22	none	none	N.C.
23	none	none	N.C.
24	TXC	O	Transmit Clock
25	none	none	N.C.

1. N.C. means "No Connection."

## Reference for the Parallel Connector




Figure A-2

Signal names ending in "L" indicate that the signal is active low.

TABLE A-2 Parallel Port Signals

Pin	Description	Pin	Description
1	STROBE_L	14	AUTO_FEED_L
2	DAT0	15	ERROR_L



**TABLE A-3** SCSI Connector Signals

<b>Pin</b>	<b>Signal</b>	<b>Pin</b>	<b>Signal</b>
1	SCSI_GND	35	SCSI_CONN_DAT<12>
2	SCSI_GND	36	SCSI_CONN_DAT<13>
3	SCSI_GND	37	SCSI_CONN_DAT<14>
4	SCSI_GND	38	SCSI_CONN_DAT<15>
5	SCSI_GND	39	SCSI_CONN_PAR<1>
6	SCSI_GND	40	SCSI_CONN_DAT<0>
7	SCSI_GND	41	SCSI_CONN_DAT<1>
8	SCSI_GND	42	SCSI_CONN_DAT<2>
9	SCSI_GND	43	SCSI_CONN_DAT<3>
10	SCSI_GND	44	SCSI_CONN_DAT<4>
11	SCSI_GND	45	SCSI_CONN_DAT<5>
12	SCSI_GND	46	SCSI_CONN_DAT<6>
13	SCSI_GND	47	SCSI_CONN_DAT<7>
14	SCSI_GND	48	SCSI_CONN_PAR<0>
15	SCSI_GND	49	SCSI_GND
16	SCSI_GND	50	SCSI_TERMDIS_L<0>
17	SCSI_CONN_TERM_PWR	51	SCSI_CONN_TERM_PWR
18	SCSI_CONN_TERM_PWR	52	SCSI_CONN_TERM_PWR
19	N.C. <sup>1</sup>	53	N.C.
20	SCSI_GND	54	SCSI_CONN_GND
21	SCSI_GND	55	SCSI_CONN_ATN
22	SCSI_GND	56	SCSI_GND
23	SCSI_GND	57	SCSI_CONN_BSY_L

TABLE A-3 SCSI Connector Signals (continued)

Pin	Signal	Pin	Signal
24	SCSI_GND	58	SCSI_CONN_ACK_L
25	SCSI_GND	59	SCSI_CONN_RST_L
26	SCSI_GND	60	SCSI_CONN_MSG_L
27	SCSI_GND	61	SCSI_CONN_SEL_L
28	SCSI_GND	62	SCSI_CONN_CD_L
29	SCSI_GND	63	SCSI_CONN_REQ_L
30	SCSI_GND	64	SCSI_CONN_IO_L
31	SCSI_GND	65	SCSI_CONN_DAT<8>
32	SCSI_GND	66	SCSI_CONN_DAT<9>
33	SCSI_GND	67	SCSI_CONN_DAT<10>
34	SCSI_GND	68	SCSI_CONN_DAT<11>

1. N.C. means "No Connection."

## Reference for the Keyboard/Mouse Connector

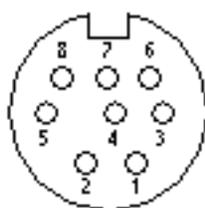


Figure A-4

Signal names ending in “L” indicate that the signal is active low.

TABLE A-4 Keyboard/Mouse Connector Signals

Pin	Description	Pin	Description
1	GND	5	KYBD_OUT_L
2	GND	6	KYBD_IN_L
3	+5 VDC	7	POWERON_L
4	MOUSE_IN_L	8	+5 VDC

---

## Reference for the Twisted-Pair Ethernet (TPE) Connector

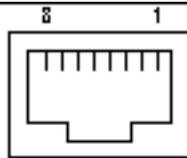


Figure A-5

TABLE A-5 TPE Connector Signals

Pin	Description	Pin	Description
1	Transmit Data +	5	Common Mode Termination
2	Transmit Data -	6	Receive Data -

TABLE A-5 TPE Connector Signals (continued)

Pin	Description	Pin	Description
3	Receive Data +	7	Common Mode Termination
4	Common Mode Termination	8	Common Mode Termination

## Reference for the Media Independent Interface (MII) Ethernet Connector



Figure A-6

TABLE A-6 MII Connector Signals

Pin	Function	Pin	Function
1	+5 VDC	21	+5 VDC
2	MDIO	22	GND
3	MDC	23	GND
4	RXD<3>	24	GND
5	RXD<2>	25	GND
6	RXD<1>	26	GND
7	RXD<0>	27	GND
8	RX_DV	28	GND

TABLE A-6 MII Connector Signals (continued)

Pin	Function	Pin	Function
9	RX_CLK	29	GND
10	RX_ER	30	GND
11	TX_ER	31	GND
12	TX_CLK	32	GND
13	TX_EN	33	GND
14	TXD<0>	34	GND
15	TXD<1>	35	GND
16	TXD<2>	36	GND
17	TXD<3>	37	GND
18	COL	38	GND
19	CRS	39	GND
20	+5 VDC	40	+5 VDC

**Note** - The +5V supply is fuse-protected with a fuse that automatically resets.

## Reference for the 13W3 Video Connector

The optional PGX Graphics Frame Buffer is a PCI-based frame buffer card with a 13W3 video connector.




Figure A-7

**TABLE A-7** 13W3 Connector Signals

<b>Pin</b>	<b>Function</b>	<b>I/O</b>	<b>Level</b>
A1	Red	O	Analog
A2	Green	O	Analog
A3	Blue	O	Analog
1	Serial Read		TTL
2	Vert Sync	O	TTL
3	Sense <0>	I	TTL
4	GND		Ground
5	Comp Sync	O	TTL
6	Horiz Sync	O	TTL
7	Serial Write		TTL
8	Sense <1>	I	TTL
9	Sense <2>	I	TTL
10	GND		Ground

# Reference for the RSC/SSP Serial Port Connector




Figure A-8

TABLE A-8 RSC/SSP Serial Port Signals

Pin Number	Function	I/O	Signal Description
1	none	none	N.C. <sup>1</sup>
2	TXD	O	Transmit Data
3	RXD	I	Receive Data
4	RTS	O	Ready To Send
5	CTS	I	Clear To Send
6	DSR	I	Data Set Ready
7	GND		Signal Ground
8	DCD	I	Data Carrier Detect
9	none	none	N.C.
10	none	none	N.C.
11	none	none	N.C.
12	none	none	N.C.
13	none	none	N.C.
14	none	none	N.C.

TABLE A-8 RSC/SSP Serial Port Signals (continued)

Pin Number	Function	I/O	Signal Description
15	none	none	N.C.
16	none	none	N.C.
17	none	none	N.C.
18	none	none	N.C.
19	none	none	N.C.
20	DTR	O	Data Terminal Ready
21	none	none	N.C.
22	none	none	N.C.
23	none	none	N.C.
24	none	none	N.C.
25	none	none	N.C.

1. N.C. means "No Connection."

## Reference for the RSC/SSP Twisted-Pair Ethernet (TPE) Connector

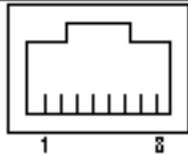


Figure A-9

**TABLE A-9** TSC/SSP TPE Connector Signals

<b>Pin</b>	<b>Description</b>	<b>Pin</b>	<b>Description</b>
1	Transmit Data +	5	Common Mode Termination
2	Transmit Data -	6	Receive Data -
3	Receive Data +	7	Common Mode Termination
4	Common Mode Termination	8	Common Mode Termination



# System Specifications

---

This appendix provides physical, clearance and service, electrical, and environmental specifications.

---

## Reference for System Specifications

### Physical Specifications

The dimensions and weight of the system are as follows.

TABLE B-1

	U.S	Metric	Comments
Height	18.1 in	46.0 cm	20.4 in (51.7 cm) if equipped with floor casters
Width	10.3 in	26.2 cm	
Depth	27.1 in	68.8 cm	Power supply handles add 1.2 in (3.1 cm)
Weight	118 lb, max	53 kg, max	Actual weight depends on the installed options.
Power Cord	8.2 ft	2.5 m	

# Clearance and Service Access Specifications

Clearances needed when servicing the system are as follows.

TABLE B-2

	U.S	Metric
Front	36 in	91.44 cm
Rear	36 in	91.44 cm
Right	36 in	91.44 cm
Left	36 in	91.44 cm
Top	36 in	91.44 cm

## Environmental Requirements

The operating and non-operating environmental requirements for the system are as follows.

TABLE B-3

Parameter	Value
Operating	
Temperature	5°C to 35°C (41°F to 95°F)—IEC 68-2-1, 68-2-2
Humidity	20% to 80% RH, noncondensing; 27°C max wet bulb—IEC 68-2-2, 68-2-3
Altitude	0 to 3000 meters (0 to 10,000 feet)—IEC 68-2-40, 68-2-41
Vibration	0.2 gravity (g) peak, 5–500 Hz (swept sine); 0.0002 g <sup>2</sup> /Hz, 5–500 Hz (random); vertical axis only (castered configuration); vertical and horizontal axes (foot glide configuration)—IEC 68-2-6
Shock	4g peak, 11 milliseconds half-sine pulse—IEC 68-2-27
Declared Noise Emissions	6.5/6.3 B (operating/idle)—ISO 9296 (LWAd)

**TABLE B-3** (continued)

Parameter	Value
Non-Operating	
Temperature	-20°C to 60°C (-4°F to 140°F)—IEC 68-2-1, 68-2-2
Humidity	93% RH, noncondensing at 35°C—IEC 68-2-2, 68-2-3
Altitude	0 to 12,000 meters (0 to 40,000 feet)—IEC 68-2-40, 68-2-41
Vibration	1g peak, 5-500 Hz (swept sine); 0.002 g <sup>2</sup> /Hz, 5-500 Hz (random); 3 perpendicular axes—IEC 68-2-6
Shock	15g peak, 11 milliseconds half-sine pulse—IEC 68-2-27e
Threshold Impact	1 m/s—SUN 900-1813

## Agency Compliance Specifications

The system complies with the following specifications.

**TABLE B-4**

Category	Relevant Standards
Safety	EN60950/IEC950, TUV UL 1950, CB Scheme IEC 950, C22.2 No. 950 from UL
RFI/EMI	EN55022/CISPR22 Class B VCCI Class II FCC Part 15 Sub Part B

**TABLE B-4** (continued)

Category	Relevant Standards
Immunity	EN50082/IEC-1000-2 IEC-1000-3 IEC-1000-4 IEC-1000-5
X-ray	DHHS 21 Subchapter J PTB German X-ray Decree

## Electrical Specifications

The following table provides the electrical specifications for the system.

**TABLE B-5**

Parameter	Value
Input	
Nominal Frequencies	50 Hz or 60 Hz nominal
Nominal Voltage Range	100 to 240 VAC
Maximum Current AC RMS	6.0 A @ 100 VAC
AC Operating Range	90 to 264 Vrms, 47 to 63Hz
Output	
+1.8 to 3.0 VDC*	3 to 27 A
+3.3 VDC**	3 to 34 A
+5 VDC**	2 to 30 A
+12 VDC	0.5 to 10 A
-12 VDC	0 to 0.5 A

**TABLE B-5** (continued)

<b>Parameter</b>	<b>Value</b>
Maximum DC Power Output	360 Watts
Maximum AC Power Consumption	580 Watts
Maximum Heat Dissipation	1980 BTUs/hr
Volt-Ampere Rating	600 VA with 360 Watt load

\* CPU core voltage. Actual voltage is determined by the specific CPU module(s) installed.

\*\* Combined output power of the +3.3 VDC and +5 VDC outputs must not exceed 170 Watts.



## Safety Precautions

---

This appendix supplies you with reference information about safety precautions you should take when setting up your equipment.

---

## Reference for Safety Precautions

Read this section before beginning any procedure. The following text provides safety precautions to follow when installing a Sun Microsystems product.

### Safety Precautions


For your protection, observe the following safety precautions when setting up your equipment:

- Follow all cautions and instructions marked on the equipment.
- Ensure that the voltage and frequency of your power source match the voltage and frequency inscribed on the equipment's electrical rating label.
- Never push objects of any kind through openings in the equipment. Dangerous voltages may be present. Conductive foreign objects could produce a short circuit that could cause fire, electric shock, or damage to your equipment.

### Symbols

The following symbols may appear in this book:

TABLE C-1

	Caution – There is risk of personal injury and equipment damage. Follow the instructions.		On – Applies AC power to the system.
	Caution – Hot surface. Avoid contact. Surfaces are hot and may cause personal injury if touched.		Off – Removes AC power from the system.
	Caution – Hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.		Standby - <i>The On/Standby switch is in the standby position.</i>

## Modifications to Equipment

Do not make mechanical or electrical modifications to the equipment. Sun Microsystems is not responsible for regulatory compliance of a modified Sun product.

## Placement of a Sun Product



**Caution -** Caution – Do not block or cover the openings of your Sun product. Never place a Sun product near a radiator or heat register. Failure to follow these guidelines can cause overheating and affect the reliability of your Sun product.

## SELV Compliance

Safety status of I/O connections comply to SELV requirements.

## European Ergonomics

In order to conform with the German ZH1/618 ergonomic standard, an antiglare treatment to the CRT has been provided. For text processing applications, a positive mode display (black characters on a white background) is required.

### Power Cord Connection

---



**Caution - Caution** – Sun products are designed to work with single-phase power systems having a grounded neutral conductor. To reduce the risk of electric shock, do not plug Sun products into any other type of power system. Contact your facilities manager or a qualified electrician if you are not sure what type of power is supplied to your building.

---



**Caution - Caution** – Not all power cords have the same current ratings. Household extension cords do not have overload protection and are not meant for use with computer systems. Do not use household extension cords with your Sun product.

---



**Caution - Caution** – Your Sun product is shipped with a grounding type (three-wire) power cord. To reduce the risk of electric shock, always plug the cord into a grounded power outlet.

---

The following caution applies only to devices with a Standby power switch:

---



**Caution - Caution** – The power switch of this product functions as a standby type device only. The power cord serves as the primary disconnect device for the system. On systems with multiple power supplies, all power cords must be unplugged to disconnect primary power from the system. Each power cord should be plugged into a grounded power outlet that is nearby the system and is readily accessible. Do not connect a power cord to a power supply that has been removed from the system chassis.

---

### Lithium Battery

---



**Caution - Caution** – On Sun CPU boards, there is a lithium battery molded into the real-time clock, SGS No. MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ, or MK48T08. Batteries are not customer replaceable parts. They may explode if mishandled. Do not dispose of the battery in fire. Do not disassemble it or attempt to recharge it.

---

## System Unit Cover

You must remove the cover(s) of your Sun computer system unit in order to add cards, memory, or internal storage devices. Be sure to replace the cover(s) before powering up your system.



---

**Caution - Caution** – Do not operate Sun products without the cover(s) in place. Failure to take this precaution may result in personal injury and system damage.

---

## Laser Compliance Notice

Sun products that use laser technology comply with Class 1 laser requirements.



Figure C-1

---

## Einhaltung sicherheitsbehördlicher Vorschriften

Auf dieser Seite werden Sicherheitsrichtlinien beschrieben, die bei der Installation von Sun-Produkten zu beachten sind.

### Sicherheitsvorkehrungen

Treffen Sie zu Ihrem eigenen Schutz die folgenden Sicherheitsvorkehrungen, wenn Sie Ihr Gerät installieren:

- Beachten Sie alle auf den Geräten angebrachten Warnhinweise und Anweisungen.
- Vergewissern Sie sich, daß Spannung und Frequenz Ihrer Stromquelle mit der Spannung und Frequenz übereinstimmen, die auf dem Etikett mit den elektrischen Nennwerten des Geräts angegeben sind.

- Stecken Sie auf keinen Fall irgendwelche Gegenstände in Öffnungen in den Geräten. Leitfähige Gegenstände könnten aufgrund der möglicherweise vorliegenden gefährlichen Spannungen einen Kurzschluß verursachen, der einen Brand, Stromschlag oder Geräteschaden herbeiführen kann.

## Symbole

Die Symbole in diesem Handbuch haben folgende Bedeutung:

TABLE C-2

	Achtung – Gefahr von Verletzung und Geräteschaden. Befolgen Sie die Anweisungen.		Ein – Setzt das System unter Wechselstrom.
	Achtung – Hohe Temperatur. Nicht berühren, da Verletzungsgefahr durch heiße Oberfläche besteht.		Aus – Unterbricht die Wechselstromzufuhr zum Gerät.
	Achtung – Gefährliche Spannungen. Anweisungen befolgen, um Stromschläge und Verletzungen zu vermeiden.		Wartezustand (Stand-by-Position) - Der Ein-/Wartezustand-Schalter steht auf Wartezustand. Änderungen an Sun-Geräten.

Nehmen Sie keine mechanischen oder elektrischen Änderungen an den Geräten vor. Sun Microsystems, übernimmt bei einem Sun-Produkt, das geändert wurde, keine Verantwortung für die Einhaltung behördlicher Vorschriften

## Aufstellung von Sun-Geräten



**Caution** - Achtung – Um den zuverlässigen Betrieb Ihres Sun-Geräts zu gewährleisten und es vor Überhitzung zu schützen, dürfen die Öffnungen im Gerät nicht blockiert oder verdeckt werden. Sun-Produkte sollten niemals in der Nähe von Heizkörpern oder Heizluftklappen aufgestellt werden.

# Einhaltung der SELV-Richtlinien

Die Sicherung der I/O-Verbindungen entspricht den Anforderungen der SELV-Spezifikation.

## Ergonomie-Richtlinien

Um den Anforderungen der in Deutschland geltenden Ergonomie-Richtlinie ZH1/618 zu entsprechen, wurde der Bildschirm entspiegelt. Für Textverarbeitungsanwendungen wird ein positiver Anzeigemodus (schwarze Zeichen auf weißem Hintergrund) empfohlen.

## Anschluß des Netzkabels

---



**Caution** - Achtung – Sun-Produkte sind für den Betrieb an Einphasen-Stromnetzen mit geerdetem Nulleiter vorgesehen. Um die Stromschlaggefahr zu reduzieren, schließen Sie Sun-Produkte nicht an andere Stromquellen an. Ihr Betriebsleiter oder ein qualifizierter Elektriker kann Ihnen die Daten zur Stromversorgung in Ihrem Gebäude geben.

---



**Caution** - Achtung – Nicht alle Netzkabel haben die gleichen Nennwerte. Herkömmliche, im Haushalt verwendete Verlängerungskabel besitzen keinen Überlastungsschutz und sind daher für Computersysteme nicht geeignet.

---



**Caution** - Achtung – Ihr Sun-Gerät wird mit einem dreiadrigen Netzkabel für geerdete Netzsteckdosen geliefert. Um die Gefahr eines Stromschlags zu reduzieren, schließen Sie das Kabel nur an eine fachgerecht verlegte, geerdete Steckdose an.

---

Die folgende Warnung gilt nur für Geräte mit Wartezustand-Netzschalter:

---



**Caution** - Achtung – Der Ein/Aus-Schalter dieses Geräts schaltet nur auf Wartezustand (Stand-By-Modus). Um die Stromzufuhr zum Gerät vollständig zu unterbrechen, müssen Sie das Netzkabel von der Steckdose abziehen. Schließen Sie den Stecker des Netzkabels an eine in der Nähe befindliche, frei zugängliche, geerdete Netzsteckdose an. Schließen Sie das Netzkabel nicht an, wenn das Netzteil aus der Systemeinheit entfernt wurde.

---

## Lithiumbatterie

---



**Caution** - Achtung – CPU-Karten von Sun verfügen über eine Echtzeituhr mit integrierter Lithiumbatterie (Teile-Nr. MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ, oder MK48T08). Diese Batterie darf nur von einem qualifizierten Servicetechniker ausgewechselt werden, da sie bei falscher Handhabung explodieren kann. Werfen Sie die Batterie nicht ins Feuer. Versuchen Sie auf keinen Fall, die Batterie auszubauen oder wiederaufzuladen.

---

## Gehäuseabdeckung

Sie müssen die obere Abdeckung Ihres Sun-Systems entfernen, um interne Komponenten wie Karten, Speicherchips oder Massenspeicher hinzuzufügen. Bringen Sie die obere Gehäuseabdeckung wieder an, bevor Sie Ihr System einschalten.



**Caution** - Achtung – Bei Betrieb des Systems ohne obere Abdeckung besteht die Gefahr von Stromschlag und Systemschäden.

---

## Einhaltung der Richtlinien für Laser

Sun-Produkte, die mit Laser-Technologie arbeiten, entsprechen den Anforderungen der Laser Klasse 1.



Figure C-2

---

## Conformité aux normes de sécurité

Ce texte traite des mesures de sécurité qu'il convient de prendre pour l'installation d'un produit Sun Microsystems.

# Mesures de sécurité

Pour votre protection, veuillez prendre les précautions suivantes pendant l'installation du matériel :

- Suivre tous les avertissements et toutes les instructions inscrites sur le matériel.
- Vérifier que la tension et la fréquence de la source d'alimentation électrique correspondent à la tension et à la fréquence indiquées sur l'étiquette de classification de l'appareil.
- Ne jamais introduire d'objets quels qu'ils soient dans une des ouvertures de l'appareil. Vous pourriez vous trouver en présence de hautes tensions dangereuses. Tout objet conducteur introduit de la sorte pourrait produire un court-circuit qui entraînerait des flammes, des risques d'électrocution ou des dégâts matériels.

## Symboles

Vous trouverez ci-dessous la signification des différents symboles utilisés :

TABLE C-3

	Attention : risques de blessures corporelles et de dégâts matériels. Veuillez suivre les instructions.		MARCHE – Votre système est sous tension (courant alternatif).
	Attention : surface à température élevée. Evitez le contact. La température des surfaces est élevée et leur contact peut provoquer des blessures corporelles.		ARRET – Votre système est hors tension (courant alternatif).
	Attention : présence de tensions dangereuses. Pour éviter les risques d'électrocution et de danger pour la santé physique, veuillez suivre les instructions.		VEILLEUSE – L'interrupteur Marche/Veilleuse est en position « Veilleuse ».

## Modification du matériel

Ne pas apporter de modification mécanique ou électrique au matériel. Sun Microsystems n'est pas responsable de la conformité réglementaire d'un produit Sun qui a été modifié.

## Positionnement d'un produit Sun



---

**Caution** - Attention : pour assurer le bon fonctionnement de votre produit Sun et pour l'empêcher de surchauffer, il convient de ne pas obstruer ni recouvrir les ouvertures prévues dans l'appareil. Un produit Sun ne doit jamais être placé à proximité d'un radiateur ou d'une source de chaleur.

---

## Conformité SELV

Sécurité : les raccordements E/S sont conformes aux normes SELV.

## Ergonomie européenne

Conformément à la norme d'ergonomie allemande ZH1/618, le CRT a été soumis à un traitement antireflets. Pour le traitement de texte, un affichage en mode positif (c'est-à-dire des caractères noirs sur fond blanc) est nécessaire.

## Connexion du cordon d'alimentation



---

**Caution** - Attention : les produits Sun sont conçus pour fonctionner avec des alimentations monophasées munies d'un conducteur neutre mis à la terre. Pour écarter les risques d'électrocution, ne pas brancher de produit Sun dans un autre type d'alimentation secteur. En cas de doute quant au type d'alimentation électrique du local, veuillez vous adresser au directeur de l'exploitation ou à un électricien qualifié.

---



---

**Caution** - Attention : tous les cordons d'alimentation n'ont pas forcément la même puissance nominale en matière de courant. Les rallonges d'usage domestique n'offrent pas de protection contre les surcharges et ne sont pas prévues pour les systèmes d'ordinateurs. Ne pas utiliser de rallonge d'usage domestique avec votre produit Sun.

---



---

**Caution** - Attention : votre produit Sun a été livré équipé d'un cordon d'alimentation à trois fils (avec prise de terre). Pour écarter tout risque d'électrocution, branchez toujours ce cordon dans une prise mise à la terre.

---

L'avertissement suivant s'applique uniquement aux systèmes équipés d'un interrupteur VEILLEUSE:

---



**Caution** - Attention : le commutateur d'alimentation de ce produit fonctionne comme un dispositif de mise en veille uniquement. C'est la prise d'alimentation qui sert à mettre le produit hors tension. Veillez donc à installer le produit à proximité d'une prise murale facilement accessible. Ne connectez pas la prise d'alimentation lorsque le châssis du système n'est plus alimenté.

---

## Batterie au lithium

---



**Caution** - Attention : sur les cartes CPU Sun, une batterie au lithium (référence MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ, ou MK48T08.) a été moulée dans l'horloge temps réel SGS. Les batteries ne sont pas des pièces remplaçables par le client. Elles risquent d'exploser en cas de mauvais traitement. Ne pas jeter la batterie au feu. Ne pas la démonter ni tenter de la recharger.

---

## Couvercle

Pour ajouter des cartes, de la mémoire, ou des unités de stockage internes, vous devrez démonter le couvercle de l'unité système Sun. Ne pas oublier de remettre ce couvercle en place avant de mettre le système sous tension.

---



**Caution** - Attention : il est dangereux de faire fonctionner un produit Sun sans le couvercle en place. Si l'on néglige cette précaution, on encourt des risques de blessures corporelles et de dégâts matériels.

---

## Conformité aux certifications Laser

Les produits Sun qui font appel aux technologies lasers sont conformes aux normes de la classe 1 en la matière.



Figure C-3

---

## Normativas de seguridad

El siguiente texto incluye las medidas de seguridad que se deben seguir cuando se instale algún producto de Sun Microsystems.

### Precauciones de seguridad


Para su protección observe las siguientes medidas de seguridad cuando manipule su equipo:

- Siga todas los avisos e instrucciones marcados en el equipo.
- Asegúrese de que el voltaje y la frecuencia de la red eléctrica concuerdan con las descritas en las etiquetas de especificaciones eléctricas del equipo.
- No introduzca nunca objetos de ningún tipo a través de los orificios del equipo. Pueden haber voltajes peligrosos. Los objetos extraños conductores de la electricidad pueden producir cortocircuitos que provoquen un incendio, descargas eléctricas o daños en el equipo.

### Símbolos

En este libro aparecen los siguientes símbolos:

TABLE C-4

	Precaución - Existe el riesgo de lesiones personales y daños al equipo. Siga las instrucciones.		Encendido - Aplica la alimentación de CA al sistema.
	Precaución - Superficie caliente. Evite el contacto. Las superficies están calientes y pueden causar daños personales si se tocan.		Apagado - Elimina la alimentación de CA del sistema.
	Precaución - Voltaje peligroso presente. Para reducir el riesgo de descarga y daños para la salud siga las instrucciones.		En espera - El interruptor de Encendido/En espera se ha colocado en la posición de <i>En espera</i> .

## Modificaciones en el equipo

No realice modificaciones de tipo mecánico o eléctrico en el equipo. Sun Microsystems no se hace responsable del cumplimiento de las normativas de seguridad en los equipos Sun modificados.

## Ubicación de un producto Sun



**Caution** - Precaución - Para asegurar la fiabilidad de funcionamiento de su producto Sun y para protegerlo de sobrecalentamientos no deben obstruirse o taparse las rejillas del equipo. Los productos Sun nunca deben situarse cerca de radiadores o de fuentes de calor.

## Cumplimiento de la normativa SELV

El estado de la seguridad de las conexiones de entrada/salida cumple los requisitos de la normativa SELV.

## Normativa ergonómica europea

Para cumplir con el estándar de ergonomía alemán ZH1/618, se ha dotado a la pantalla con un tratamiento antireflectante. Para las aplicaciones de tratamiento de textos, se precisa un modo de visualización positivo (caracteres negros sobre fondo blanco).

### Conexión del cable de alimentación eléctrica

---



**Caution - Precaución** – Los productos Sun están diseñados para trabajar en una red eléctrica monofásica con toma de tierra. Para reducir el riesgo de descarga eléctrica, no conecte los productos Sun a otro tipo de sistema de alimentación eléctrica. Póngase en contacto con el responsable de mantenimiento o con un electricista cualificado si no está seguro del sistema de alimentación eléctrica del que se dispone en su edificio.

---



**Caution - Precaución** – No todos los cables de alimentación eléctrica tienen la misma capacidad. Los cables de tipo doméstico no están provistos de protecciones contra sobrecargas y por tanto no son apropiados para su uso con computadores. No utilice alargadores de tipo doméstico para conectar sus productos Sun.

---



**Caution - Precaución** – Con el producto Sun se proporciona un cable de alimentación con toma de tierra. Para reducir el riesgo de descargas eléctricas conéctelo siempre a un enchufe con toma de tierra.

---

La siguiente advertencia se aplica solamente a equipos con un interruptor de encendido que tenga una posición "En espera":

---



**Caution - Precaución** – El interruptor de encendido de este producto funciona exclusivamente como un dispositivo de puesta en espera. El enchufe de la fuente de alimentación está diseñado para ser el elemento primario de desconexión del equipo. El equipo debe instalarse cerca del enchufe de forma que este último pueda ser fácil y rápidamente accesible. No conecte el cable de alimentación cuando se ha retirado la fuente de alimentación del chasis del sistema.

---

## Batería de litio

---



**Caution** - Precaución - En las placas de CPU Sun hay una batería de litio insertada en el reloj de tiempo real, tipo SGS Núm. MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ, o MK48T08. Las baterías no son elementos reemplazables por el propio cliente. Pueden explotar si se manipulan de forma errónea. No arroje las baterías al fuego. No las abra o intente recargarlas.

---

## Tapa de la unidad del sistema

Debe quitar la tapa del sistema cuando sea necesario añadir tarjetas, memoria o dispositivos de almacenamiento internos. Asegúrese de cerrar la tapa superior antes de volver a encender el equipo.



**Caution** - Precaución - Es peligroso hacer funcionar los productos Sun sin la tapa superior colocada. El hecho de no tener en cuenta esta precaución puede ocasionar daños personales o perjudicar el funcionamiento del equipo.

---

## Aviso de cumplimiento con requisitos de láser

Los productos Sun que utilizan la tecnología de láser cumplen con los requisitos de láser de Clase 1.



*Figure C-4*

---

# Nordic Lithium Battery Cautions

## Norge

---



**Caution - A D V A R S E L** - Litiumbatteri — Eksplosjonsfare. Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten. Brukt batteri returneres apparatleverandøren.

---

## Sverige

---



**Caution - VARNING** - Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren. Kassera använt batteri enligt fabrikantens instruktion.

---

## Danmark

---



**Caution - ADVARSEL!** - Litiumbatteri — Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.

---

## Suomi

---



**Caution - VAROITUS** - Paristo voi räjähtää, jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

---



---

## Illustrated Parts Breakdown

---

This appendix consists of a sequence of illustrations that show how the various pieces of the system fit together. Part numbers are also provided.

---

## Illustrated Parts Breakdown

The following items for the Sun Enterprise 250 server can be replaced at the customer site by a qualified service engineer.

**Note** - Part numbers listed in this section are correct as of the manual publication date but are subject to change without notice. Consult your authorized Sun sales representative or service provider to confirm a part number prior to ordering a replacement part.

---

TABLE D-1

Category	Replacement Part	Part Number
Main Logic Board and Components	Main Logic Board	501-4681
	DIMM, 32 MB, 60 NS	501-2622
	DIMM, 64 MB, 60 NS	501-2480
	DIMM, 128 MB, 60 NS	501-3136

---

TABLE D-1 (continued)

Category	Replacement Part	Part Number
	UltraSPARC II CPU (250 MHz, 1 MB Ecache)	501-4857
	UltraSPARC II CPU (300 MHz, 2 MB Ecache)	501-4849
	SSP Paddle Card and Cable	501-4818
	PGX Graphics Frame Buffer Card, PCI	370-2256
Backplanes	UltraSCSI Backplane	501-4682
	Power Distribution Board	501-4683
Storage Devices		
	4.2 GB UltraSCSI Disk Drive	540-2938
	9 GB UltraSCSI Disk Drive	540-2951
	12X CD-ROM Drive	370-2817
	32X CD-ROM Drive	370-3416
	Diskette Drive	370-2730
	12-24 GB 4 mm DDS3 Tape Drive	370-2376
Miscellaneous Assemblies		
	Fan Tray Assembly	540-3274
	Power Supply (360W)	300-1352
	LED/Keypress Assembly	540-3604
	PCI Filler Panel	340-3256
	Diskette Filler Panel (plastic)	330-2400
	CD-ROM/Tape Filler Panel (plastic)	330-2399
	Power Supply Filler Panel	340-4416

**TABLE D-1** (continued)

<b>Category</b>	<b>Replacement Part</b>	<b>Part Number</b>
<b>Panels and Doors</b>		
	Disk Access Door	540-3352
	RMA Bezel	540-3273
<b>Internal Cables</b>		
	CPU 5V Power Cable	530-2441
	CPU 3.3V Power Cable	530-2444
	System Interlock Cable	530-2482
	14-pin Power Sense Cable	530-2480
	16-pin Power Sense Cable	530-2481
	UltraSCSI Power Cable	530-2443
	UltraSCSI Data Cable	530-2446
	Keypress/LED Cable	530-2525
	Removable Media SCSI Cable	530-2445
	Removable Media Power Cable	530-2440
	Diskette Data Cable	530-2439
	Fan Tray Cable	530-2685

# Assembly Illustrations

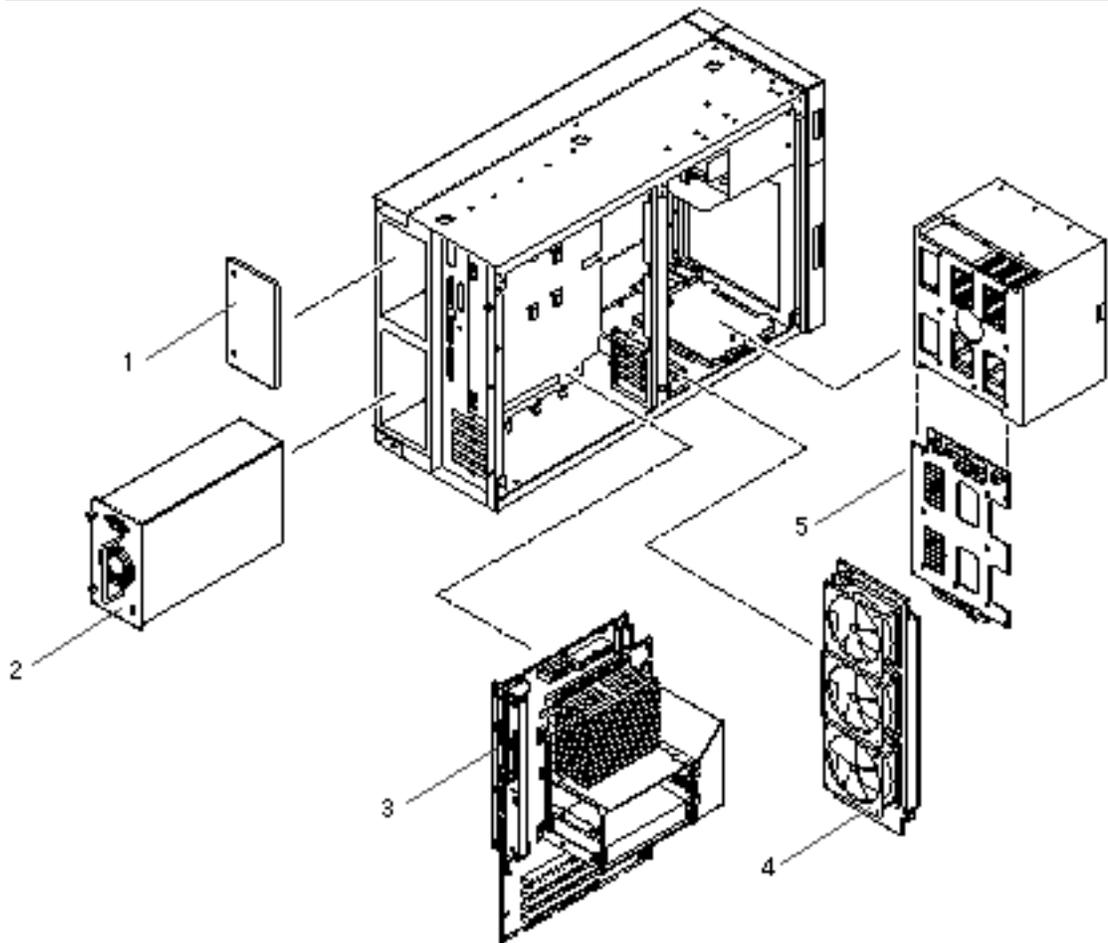


Figure D-1

TABLE D-2

Description	Part Number
Power Supply Filler Panel	340-4416
Power Supply (360W)	300-1352

TABLE D-2 (continued)

Keycription	Part Number
Main Logic Board	501-4681
Fan Tray Assembly	540-3274
UltraSCSI Backplane	501-4682

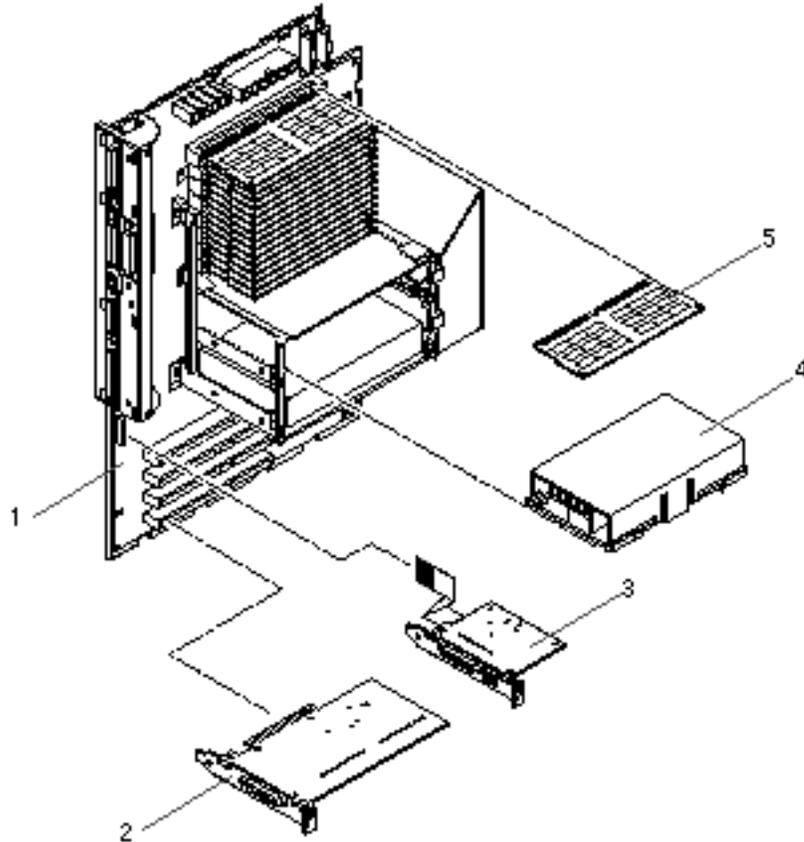


Figure D-2

TABLE D-3

<b>Description</b>	<b>Part Number</b>
Main Logic Board	501-4681
VGX Graphics Frame Buffer Card, PCI	370-2256
SSP Paddle Card and Cable	501-4818
UltraSPARC II CPU (250 MHz, 1 MB Ecache)	501-4857
UltraSPARC II CPU (300 MHz, 2 MB Ecache)	501-4849
DIMM, 32 MB, 60 NS	501-2622
DIMM, 64 MB, 60 NS	501-2480
DIMM, 128 MB, 60 NS	501-3136

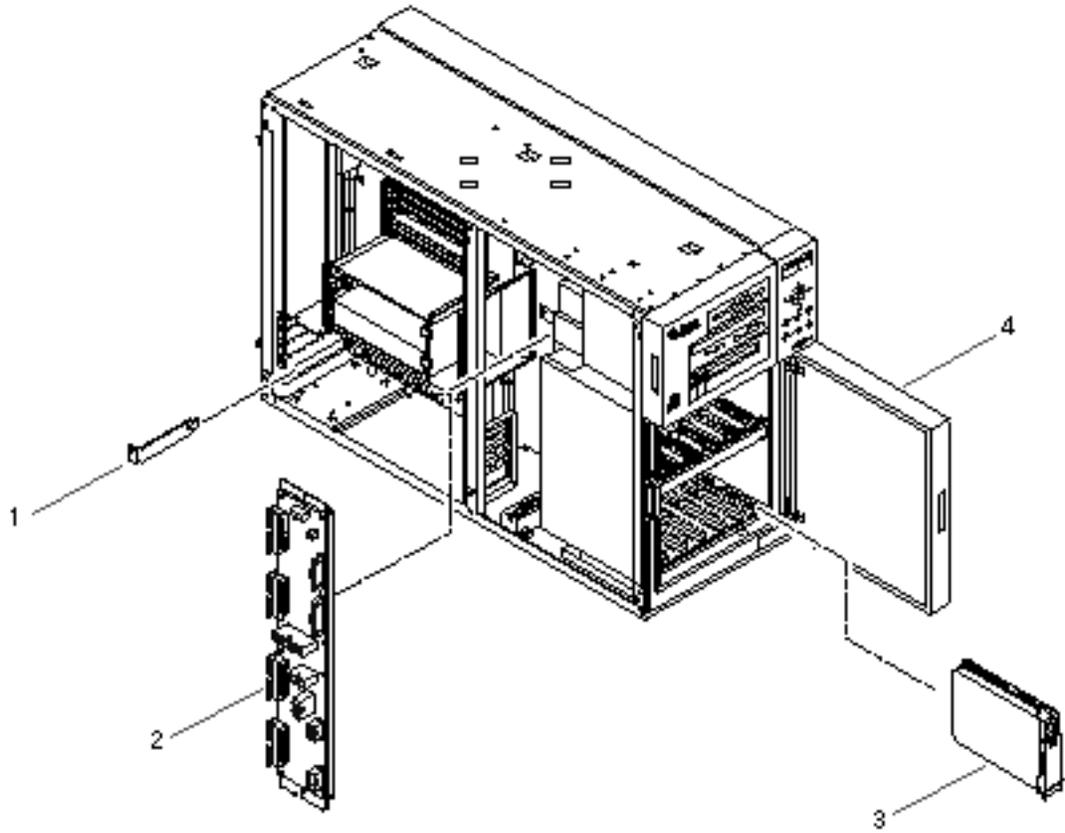


Figure D-3

TABLE D-4

Description	Part Number
PCI Filler Panel	340-3256
Power Distribution Board	501-4683
3.2 GB UltraSCSI Disk Drive	540-2938
9 GB UltraSCSI Disk Drive	540-2951
Disk Access Door	540-3352

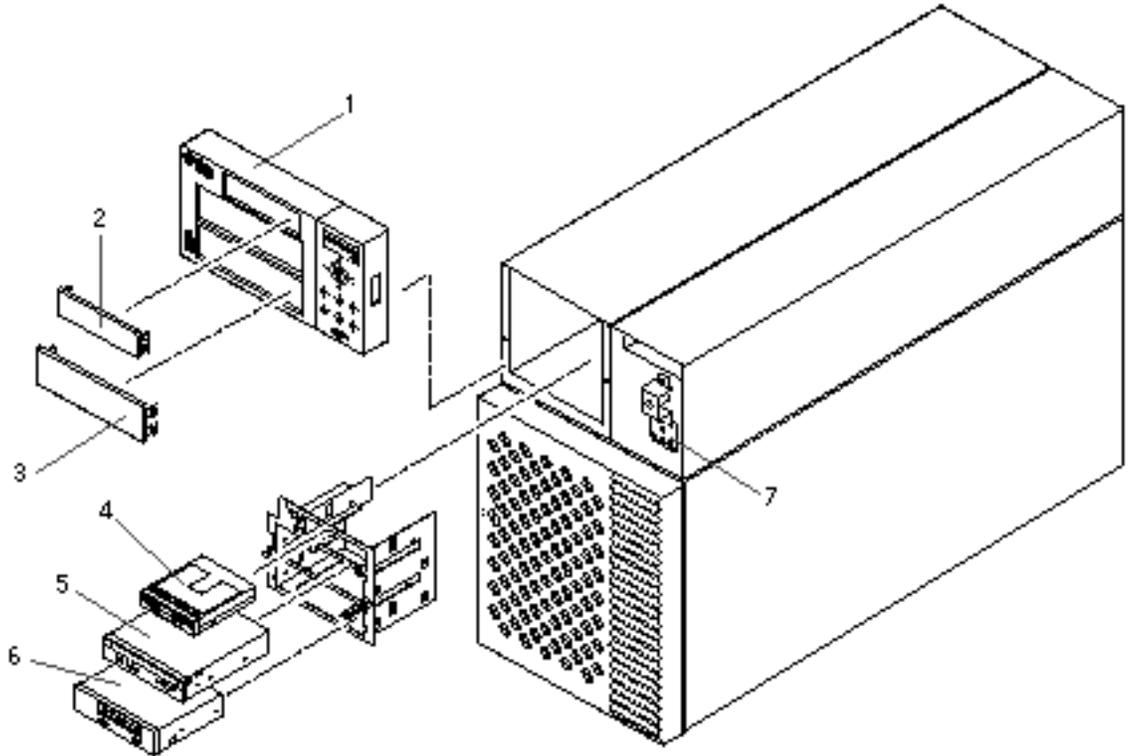


Figure D-4

TABLE D-5

Description	Part Number
RMA Bezel	540-3273
Diskette Filler Panel (plastic)	330-2400
CD-ROM/Tape Filler Panel (plastic)	330-2399
Diskette Drive	370-2730

TABLE D-5 (continued)

Description	Part Number
52X CD-ROM Drive	370-2817
32X CD-ROM Drive	370-3416
62-24 GB 4 mm DDS3 Tape Drive	370-2376
LED/Keyswitch Assembly	540-3604

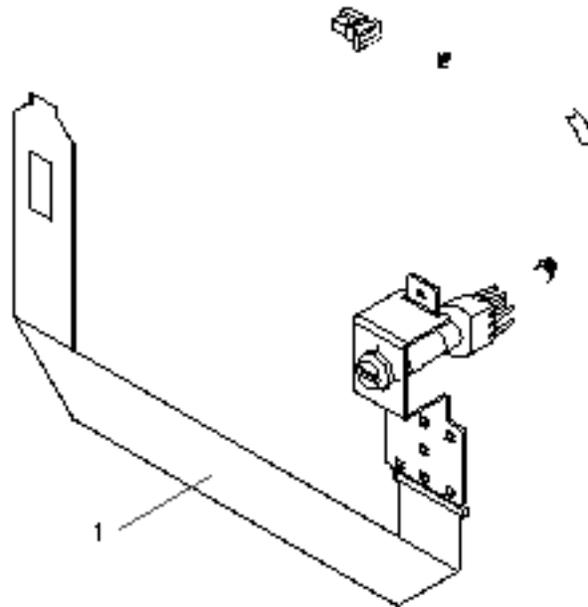


Figure D-5

TABLE D-6

Description	Part Number
LED/Keyswitch Assembly	540-3604



## Video Player Help

---

This AnswerBook2 document provides online video demonstrations of installation and repair procedures and other technical content in narrated video files. If you have access to version 1.70 (or later) of the AnswerBook2 server, and to a video player and a browser configured to use the video player, you can play these online videos by clicking on the video icon, shown below, where it appears in the document.



*Figure E-1*

---

## Do You Have a Problem Playing Video?

In order to play videos from the AnswerBook2 product, your administrator must install Version 1.70 or greater of the AnswerBook2 server software on the server. Consult your system administrator to confirm that the correct version of the server software is being used.

Sun workstation users:

- If you are unsure of what the problem might be, see “Requirements for Playing Video” on page 324.
- If you cannot get a video player to start, or a video player starts but does not work, see “Installing the ShowMe TV Player on Solaris Systems” on page 325.

- If you have installed a supported video player, but your browser is not finding it, see “Configuring Browsers to Use ShowMe TV” on page 327.
- If the movie files take several minutes to download, if the color is not acceptable, or if you get video but no audio, see “Improving Online Video Performance” on page 331.

PC users can view AnswerBook2 videos using ActiveMovie, which is commonly available for Windows95 and NT systems. ActiveMovie configures itself automatically to your browser.

- If you are unsure of what the problem might be, see “Requirements for Playing Video” on page 324.
- If the movie files take several minutes to download, if the color is not acceptable, or if you get video but no audio, see “Improving Online Video Performance” on page 331.

---

## Requirements for Playing Video

The following browser-video player combinations are supported:

- On a PC running either Windows95 or NT software, version 4.0 or later
  - ActiveMovie and Netscape, version 3.x or later
  - ActiveMovie and Internet Explorer, version 4.0 or later

On a PC, ActiveMovie should work with the supported platforms listed above. If you do not have ActiveMovie on your system, you must obtain it. No special installation or configuration procedures are required.

---

**Note** - Other browser-player combinations may work, but have not been tested.

---

- On a Sun workstation running the Solaris 2.4 environment or later
  - ShowMe™ TV, version 1.2 or later installed, and Netscape version 3.x or later
  - ShowMe TV, version 1.2 or later installed, and HotJava™ version 1.1 or later

On a Sun workstation, you will need to install the ShowMe TV software and configure one of the supported browsers listed above to use ShowMe TV. If clicking on the video icon does not launch a video player capable of playing AnswerBook2 videos, you must do one or both of the following:

- Install ShowMe TV, if it is not already installed, on your system and configure your browser to use the installed ShowMe TV player

- Configure your browser with the path to an exported file system containing the player

---

## Installing the ShowMe TV Player on Solaris Systems

If you are using a PC to access the AnswerBook2 documentation, you do *not* need to read this section. ShowMe TV is only for Sun workstation users. PC users can view online videos using ActiveMovie, which is widely available but not supplied by Sun.

If you are using a Sun workstation, ShowMe TV is the supported movie player. ShowMe TV software was shipped with the AnswerBook2 collection you are now viewing. Before your browser can play videos using ShowMe TV, you must install the player on your own system so that the browser can access it.

There are two ways to access the ShowMe TV software, the first of which does not require any installation procedure on your part.

1. If your administrator has stored the ShowMe TV player in a mounted, exported file system, you can already access this software without any installation. Consult your system administrator to determine if this applies to you.

If the exported file system is in your path, you should be able to type `showmetv` in a command window, and the ShowMe TV player will start. In this case, you can skip to “Configuring Browsers to Use ShowMe TV” on page 327 and configure your browser to use the accessible version of the video player.

If the exported file system is *not* in your path, you need to find out the path from your administrator and then skip to “Configuring Browsers to Use ShowMe TV” on page 327. You will need to enter the full path to the software in your browser.

2. If your administrator has not stored the ShowMe TV player in a mounted, exported file system, you will need to retrieve the ShowMe TV `tar` file, extract the packages, and install the ShowMe TV player software on your local system. See “How to Install ShowMe TV on Your System” on page 325 for step-by-step instructions.

### How to Install ShowMe TV on Your System

If your AnswerBook2 server is not a mounted file server, the ShowMe TV software must be copied via `ftp` from the AnswerBook2 server into your `/tmp` directory so that you can install it. Instructions for using the `ftp` command are provided below. If you need further assistance, please consult your system administrator.

---

**Note** - If the AnswerBook2 server is also a file server, you can copy the tar file using the Solaris `cp` command instead of using `ftp`.

---

- 1. Log in as the `root` user of your system. You must have `root` access to your system to install software on it. Type:**

```
hostname console login: root
password: password
```

Or

```
hostname% su
password: password
```

- 2. To retrieve the client software via FTP, follow these steps.**
  - a. Activate the FTP program by typing this command:**

```
# ftp
servername
```

Where *servername* is the hostname of the AnswerBook2 server.

- b. The FTP program will request that you type in your user name and password:**

```
Name:
username
Password: password
```

- c. While in the FTP environment, type these commands:**

```
ftp> binary
ftp> get /smtvtmp/smtv.tar /tmp/smtv.tar
ftp> bye
```

The FTP program will end.

- 3. To extract the contents of the `smtv.tar` file, type:**

```
# tar -xvf /tmp/smtv.tar /tmp
```

- 4. Install the ShowMe TV package. Type:**

```
# pkgadd -d /tmp SUNWsmtvh SUNWsmtvr SUNWsmtvu
```

The packages are installed in your `/opt` directory by default; however, the `pkgadd` command gives you the option to select a directory other than `/opt`.

**5. Log out as the root user. Type:**

```
# exit
```

When you have completed the installation, you will need to configure your browser to use the ShowMe TV software. See “Configuring Browsers to Use ShowMe TV” on page 327.

---

## Configuring Browsers to Use ShowMe TV

Once you have access to the ShowMe TV player, you must configure your Netscape or HotJava browser to use it. This section provides instructions for configuring the browsers. These instructions are provided as an example. The screens you see may differ depending on the version of the browser you are running.

- “Configuring Netscape to Use ShowMe TV ” on page 327
- “Configuring HotJava to Use ShowMe TV” on page 330

### Configuring Netscape to Use ShowMe TV

1. **From the Edit menu at the top of the Netscape window, select the Preferences option.**
2. **Under the Category menu in the left-hand column, expand the Navigator option.**
3. **Select Applications from the Category menu, as shown below, and scroll down the Applications window until you find the entries for MPEG video and video/**  
\*.

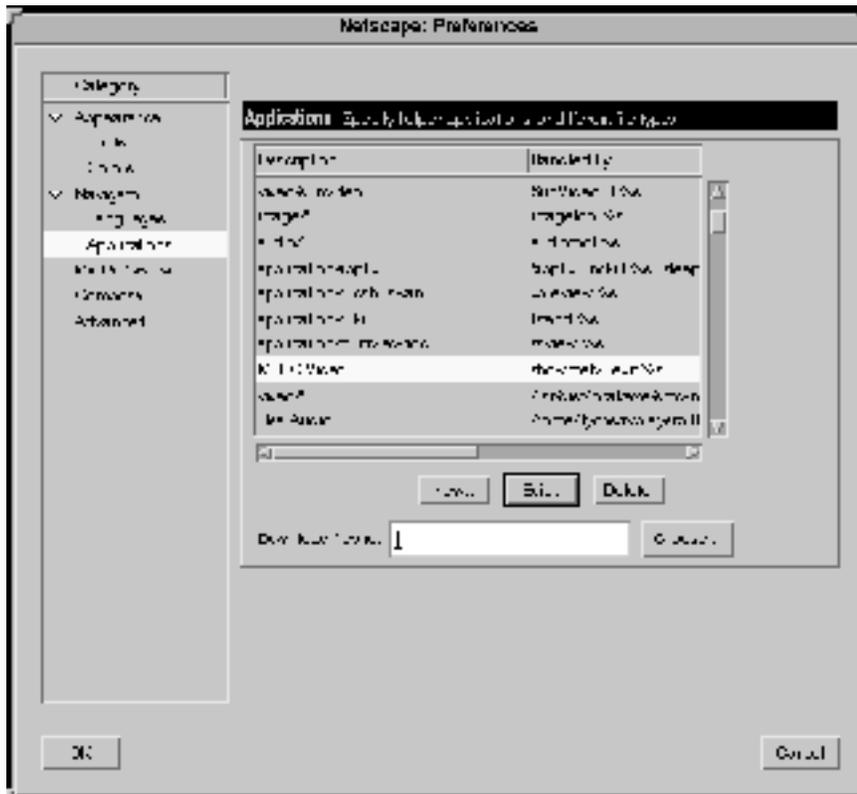


Figure E-2

4. Click on the MPEG Video entry to select it.
5. Click on the Edit button, and enter the information shown below into the Netscape: Application dialog box.

Enter the following information:

- Beside MIMEType, enter `video/mpeg`
- Beside suffixes, enter `mpg` for the Sun videos. You can also enter `mpeg` to accommodate file names from other suppliers.
- Beside Application, enter the path to the installed ShowMe TV player software, such as `/opt/SUNWsmtv/bin/showmetv -exit %s`. If your administrator has made ShowMe TV available to you in an exported file system, enter the

path to the exported software. If the directory containing the command is not in your path, you should provide the full path.

The `-exit` option configures the movie player to quit after the movie finishes playing. If you do not use this option, the player will continue to play the selected video until you instruct it to stop.

An example of the Edit screen is shown below.

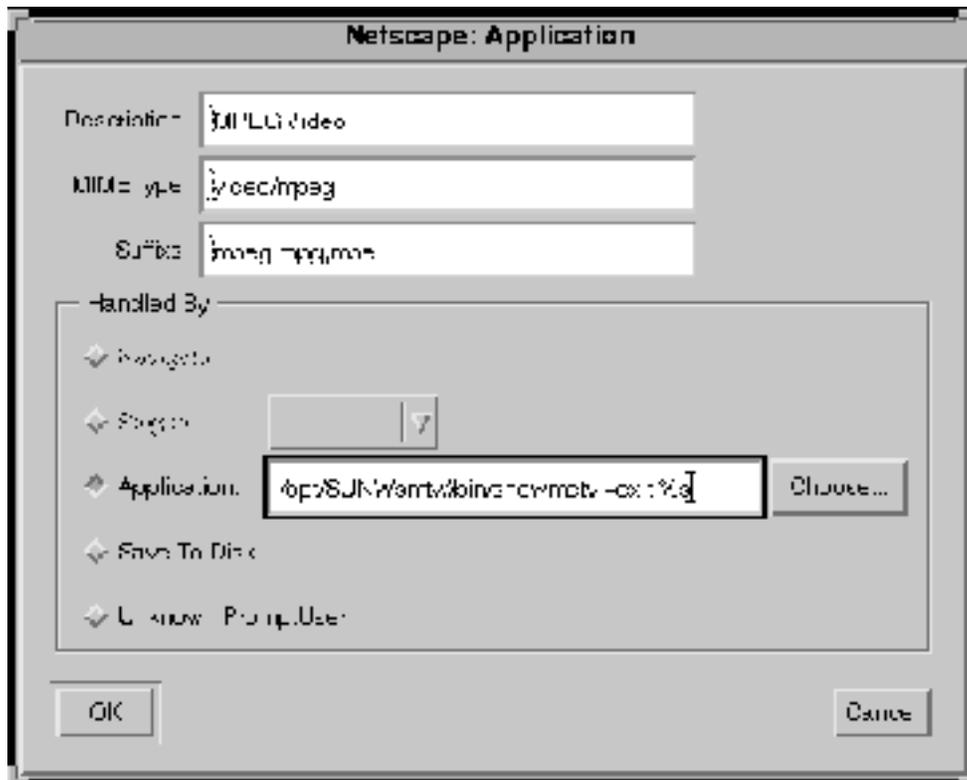


Figure E-3

6. When you have finished, click on the OK button on the Edit screen.
7. Repeat Steps 4 through 6 to change the settings for the video/\* entry. The settings should be identical to the MPEG Video settings.
8. Click on the OK button of the Netscape: Preferences dialog box, so that your changes will take effect.

You should now be able to play the video using the ShowMe TV player by clicking on the video icon in the AnswerBook2 documentation.

---

**Note** - After you have configured the Netscape browser to use the ShowMe TV player, you will be able to play videos through ShowMe TV in future Netscape sessions. As long as you access the same Netscape application, you do not need to configure the browser again.

---

## Configuring HotJava to Use ShowMe TV

1. From the Edit menu at the top of the HotJava window, select Preferences ==> Viewer Applications.

2. Scroll down the Content Types box and select MPEG Video Clip.

3. Update the information for MPEG Video Clip as explained here.

Enter the following information:

- Beside Description, enter MPEG Video Clip
- Beside Extensions, enter mpg for the Sun videos. You can also enter mpeg to accommodate file names from other suppliers
- Beside Action, select the View in Application option
- Beside Application, enter the path to the installed ShowMe TV player software, such as /opt/SUNWsmtv/bin/showmetv -exit %s. If your administrator has made ShowMe TV available to you in an exported file system, enter the path to the exported software. If the directory containing the command is not in your path, you should provide the full path.

The -exit option configures the movie player to quit after the movie finishes playing. If you do not use this option, the player will continue to play the selected video until you instruct it to stop.

4. Click on the Apply button so that your changes will take effect.

5. Click on the Back arrow to return to the page with the video.

You should now be able to play the video using the ShowMe TV player by clicking on the video icon in the AnswerBook2 documentation.

---

**Note** - After you have configured the HotJava browser to use the ShowMe TV player, you will be able to play videos through ShowMe TV in future HotJava sessions. As long as you access the same HotJava application, you do not need to configure the browser again.

---

---

# Improving Online Video Performance

To find out about each topic, go to:

- “Improving File Loading Time” on page 331
- “Avoiding Using Proxy Servers to Access the AnswerBook2 Server” on page 331
- “Quitting the Video Player” on page 333
- “Adjusting the Brightness of ShowMe TV Files” on page 334

Playing video online requires considerable computer resources compared to other computer applications. This section alerts you to measures you can take to improve performance and conserve system resources.

The video files are stored in your site’s AnswerBook2 directory. Each video file can be as large as 10 to 30 Mbytes, or even larger. The size of the video file is displayed next to the video icon. When you click on the video icon, AnswerBook2 launches the video player for which your browser is configured. Once started, your video player downloads the selected file to your local system, where it is temporarily stored in your system swap space. When you quit the video player, the swap space is released.

## Improving File Loading Time

Downloading video files can take anywhere from seconds to minutes, depending on the size of the file and the amount of network traffic. Because load time is so dependent on your network environment, it is impossible to be more specific. The status bar at the bottom of your browser window will generally provide real-time reports on what percentage of the file has been downloaded.

To improve access times to the videos, you can store the AnswerBook2 collection on your local disk. Keep in mind that the size of the AnswerBook2 collection can be as large as 660 Mbytes. If storing the AnswerBook2 locally is not an option, load times will be improved by having the AnswerBook2 stored on the same subnetwork as your own system. If you find the load times of videos are unacceptable, speak to your administrator about storing the AnswerBook2 collection on your subnetwork.

## Avoiding Using Proxy Servers to Access the AnswerBook2 Server

Some web browsers are configured to use proxies. These proxies may slow down or prevent viewing of the AnswerBook2 documents by the web browser. Normally, however, proxies are used primarily to access external sites. In the unlikely event that your browser does access the AnswerBook2 server through a proxy, perform the

procedure that follows which describes how you can configure your web browser not to use proxies.

---

**Note** - The procedures shown here are examples that apply to specific browsers. If you are using a different browser, the procedure you use will differ slightly.

---

## To Configure HotJava Browser 1.1 Not to Use Proxies

### 1. Log in to the client as a user. Type:

```
hostname console login:  
  username  
  password: password
```

### 2. Start the HotJava browser.

### 3. From the Edit menu, choose Preferences ==> Proxies...

The Proxies window opens.

### 4. In the large Don't Proxy field, type the full hostname of the AnswerBook2 server.

### 5. Click on the Apply button and then click the Back button.

## To Configure Netscape Navigator 4.x Not to Use Proxies

### 1. Log in to the client as a user. Type:

```
hostname console login:  
  username  
  password: password
```

### 2. Start the Navigator browser.

### 3. For Navigator 4.x, perform the following steps:

#### a. Choose Preferences from the Edit menu.

The Netscape: Preferences window is displayed.

#### b. Click on the triangle next to Advanced, and then click on Proxies.

The Proxies window is displayed.

4. **If Manual proxy configuration has been selected, click on the View button. Otherwise, skip to Step 6.**  
The Netscape: View Manual Proxy Configuration window opens.
5. **In the No Proxy for field, type the full hostname of the AnswerBook2 server and click OK.**
6. **If Automatic proxy configuration has been selected (and you find that it takes a long time for the video file to start up), you should consult your system administrator for advice about switching to a Manual configuration.**
7. **Click OK to complete the task.**

## To Configure Microsoft Internet Explorer Not to Use Proxies

1. **Log in to the client as a user.**
2. **Start the Internet Explorer browser.**
3. **From the main menu, choose View ==> Options.**  
The Options window is displayed.
4. **Click on the Connection tab.**  
The Proxy Server window is displayed.
5. **If Connect Through Proxy Server is checked, click on the Settings button. Otherwise, skip to Step 7.**  
The Proxy Settings window is displayed.
6. **In the field of the Exception window, type the full hostname of the AnswerBook2 server and click OK.**
7. **Click OK to complete the task.**

## Quitting the Video Player

Although AnswerBook2 and your browser software will launch the video player for you, it will not quit the player for you. The software has no way to determine when you have finished watching the video, or whether you intend to use it for watching other videos that are not part of AnswerBook2. Quitting the player is up to you. If you are using the ShowMe TV player on a Sun workstation, you should configure it to quit after playing the video file. Otherwise, it will play the file continuously until

you stop it. For instructions, see “Configuring Browsers to Use ShowMe TV” on page 327.

Here are some reasons to make sure you quit the video player when you have finished viewing a video:

- If you stop or pause a video player, the large video file remains in your swap space. You should quit your video player when it is not in use to free swap space.
- On a Sun workstation the ShowMe TV video player will appropriate the audio device on your system, so if you try to play a second video, or use another application that requires audio, the second application will not be able to deliver its audio portion. You should quit the video player to keep the audio device available for other videos or other applications.
- If you are using ActiveMovie on a PC, quitting the movie player is still advisable but less critical. ActiveMovie does not loop the video file, nor does it capture the audio device exclusively. But ActiveMovie will remain on your desktop until you exit the application, and the file you are playing remains in your swap space.

## Adjusting the Brightness of ShowMe TV Files

The settings on your monitor partly determine how bright or dark the video appears on your screen. The AnswerBook2 videos are digitized to look their best on an “average” monitor setting. If your monitor or video card do not fit this average profile, the video may seem too light or dark. When using the ShowMe TV player, you can adjust the brightness of the video file you are playing by selecting the Properties option under the TV pull-down menu. The Properties control sheet has a Brightness slider bar that will make the video lighter or darker.

There is no Brightness control available for ActiveMovie.

## Index to Videos

---

- “How to Remove the Side Access Panel” on page 60
- “How to Install the Side Access Panel” on page 62
- “How to Remove the Main Logic Board” on page 100
- “How to Install the Main Logic Board” on page 102
- “How to Remove a PCI Card” on page 112
- “How to Install a PCI Card” on page 114
- “How to Remove the SSP Paddle Card” on page 117
- “How to Install the SSP Paddle Card” on page 120
- “How to Remove the Removable Media Assembly (RMA)” on page 128
- “How to Install the Removable Media Assembly (RMA)” on page 132
- “How to Remove a CD-ROM Drive or Tape Drive” on page 139
- “How to Install a CD-ROM Drive or Tape Drive” on page 141
- “How to Remove the Diskette Drive” on page 144
- “How to Install the Diskette Drive” on page 146
- “How to Remove the LED/Keyswitch Assembly” on page 157
- “How to Install the LED/Keyswitch Assembly” on page 160