


Tape Drive Insulator Strip

A plastic strip (part #70-32518-01) *must* first be attached to a TLZ0n tape drive, when the tape drive is installed as the left-most removable-media device in a Digital Alpha VME 2100 system with no front bezel. To attach the insulator strip to the TLZ0n drive, follow these steps:

1. Remove the liner attached to the plastic strip.
2. Align the adhesive side of the plastic strip with the front edge of the TLZ0n drive, and press the strip firmly in place.
3. Continue with the installation of the tape drive. Refer to your *Digital Alpha VME 2100 Owner's Guide* (EK-DALPH-OG), for instructions.

WARNING

Before installing the TLZ0n, turn off all power to the system (both ac and dc.)

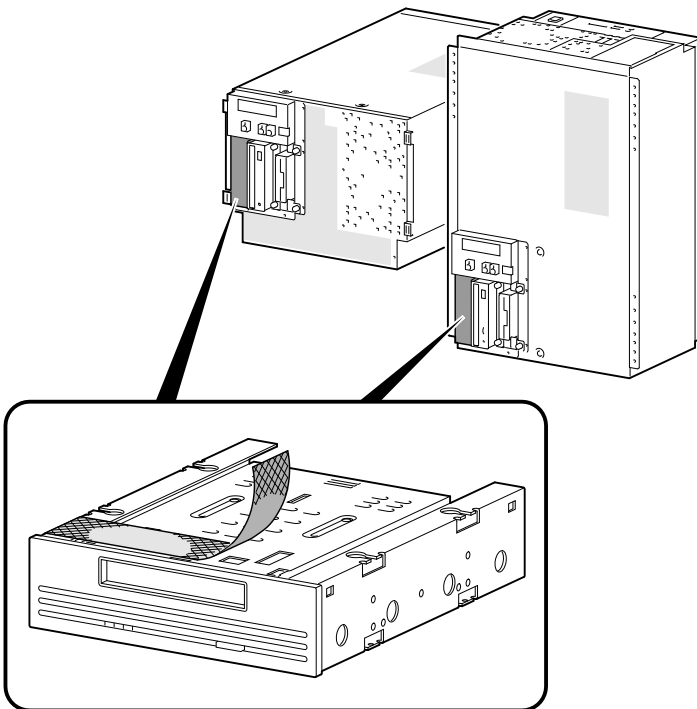

MLO-011669

© Digital Equipment Corporation 1995. All Rights Reserved.

Digital Equipment Corporation makes no representations that the use of its products in the manner described in this publication will not infringe on existing or future patent rights, nor do the descriptions contained in this publication imply the granting of licenses to make, use, or sell equipment or software in accordance with the description.

S2859

