



## RM Storage System Interlock Kit Installation Information

### EK-CDSTG-IN. A01

May 1999

### Introduction

The 2T-QINTL-CD interlock kit contains the components for installing the slide assemblies, the interlock system, and the shipping bracket on the rackmounted CD storage system. The interlock system helps prevent cabinet instability by allowing only one system at a time to be pulled out of the cabinet. The shipping bracket is used to secure the rackmounted CD storage system in the cabinet during shipment or when moving the cabinet to a new location.

The interlock system consists of a vertical rod, on which are mounted actuator latches for each product installed in the cabinet. These actuator latches engage the interlock actuator on the rear of rackmount systems. When a rackmount system is pulled out of the cabinet, the actuator latches rotate to prevent any other rackmount system that has an interlock actuator from being pulled out of the cabinet.

Table 1 lists the parts that are shipped with the 2T-QINTL-CD interlock kit. The callouts in column 1 refer to the part location in Figure 1.

**Table 1 2T-QINTL-CD Interlock Kit Parts List**

| Figure 1 Callout | Description   | Part Number | Qty. |
|------------------|---|-------------|------|
| ❶                | Slide bracket, front and rear                                   | 74-53882-01 | 4    |
| ❷                | 8-32 pan-head screw   | 90-06038-01 | 8    |
| ❸                | Flat washer, .190ID x .051THK                                   | 90-06660-00 | 8    |
| ❹                | Split washer, .171ID  | 90-06690-00 | 8    |
| ❺                | 8-32 hex nut  | 90-06561-00 | 8    |
| ❻                | 10-32 nut bar   | 74-53977-01 | 4    |
| ❼                | 10-32 truss-head screw  | 90-00063-39 | 12   |
| ❽                | Interlock actuator  | 74-53883-01 | 1    |
| ❾                | 6-32 truss-head screw   | 90-00063-10 | 6    |
| ❿                | Actuator latch  | 74-48997-02 | 1    |
| ①                | Stabilizer bracket  | 74-48996-01 | 1    |
| ②                | 10-32 threaded nut bar  | 74-48998-01 | 1    |
| ③                | Cable carrier mounting bracket                                  | 74-53975-01 | 1    |
| ④                | Flat washer, .286ID x .066THK                                   | 90-06676-00 | 2    |
| ⑤                | Split washer, .263ID  | 90-07797-00 | 2    |
| ⑥                | Shipping bracket  | 74-53884-01 | 1    |
| ⑦                | Flat washer, .221ID x .051THK                                   | 90-06664-00 | 2    |
| ⑧                | 10-32 Kep nut   | 90-06565-00 | 2    |
|                  | <i>RM Storage System Interlock Kit Installation Information</i> | EK-CDSTG-IN | 1    |

© Compaq Computer Corporation. 1999. All Rights Reserved.

® Compaq and the Compaq logo are registered in the United States Patent and Trademark Office.

## Installing the Slide Assemblies

The rackmounted CD storage system requires 17.78 cm (7.00 in.) of vertical space or 12 contiguous holes in a 48.26-cm (19-in) EIA cabinet. The bottom hole in this installation area ⑨ is identified as hole 1 and the top hole is identified as hole 12 (see Figure 1).

In the following installation procedures, directions are referred to while viewing the rackmounted CD storage system from the front of the cabinet. To install the slide assemblies, refer to Figure 1 and the following procedures:

1. Remove the inner races from the right and left slide assemblies. Set the inner races aside.
2. Attach the right front slide bracket ❶ to the right slide assembly with two 8-32 pan-head screws ❷, flat washers ❸, split washers ❹, and 8-32 hex nuts ❺.
3. Attach the right rear slide bracket ❶ to the right slide assembly with two 8-32 pan-head screws ❷, flat washers ❸, split washers ❹, and 8-32 hex nuts ❺, but *do not* tighten.
4. Attach the left front slide bracket ❶ to the left slide assembly with two 8-32 pan-head screws ❷, flat washers ❸, split washers ❹, and 8-32 hex nuts ❺.
5. Attach the left rear slide bracket ❶ to the left slide assembly with two 8-32 pan-head screws ❷, flat washers ❸, split washers ❹, and 8-32 hex nuts ❺, but *do not* tighten.
6. Place the right front slide bracket ❶ on the inside of the right front rail and align two holes of the 10-32 nut bar ❻ with the two slide bracket holes and with the 2nd and 4th holes of the installation area on the right front rail. Install two 10-32 truss-head screws ❼ in the 2nd and 4th holes of the installation area to secure the right front slide bracket to the right front rail.
7. Place the right rear slide bracket ❶ on the inside of the right rear rail and align two holes of the 10-32 nut bar ❻ with the two slide bracket holes and with the 2nd and 4th holes of the installation area on the right rear rail. Install two 10-32 truss-head screws ❼ in the 2nd and 4th holes of the installation area to secure the right rear slide bracket to the right rear rail. Tighten the two 8-32 pan-head screws ❷ and 8-32 hex nuts ❺ that secure the right rear slide bracket to the right slide assembly.
8. Place the left front slide bracket ❶ on the inside of the left front rail and align two holes of the 10-32 nut bar ❻ with the two slide bracket holes and with the 2nd and 4th holes of the installation area on the left front rail. Install two 10-32 truss-head screws ❼ in the 2nd and 4th holes of the installation area to secure the left front slide bracket to the left front rail.
9. Place the left rear slide bracket ❶ on the inside of the left rear rail and align two holes of the 10-32 nut bar ❻ with the two slide bracket holes and with the 2nd and 4th holes of the installation area on the left rear rail. Install two 10-32 truss-head screws ❼ in the 2nd and 4th holes of the installation area to secure the left rear slide bracket to the left rear rail. Tighten the two 8-32 pan-head screws ❷ and 8-32 hex nuts ❺ that secure the left rear slide bracket to the left slide assembly.
10. Attach the right inner race to the right side of the CD storage system chassis and the left inner race to the left side of the CD storage system chassis.
11. Pull both slide assemblies out fully to their locked positions, then lift the chassis and position it so that the inner races fit into the front end of the slide assemblies. Push the chassis into the slide assemblies until it stops, then release the two locking levers and push the chassis all the way into the cabinet.


## Installing the Interlock System

In the following installation procedures, directions are referred to while viewing the rackmount CD storage system from the rear of the cabinet. To install the interlock system, refer to Figure 1 and the following procedures:

1. Mount the interlock actuator ❸ on the upper right rear of the CD storage system chassis using two 6-32 truss-head screws ❹.
2. Remove the screws securing the vertical rod's bottom mounting bracket to the cabinet and slide the mounting bracket off the bottom of the vertical rod.
3. Slide the actuator latch ❿ for the CD storage system onto the bottom of the vertical rod.

4. Slide the stabilizer bracket ① for the new product onto the bottom of the vertical rod.
5. Replace the vertical rod's bottom mounting bracket and install the screws removed in step 2 but *do not* tighten them.
6. Position the stabilizer bracket ① so that the bottom hole in the stabilizer bracket is aligned with the 8th hole of the installation area and the top hole in the stabilizer bracket is aligned with the 11th hole of the installation area on the right rear cabinet rail.
7. Place the nut bar ② behind the right rear cabinet rail and install and tighten the two 10-32 truss-head screws ⑦ provided to secure the stabilizer bracket ①.
8. Position the actuator latch ⑩ to properly engage the interlock actuator, and tighten the two 6-32 set screws to secure the actuator latch to the vertical rod.
9. Now tighten the screws to secure the vertical rod's bottom mounting bracket.

**Figure 1 Installing the 2T-QINTL-CD Interlock Kit**

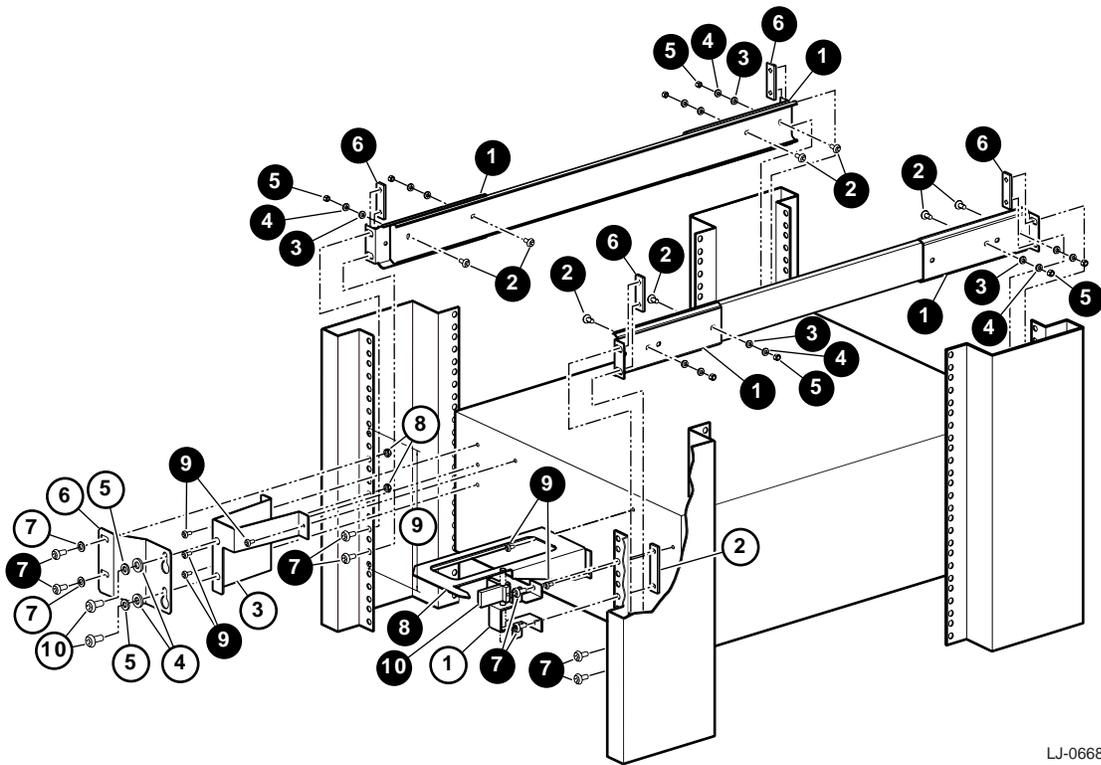

LJ-06687

## Installing the Shipping Bracket

In the following installation procedures, directions are referred to while viewing the rackmount CD storage system from the rear of the cabinet. The shipping bracket is used to secure the CD storage system in the cabinet during shipment or when moving the cabinet to a new location. To install the shipping bracket, refer to Figure 1 and the following procedures:

1. Mount the cable carrier mounting bracket ③ on the upper left rear of the CD storage system chassis using four 6-32 truss-head screws ⑨. At this time the cable carrier should be mounted on the mounting bracket with the two M6 screws ⑩.
2. **Removing and replacing one screw at a time**, remove the two M6 screws ⑩ securing the cable carrier to the mounting bracket and install two flat washers ④ and two split washers ⑤, then reinstall the two M6 screws ⑩.
3. To install the shipping bracket ⑥, loosen the two M6 screws ⑩ securing the cable carrier to the mounting bracket and place the large part of the two keyholes on the shipping bracket over the screw heads.
4. Slide the shipping bracket ⑥ down, until the top hole on the left side of the shipping bracket is aligned with the 10th hole of the installation area on the left rear cabinet rail. Tighten the two M6 screws ⑩ securing the shipping bracket and cable carrier to the mounting bracket.
5. Secure the shipping bracket ⑥ to the left rear rail with two flat washers ⑦, two 10-32 truss-head screws ①, and two 10-32 Kep nuts ⑧.