

---

# OpenVMS Alpha System Analysis Tools Manual

Order Number: AA-REZTB-TE

**April 2001**

This manual explains how to use various Alpha system analysis tools to investigate system failures and examine a running Compaq OpenVMS system.

**Revision/Update Information:** This manual supersedes the *OpenVMS Alpha System Analysis Tools Manual* Version 7.2

**Software Version:** OpenVMS Alpha Version 7.3

**Compaq Computer Corporation  
Houston, Texas**

---

© 2001 Compaq Computer Corporation

Compaq, AlphaServer, VAX, VMS, and the Compaq logo Registered in U.S. Patent and Trademark Office.

Alpha, OpenVMS, PATHWORKS, DECnet, and DEC are trademarks of Compaq Information Technologies Group, L.P. in the United States and other countries.

UNIX and X/Open are trademarks of The Open Group in the United States and other countries.

All other product names mentioned herein may be the trademarks of their respective companies.

Confidential computer software. Valid license from Compaq required for possession, use, or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Compaq shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided "as is" without warranty of any kind and is subject to change without notice. The warranties for Compaq products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.

ZK6549

The Compaq *OpenVMS* documentation set is available on CD-ROM.

---

# Contents

<b>Preface</b> .....	xi
<b>1 Overview of System Analysis Tools</b>	
1.1 System Dump Analyzer (SDA) .....	1-1
1.2 System Code Debugger (SCD) .....	1-1
1.3 System Dump Debugger (SDD) .....	1-2
1.4 Watchpoint Utility .....	1-2
1.5 Delta/XDelta Debugger .....	1-2
1.6 Dump Off System Disk (DOSD) .....	1-3
<b>Part I OpenVMS Alpha System Dump Analyzer (SDA)</b>	
<b>2 SDA Description</b>	
2.1 Capabilities of SDA .....	2-1
2.2 System Management and SDA .....	2-3
2.2.1 Writing System Dumps .....	2-3
2.2.1.1 Dump File Style .....	2-3
2.2.1.2 Comparison of Full and Selective Dumps .....	2-4
2.2.1.3 Controlling the Size of Page Files and Dump Files .....	2-5
2.2.1.4 Writing to the System Dump File .....	2-5
2.2.1.5 Writing to the Dump File off the System Disk .....	2-6
2.2.1.6 Writing to the System Page File .....	2-7
2.2.2 Saving System Dumps .....	2-8
2.2.3 Invoking SDA When Rebooting the System .....	2-8
2.3 Analyzing a System Dump .....	2-9
2.3.1 Requirements .....	2-10
2.3.2 Invoking SDA .....	2-10
2.3.3 Mapping the Contents of the Dump File .....	2-10
2.3.4 Building the SDA Symbol Table .....	2-11
2.3.5 Executing the SDA Initialization File (SDASINIT) .....	2-11
2.4 Analyzing a Running System .....	2-12
2.5 SDA Context .....	2-12
2.6 SDA Command Format .....	2-14
2.6.1 General Command Format .....	2-14
2.6.2 Expressions .....	2-14
2.6.2.1 Radix Operators .....	2-15
2.6.2.2 Arithmetic and Logical Operators .....	2-15
2.6.2.3 Precedence Operators .....	2-16
2.6.2.4 Symbols .....	2-16
2.7 Investigating System Failures .....	2-21
2.7.1 General Procedure for Analyzing System Failures .....	2-22

2.7.2	Fatal Bugcheck Conditions .....	2-22
2.7.2.1	Mechanism Array .....	2-23
2.7.2.2	Signal Array .....	2-25
2.7.2.3	64-Bit Signal Array .....	2-27
2.7.2.4	Exception Stack Frame .....	2-28
2.7.2.5	SSRVEXCEPT Example .....	2-28
2.7.2.6	Illegal Page Faults .....	2-33
2.8	Inducing a System Failure .....	2-33
2.8.1	Meeting Crash Dump Requirements .....	2-34
2.8.2	Procedure for Causing a System Failure .....	2-34

### 3 ANALYZE Usage Summary and Qualifiers

3.1	ANALYZE Usage Summary .....	3-1
3.2	ANALYZE Qualifiers .....	3-2
	/CRASH_DUMP .....	3-3
	/OVERRIDE .....	3-4
	/RELEASE .....	3-5
	/SYMBOL .....	3-6
	/SYSTEM .....	3-7

### 4 SDA Commands

@(Execute Command) .....	4-3
ATTACH .....	4-4
COPY .....	4-5
DEFINE .....	4-7
DEFINE/KEY .....	4-9
DUMP .....	4-12
EVALUATE .....	4-15
EXAMINE .....	4-18
EXIT .....	4-22
FORMAT .....	4-23
HELP .....	4-26
MAP .....	4-28
MODIFY DUMP .....	4-31
READ .....	4-33
REPEAT .....	4-41
SEARCH .....	4-43
SET CPU .....	4-45
SET ERASE_SCREEN .....	4-47
SET FETCH .....	4-48
SET LOG .....	4-50
SET OUTPUT .....	4-51
SET PROCESS .....	4-53
SET RMS .....	4-56
SET SIGN_EXTEND .....	4-59
SET SYMBOLIZE .....	4-60
SHOW ADDRESS .....	4-61

SHOW BUGCHECK .....	4-63
SHOW CALL_FRAME .....	4-64
SHOW CLUSTER .....	4-66
SHOW CONNECTIONS .....	4-72
SHOW CPU .....	4-74
SHOW CRASH .....	4-77
SHOW DEVICE .....	4-81
SHOW DUMP .....	4-85
SHOW EXECUTIVE .....	4-88
SHOW GALAXY .....	4-92
SHOW GCT .....	4-93
SHOW GLOBAL_SECTION_TABLE, SHOW GST .....	4-96
SHOW GLOCK .....	4-98
SHOW GMDB .....	4-101
SHOW GSD .....	4-103
SHOW HEADER .....	4-105
SHOW LAN .....	4-106
SHOW LOCKS .....	4-116
SHOW MACHINE_CHECK .....	4-121
SHOW MEMORY .....	4-123
SHOW PAGE_TABLE .....	4-125
SHOW PARAMETER .....	4-131
SHOW PFN_DATA .....	4-134
SHOW POOL .....	4-139
SHOW PORTS .....	4-146
SHOW PROCESS .....	4-150
SHOW RAD .....	4-173
SHOW RESOURCES .....	4-175
SHOW RMD .....	4-180
SHOW RMS .....	4-182
SHOW RSPID .....	4-183
SHOW SHM_CPP .....	4-185
SHOW SHM_REG .....	4-188
SHOW SPINLOCKS .....	4-190
SHOW STACK .....	4-196
SHOW SUMMARY .....	4-200
SHOW SYMBOL .....	4-203
SHOW TQE .....	4-205
SHOW WORKING_SET_LIST, SHOW WSL .....	4-207
SPAWN .....	4-208
UNDEFINE .....	4-210
VALIDATE PFN_LIST .....	4-211
VALIDATE QUEUE .....	4-213
VALIDATE SHM_CPP .....	4-215

## 5 SDA CLUE Extension Commands

5.1	Overview of SDA CLUE Extensions . . . . .	5-1
5.2	Displaying Data Using SDA CLUE Commands . . . . .	5-2
5.3	Using SDA CLUE with DOSD . . . . .	5-2
5.4	Listing of SDA CLUE Extension Commands . . . . .	5-3
	CLUE CALL_FRAME . . . . .	5-4
	CLUE CLEANUP . . . . .	5-7
	CLUE CONFIG . . . . .	5-8
	CLUE CRASH . . . . .	5-9
	CLUE ERRLOG . . . . .	5-12
	CLUE FRU . . . . .	5-13
	CLUE HISTORY . . . . .	5-14
	CLUE MCHK . . . . .	5-16
	CLUE MEMORY . . . . .	5-17
	CLUE PROCESS . . . . .	5-25
	CLUE REGISTER . . . . .	5-27
	CLUE SG . . . . .	5-29
	CLUE STACK . . . . .	5-30
	CLUE SYSTEM . . . . .	5-33
	CLUE VCC . . . . .	5-34
	CLUE XQP . . . . .	5-37

## 6 SDA Spinlock Tracing Utility

6.1	Overview of the SDA Spinlock Tracing Utility . . . . .	6-1
6.2	How to Use the SDA Spinlock Tracing Utility . . . . .	6-2
6.3	Example Command Procedure for Collection of Spinlock Statistics . . . . .	6-3
6.4	Listing of SDA Spinlock Tracing Commands . . . . .	6-3
	SPL LOAD . . . . .	6-4
	SPL SHOW COLLECT . . . . .	6-5
	SPL SHOW TRACE . . . . .	6-6
	SPL START COLLECT . . . . .	6-11
	SPL START TRACE . . . . .	6-12
	SPL STOP COLLECT . . . . .	6-14
	SPL STOP TRACE . . . . .	6-15
	SPL UNLOAD . . . . .	6-16

## 7 SDA Extension Routines

7.1	Introduction . . . . .	7-1
7.2	General Description . . . . .	7-1
7.3	Detailed Description . . . . .	7-2
7.3.1	Compiling and Linking an SDA Extension . . . . .	7-2
7.3.2	Invoking an SDA Extension . . . . .	7-3
7.3.3	Contents of an SDA Extension . . . . .	7-3
7.4	Debugging an Extension . . . . .	7-5
7.5	Callable Routines Overview . . . . .	7-6

7.6	Callable Routines Specifics . . . . .	7-8
	SDA\$ADD_SYMBOL . . . . .	7-9
	SDA\$ALLOCATE . . . . .	7-10
	SDA\$DBG_IMAGE_INFO . . . . .	7-11
	SDA\$DEALLOCATE . . . . .	7-12
	SDA\$DISPLAY_HELP . . . . .	7-13
	SDA\$ENSURE . . . . .	7-15
	SDA\$FORMAT . . . . .	7-16
	SDA\$FORMAT_HEADING . . . . .	7-18
	SDA\$GET_ADDRESS . . . . .	7-19
	SDA\$GET_BLOCK_NAME . . . . .	7-20
	SDA\$GET_BUGCHECK_MSG . . . . .	7-22
	SDA\$GET_CURRENT_CPU . . . . .	7-24
	SDA\$GET_CURRENT_PCB . . . . .	7-25
	SDA\$GET_HEADER . . . . .	7-26
	SDA\$GET_HW_NAME . . . . .	7-28
	SDA\$GET_IMAGE_OFFSET . . . . .	7-29
	SDA\$GET_INPUT . . . . .	7-31
	SDA\$GET_LINE_COUNT . . . . .	7-32
	SDA\$GETMEM . . . . .	7-33
	SDA\$INSTRUCTION_DECODE . . . . .	7-35
	SDA\$NEW_PAGE . . . . .	7-37
	SDA\$PARSE_COMMAND . . . . .	7-38
	SDA\$PRINT . . . . .	7-40
	SDA\$READ_SYMFILE . . . . .	7-42
	SDA\$REQMEM . . . . .	7-44
	SDA\$SET_ADDRESS . . . . .	7-46
	SDA\$SET_CPU . . . . .	7-47
	SDA\$SET_HEADING_ROUTINE . . . . .	7-48
	SDA\$SET_LINE_COUNT . . . . .	7-50
	SDA\$SET_PROCESS . . . . .	7-51
	SDA\$SKIP_LINES . . . . .	7-52
	SDA\$SYMBOL_VALUE . . . . .	7-53
	SDA\$SYMBOLIZE . . . . .	7-54
	SDA\$TRYMEM . . . . .	7-56
	SDA\$TYPE . . . . .	7-58
	SDA\$VALIDATE_QUEUE . . . . .	7-59

**Part II OpenVMS Alpha System Code Debugger & System Dump Debugger**

## 8 The OpenVMS Alpha System Code Debugger

8.1	User-Interface Options . . . . .	8-2
8.2	Building a System Image to Be Debugged . . . . .	8-2
8.3	Setting Up the Target System for Connections . . . . .	8-3
8.3.1	Making Connections Between the Target Kernel and the System Code Debugger . . . . .	8-5
8.3.2	Interactions Between XDELTA and the Target Kernel/System Code Debugger . . . . .	8-6
8.4	Setting Up the Host System . . . . .	8-6
8.5	Starting the System Code Debugger . . . . .	8-7
8.6	Summary of System Code Debugger Commands . . . . .	8-8
8.7	Using System Dump Analyzer Commands . . . . .	8-8
8.8	System Code Debugger Network Information . . . . .	8-9
8.9	Troubleshooting Checklist . . . . .	8-9
8.10	Troubleshooting Network Failures . . . . .	8-10
8.11	Access to Symbols in OpenVMS Executive Images . . . . .	8-10
8.11.1	Overview of How the OpenVMS Debugger Maintains Symbols . . . . .	8-10
8.11.2	Overview of OpenVMS Executive Image Symbols . . . . .	8-11
8.11.3	Possible Problems You May Encounter . . . . .	8-12
8.12	Sample System Code Debugging Session . . . . .	8-14

## 9 The OpenVMS Alpha System Dump Debugger

9.1	User-Interface Options . . . . .	9-1
9.2	Preparing a System Dump to Be Analyzed . . . . .	9-2
9.3	Setting Up the Test System . . . . .	9-3
9.4	Setting Up the Build System . . . . .	9-3
9.5	Starting the System Dump Debugger . . . . .	9-4
9.6	Summary of System Dump Debugger Commands . . . . .	9-4
9.7	Using System Dump Analyzer Commands . . . . .	9-5
9.8	Limitations of the System Dump Debugger . . . . .	9-6
9.9	Access to Symbols in OpenVMS Executive Images . . . . .	9-6
9.10	Sample System Dump Debugging Session . . . . .	9-6

## Part III OpenVMS Watchpoint Utility

### 10 The Watchpoint Utility

10.1	Introduction . . . . .	10-1
10.2	Initializing the Watchpoint Utility . . . . .	10-2
10.3	Creating and Deleting Watchpoints . . . . .	10-2
10.3.1	Using the \$QIO Interface . . . . .	10-3
10.3.2	Invoking WPDRIVER Entry Points from System Routines . . . . .	10-5
10.4	Data Structures . . . . .	10-6
10.4.1	Watchpoint Restore Entry (WPRE) . . . . .	10-6
10.4.2	Watchpoint Control Blocks (WPCB) . . . . .	10-6
10.4.3	Trace Table Entries (WPTTEs) . . . . .	10-7
10.5	Analyzing Watchpoint Results . . . . .	10-7
10.6	Watchpoint Protection Overview . . . . .	10-9
10.7	Restrictions . . . . .	10-10



## Index

### Examples

8-1	Booting the Target System . . . . .	8-14
8-2	Invoking the System Code Debugger . . . . .	8-14
8-3	Connecting to the Target System . . . . .	8-15
8-4	Target System Connection Display . . . . .	8-16
8-5	Setting a Breakpoint . . . . .	8-16
8-6	Finding the Source Code . . . . .	8-17
8-7	Using the Set Mode Screen Command . . . . .	8-18
8-8	Using the SCROLL/UP DEBUG Command . . . . .	8-19
8-9	Breakpoint Display . . . . .	8-20
8-10	Using the Debug Step Command . . . . .	8-21
8-11	Using the Examine and Show Calls Commands . . . . .	8-22
8-12	Canceling the Breakpoints . . . . .	8-23
8-13	Using the Step/Return Command . . . . .	8-24
8-14	Source Lines Error Message . . . . .	8-25
8-15	Using the Show Image Command . . . . .	8-26
9-1	Invoking the System Dump Debugger . . . . .	9-7
9-2	Accessing the System Dump . . . . .	9-7
9-3	Displaying the Source Code . . . . .	9-8
9-4	Using the Examine and Show Calls Commands . . . . .	9-9

### Figures

2-1	Mechanism Array . . . . .	2-24
2-2	Signal Array . . . . .	2-26
2-3	64-Bit Signal Array . . . . .	2-27
2-4	Exception Stack Frame . . . . .	2-28
2-5	Stack Following an Illegal Page-Fault Error . . . . .	2-33
8-1	Maintaining Symbols . . . . .	8-11
10-1	Format of Data Returned in Buffer . . . . .	10-9

### Tables

2-1	Definitions of Bits in DUMPSTYLE . . . . .	2-4
2-2	Comparison of Full and Selective Dumps . . . . .	2-5
2-3	SDA Operators . . . . .	2-15
2-4	Modules Containing Global Symbols and Data Structures Used by SDA . . . . .	2-18
2-5	SDA Symbols Defined on Initialization . . . . .	2-18
2-6	SDA Symbols Defined by SET CPU Command . . . . .	2-19
2-7	SDA Symbols Defined by SET PROCESS Command . . . . .	2-19
2-8	Exception Stack Frame Values . . . . .	2-28
4-1	Modules Defining Global Locations Within Executive Image . . . . .	4-35

4-2	SET RMS Command Keywords for Displaying Process RMS Information .....	4-56
4-3	GSD Fields .....	4-104
4-4	Contents of the SHOW LOCK and SHOW PROCESS/LOCKS Displays .....	4-118
4-5	Virtual Page Information in the SHOW PAGE_TABLE Display .....	4-127
4-6	Type of Virtual Pages .....	4-128
4-7	Bits In the PTE .....	4-128
4-8	Physical Page Information in the SHOW PAGE_TABLE Display .....	4-128
4-9	Types of Physical Pages .....	4-129
4-10	Location of the Page .....	4-129
4-11	Command Options with the /COLOR and /RAD Qualifiers .....	4-135
4-12	Page Frame Number Information—Line One Fields .....	4-136
4-13	Page Frame Number Information—Line Two Fields .....	4-137
4-14	Flags Set in Page State .....	4-137
4-15	/TYPE and /SUBTYPE Qualifier Examples .....	4-142
4-16	Options for the /WORKING_SET_LIST Qualifier .....	4-156
4-17	Working Set List Entry Information in the SHOW PROCESS Display .....	4-157
4-18	Process Section Table Entry Information in the SHOW PROCESS Display .....	4-158
4-19	Process I/O Channel Information in the SHOW PROCESS Display .....	4-160
4-20	Image Information in the SHOW PROCESS Display .....	4-160
4-21	Resource Information in the SHOW RESOURCES Display .....	4-176
4-22	Lock on Resources .....	4-178
4-23	RMD Fields .....	4-180
4-24	Static Spinlocks .....	4-191
4-25	Process Information in the SHOW SUMMARY Display .....	4-200
4-26	Current State Information .....	4-201
4-27	Options for the SHOW WORKING_SET_LIST Command .....	4-207
10-1	Driver Supported Functions .....	10-3
10-2	Returned Status Codes .....	10-4
10-3	Returned Status Values .....	10-5

---

# Preface

## Intended Audience

The *OpenVMS Alpha System Analysis Tools Manual* is intended primarily for the system programmer who must investigate the causes of system failures and debug kernel mode code, such as a device driver. This manual describes the following system analysis tools in detail; it also provides a summary of the dump off system disk (DOSD) feature and DELTA/XDELTA debugger:

- System Dump Analysis (SDA)
- System code debugger (SCD)
- System dump debugger (SDD)
- Watchpoint utility (WP)

This manual also includes such system management information as maintaining the system resources necessary to capture and store system crash dumps including the use of Dump off System Disk (DOSD). If you need to determine the cause of a hung process or improve system performance, refer to this manual for instructions on using the appropriate system analysis tool to analyze a running system.

## Document Structure

The *OpenVMS Alpha System Analysis Tools Manual* includes the following information:

Chapter 1 presents an overview of all the system analysis tools. It describes the system dump analyzer (SDA), system code debugger (SCD), system dump debugger (SDD), and watchpoint utility (WP). It also provides a brief description of the dump off system disk (DOSD) feature and the DELTA/XDELTA debugger.

Part I describes the system dump analyzer (SDA) commands, SDA CLUE extension commands, and SDA extension commands.

Part II describes the system code debugger (SCD) and the system dump debugger (SDD).

Part III describes the Watchpoint utility (WP).

## Related Documents

For additional information, refer to the following documents:

- *OpenVMS Alpha Version 7.3 Upgrade and Installation Manual*
- *OpenVMS Calling Standard*
- *OpenVMS System Manager's Manual, Volume 1: Essentials*

- *OpenVMS System Manager's Manual, Volume 2: Tuning, Monitoring, and Complex Systems*
- *OpenVMS Programming Concepts Manual, Volume II*
- *Writing OpenVMS Alpha Device Drivers in C*
- *OpenVMS AXP Internals and Data Structures*
- *Alpha Architecture Reference Manual*
- *MACRO-64 Assembler for OpenVMS AXP Systems Reference Manual*

For additional information about *OpenVMS* products and services, access the following World Wide Web address:

<http://www.openvms.compaq.com/>

## Reader's Comments

Compaq welcomes your comments on this manual. Please send comments to either of the following addresses:

Internet	<b>openvmsdoc@compaq.com</b>
Mail	Compaq Computer Corporation OSSG Documentation Group, ZKO3-4/U08 110 Spit Brook Rd. Nashua, NH 03062-2698

## How To Order Additional Documentation

Use the following World Wide Web address to order additional documentation:

<http://www.openvms.compaq.com/>

If you need help deciding which documentation best meets your needs, call 800-282-6672.

## Conventions

In this manual, any reference to OpenVMS is synonymous with Compaq OpenVMS.

VMScluster systems are now referred to as OpenVMS Cluster systems. Unless otherwise specified, references to OpenVMS Clusters or clusters in this document are synonymous with VMSclusters.

The following conventions are used in this manual:

Ctrl/ <i>x</i>	A sequence such as Ctrl/ <i>x</i> indicates that you must hold down the key labeled Ctrl while you press another key or a pointing device button.
PF1 <i>x</i>	A sequence such as PF1 <i>x</i> indicates that you must first press and release the key labeled PF1 and then press and release another key or a pointing device button.
<span style="border: 1px solid black; padding: 2px;">Return</span>	In examples, a key name enclosed in a box indicates that you press a key on the keyboard. (In text, a key name is not enclosed in a box.)  In the HTML version of this document, this convention appears as brackets, rather than a box.

...	A horizontal ellipsis in examples indicates one of the following possibilities: <ul style="list-style-type: none"> <li>• Additional optional arguments in a statement have been omitted.</li> <li>• The preceding item or items can be repeated one or more times.</li> <li>• Additional parameters, values, or other information can be entered.</li> </ul>
.	A vertical ellipsis indicates the omission of items from a code example or command format; the items are omitted because they are not important to the topic being discussed.
()	In command format descriptions, parentheses indicate that you must enclose choices in parentheses if you specify more than one.
[]	In command format descriptions, brackets indicate optional choices. You can choose one or more items or no items. Do not type the brackets on the command line. However, you must include the brackets in the syntax for OpenVMS directory specifications and for a substring specification in an assignment statement.
	In command format descriptions, vertical bars separate choices within brackets or braces. Within brackets, the choices are optional; within braces, at least one choice is required. Do not type the vertical bars on the command line.
{ }	In command format descriptions, braces indicate a required choices; you must choose one of the options listed. Do not type the braces on the command line.
<b>bold text</b>	This type face represents the introduction of a new term. It also represents the name of an argument, an attribute, or a reason.
<i>italic text</i>	Italic text indicates important information, complete titles of manuals, or variables. Variables include information that varies in system output (Internal error <i>number</i> ), in command lines ( <i>/PRODUCER=name</i> ), and in command parameters in text (where <i>dd</i> represents the predefined code for the device type).
UPPERCASE TEXT	Uppercase text indicates a command, the name of a routine, the name of a file, or the abbreviation for a system privilege.
Monospace text	Monospace text indicates code examples and interactive screen displays. In the C programming language, monospace type in text identifies the following elements: keywords, the names of independently compiled external functions and files, syntax summaries, and references to variables or identifiers introduced in an example.
-	A hyphen at the end of a command format description, command line, or code line indicates that the command or statement continues on the following line.
numbers	All numbers in text are assumed to be hexadecimal unless otherwise noted. Other radices—binary, octal, or decimal—are explicitly indicated.



---

# Overview of System Analysis Tools

This chapter presents an overview of the following system dump analysis tools and features:

- System Dump Analyzer (SDA)
- System Code Debugger (SCD)
- System Dump Debugger (SDD)
- Watchpoint Utility (WP)
- Delta/XDelta Debugger
- Dump Off System Disk (DOSD)

## 1.1 System Dump Analyzer (SDA)

The OpenVMS Alpha system dump analyzer (SDA) utility allows you to analyze a running system or a system dump after a system failure occurs. With a system failure, the operating system copies the contents of memory to a system dump file or the primary page file. Additionally, it records the hardware context of each processor. With SDA, you can interpret the contents of the dump file, examine the status of each processor at the time of the system failure, and investigate the possible causes of failure.

See Part I for complete information about SDA, SDA CLUE (Crash Log Utility Extractor), and SDA Extension routines.

## 1.2 System Code Debugger (SCD)

The OpenVMS Alpha System Code Debugger (SCD) allows you to debug nonpageable system code and device drivers running at any interrupt priority level (IPL). You can use the SCD to perform the following tasks:

- Control the system software's execution—stop at points of interest, resume execution, intercept fatal exceptions, and so on
- Trace the execution path of the system software
- Display the source code where the software is executing, and step by source line
- Monitor exception conditions
- Examine and modify the values of variables
- In some cases, test the effect of modifications without having to edit the source code, recompile, and relink

SCD is a symbolic debugger. You can specify variable names, routine names, and so on, precisely as they appear in your source code.

## Overview of System Analysis Tools

### 1.2 System Code Debugger (SCD)

SCD recognizes the syntax, data typing, operators, expressions, scoping rules, and other constructs of a given language. If your code or driver is written in more than one language, you can change the debugging context from one language to another during a debugging session.

See Part II for complete information about SCD.

### 1.3 System Dump Debugger (SDD)

The OpenVMS Alpha System Dump Debugger allows you to analyze certain system dumps using the commands and semantics of SCD. You can use SDD to perform the following tasks:

- Display the source code where the software was executing at the time of the system failure
- Examine the values of variables and registers at the time of the system failure

SDD is a symbolic debugger. You can specify variable names, routine names, and so on, precisely as they appear in your source code.

SDD recognizes the syntax, data typing, operators, expressions, scoping rules, and other constructs of a given language. If your code or driver is written in more than one language, you can change the debugging context from one language to another during a debugging session.

See Part II for complete information about SDD.

### 1.4 Watchpoint Utility

The OpenVMS Watchpoint utility allows you to maintain a history of modifications that are made to a particular location in shared system space. It sets watchpoints on 32-bit and 64-bit addresses, and watches any system addresses whether in S0, S1, or S2 space.

See Part III for complete information about the Watchpoint utility.

### 1.5 Delta/XDelta Debugger

The OpenVMS Delta/XDelta debugger allows you to monitor the execution of user programs and the OpenVMS operating system. The Delta/XDelta debuggers both use the same commands and expressions, but they are different in how they operate. Delta operates as an exception handler in a process context; whereas XDelta is invoked directly from the hardware system control block (SCB) vector in a system context.

You use OpenVMS Delta instead of the OpenVMS symbolic debugger to debug programs that run in privileged processor mode at interrupt priority level (IPL) 0. Because Delta operates in a process context, you can use it to debug user-mode programs or programs that execute at interrupt priority level (IPL) 0 in any processor mode—user, supervisor, executive, and kernel. To run Delta in a processor mode other than user mode, your process must have the privilege that allows Delta to change to that mode: change-mode-to-executive (CMEXEC), or change-mode-to-kernel (CMKRNL) privilege. You cannot use Delta to debug code that executes at an elevated IPL. To debug with Delta, you invoke it from within your process by specifying it as the debugger instead of the symbolic debugger.



## Overview of System Analysis Tools

### 1.5 Delta/XDelta Debugger

You use OpenVMS XDelta instead of the System Code Debugger when debugging system code that runs early in booting or when there is no Ethernet adaptor that can be dedicated to SCD. Because XDelta is invoked directly from the hardware system control block (SCB), it can be used to debug programs executing in any processor mode or at any IPL level. To use XDelta, you must have system privileges, and you must include XDelta when you boot the system. Since XDelta is not process specific, it is not invoked from a process. To debug with XDelta, you must boot the system with a command to include XDelta in memory. XDelta's existence terminates when you reboot the system without XDelta.

On OpenVMS Alpha systems, XDelta supports 64-bit addressing. Quadword display mode displays full quadwords of information. The 64-bit address display mode accepts and displays all addresses as 64-bit quantities. XDelta has predefined command strings for displaying the contents of the page frame number (PFN) database.

You can use Delta/XDelta commands to perform the following debugging tasks:

- Open, display, and change the value of a particular location
- Set, clear, and display breakpoints
- Set, display modes in byte, word, longword, or ASCII
- Display instructions
- Execute the program in a single step with the option to step over a subroutine
- Set base registers
- List the names and locations of all loaded modules of the executive
- Map an address to an executive module

See the *OpenVMS Delta/XDelta Debugger Manual* for complete information about using the Delta/XDelta debugging utility.

## 1.6 Dump Off System Disk (DOSD)

The OpenVMS Alpha system allows you to write the system dump file to a device other than the system disk. This is useful in large memory systems and in clusters with common system disks where sufficient disk space, on one disk, is not always available to support your dump file requirements. To perform this activity, you must correctly enable the DUMPSTYLE system parameter to allow the bugcheck code to write the system dump file to an alternative device.

See the *OpenVMS System Manager's Manual, Volume 2: Tuning, Monitoring, and Complex Systems* for complete information about how to write the system dump file to a disk other than the system disk.



# Part I

---

## OpenVMS Alpha System Dump Analyzer (SDA)

Part 1 describes the capabilities and system management of SDA. It provides how to use SDA by doing the following:

- Analyzing a system dump and a running system
- Understanding SDA context and commands
- Investigating system failures
- Inducing system failures
- Understanding the ANALYZE command and qualifiers
- Invoking SDA commands, SDA CLUE extension commands, SDA Spinlock Tracing commands, and SDA extension routines



---

## SDA Description

This chapter describes the functions and the system management of SDA. It describes initialization, operation, and procedures in analyzing a system dump and analyzing a running system. This chapter also describes the SDA context, the command format, and the way both to investigate system failures and induce system failures.

### 2.1 Capabilities of SDA

When a system failure occurs, the operating system copies the contents of memory to a system dump file or the primary page file, recording the hardware context of each processor in the system as well. The System Dump Analyzer (SDA) is a utility that allows you to interpret the contents of this file, examine the status of each processor at the time of the system failure, and investigate the probable causes of the failure.

You can invoke SDA to analyze a system dump, using the DCL command `ANALYZE/CRASH_DUMP`. You can then use SDA commands to perform the following operations:

- Direct (or echo) the output of an SDA session to a file or device (`SET OUTPUT` or `SET LOG`).
- Display the condition of the operating system and the hardware context of each processor in the system at the time of the system failure (`SHOW CRASH` or `CLUE CRASH`).
- Select a specific processor in a multiprocessing system as the subject of analysis (`SET CPU`).
- Select the default size of address data manipulated by the `EXAMINE` and `EVALUATE` commands (`SET FETCH`).
- Enable or disable the sign extension of 32-bit addresses (`SET SIGN_EXTEND`).
- Display the contents of a specific process stack (`SHOW STACK` or `CLUE STACK`).
- Format a call frame from a stack location (`SHOW CALL_FRAME`).
- Read a set of global symbols into the SDA symbol table (`READ`).
- Define symbols to represent values or locations in memory and add them to the SDA symbol table (`DEFINE`).
- Delete symbols not required from the SDA symbol table (`UNDEFINE`).
- Evaluate an expression in hexadecimal and decimal, interpreting its value as a symbol, a condition value, a page table entry (PTE), a processor status (PS) quadword, or date and time (`EVALUATE`).

## SDA Description

### 2.1 Capabilities of SDA

- Examine the contents of memory locations, optionally interpreting them as Alpha assembler instructions, a PTE, a PS, or date and time (EXAMINE).
- Display device status as reflected in system data structures (SHOW DEVICE).
- Display the contents of the stored machine check frame (SHOW MACHINE\_CHECK or CLUE MCHK) for selected Compaq computers.
- Format system data structures (FORMAT).
- Validate the integrity of the links in a queue (VALIDATE QUEUE).
- Display a summary of all processes on the system (SHOW SUMMARY).
- Show the hardware or software context of a process (SHOW PROCESS or CLUE PROCESS).
- Display the OpenVMS RMS data structures of a process (SHOW PROCESS with the /RMS qualifier).
- Display memory management data structures (SHOW POOL, SHOW PFN\_DATA, SHOW PAGE\_TABLE, or CLUE MEMORY).
- Display lock management data structures (SHOW RESOURCE or SHOW LOCK).
- Display OpenVMS Cluster management data structures (SHOW CLUSTER, SHOW CONNECTIONS, SHOW RSPID, or SHOW PORTS).
- Display multiprocessor synchronization information (SHOW SPINLOCKS).
- Display the layout of the executive images (SHOW EXECUTIVE).
- Capture and archive a summary of dump file information in a list file (CLUE HISTORY).
- Copy the system dump file (COPY).
- Define keys to invoke SDA commands (DEFINE/KEY).
- Search memory for a given value (SEARCH).

Although SDA provides a great deal of information, it does not automatically analyze all the control blocks and data contained in memory. For this reason, in the event of system failure, it is extremely important that you save not only the output provided by SDA commands, but also a copy of the system dump file written at the time of the failure.

You can also invoke SDA to analyze a running system, using the DCL command ANALYZE/SYSTEM. Most SDA commands generate useful output when entered on a running system.

---

**Caution:** \_\_\_\_\_

Although analyzing a running system may be instructive, you should undertake such an operation with caution. System context, process context, and a processor's hardware context can change during any given display.

In a multiprocessing environment, it is very possible that, during analysis, a process running SDA could be rescheduled to a different processor frequently. Therefore, avoid examining the hardware context of processors in a running system.

---

## 2.2 System Management and SDA

The system manager must ensure that the system writes a dump file whenever the system fails. The manager must also see that the dump file is large enough to contain all the information to be saved, and that the dump file is saved for analysis. The following sections describe these tasks.

### 2.2.1 Writing System Dumps

The operating system attempts to write information into the system dump file only if the system parameter DUMPBUG is set. (The DUMPBUG parameter is set by default. To examine and change its value, consult the *OpenVMS System Manager's Manual, Volume 2: Tuning, Monitoring, and Complex Systems*.) If DUMPBUG is set and the operating system fails, the system manager has the following choices for writing system dumps:

- Have the system dump file written to either SYSDUMP.DMP (the system dump file) or to PAGEFILE.SYS (the primary system page file).
- Set the DUMPSTYLE system parameter to an even number (for dumps containing all physical memory) or to an odd number (for dumps containing only selected virtual addresses). See Section 2.2.1.1 for more information about the DUMPSTYLE parameter values.

#### 2.2.1.1 Dump File Style

There are two types of dump files—a full memory dump (also known as a physical dump), and a dump of selected virtual addresses (also known as a selective dump). Both full and selective dumps may be produced in either compressed or uncompressed form. Compressed dumps save disk space and time taken to write the dump at the expense of a slight increase in time to access the dump with SDA. The SDA commands COPY/COMPRESS and COPY/DECOMPRESS can be used to convert an existing dump.

A dump can be written to the system disk, or to another disk set aside for dumps. When using a disk other than a system disk, the disk name is set in the console environment variable DUMP\_DEV. This disk is also known as the “dump off system disk” (DOSD) disk.

When writing a system dump, information about the crash is displayed at the system console. This can be either minimal output (for example, bug check code, process name, and image name), or verbose output (for example, executive layout, stack and register contents).

In an OpenVMS Alpha Galaxy system, shared memory is dumped by default. It is sometimes necessary to disable the dumping of shared memory. For more information about shared memory, see *OpenVMS Alpha Galaxy Guide*.

DUMPSTYLE, which specifies the method of writing system dumps, is a 32-bit mask. Table 2–1 shows how the bits are defined. Each bit can be set independently. The value of the SYSGEN parameter is the sum of the values of the bits that have been set. Remaining or undefined values are reserved to Compaq.

## SDA Description

### 2.2 System Management and SDA

**Table 2–1 Definitions of Bits in DUMPSTYLE**

Bit	Value	Description
0	1	0= Full dump. The entire contents of physical memory will be written to the dump file.  1= Selective dump. The contents of memory will be written to the dump file selectively to maximize the usefulness of the dump file while conserving disk space. (Only pages that are in use are written).
1	2	0= Minimal console output. This consists of the bugcheck code; the identity of the CPU, process, and image where the crash occurred; the system date and time; plus a series of dots indicating progress writing the dump.  1= Full console output. This includes the minimal output previously described plus stack and register contents, system layout, and additional progress information such as the names of processes as they are dumped.
2	4	0= Dump to system disk. The dump will be written to <code>SYSSYSDEVICE:[SYSn.SYSEX]SYSDUMP.DMP</code> , or in its absence, <code>SYSSYSDEVICE:[SYSn.SYSEX]PAGEFILE.SYS</code> .  1= Dump to alternate disk. The dump will be written to <code>dump_dev:[SYSn.SYSEX]SYSDUMP.DMP</code> , where <code>dump_dev</code> is the value of the console environment variable <code>DUMP_DEV</code> .
3	8	0= Uncompressed dump. Pages are written directly to the dump file.  1= Compressed dump. Each page is compressed before it is written, providing a saving in space and in the time taken to write the dump, at the expense of a slight increase in time taken to access the dump.
4	16	0= Dump shared memory.  1= Do not dump shared memory.
5–31		Reserved to Compaq

The default setting for DUMPSTYLE is 0 (an uncompressed full dump, including shared memory, written to the system disk). Unless a value for DUMPSTYLE is specified in MODPARAMS.DAT, AUTOGEN.COM will set DUMPSTYLE either to 1 (an uncompressed selective dump, including shared memory, written to the system disk) if there is less than 128 megabytes of memory on the system, or to 9 (a compressed selective dump, including shared memory, written to the system disk).

#### 2.2.1.2 Comparison of Full and Selective Dumps

A full dump requires that all physical memory be written to the dump file. This ensures the presence of all the page table pages required for SDA to emulate translation of system virtual addresses. Any even-numbered value in the DUMPSTYLE system parameter generates a full dump.

In certain system configurations, it may be impossible to preserve the entire contents of memory in a disk file. For instance, a large memory system or a system with small disk capacity may not be able to supply enough disk space for a full memory dump. If the system dump file cannot accommodate all of memory, information essential to determining the cause of the system failure may be lost.



To preserve those portions of memory that contain information most useful in determining the causes of system failures, a system manager sets the value of the DUMPSTYLE system parameter to specify a dump of selected virtual address spaces. In a selective dump, related pages of virtual address space are written to the dump file as units called logical memory blocks (LMBs). For example, one LMB consists of the page tables for system space; another is the address space of a particular process. Those LMBs most likely to be useful in crash dump analysis are written first. Any odd-numbered value in the DUMPSTYLE system parameter generates a selective dump.

Table 2–2 compares full and selective style dumps.

**Table 2–2 Comparison of Full and Selective Dumps**

Item	Full	Selective
<b>Available Information</b>	Complete contents of physical memory in use, stored in order of increasing physical address.	System page table, global page table, system space memory, and process and control regions (plus global pages) for all saved processes.
<b>Unavailable Information</b>	Contents of paged-out memory at the time of the system failure.	Contents of paged-out memory at the time of the system failure, process and control regions of unsaved processes, and memory not mapped by a page table.
<b>SDA Command Limitations</b>	None.	The following commands are not useful for unsaved processes: SHOW PROCESS/CHANNELS, SHOW PROCESS/IMAGE, SHOW PROCESS/RMS, SHOW STACK, and SHOW SUMMARY/IMAGE.

### 2.2.1.3 Controlling the Size of Page Files and Dump Files

You can adjust the size of the system page file and dump file using AUTOGEN (the recommended method) or by using SYSGEN.

AUTOGEN automatically calculates the appropriate sizes for page and dump files. AUTOGEN invokes the System Generation utility (SYSGEN) to create or change the files. However, you can control sizes calculated by AUTOGEN by defining symbols in the MODPARAMS.DAT file. The file sizes specified in MODPARAMS.DAT are copied into the PARAMS.DAT file during AUTOGEN's GETDATA phase. AUTOGEN then makes appropriate adjustments in its calculations.

Although Compaq recommends using AUTOGEN to create and modify page and dump file sizes, you can use SYSGEN to directly create and change the sizes of those files.

The sections that follow discuss how you can calculate the size of a dump file.

See the *OpenVMS System Manager's Manual* for detailed information about using AUTOGEN and SYSGEN to create and modify page and dump file sizes.

### 2.2.1.4 Writing to the System Dump File

OpenVMS Alpha writes the contents of the error-log buffers, processor registers, and memory into the system dump file, overwriting its previous contents. If the system dump file is too small, OpenVMS Alpha cannot copy all memory to the file when a system failure occurs.

## SDA Description

### 2.2 System Management and SDA

SYSS\$SYSTEM:SYSDUMP.DMP (SYSS\$SPECIFIC:[SYSEXE]SYSDUMP.DMP) is created during installation. To successfully store a crash dump, SYSS\$SYSTEM:SYSDUMP.DMP must be enlarged to hold all of memory (full dump) or all of system space and the key processes (selective dump).

To calculate the correct size for an uncompressed full dump to SYSS\$SYSTEM:SYSDUMP.DMP, use the following formula:

```
size-in-blocks(SYSS$SYSTEM:SYSDUMP.DMP)
  = size-in-pages(physical-memory) * blocks-per-page
  + number-of-error-log-buffers * blocks-per-buffer
  + 10
```

Use the DCL command SHOW MEMORY to determine the total size of physical memory on your system. There is a variable number of error log buffers in any given system, depending on the setting of the ERRORLOGBUFFERS system parameter. The size of each buffer depends on the setting of the ERLBUFFERPAGES parameter. (See the *OpenVMS System Manager's Manual* for additional information about these parameters.)

#### 2.2.1.5 Writing to the Dump File off the System Disk

OpenVMS Alpha allows you to write the system dump file to a device other than the system disk. This is useful in large memory systems and in clusters with common system disks where sufficient disk space, on one disk, is not always available to support customer dump file requirements. To perform this activity, the DUMPSTYLE system parameter must be correctly enabled to allow the bugcheck code to write the system dump file to an alternative device.

The requirements for writing the system dump file off the system disk are the following:

- The dump device directory structure must resemble the current system disk structure. The [SYSn.SYSEXE]SYSDUMP.DMP file will reside there, with the same boot time system root.

You can use AUTOGEN to create this file. In the MODPARAMS.DAT file, the following symbol prompts AUTOGEN to create the file:

```
DUMPFIL$DEVICE = $nnn$ddcuuuu
```

- The dump device cannot be part of a volume set or a member of a shadow set.
- You must set DOSD for SDA CLUE as described in Chapter 5.
- The DUMP\_DEV environment variable must exist on your system. You specify the dump device at the console prompt, using the following format:  
>>>SET DUMP\_DEV device-name[,...]

On some CPU types, you can enter a list of devices. The list can include various alternate paths to the system disk and the dump disk.

By specifying alternate paths in DUMP\_DEV, a dump can still be written if the disk fails over to an alternate path while the system is running. When the system crashes, the bugcheck code can use the alternate path by referring to the contents of DUMP\_DEV.

When you enter a list of devices, however, the system disk must come last.

For information on how to write the system dump file to an alternative device to the system disk, see the *OpenVMS System Manager's Manual, Volume 2: Tuning, Monitoring, and Complex Systems*.

### 2.2.1.6 Writing to the System Page File

If SYSS\$SYSTEM:SYSDUMP.DMP does not exist, and there is no DOSD device or dump file, the operating system writes the dump of physical memory into SYSS\$SYSTEM:PAGEFILE.SYS, the primary system page file, overwriting the contents of that file.

If the SAVEDUMP system parameter is set, the dump file is retained in PAGEFILE.SYS when the system is booted after a system failure. If the SAVEDUMP parameter is not set, which is the default, OpenVMS Alpha uses the entire page file for paging and any dump written to the page file is lost. (To examine or change the value of the SAVEDUMP parameter, consult the *OpenVMS System Manager's Manual, Volume 2: Tuning, Monitoring, and Complex Systems*.)

To calculate the minimum size for a full memory dump to SYSS\$SYSTEM:PAGEFILE.SYS, use the following formula:

```
size-in-blocks(SYSS$SYSTEM:PAGEFILE.SYS)
= size-in-pages(physical-memory) * blocks-per-page
+ number-of-error-log-buffers * blocks-per-buffer
+ 10
+ value of the system parameter RSRVPAGCNT * blocks-per-page
```

Note that this formula calculates the minimum size requirement for saving a physical dump in the system's page file. Compaq recommends that the page file be a bit larger than this minimum to avoid hanging the system. Also note that you can only write the system dump into the primary page file (SYSS\$SYSTEM:PAGEFILE.SYS). Secondary page files cannot be used to save dump file information.

Note also that OpenVMS will not fill the page file completely when writing a system dump, since the system might hang when rebooting after a system crash. RSRVPAGCNT pages are kept unavailable for dumps. This applies to both full dumps and selective dumps.

Writing crash dumps to SYSS\$SYSTEM:PAGEFILE.SYS presumes that you will later free the space occupied by the dump for use by the pager. Otherwise, your system may hang during the startup procedure. To free this space, you can do one of the following:

- Include SDA commands that free dump space in the site-specific startup command procedure (described in Section 2.2.3).
- Use the SDA COPY command to copy the dump from SYSS\$SYSTEM:PAGEFILE.SYS to another file. Use the SDA COPY command instead of the DCL COPY command because the SDA COPY command only copies the blocks used by the dump and causes the pages occupied by the dump to be freed from the system's page file.
- If you do not need to copy the dump elsewhere, issue an ANALYZE/CRASH\_DUMP/RELEASE command. When you issue this command, SDA immediately releases the pages to be used for system paging, effectively deleting the dump. Note that this command does not allow you to analyze the dump before deleting it.

## SDA Description

### 2.2 System Management and SDA

#### 2.2.2 Saving System Dumps

Every time the operating system writes information to the system dump file, it writes over whatever was previously stored in the file. The system writes information to the dump file whenever the system fails. For this reason, the system manager must save the contents of the file after a system failure has occurred.

The system manager can use the SDA COPY command or the DCL COPY command. Either command can be used in a site-specific startup procedure, but the SDA COPY command is preferred because it marks the dump file as copied. As mentioned earlier, this is particularly important if the dump was written into the page file, SYSS\$SYSTEM:PAGEFILE.SYS, because it releases those pages occupied by the dump to the pager. Another advantage of using the SDA COPY command is that this command copies only the saved number of blocks and not necessarily the whole allotted dump file. For instance, if the size of the SYSDUMP.DMP file is 100,000 blocks and the bugcheck wrote only 60,000 blocks to the dump file, then DCL COPY would create a file of 100,000 blocks. However, SDA COPY would generate a file of only 60,000 blocks.

Because system dump files are set to NOBACKUP, the Backup utility (BACKUP) does not copy them to tape unless you use the qualifier /IGNORE=NOBACKUP when invoking BACKUP. When you use the SDA COPY command to copy the system dump file to another file, OpenVMS Alpha does not set the new file to NOBACKUP.

As created during installation, the file SYSS\$SYSTEM:SYSDUMP.DMP is protected against world access. Because a dump file can contain privileged information, Compaq recommends that the system manager does not change this default protection.

#### 2.2.3 Invoking SDA When Rebooting the System

When the system reboots after a system failure, SDA is automatically invoked by default. SDA archives information from the dump in a history file. In addition, a listing file with more detailed information about the system failure is created in the directory pointed to by the logical name CLUE\$COLLECT. (Note that the default directory is SYSS\$ERRORLOG unless you redefine the logical name CLUE\$COLLECT in the procedure SYSS\$MANAGER:SYLOGICALS.COM.) The file name is in the form CLUE\$*node\_ddmmyy\_hhmm*.LIS where the timestamp (*hhmm*) corresponds to the system failure time and not the time when the file was created.

Directed by commands in a site-specific file, SDA can take additional steps to record information about the system failure. They include the following:

- Copying the contents of the dump file to another file. This information is otherwise lost at the next system failure when the system saves information only about that failure.
- Supplementing the contents of the list file containing the output of specific SDA commands.

If the logical name CLUE\$SITE\_PROC points to a valid and existing command file, it will be executed as part of the CLUE HISTORY command when you reboot. If used, this file should contain only valid SDA commands.

Generated by a set sequence of commands, the CLUE list file contains only an overview of the failure and is unlikely to provide enough information to determine the cause of the failure. Compaq, therefore, recommends that you always copy the dump file.

The following example shows SDA commands that can make up your site-specific command file to produce a more complete SDA listing after each system failure, and to save a copy of the dump file:

```
!  
! SDA command file, to be executed as part of the system  
! bootstrap from within CLUE. Commands in this file can  
! be used to save the dump file after a system bugcheck, and  
! to execute any additional SDA commands.  
!  
!  
! Note that the logical name DMP$ must have been defined  
! within SYSS$MANAGER:SYLOGICALS.COM  
!  
READ/EXEC                ! read in the executive images' symbol tables  
SHOW STACK               ! display the stack  
COPY DMP$:SAVEDUMP.DMP   ! copy and save dump file  
!
```

The CLUE HISTORY command is executed first, followed by the SDA commands in this site-specific command file. See the reference section on CLUE HISTORY for details on the summary information that is generated and stored in the CLUE list file by the CLUE HISTORY command. Note that the SDA COPY command is final command. If the dump has been written to PAGEFILE.SYS, then the space used by the dump will be automatically returned for use for paging as soon as the COPY is complete and no more analysis is possible.

To point to your site-specific file, add a line such as the following to the file SYSS\$MANAGER:SYLOGICALS.COM:

```
$ DEFINE/SYSTEM CLUE$SITE_PROC SYSS$MANAGER:SAVEDUMP.COM
```

In this example, the site-specific file is named SAVEDUMP.COM.

The CLUE list file can be printed immediately or saved for later examination.

SDA is invoked and executes the specified commands only when the system boots for the first time after a system failure. If the system is booting for any other reason (such as a normal system shutdown and reboot), SDA exits.

If CLUE files occupy more space than the threshold allows (the default is 5000 blocks), the oldest files will be deleted until the threshold limit is reached. The threshold limit can be customized with the CLUE\$MAX\_BLOCK logical name.

To prevent the running of CLUE at system startup, define the logical CLUE\$INHIBIT in the SYLOGICALS.COM file as TRUE in the system logical name table.

## 2.3 Analyzing a System Dump

SDA performs certain tasks before bringing a dump into memory, presenting its initial displays, and accepting command input. These tasks include the following:

- Verifying that the process invoking it is suitably privileged to read the dump file
- Using RMS to read in pages from the dump file

## SDA Description

### 2.3 Analyzing a System Dump

- Building the SDA symbol table from the files `SDA$READ_DIR:SYSS$BASE_IMAGE.EXE` and `SDA$READ_DIR:REQSYSDEF.STB`
- Executing the commands in the SDA initialization file

For detailed information on investigating system failures, see Section 2.7.

#### 2.3.1 Requirements

To analyze a dump file, your process must have read access both to the file that contains the dump and to copies of `SDA$READ_DIR:SYSS$BASE_IMAGE.EXE` and `SDA$READ_DIR:REQSYSDEF.STB` (the required subset of the symbols in the file `SYSDEF.STB`). SDA reads these tables by default.

#### 2.3.2 Invoking SDA

If your process can access the files listed in Section 2.3.1, you can issue the DCL command `ANALYZE/CRASH_DUMP` to invoke SDA. If you do not specify the name of a dump file in the command, SDA prompts you:

```
$ ANALYZE/CRASH_DUMP
_Dump File:
```

The default file specification is as follows:

```
SYSSDISK:[default-dir]SYSDUMP.DMP
```

`SYSSDISK` and `[default-dir]` represent the disk and directory specified in your last `SET DEFAULT` command.

If you are rebooting after a system failure, SDA is automatically invoked. See Section 2.2.3.

#### 2.3.3 Mapping the Contents of the Dump File

SDA first attempts to map the contents of memory as stored in the specified dump file. To do this, it must first locate the page tables for system space among its contents. The system page tables contain one entry for each page of system virtual address space.

- If SDA cannot find the system page tables in the dump file, it displays the following message:

```
%SDA-E-SPTNOTFND, system page table not found in dump file
```

If that error message is displayed, you cannot analyze the crash dump, but must take steps to ensure that any subsequent dump can be analyzed. To do this, you must either adjust the `DUMPSTYLE` system parameter as discussed in Section 2.2.1.1 or increase the size of the dump file as indicated in Section 2.2.1.3.

- If SDA finds the system page tables in an incomplete dump, the following message is displayed:

```
%SDA-W-SHORTDUMP, dump file was n blocks too small when dump written;
analysis may not be possible
```

Under certain conditions, some memory locations might not be saved in the system dump file. Additionally, if a bugcheck occurs during system initialization, the contents of the register display may be unreliable. The symptom of such a bugcheck is a `SHOW SUMMARY` display that shows no processes or only the swapper process.

If you use an SDA command to access a virtual address that has no corresponding physical address, SDA generates the following error message:

```
%SDA-E-NOTINPHYS, 'location': virtual data not in physical memory
```

When analyzing a selective dump file, if you use an SDA command to access a virtual address that has a corresponding physical address not saved in the dump file, SDA generates one of the following error messages:

```
%SDA-E-MEMNOTSVD, memory not saved in the dump file
```

```
%SDA-E-NOREAD, unable to access location n
```

### 2.3.4 Building the SDA Symbol Table

After locating and reading the system dump file, SDA attempts to read the system symbol table file into the SDA symbol table. If SDA cannot find SDA\$READ\_DIR:SYS\$BASE\_IMAGE.EXE—or is given a file that is not a system symbol table in the /SYMBOL qualifier to the ANALYZE command—it displays a fatal error and exits. SDA also reads into its symbol table a subset of SDA\$READ\_DIR:SYSDEF.STB, called SDA\$READ\_DIR:REQSYSDEF.STB. This subset provides SDA with the information needed to access some of the data structures in the dump.

When SDA finishes building its symbol table, SDA displays a message identifying itself and the immediate cause of the system failure. In the following example, the cause of the system failure was the deallocation of a bad page file address.

```
OpenVMS Alpha System Dump Analyzer
Dump taken on 27-MAR-1993 11:22:33.92
BADPAGFILD, Bad page file address deallocated
```

### 2.3.5 Executing the SDA Initialization File (SDA\$INIT)

After displaying the system failure summary, SDA executes the commands in the SDA initialization file, if you have established one. SDA refers to its initialization file by using the logical name SDA\$INIT. If SDA cannot find the file defined as SDA\$INIT, it searches for the file SYS\$LOGIN:SDA.INIT.

This initialization file can contain SDA commands that read symbols into SDA's symbol table, define keys, establish a log of SDA commands and output, or perform other tasks. For instance, you may want to use an SDA initialization file to augment SDA's symbol table with definitions helpful in locating system code. If you issue the following command, SDA includes those symbols that define many of the system's data structures, including those in the I/O database:

```
READ SDA$READ_DIR:filename
```

You may also find it helpful to define those symbols that identify the modules in the images that make up the executive by issuing the following command:

```
READ/EXECUTIVE SDA$READ_DIR:
```

After SDA has executed the commands in the initialization file, it displays its prompt as follows:

```
SDA>
```

This prompt indicates that you can use SDA interactively and enter SDA commands.

An SDA initialization file may invoke a command procedure with the @ command. However, such command procedures cannot invoke other command procedures.

## SDA Description

### 2.4 Analyzing a Running System

## 2.4 Analyzing a Running System

Occasionally, OpenVMS Alpha encounters an internal problem that hinders system performance without causing a system failure. By allowing you to examine the running system, SDA enables you to search for the solution without disturbing the operating system. For example, you may be able to use SDA to examine the stack and memory of a process that is stalled in a scheduler state, such as a miscellaneous wait (MWAIT) or a suspended (SUSP) state.

If your process has change-mode-to-kernel (CMKRNL) privilege, you can invoke SDA to examine the system. Use the following DCL command:

```
$ ANALYZE/SYSTEM
```

SDA attempts to load SDA\$READ\_DIR:SYS\$BASE\_IMAGE.EXE and SDA\$READ\_DIR:REQSYSDEF.STB. It then executes the contents of any existing SDA initialization file, as it does when invoked to analyze a crash dump (see Sections 2.3.4 and 2.3.5, respectively). SDA subsequently displays its identification message and prompt, as follows:

```
OpenVMS Alpha System Analyzer  
SDA>
```

This prompt indicates that you can use SDA interactively and enter SDA commands. When analyzing a running system, SDA sets its process context to that of the process running SDA.

If you are analyzing a running system, consider the following:

- When used in this mode, SDA does not map the entire system, but instead retrieves only the information it needs to process each individual command. To update any given display, you must reissue the previous command.

---

**Caution:**

---

When using SDA to analyze a running system, carefully interpret its displays. Because system states change frequently, it is possible that the information SDA displays may be inconsistent with the current state of the system.

---

- Certain SDA commands are illegal in this mode, such as SHOW CPU and SET CPU. Use of these commands results in the following error message:  

```
%SDA-E-CMDNOTVLD, command not valid on the running system
```
- The SHOW CRASH command, although valid, does not display the contents of any of the processor's set of hardware registers.

## 2.5 SDA Context

When you invoke SDA to analyze either a crash dump or a running system, SDA establishes a default context for itself from which it interprets certain commands.

When you are analyzing a uniprocessor system, SDA's context is solely **process context**, which means SDA can interpret its process-specific commands in the context of either the process current on the uniprocessor or some other process in another scheduling state. When SDA is initially invoked to analyze a crash dump, SDA's process context defaults to that of the process that was current at the time of the system failure. When you invoke SDA to analyze a running



system, SDA's process context defaults to that of the current process, that is, the one executing SDA. To change SDA's process context, issue any of the following commands:

```
SET PROCESS process-name  
SET PROCESS/ADDRESS=pcb-address  
SET PROCESS/INDEX=nn  
SET PROCESS/SYSTEM  
SHOW PROCESS process-name  
SHOW PROCESS/ADDRESS=pcb-address  
SHOW PROCESS/INDEX=nn  
SHOW PROCESS/SYSTEM
```

When you invoke SDA to analyze a crash dump from a multiprocessing system with more than one active CPU, SDA maintains a second dimension of context—its **CPU context**—that allows it to display certain processor-specific information. This information includes the reason for the bugcheck exception, the currently executing process, the current IPL, and the spin locks owned by the processor. When you invoke SDA to analyze a multiprocessor's crash dump, its CPU context defaults to that of the processor that induced the system failure. When you are analyzing a running system, CPU context is not accessible to SDA. Therefore, the SET CPU and SHOW CPU commands are not permitted.

You can change the SDA CPU context by using any of the following commands:

```
SET CPU cpu-id  
SHOW CPU cpu-id  
SHOW CRASH  
SHOW MACHINE_CHECK cpu-id
```

Changing CPU context involves an implicit change in process context in either of the following ways:

- If there is a current process on the CPU made current, SDA process context is changed to that of that CPU's current process.
- If there is no current process on the CPU made current, SDA process context is undefined and no process-specific information is available until SDA process context is set to that of a specific process.

Changing process context can require a switch of CPU context as well. For instance, if you issue a SET PROCESS command for a process that was current at the time of a system failure on another CPU, SDA will automatically change its CPU context to that of the CPU on which that process was current. The following commands can have this effect if the **process-name**, **pcb-address**, or index number (**nn**) refers to a current process:

```
SET PROCESS process-name  
SET PROCESS/ADDRESS=pcb-address  
SET PROCESS/INDEX=nn  
SHOW PROCESS process-name  
SHOW PROCESS/ADDRESS=pcb-address  
SHOW PROCESS/INDEX=nn
```

## SDA Description

### 2.6 SDA Command Format

## 2.6 SDA Command Format

The following sections describe the format of SDA commands and the expressions you can use with SDA commands.

### 2.6.1 General Command Format

SDA uses a command format similar to that used by the DCL interpreter. Issue commands in the following format:

```
command-name[/qualifier...] [parameter][[/qualifier...]] [!comment]
```

The **command-name** is an SDA command. Each command tells the utility to perform a function. Commands can consist of one or more words, and can be abbreviated to the number of characters that make the command unique. For example, SH stands for SHOW.

The **parameter** is the target of the command. For example, SHOW PROCESS RUSKIN tells SDA to display the context of the process RUSKIN. The command EXAMINE 80104CD0;40 displays the contents of 40 bytes of memory, beginning with location 80104CD0.

When you supply part of a file specification as a parameter, SDA assumes default values for the omitted portions of the specification. The default device is SYS\$DISK, the device specified in your most recent SET DEFAULT command. The default directory is the directory specified in the most recent SET DEFAULT command. See the *OpenVMS DCL Dictionary* for a description of the DCL command SET DEFAULT.

The **qualifier** modifies the action of an SDA command. A qualifier is always preceded by a slash (/). Several qualifiers can follow a single parameter or command name, but each must be preceded by a slash. Qualifiers can be abbreviated to the shortest string of characters that uniquely identifies the qualifier.

The **comment** consists of text that describes the command; this comment is not actually part of the command. Comments are useful for documenting SDA command procedures. When executing a command, SDA ignores the exclamation point and all characters that follow it on the same line.

### 2.6.2 Expressions

You can use expressions as parameters for some SDA commands, such as SEARCH and EXAMINE. To create expressions, use any of the following elements:

- Numerals
- Radix operators
- Arithmetic and logical operators
- Precedence operators
- Symbols

Numerals are one possible component of an expression. The following sections describe the use of the other components.

### 2.6.2.1 Radix Operators

**Radix operators** determine which numeric base SDA uses to evaluate expressions. You can use one of the three radix operators to specify the radix of the numeric expression that follows the operator:

- ^X (hexadecimal)
- ^O (octal)
- ^D (decimal)

The default radix is hexadecimal. SDA displays hexadecimal numbers with leading zeros and decimal numbers with leading spaces.

### 2.6.2.2 Arithmetic and Logical Operators

There are two types of arithmetic and logical operators, both of which are listed in Table 2–3.

- **Unary operators** affect the value of the expression that follows them.
- **Binary operators** combine the operands that precede and follow them.

In evaluating expressions containing binary operators, SDA performs logical AND, OR, and XOR operations, and multiplication, division, and arithmetic shifting before addition and subtraction. Note that the SDA arithmetic operators perform integer arithmetic on 64-bit operands.

**Table 2–3 SDA Operators**

Operator	Action
<b>Unary Operators</b>	
#	Performs a logical NOT of the expression
+	Makes the value of the expression positive
–	Makes the value of the expression negative
@	Evaluates the following expression as an address, then uses the contents of that address as value
^Q	Specifies that the size of field to be used as an address is a quadword when used with the unary operator @ <sup>1</sup>
^L	Specifies that the size of field to be used as an address is a longword when used with the unary operator @ <sup>1</sup>
^W	Specifies that the size of field to be used as an address is a word when used with the unary operator @ <sup>1</sup>
^B	Specifies that the size of field to be used as an address is a byte when used with the unary operator @ <sup>1</sup>
^P	Specifies a physical address when used with the unary operator @ <sup>1</sup>
^V	Specifies a virtual address when used with the unary operator @ <sup>1</sup>
G	Adds FFFFFFFF 80000000 <sub>16</sub> to the value of the expression <sup>2</sup> .

<sup>1</sup>The command SET FETCH can be used to change the default FETCH size and/or access method. See the SET FETCH command description in Chapter 4 for more details and examples.

<sup>2</sup>The unary operator G corresponds to the first virtual address in system space. For example, the expression GD40 can be used to represent the address FFFFFFFF 8000D40<sub>16</sub>.

(continued on next page)

## SDA Description

### 2.6 SDA Command Format

Table 2–3 (Cont.) SDA Operators

Operator	Action
<b>Unary Operators</b>	
H	Adds 7FFE0000 <sub>16</sub> to the value of the expression <sup>3</sup> .
I	Fills the leading digits of the following hexadecimal number with hex value of F. For example:  <pre>SDA&gt; eval i80000000 Hex = FFFFFFFF.80000000 Decimal = -2147483648 G SYS\$PUBLIC_VECTORS_NPRO</pre>
<b>Binary Operators</b>	
+	Addition
-	Subtraction
*	Multiplication
&	Logical AND
	Logical OR
\	Logical XOR
/	Division <sup>4</sup>
@	Arithmetic shifting
."	Catenates two 32-bit values into a 64-bit value. For example:  <pre>SDA&gt; eval fe.50000 Hex = 000000FE00050000 Decimal = 1090922020864</pre>

<sup>3</sup>The unary operator H corresponds to a convenient base address in P1 space (7FFE0000<sub>16</sub>). You can therefore refer to an address such as 7FFE2A64<sub>16</sub> as H2A64.

<sup>4</sup>In division, SDA truncates the quotient to an integer, if necessary, and does not retain a remainder.

#### 2.6.2.3 Precedence Operators

SDA uses parentheses as **precedence operators**. Expressions enclosed in parentheses are evaluated first. SDA evaluates nested parenthetical expressions from the innermost to the outermost pairs of parentheses.

#### 2.6.2.4 Symbols

A **symbol** can represent a few different types of values. It can represent a constant, a data address, a procedure descriptor address, or a routine address. Constants are usually offsets of a particular field in a data structure; however, they can also represent constant values such as the BUG\$\_xxx symbols.

All address symbols identify memory locations. SDA generally does not distinguish among different types of address symbols. However, for a symbol identified as the name of a procedure descriptor, SDA takes an additional step of creating an associated symbol to name the code entry point address of the procedure. It forms the code entry point symbol name by appending \_C to the name of the procedure descriptor.

Also, SDA substitutes the code entry point symbol name for the procedure descriptor symbol when you enter the following command:

```
SDA> EXAMINE/INSTRUCTION procedure descriptor
```

For example, enter the following command:

```
SDA> EXAMINE/INSTRUCTION SCH$QAST
```

SDA displays the following information:

```
SCH$QAST_C:      SUBQ      SP,#X40,SP
```

Now enter the EXAMINE command but do not specify the /INSTRUCTION qualifier, as follows:

```
SDA> EXAMINE SCH$QAST
```

SDA displays the following information:

```
SCH$QAST:  0000002C.00003009  ".0...."
```

This display shows the contents of the first two longwords of the procedure descriptor.

Note that there are no routine address symbols on Alpha systems, except for those in MACRO-64 assembly language modules. Therefore, SDA creates a routine address symbol for every procedure descriptor it has in its symbol table. The new symbol name is the same as for the procedure descriptor except that it has an `_C` appended to the end of the name.

### Sources for SDA Symbols

SDA can get its information from the following places:

- Images (.EXE files)
- Image symbol table files (.STB files)
- Object files

SDA also defines symbols to access registers and to access common data structures.

The only images with symbols are shareable images and executive images. These images contain only universal symbols, such as constants and addresses.

The image symbol table files are produced by the linker with the /SYMBOLS qualifier. These files normally only contain universal symbols, as do the executable images. However, if the SYMBOL\_TABLE=GLOBALS linker option is specified, the .STB file also contains all global symbols defined in the image. See the *OpenVMS Linker Utility Manual* for more information.

Object files can contain global constant values. An object file used with SDA typically contains symbol definitions for data structure fields. Such an object file can be generated by compiling a MACRO-32 source module that invokes specific macros. The macros, which are typically defined in SYSS\$LIBRARY:LIB.MLB or STARLET.MLB, define symbols that correspond to data structure field offsets. The macro \$UCBDEF, for example, defines offsets for fields within a unit control block (UCB). OpenVMS Alpha provides a number of such object modules in SDA\$READ\_DIR, as listed in Table 2-4. For compatibility with OpenVMS VAX, the modules' file types have been renamed to .STB.

## SDA Description

### 2.6 SDA Command Format

**Table 2–4 Modules Containing Global Symbols and Data Structures Used by SDA**

File	Contents
DCLDEF.STB	Symbols for the DCL interpreter
DECDTMDEF.STB	Symbols for transaction processing
GLXDEF.STB	Symbols for OpenVMS Galaxy data structures
IMGDEF.STB	Symbols for the image activator
IODEF.STB	I/O database structure symbols
NETDEF.STB	Symbols for DECnet data structures
REQSYSDEF.STB	Required symbols for SDA
RMSDEF.STB	Symbols that define RMS internal and user data structures and RMSS_xxx completion codes
SCSDEF.STB	Symbols that define data structures for system communications services
SYSDEF.STB	Symbols that define system data structures, including the I/O database
TCPIP\$NET_GLOBALS.STB <sup>1</sup>	Data structure definitions for TCP/IP internet driver, execlet, and ACP data structures
TCPIP\$NFS_GLOBALS.STB <sup>1</sup>	Data structure definitions for TCP/IP NFS server
TCPIP\$PROXY_GLOBALS.STB <sup>1</sup>	Data structure definitions for TCP/IP proxy execlet
TCPIP\$PWIP_GLOBALS.STB <sup>1</sup>	Data structure definitions for TCP/IP PWIP driver, and ACP data structures
TCPIP\$TN_GLOBALS.STB <sup>1</sup>	Data structure definitions for TCP/IP TELNET/RLOGIN server driver data structures

<sup>1</sup>Only available if TCP/IP has been installed. These are found in SYSSYSTEM, so that all files are not automatically read in when you issue a READ/EXEC command.

Table 2–5 lists symbols that SDA defines automatically on initialization.

**Table 2–5 SDA Symbols Defined on Initialization**

ASN	Address space number
AST	Both the asynchronous system trap status and enable registers: AST<3:0> = AST enable; AST<7:4> = AST status
ESP	Executive stack pointer
FEN	Floating-point enable
FP	Frame pointer (R29)
FP0 through FP30	Floating-point registers 0-30
FPCR	Floating-point control register
G	FFFFFFFF.80000000 <sub>16</sub> , the base address of system space
H	00000000.7FFE0000 <sub>16</sub> , a base address in P1 space

(continued on next page)

**Table 2–5 (Cont.) SDA Symbols Defined on Initialization**

I	FFFFFFFF.FFFFFFFF <sub>16</sub> , also fills the leading digits of a hexadecimal number with the value of F
KSP	Kernel stack pointer
PC	Program counter
PCC	Process cycle counter
PS	Processor status
PTBR	Page table base register
R0 through R29	Integer registers
SCC	System cycle counter
SP	Current stack pointer of a process
SSP	Supervisor stack pointer
USP	User stack pointer

After a SET CPU command is issued (for analyzing a crash dump only), the symbols defined in Table 2–6 are set for that CPU.

**Table 2–6 SDA Symbols Defined by SET CPU Command**

CPUDB	Address of CPU database
IPL	Interrupt priority level register
PCBB	Process context block base register
PRBR	Processor base register (CPU database address)
SCBB	System control block base register
SISR	Software interrupt status register

After a SET PROCESS command is issued, the symbols listed in Table 2–7 are defined for that process.

**Table 2–7 SDA Symbols Defined by SET PROCESS Command**

ARB	Address of access rights block
JIB	Address of job information block
KTB	Address of the kernel thread block
ORB	Address of object rights block
PCB	Address of process control block
PHD	Address of process header

Other SDA commands, such as SHOW DEVICE and SHOW CLUSTER, predefine additional symbols.

**SDA Symbol Initialization**

On initialization, SDA reads the universal symbols defined by SYS\$BASE\_IMAGE.EXE. For every procedure descriptor address symbol found, a routine address symbol is created (with `_C` appended to the symbol name).

## SDA Description

### 2.6 SDA Command Format

SDA then reads the object file REQSYSDEF.STB. This file contains data structure definitions that are required for SDA to run correctly. It uses these symbols to access some of the data structures in the crash dump file or on the running system.

Finally, SDA initializes the process registers defined in Table 2-7 and executes a SET CPU command, defining the symbols as well.

#### Use of SDA Symbols

There are two major uses of the address type symbols. First, the EXAMINE command employs them to find the value of a known symbol. For example, EXAMINE CTL\$GL\_PCB finds the PCB for the current process. Then, certain SDA commands (such as EXAMINE, SHOW STACK, and FORMAT) use them to symbolize addresses when generating output.

When the code for one of these commands needs a symbol for an address, it calls the SDA symbolize routine. The symbolize routine tries to find the symbol in the symbol table whose address is closest to, but not greater than the requested address. This means, for any given address, the routine may return a symbol of the form symbol\_name+offset. If, however, the offset is greater than 0FFF<sub>16</sub>, it fails to find a symbol for the address.

As a last resort, the symbolize routine checks to see if this address falls within a known memory range. Currently, the only known memory ranges are those used by the OpenVMS Alpha executive images and those used by active images in a process. SDA searches through the executive loaded image list (LDRIMG data structure) to see if the address falls within any of the image sections. If SDA does find a match, it returns one of the following types of symbols:

```
executive_image_name+offset  
activated_image_name+offset
```

The offset is the same as the image offset as defined in the map file.

The constants in the SDA symbol table are usually used to display a data structure with the FORMAT command. For example, the PHD offsets are defined in SYSDEF.STB; you can display all the fields of the PHD by entering the following commands:

```
SDA> READ SDA$READ_DIR:SYSDEF.STB  
SDA> FORMAT/TYPE=PHD phd_address
```

#### Symbols and Address Resolution

In OpenVMS Alpha, executive and user images are loaded into dynamically assigned address space. To help you associate a particular virtual address with the image whose code has been loaded at that address, SDA provides several features:

- The SHOW EXECUTIVE command
- The symbolization of addresses, described in the previous section
- The READ command
- The SHOW PROCESS command with the /IMAGES qualifier
- The MAP command



The OpenVMS Alpha executive consists of two base images, SYSS\$BASE\_IMAGE.EXE and SYSS\$PUBLIC\_VECTORS.EXE, and a number of other separately loadable images. Some of these images are loaded on all systems, while others support features unique to particular system configurations. Executive images are mapped into system space during system initialization.

By default, a typical executive image is not mapped at contiguous virtual addresses. Instead, its nonpageable image sections are loaded into a reserved set of pages with other executive images' nonpageable sections. The pageable sections of a typical executive image are mapped contiguously into a different part of system space. An image mapped in this manner is said to be **sliced**. A particular system may have system parameters defined that disable executive image slicing altogether.

Each executive image is described by a data structure called a **loadable image data block** (LDRIMG). The LDRIMG specifies whether the image has been sliced. If the image is sliced, the LDRIMG indicates the beginning of each image section and the size of each section. All the LDRIMGs are linked together in a list that SDA scans to determine what images have been loaded and into what addresses they have been mapped. The SHOW EXECUTIVE command displays a list of all images that are included in the OpenVMS Alpha executive.

Each executive image is a shareable image whose universal symbols are defined in the SYSS\$BASE\_IMAGE.EXE symbol vector. On initialization, SDA reads this symbol vector and adds its universal symbols to the SDA symbol table.

Executive image .STB files define additional symbols within an executive image that are not defined as universal symbols and thus are not in the SYSS\$BASE\_IMAGE.EXE symbol vector (see *Sources for SDA Symbols* in this section). You can enter a READ/EXECUTIVE command to read symbols defined in all executive image .STB files into the SDA symbol table, or a READ/IMAGE filespec command to read the .STB for a specified image only.

To obtain a display of all images mapped within a process, execute a SHOW PROCESS/IMAGE command. See the description of the SHOW PROCESS command for additional information about displaying the hardware and software context of a process.

You can also identify the image name and offset that correspond to a specified address with the MAP command. With the information obtained from the MAP command, you can then examine the image map to locate the source module and program section offset corresponding to an address.

## 2.7 Investigating System Failures

This section discusses how the operating system handles internal errors, and suggests procedures that can help you determine the causes of these errors. It illustrates, through detailed analysis of a sample system failure, how SDA helps you find the causes of operating system problems.

For a complete description of the commands discussed in the sections that follow, refer to Chapter 4 and Chapter 5 of this document, where all the SDA and CLUE commands are presented in alphabetical order.

## SDA Description

### 2.7 Investigating System Failures

#### 2.7.1 General Procedure for Analyzing System Failures

When the operating system detects an internal error so severe that normal operation cannot continue, it signals a condition known as a fatal bugcheck and shuts itself down. A specific bugcheck code describes each fatal bugcheck.

To resolve the problem, you must find the reason for the bugcheck. Many failures are caused by errors in user-written device drivers or other privileged code not supplied by Compaq. To identify and correct these errors, you need a listing of the code in question.

Occasionally, a system failure is the result of a hardware failure or an error in code supplied by Compaq. A hardware failure requires the attention of Compaq Services. To diagnose an error in code supplied by Compaq, you need listings of that code, which are available from Compaq.

Start the search for the error by analyzing the CLUE list file that was created by default when the system failed. This file contains an overview of the system failure, which can assist you in finding the line of code that signaled the bugcheck. CLUE CRASH displays the content of the program counter (PC) in the list file. The content of the PC is the address of the next instruction after the instruction that signaled the bugcheck.

However, some bugchecks are caused by unexpected exceptions. In such cases, the address of the instruction that *caused* the exception is more informative than the address of the instruction that signaled the bugcheck. The address of the instruction that caused the exception is located on the stack. You can obtain this address either by using the SHOW STACK command to display the contents of the stack or by using the CLUE CRASH command to display the system state at time of exception. See Section 2.7.2 for information on how to proceed for several types of bugchecks.

Once you have found the address of the instruction that caused the bugcheck or exception, find the module in which the failing instruction resides. Use the MAP command to determine whether the instruction is part of a device driver or another executive image. Alternatively, the SHOW EXECUTIVE command shows the location and size of each of the images that make up the OpenVMS Alpha executive.

If the instruction that caused the bugcheck is not part of a driver or executive image, examine the linker's map of the module or modules you are debugging to determine whether the instruction that caused the bugcheck is in your program.

To determine the general cause of the system failure, examine the code that signaled the bugcheck or the instruction that caused the exception.

#### 2.7.2 Fatal Bugcheck Conditions

There are many possible conditions that can cause OpenVMS Alpha to issue a bugcheck. Normally, these occasions are rare. When they do occur, they are often fatal exceptions or illegal page faults occurring within privileged code. This section describes the symptoms of several common bugchecks. A discussion of other exceptions and condition handling in general appears in the *OpenVMS Programming Concepts Manual*.

An exception is fatal when it occurs while either of the following conditions exists:

- The process is executing above IPL 2 (IPL\$ASTDEL).

- The process is executing in a privileged (kernel or executive) processor access mode and has not declared a condition handler to deal with the exception.

When the system fails, the operating system reports the approximate cause of the system failure on the console terminal. SDA displays a similar message when you issue a SHOW CRASH command. For instance, for a fatal exception, SDA can display one of these messages:

FATALEXCPT, Fatal executive or kernel mode exception

INVEXCEPTN, Exception while above ASTDEL

SSRVEXCEPT, Unexpected system service exception

UNXSIGNAL, Unexpected signal name in ACP

When a FATALEXCPT, INVEXCEPTN, SSRVEXCEPT, or UNXSIGNAL bugcheck occurs, two argument lists, known as the mechanism and signal arrays, are placed on the stack.

Section 2.7.2.1 to Section 2.7.2.4 describe these arrays and related data structures, and Section 2.7.2.5 shows example output from SDA for an SSRVEXCEPT bugcheck.

A page fault is illegal when it occurs while the interrupt priority level (IPL) is greater than 2 (IPL\$\_ASTDEL). When OpenVMS Alpha fails because of an illegal page fault, it displays the following message on the console terminal:

PGFIPLHI, Page fault with IPL too high

Section 2.7.2.6 describes the stack contents when an illegal page fault occurs.


### 2.7.2.1 Mechanism Array

Figure 2–1 illustrates the **mechanism array**, which is made up entirely of quadwords. The first quadword of this array indicates the number of quadwords in this array; this value is always 2C<sub>16</sub>. These quadwords are used by the procedures that search for a condition handler and report exceptions.

# SDA Description

## 2.7 Investigating System Failures

**Figure 2–1 Mechanism Array**

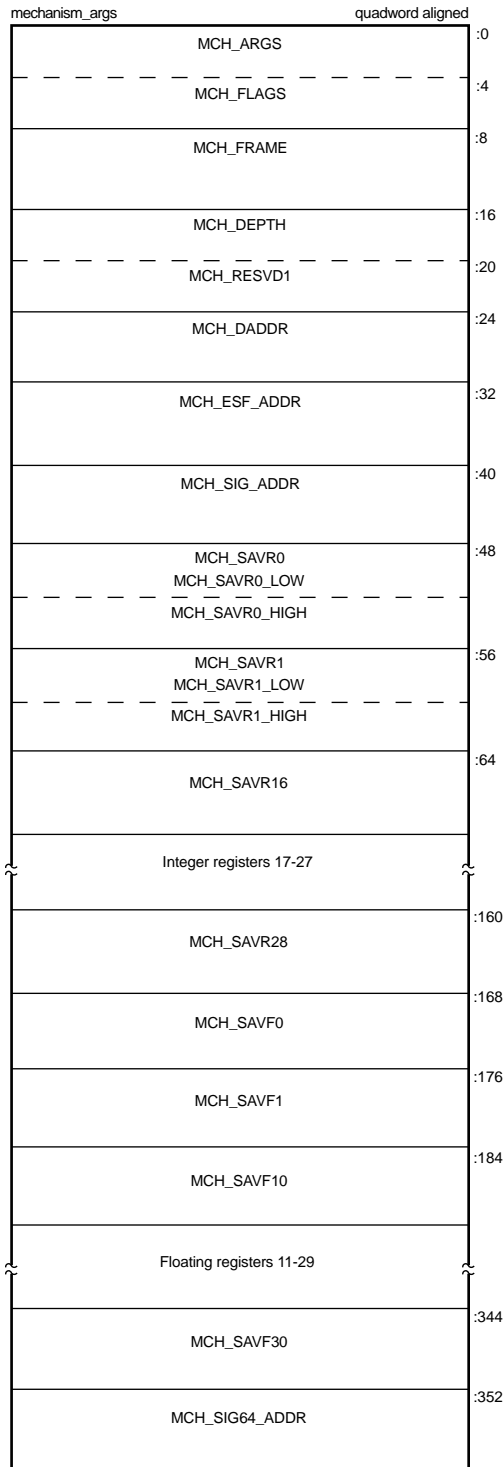

CHF\$\$\_CHFDEF2 = 360

VM-0763A-A1

Symbolic offsets into the mechanism array are defined as follows. The SDA SHOW STACK command identifies the elements of the mechanism array on the stack using these symbols.

Offset	Meaning
CHF\$IS_MCH_ARGS	Number of quadwords that follow. In a mechanism array, this value is always $2C_{16}$ .
CHF\$IS_MCH_FLAGS	Flag bits for related argument mechanism information.
CHF\$PH_MCH_FRAME	Address of the FP (frame pointer) of the establisher's call frame.
CHF\$IS_MCH_DEPTH	Depth of the OpenVMS Alpha search for a condition handler.
CHF\$PH_MCH_DADDR	Address of the handler data quadword, if the exception handler data field is present.
CHF\$PH_MCH_ESF_ADDR	Address of the exception stack frame (see Figure 2-4).
CHF\$PH_MCH_SIG_ADDR	Address of the signal array (see Figure 2-2).
CHF\$IH_MCH_SAVRnn	Contents of the saved integer registers at the time of the exception. The following registers are saved: R0, R1, and R16 to R28 inclusive.
CHF\$FH_MCH_SAVFnn	If the process was using floating point, contents of the saved floating-point registers at the time of the exception. The following registers are saved: F0, F1, and F10 to F30 inclusive.
CHF\$PH_MCH_SIG64_ADDR	Address of the 64-bit signal array (see Figure 2-3).


### 2.7.2.2 Signal Array

The **signal array** appears somewhat farther down the stack. This array comprises all longwords so that the structure is VAX compatible. A signal array describes the exception that occurred. It contains an argument count, the exception code, zero or more exception parameters, the PC, and the PS. Therefore, the size of a signal array can vary from exception to exception. Although there are several possible exception conditions, access violations are most common. Figure 2-2 shows the signal array for an access violation.

## SDA Description

### 2.7 Investigating System Failures

Figure 2–2 Signal Array

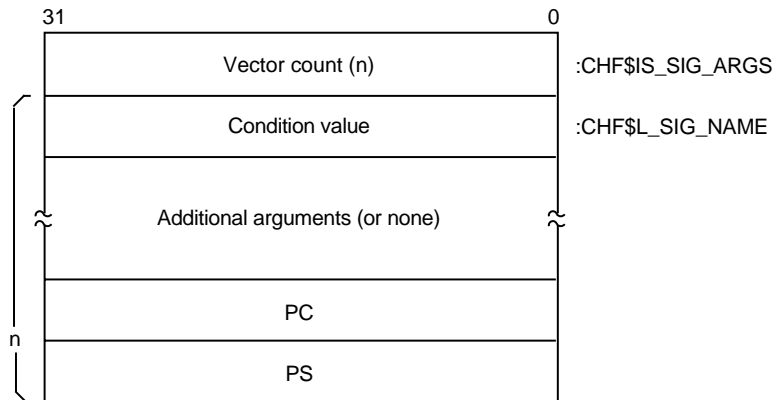

ZK-4643A-GE


For access violations, the signal array is set up as follows:

Value	Meaning
Vector list length	Number of longwords that follow. For access violations, this value is always 5.
Condition value	Exception code. The value $0C_{16}$ represents an access violation. You can identify the exception code by using the SDA command EVALUATE/CONDITION_VALUE or SHOW CRASH.
Additional arguments	<p>These can include a reason mask and a virtual address.</p> <p>In the longword mask if bit 0 of the longword is set, the failing instruction (at the PC saved below) caused a length violation. If bit 1 is set, it referred to a location whose page table entry is in a “no access” page. Bit 2 indicates the type of access used by the failing instruction: it is set for write and modify operations and clear for read operations.</p> <p>The virtual address represents the low-order 32 bits of the virtual address that the failing instruction tried to reference.</p>
PC	PC whose execution resulted in the exception.
PS	PS at the time of the exception.

**2.7.2.3 64-Bit Signal Array**

The **64-bit signal array** also appears further down the stack. This array comprises all quadwords and is not VAX compatible. It contains the same data as the signal array, and Figure 2–3 shows the 64-bit signal array for an access violation. The SDA SHOW STACK command uses the CHF64\$ symbols listed in the figure to identify the 64-bit signal array on the stack.

**Figure 2–3 64-Bit Signal Array**

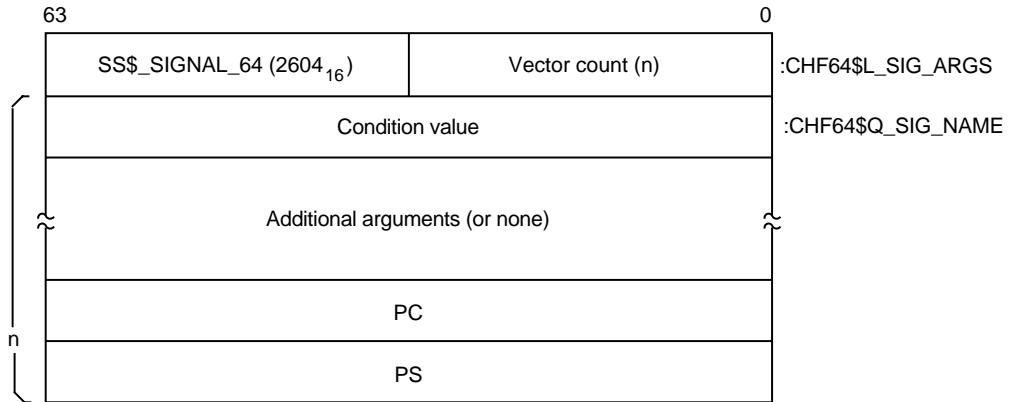

ZK-8960A-GE

For access violations, the 64-bit signal array is set up as follows:

Value	Meaning
Vector list length	Number of quadwords that follow. For access violations, this value is always 5.
Condition value	Exception code. The value 0C <sub>16</sub> represents an access violation. You can identify the exception code by using the SDA command EVALUATE/CONDITION_VALUE or SHOW CRASH.
Additional arguments	These can include a reason mask and a virtual address. In the quadword mask if bit 0 of the quadword is set, the failing instruction (at the PC saved below) caused a length violation. If bit 1 is set, it referred to a location whose page table entry is in a “no access” page. Bit 2 indicates the type of access used by the failing instruction: it is set for write and modify operations and clear for read operations.
PC	PC whose execution resulted in the exception.
PS	PS at the time of the exception.


## SDA Description

### 2.7 Investigating System Failures

#### 2.7.2.4 Exception Stack Frame

Figure 2–4 illustrates the exception stack frame, which comprises all quadwords.

Figure 2–4 Exception Stack Frame

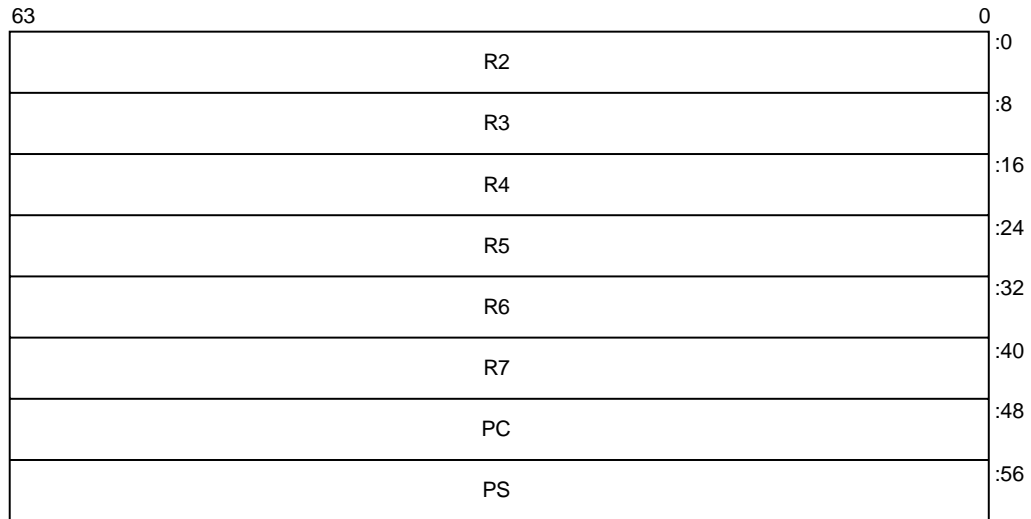

ZK-6788A-GE

The values contained in the exception stack frame are defined as follows:

Table 2–8 Exception Stack Frame Values

Value	Contents
INTSTK\$Q_R2	Contents of R2 at the time of the exception
INTSTK\$Q_R3	Contents of R3 at the time of the exception
INTSTK\$Q_R4	Contents of R4 at the time of the exception
INTSTK\$Q_R5	Contents of R5 at the time of the exception
INTSTK\$Q_R6	Contents of R6 at the time of the exception
INTSTK\$Q_R7	Contents of R7 at the time of the exception
INTSTK\$Q_PC	PC whose execution resulted in the exception
INTSTK\$Q_PS	PS at the time of the exception (except high-order bits)

The SDA SHOW STACK command identifies the elements of the exception stack frame on the stack using these symbols.

#### 2.7.2.5 SSRVEXCEPT Example

If OpenVMS Alpha encounters a fatal exception, you can find the code that signaled it by examining the PC in the signal array. Use the SHOW CRASH or CLUE CRASH command to display the PC and the instruction stream around the PC to locate the exception.



## SDA Description 2.7 Investigating System Failures

The following display shows the SDA output in response to the SHOW CRASH and SHOW STACK commands for an SSRVEXCEPT bugcheck. It illustrates the mechanism array, signal arrays, and the exception stack frame previously described.

```
OpenVMS (TM) Alpha system dump analyzer
...analyzing a selective memory dump...

Dump taken on 30-AUG-2000 13:13:46.83
SSRVEXCEPT, Unexpected system service exception

SDA> SHOW CRASH
Time of system crash: 30-AUG-1996 13:13:46.83

Version of system: OpenVMS (TM) Alpha Operating System, Version V7.3
System Version Major ID/Minor ID: 3/0

System type: DEC 3000 Model 400
Crash CPU ID/Primary CPU ID: 00/00
Bitmask of CPUs active/available: 00000001/00000001

CPU bugcheck codes:
  CPU 00 -- SSRVEXCEPT, Unexpected system service exception

System State at Time of Exception
-----
Exception Frame:
-----
R2 = 00000000.00000003
R3 = FFFFFFFF.80C63460 EXCEPTION_MON_NPRW+06A60
R4 = FFFFFFFF.80D12740 PCB
R5 = 00000000.000000C8
R6 = 00000000.00030038
R7 = 00000000.7FFA1FC0
PC = 00000000.00030078
PS = 00000000.00000003

00000000.00030068: STQ R27,(SP)
00000000.0003006C: BIS R31,SP,FP
00000000.00030070: STQ R26,#X0010(SP)
00000000.00030074: LDA R28,(R31)
PC => 00000000.00030078: LDL R28,(R28)
00000000.0003007C: BEQ R28,#X000007
00000000.00030080: LDQ R26,#XFFE8(R27)
00000000.00030084: BIS R31,R26,R0
00000000.00030088: BIS R31,FP,SP

PS =>
MBZ SPAL MBZ IPL VMM MBZ CURMOD INT PRVMOD
0 00 000000000000 00 0 0 KERN 0 USER

Signal Array
-----
Length = 00000005
Type = 0000000C
Arg = 00000000.00010000
Arg = 00000000.00000000
Arg = 00000000.00030078
Arg = 00000000.00000003
%SYSTEM-F-ACCVI0, access violation, reason mask=00, virtual address=0000000000000000,
PC=0000000000030078, PS=00000003
```

## SDA Description

### 2.7 Investigating System Failures

#### Saved Scratch Registers in Mechanism Array

```
-----  
R0  = 00000000.00020000  R1  = 00000000.00000000  R16 = 00000000.00020004  
R17 = 00000000.00010050  R18 = FFFFFFFF.FFFFFFFF  R19 = 00000000.00000000  
R20 = 00000000.7FFA1F50  R21 = 00000000.00000000  R22 = 00000000.00010050  
R23 = 00000000.00000000  R24 = 00000000.00010051  R25 = 00000000.00000000  
R26 = FFFFFFFF.8010ACA4  R27 = 00000000.00010050  R28 = 00000000.00000000
```

#### CPU 00 Processor crash information

-----  
CPU 00 reason for Bugcheck: SSRVEXCEPT, Unexpected system service exception

Process currently executing on this CPU: SYSTEM

Current image file: \$31\$DKB0:[SYS0.][SYSMGR]X.EXE;1

Current IPL: 0 (decimal)

CPU database address: 80D0E000

CPUs Capabilities: PRIMARY,QUORUM,RUN

#### General registers:

```
R0  = 00000000.00000000  R1  = 00000000.7FFA1EB8  R2  = FFFFFFFF.80D0E6C0  
R3  = FFFFFFFF.80C63460  R4  = FFFFFFFF.80D12740  R5  = 00000000.000000C8  
R6  = 00000000.00030038  R7  = 00000000.7FFA1FC0  R8  = 00000000.7FFAC208  
R9  = 00000000.7FFAC410  R10 = 00000000.7FFAD238  R11 = 00000000.7FFCE3E0  
R12 = 00000000.00000000  R13 = FFFFFFFF.80C6EB60  R14 = 00000000.00000000  
R15 = 00000000.009A79FD  R16 = 00000000.000003C4  R17 = 00000000.7FFA1D40  
R18 = FFFFFFFF.80C05C38  R19 = 00000000.00000000  R20 = 00000000.7FFA1F50  
R21 = 00000000.00000000  R22 = 00000000.00000001  R23 = 00000000.7FFF03C8  
R24 = 00000000.7FFF0040  AI  = 00000000.00000003  RA  = FFFFFFFF.82A21080  
PV  = FFFFFFFF.829CF010  R28 = FFFFFFFF.8004B6DC  FP  = 00000000.7FFA1CA0  
PC  = FFFFFFFF.82A210B4  PS  = 18000000.00000000
```

#### Processor Internal Registers:

```
ASN = 00000000.0000002F          ASTSR/ASTEN =          0000000F  
IPL =          00000000  PCBB = 00000000.003FE080  PRBR = FFFFFFFF.80D0E000  
PTBR = 00000000.00001136  SCBB = 00000000.000001DC  SISR = 00000000.00000000  
VPTB = FFFFFFFF.C0000000  FPCR = 00000000.00000000  MCES = 00000000.00000000
```

#### CPU 00 Processor crash information

```
-----  
KSP  = 00000000.7FFA1C98  
ESP  = 00000000.7FFA6000  
SSP  = 00000000.7FFAC100  
USP  = 00000000.7AFFBAD0
```

No spinlocks currently owned by CPU 00

## SDA Description 2.7 Investigating System Failures

SDA> SHOW STACK

Current Operating Stack (KERNEL):

```

00000000.7FFA1C78 18000000.00000000
00000000.7FFA1C80 00000000.7FFA1CA0
00000000.7FFA1C88 00000000.00000000
00000000.7FFA1C90 00000000.7FFA1D40
SP => 00000000.7FFA1C98 00000000.00000000
00000000.7FFA1CA0 FFFFFFFF.829CF010 EXE$EXCPTN
00000000.7FFA1CA8 FFFFFFFF.82A2059C EXCEPTION_MON_PRO+0259C
00000000.7FFA1CB0 00000000.00000000
00000000.7FFA1CB8 00000000.7FFA1CD0
00000000.7FFA1CC0 FFFFFFFF.829CEDA8 EXE$SET_PAGES_READ_ONLY+00948
00000000.7FFA1CC8 00000000.00000000
00000000.7FFA1CD0 FFFFFFFF.829CEDA8 EXE$SET_PAGES_READ_ONLY+00948
00000000.7FFA1CD8 00000000.00000000
00000000.7FFA1CE0 FFFFFFFF.82A1E930 EXE$CONTSIGNAL_C+001D0
00000000.7FFA1CE8 00000000.7FFA1F40
00000000.7FFA1CF0 FFFFFFFF.80C63780 EXE$ACVIOLAT
00000000.7FFA1CF8 00000000.7FFA1EB8
00000000.7FFA1D00 00000000.7FFA1D40
00000000.7FFA1D08 00000000.7FFA1F00
00000000.7FFA1D10 00000000.7FFA1F40
00000000.7FFA1D18 00000000.00000000
00000000.7FFA1D20 00000000.00000000
00000000.7FFA1D28 00000000.00020000 SYS$K_VERSION_04
00000000.7FFA1D30 00000005.00000250 BUG$_NETRCVPKT
00000000.7FFA1D38 829CE050.000008F8 BUG$_SEQ_NUM_OVF
CHF$IS_MCH_ARGS 00000000.7FFA1D40 00000000.0000002C
CHF$PH_MCH_FRAME 00000000.7FFA1D48 00000000.7AFFBAD0
CHF$IS_MCH_DEPTH 00000000.7FFA1D50 FFFFFFFF.FFFFFFFD
CHF$PH_MCH_DADDR 00000000.7FFA1D58 00000000.00000000
CHF$PH_MCH_ESF_ADDR 00000000.7FFA1D60 00000000.7FFA1F00
CHF$PH_MCH_SIG_ADDR 00000000.7FFA1D68 00000000.7FFA1EB8
CHF$IH_MCH_SAVR0 00000000.7FFA1D70 00000000.00020000 SYS$K_VERSION_04
CHF$IH_MCH_SAVR1 00000000.7FFA1D78 00000000.00000000
CHF$IH_MCH_SAVR16 00000000.7FFA1D80 00000000.00020004 UCB$M_LCL_VALID+00004
CHF$IH_MCH_SAVR17 00000000.7FFA1D88 00000000.00010050 SYS$K_VERSION_16+00010
CHF$IH_MCH_SAVR18 00000000.7FFA1D90 FFFFFFFF.FFFFFFFF
CHF$IH_MCH_SAVR19 00000000.7FFA1D98 00000000.00000000
CHF$IH_MCH_SAVR20 00000000.7FFA1DA0 00000000.7FFA1F50
CHF$IH_MCH_SAVR21 00000000.7FFA1DA8 00000000.00000000
CHF$IH_MCH_SAVR22 00000000.7FFA1DB0 00000000.00010050 SYS$K_VERSION_16+00010
CHF$IH_MCH_SAVR23 00000000.7FFA1DB8 00000000.00000000
CHF$IH_MCH_SAVR24 00000000.7FFA1DC0 00000000.00010051 SYS$K_VERSION_16+00011
CHF$IH_MCH_SAVR25 00000000.7FFA1DC8 00000000.00000000
CHF$IH_MCH_SAVR26 00000000.7FFA1DD0 FFFFFFFF.8010ACA4 AMAC$EMUL_CALL_NATIVE_C+000A4
CHF$IH_MCH_SAVR27 00000000.7FFA1DD8 00000000.00010050 SYS$K_VERSION_16+00010
CHF$IH_MCH_SAVR28 00000000.7FFA1DE0 00000000.00000000
00000000.7FFA1DE8 00000000.00000000
00000000.7FFA1DF0 00000000.00000000
00000000.7FFA1DF8 00000000.00000000
00000000.7FFA1E00 00000000.00000000
00000000.7FFA1E08 00000000.00000000
00000000.7FFA1E10 00000000.00000000
00000000.7FFA1E18 00000000.00000000
00000000.7FFA1E20 00000000.00000000
00000000.7FFA1E28 00000000.00000000
00000000.7FFA1E30 00000000.00000000
00000000.7FFA1E38 00000000.00000000
00000000.7FFA1E40 00000000.00000000
00000000.7FFA1E48 00000000.00000000
00000000.7FFA1E50 00000000.00000000
00000000.7FFA1E58 00000000.00000000
00000000.7FFA1E60 00000000.00000000
00000000.7FFA1E68 00000000.00000000

```

## SDA Description


### 2.7 Investigating System Failures

	00000000.7FFA1E70	00000000.00000000	
	00000000.7FFA1E78	00000000.00000000	
	00000000.7FFA1E80	00000000.00000000	
	00000000.7FFA1E88	00000000.00000000	
	00000000.7FFA1E90	00000000.00000000	
	00000000.7FFA1E98	00000000.00000000	
CHF\$PH_MCH_SIG64_ADDR	00000000.7FFA1EA0	00000000.7FFA1ED0	
	00000000.7FFA1EA8	00000000.00000000	
	00000000.7FFA1EB0	00000000.7FFA1F50	
	00000000.7FFA1EB8	0000000C.00000005	
	00000000.7FFA1EC0	00000000.00010000	SYS\$K_VERSION_07
	00000000.7FFA1EC8	00000003.00030078	SYS\$K_VERSION_01+00078
CHF\$L_SIG_ARGS	00000000.7FFA1ED0	00002604.00000005	UCB\$M_TEMPLATE+00604
CHF\$L_SIG_ARG1	00000000.7FFA1ED8	00000000.0000000C	
	00000000.7FFA1EE0	00000000.00010000	SYS\$K_VERSION_07
	00000000.7FFA1EE8	00000000.00000000	
	00000000.7FFA1EF0	00000000.00030078	SYS\$K_VERSION_01+00078
	00000000.7FFA1EF8	00000000.00000003	
INTSTK\$Q_R2	00000000.7FFA1F00	00000000.00000003	
INTSTK\$Q_R3	00000000.7FFA1F08	FFFFFFFF.80C63460	EXCEPTION_MON_NPRW+06A60
INTSTK\$Q_R4	00000000.7FFA1F10	FFFFFFFF.80D12740	PCB
INTSTK\$Q_R5	00000000.7FFA1F18	00000000.0000000C8	
INTSTK\$Q_R6	00000000.7FFA1F20	00000000.00030038	SYS\$K_VERSION_01+00038
INTSTK\$Q_R7	00000000.7FFA1F28	00000000.7FFA1FC0	
INTSTK\$Q_PC	00000000.7FFA1F30	00000000.00030078	SYS\$K_VERSION_01+00078
INTSTK\$Q_PS	00000000.7FFA1F38	00000000.00000003	
Prev SP (7FFA1F40) ==>	00000000.7FFA1F40	00000000.00010050	SYS\$K_VERSION_16+00010
	00000000.7FFA1F48	00000000.00010000	SYS\$K_VERSION_07
	00000000.7FFA1F50	FFFFFFFF.8010ACA4	AMAC\$EMUL_CALL_NATIVE_C+000A4
	00000000.7FFA1F58	00000000.7FFA1F70	
	00000000.7FFA1F60	00000000.00000001	
	00000000.7FFA1F68	FFFFFFFF.800EE81C	RM_STD\$DIRCACHE_BLKAST_C+005AC
	00000000.7FFA1F70	FFFFFFFF.80C6EBA0	SCH\$CHSEP+001E0
	00000000.7FFA1F78	00000000.829CEDE8	EXE\$SIGTORET
	00000000.7FFA1F80	00010050.00000002	SYS\$K_VERSION_16+00010
	00000000.7FFA1F88	00000000.00020000	SYS\$K_VERSION_04
	00000000.7FFA1F90	00000000.00030000	SYS\$K_VERSION_01
	00000000.7FFA1F98	FFFFFFFF.800A4D64	EXCEPTION_MON_NPRO+00D64
	00000000.7FFA1FA0	00000000.00000003	
	00000000.7FFA1FA8	FFFFFFFF.80D12740	PCB
	00000000.7FFA1FB0	00000000.00010000	SYS\$K_VERSION_07
	00000000.7FFA1FB8	00000000.7AFFBAD0	
	00000000.7FFA1FC0	00000000.7FFCF880	MMG\$IMGHDRBUF+00080
	00000000.7FFA1FC8	00000000.7B0E9851	
	00000000.7FFA1FD0	00000000.7FFCF818	MMG\$IMGHDRBUF+00018
	00000000.7FFA1FD8	00000000.7FFCF938	MMG\$IMGHDRBUF+00138
	00000000.7FFA1FE0	00000000.7FFAC9F0	
	00000000.7FFA1FE8	00000000.7FFAC9F0	
	00000000.7FFA1FF0	FFFFFFFF.80000140	SYS\$PUBLIC_VECTORS_NPRO+00140
	00000000.7FFA1FF8	00000000.0000001B	
	.		
	.		
	.		

**2.7.2.6 Illegal Page Faults**

When an illegal page fault occurs, the stack appears as pictured in Figure 2-5.

**Figure 2-5 Stack Following an Illegal Page-Fault Error**

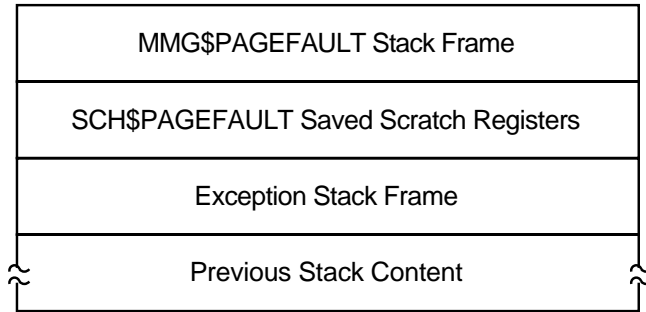

ZK-6787A-GE

The stack contents are as follows:

MMG\$PAGEFAULT Stack Frame	Stack frame built at entry to MMG\$PAGEFAULT, the page fault exception service routine. The frame includes the contents of the following registers at the time of the page fault: R3, R8, R11 to R15, R29 (frame pointer)
SCH\$PAGEFAULT Saved Scratch Registers	Contents of the following registers at the time of the page fault: R0, R1, R16 to R28
Exception Stack Frame	Exception stack frame (see Figure 2-4)
Previous Stack Content	Contents of the stack prior to the illegal page-fault error

When you analyze a dump caused by a PGFIPLHI bugcheck, the SHOW STACK command identifies the exception stack frame using the symbols shown in Table 2-8. The SHOW CRASH or CLUE CRASH command displays the instruction that caused the page fault and the instructions around it.

**2.8 Inducing a System Failure**

If the operating system is not performing well and you want to create a dump you can examine, you must induce a system failure. Occasionally, a device driver or other user-written, kernel-mode code can cause the system to execute a loop of code at a high priority, interfering with normal system operation. This loop can occur even though you have set a breakpoint in the code if the loop is encountered before the breakpoint. To gain control of the system in such circumstances, you must cause the system to fail and then reboot it.

If the system has suspended all noticeable activity and is hung, see the examples of causing system failures in Section 2.8.2.

If you are generating a system failure in response to a system hang, be sure to record the PC and PS as well as the contents of the integer registers at the time of the system halt.

## SDA Description

### 2.8 Inducing a System Failure

#### 2.8.1 Meeting Crash Dump Requirements

The following requirements must be met before the operating system can write a complete crash dump:

- You must not halt the system until the console dump messages have been printed in their entirety and the memory contents have been written to the crash dump file. Be sure to allow sufficient time for these events to take place or make sure that all disk activity has stopped before using the console to halt the system.
- There must be a crash dump file in SYS\$\$SPECIFIC:[SYSEXE]: named either SYSDUMP.DMP or PAGEFILE.SYS.

This dump file must be either large enough to hold the entire contents of memory (as discussed in Section 2.2.1.1) or, if the DUMPSTYLE system parameter is set, large enough to accommodate a subset or compressed dump (also discussed in Section 2.2.1.1).

If SYSDUMP.DMP is not present, the operating system attempts to write crash dumps to PAGEFILE.SYS. In this case, the SAVEDUMP system parameter must be 1 (the default is 0).

- Alternatively, the system must be set up for DOSD. See Section 2.2.1.5, and the *OpenVMS System Manager's Manual, Volume 2: Tuning, Monitoring, and Complex Systems* for details.
- The DUMPBUG system parameter must be 1 (the default is 1).

#### 2.8.2 Procedure for Causing a System Failure

This section tells you how to enter the XDelta utility (XDELTA) to force a system failure.

Before you can use XDelta, it must be loaded at system startup. To load XDelta during system bootstrap, you must set bit 1 in the boot flags. See the *OpenVMS Alpha Version 7.1 Upgrade and Installation Manual* for information about booting with the XDelta utility.

Put the system in console mode by pressing Ctrl/P or the Halt push button. Enter the following commands at the console prompt to enter XDelta:

```
>>> DEPOSIT SIRR E
>>> CONTINUE
```

Once you have entered XDelta, use any valid XDelta commands to examine register or memory locations, step through code, or force a system failure (by entering ;C under XDelta). See the *OpenVMS Delta/XDelta Debugger Manual* for more information about using XDelta.

If you did not load XDelta, you can force a system crash by entering console commands that make the system incur an exception at high IPL. At the console prompt, enter commands to set the program counter (PC) to an invalid address and the PS to kernel mode at IPL 31 before continuing. This results in a forced INVEXCEPTN-type bugcheck. Some Compaq computers employ the console command CRASH (which will force a system failure) while other systems require that you manually enter the commands.

Enter the following commands at the console prompt to force a system failure:

```
>>> DEPOSIT PC FFFFFFFFFFFFFFFF00
>>> DEPOSIT PS 1F00
>>> CONTINUE
```

## **SDA Description 2.8 Inducing a System Failure**

For more information, refer to the hardware manuals that accompanied your computer.





---

## ANALYZE Usage Summary and Qualifiers

This chapter describes the format, usage, and qualifiers of the System Dump Analyzer (SDA) utility.

### 3.1 ANALYZE Usage Summary

The System Dump Analyzer (SDA) utility helps determine the causes of system failures. This utility is also useful for examining the running system.

#### Format

```
ANALYZE {/CRASH_DUMP [/RELEASE] [/OVERRIDE] filespec|/SYSTEM}  
        [/SYMBOL = system-symbols-table]
```

#### Command Parameter

##### **filespec**

Name of the file that contains the dump you want to analyze. At least one field of the **filespec** is required, and it can be any field. The default **filespec** is the highest version of SYSDUMP.DMP in your default directory.

#### Description

By default, the System Dump Analyzer is automatically invoked when you reboot the system after a system failure.

To analyze a system dump interactively, invoke SDA by issuing the following command:

```
$ ANALYZE/CRASH_DUMP filespec
```

If you do not specify **filespec**, SDA prompts you for it.

To analyze a crash dump, your process must have the privileges necessary for reading the dump file. This usually requires system privilege (SYSPRV), but your system manager can, if necessary, allow less privileged processes to read the dump files. Your process needs change-mode-to-kernel (CMKRNL) privilege to release page file dump blocks, whether you use the /RELEASE qualifier or the SDA COPY command.

Invoke SDA to analyze a running system by issuing the following command:

```
$ANALYZE/SYSTEM
```

To examine a running system, your process must have change-mode-to-kernel (CMKRNL) privilege. Your process must also have the map-by-PFN privilege (PFNMAP) to access memory by physical address on a running system. You cannot specify **filespec** when using the /SYSTEM qualifier.

## **ANALYZE Usage Summary and Qualifiers**

### **3.1 ANALYZE Usage Summary**

To send all output from SDA to a file, use the SDA command `SET OUTPUT`, specifying the name of the output file. The file produced is 132 columns wide and is formatted for output to a printer. To later redirect the output to your terminal, use the following command:

```
SDA> SET OUTPUT SYS$OUTPUT
```

To send a copy of all the commands you type and a copy of all the output those commands produce to a file, use the SDA command `SET LOG`, specifying the name of the log file. The file produced is 132 columns wide and is formatted for output to a printer.

To exit from SDA, use the `EXIT` command. Note that the `EXIT` command also causes SDA to exit from display mode. Thus, if SDA is in display mode, you must use the `EXIT` command twice: once to exit from display mode, and a second time to exit from SDA.

### **3.2 ANALYZE Qualifiers**

The following qualifiers described in this section determine whether the object of an SDA session is a crash dump or a running system. They also help create the environment of an SDA session.

```
/CRASH_DUMP  
/OVERRIDE  
/RELEASE  
/SYMBOL  
/SYSTEM
```

## /CRASH\_DUMP

Invokes SDA to analyze the specified dump file.

### Format

/CRASH\_DUMP filespec

### Parameter

#### **filespec**

Name of the crash dump file to be analyzed. The default file specification is:

SYS\$DISK:[default-dir]SYSDUMP.DMP

SYS\$DISK and [default-dir] represent the disk and directory specified in your last SET DEFAULT command. If you do not specify **filespec**, SDA prompts you for it.

### Description

See Chapter 2, Section 2.3 for additional information on crash dump analysis. You cannot specify the /SYSTEM qualifier when you include the /CRASH\_DUMP qualifier in the ANALYZE command.

### Examples

1. \$ ANALYZE/CRASH\_DUMP SYS\$SYSTEM:SYSDUMP.DMP  
\$ ANALYZE/CRASH SYS\$SYSTEM

These commands invoke SDA to analyze the crash dump stored in SYS\$SYSTEM:SYSDUMP.DMP.

2. \$ ANALYZE/CRASH SYS\$SYSTEM:PAGEFILE.SYS

This command invokes SDA to analyze a crash dump stored in the system page file.

## ANALYZE Usage Summary and Qualifiers /OVERRIDE

---

### /OVERRIDE

When used with the /CRASH\_DUMP qualifier, invokes SDA to analyze only the structure of the specified dump file when a corruption or other problem prevents normal invocation of SDA with the ANALYZE/CRASH\_DUMP command.

#### Format

```
/CRASH_DUMP/OVERRIDE filespec
```

#### Parameter

##### filespec

Name of the crash dump file to be analyzed. The default file specification is:

```
SYSSDISK:[default-dir]SYSDUMP.DMP
```

SYSSDISK and [default-dir] represent the disk and directory specified in your last SET DEFAULT command. If you do not specify **filespec**, SDA prompts you for it.

#### Description

See Chapter 2, Section 2.3 for additional information on crash dump analysis. Note that when SDA is invoked with /OVERRIDE, not all the commands in Chapter 2, Section 2.3 can be used. Commands that can be used are as follows:

- Output control commands such as SET OUTPUT and SET LOG
- Dump file related commands such as SHOW DUMP and CLUE ERRLOG

Commands that cannot be used are as follows:

- Commands that access memory addresses within the dump file such as EXAMINE and SHOW SUMMARY
- The /RELEASE qualifier when you include the /OVERRIDE qualifier in the ANALYZE/CRASH\_DUMP command

When /OVERRIDE is used, the SDA command prompt is SDA>>.

#### Examples

1. 

```
$ ANALYZE/CRASH_DUMP/OVERRIDE SYSS$SYSTEM:SYSDUMP.DMP
$ ANALYZE/CRASH/OVERRIDE SYSS$SYSTEM
```

These commands invoke SDA to analyze the crash dump stored in SYSS\$SYSTEM:SYSDUMP.DMP.

---

## /RELEASE

Invokes SDA to release those blocks in the specified system page file occupied by a crash dump.

Requires CMKRNL (change-mode-to-kernel) privilege.

### Format

/RELEASE filespec

### Parameter

#### filespec

Name of the system page file (SYSSSYSTEM:PAGEFILE.SYS). Because the default file specification is SYSSDISK:[default-dir]SYSDUMP.DMP, you must identify the page file explicitly. SYSSDISK and [default-dir] represent the disk and directory specified in your last DCL command SET DEFAULT. If you do not specify **filespec**, SDA prompts you for it.

### Description

Use the /RELEASE qualifier to release from the system page file those blocks occupied by a crash dump. When invoked with the /RELEASE qualifier, SDA immediately deletes the dump from the page file and allows no opportunity to analyze its contents.

When you specify the /RELEASE qualifier in the ANALYZE command, do the following:

1. Use the /CRASH\_DUMP qualifier.
2. Include the name of the system page file (SYSSSYSTEM:PAGEFILE.SYS) as the **filespec**.

If you do not specify the system page file or the specified page file does not contain a dump, SDA generates the following messages:

```
%SDA-E-BLKSNRLSD, no dump blocks in page file to release, or not page file  
%SDA-E-NOTPAGFIL, specified file is not the page file
```

You cannot specify the /OVERRIDE qualifier when you include the /RELEASE qualifier in the ANALYZE/CRASH\_DUMP command.

### Example

```
$ ANALYZE/CRASH_DUMP/RELEASE SYSSSYSTEM:PAGEFILE.SYS  
$ ANALYZE/CRASH/RELEASE PAGEFILE.SYS
```

These commands invoke SDA to release to the page file those blocks in SYSSSYSTEM:PAGEFILE.SYS occupied by a crash dump.

## /SYMBOL

Specifies an alternate system symbol table for SDA to use.

### Format

`/SYMBOL = system-symbol-table`

File specification of the OpenVMS Alpha SDA system symbol table required by SDA to analyze a system dump or running system. The specified **system-symbol-table** must contain those symbols required by SDA to find certain locations in the executive image.

If you do not specify the `/SYMBOL` qualifier, SDA uses `SDA$READ_DIR:SYS$BASE_IMAGE.EXE` to load system symbols into the SDA symbol table. When you specify the `/SYMBOL` qualifier, SDA assumes the default disk and directory to be `SYSDISK:[ ]`, that is, the disk and directory specified in your last DCL command `SET DEFAULT`. If you specify a file for this parameter that is not a system symbol table, SDA exits with a fatal error.

### Description

The `/SYMBOL` qualifier allows you to specify a system symbol table to load into the SDA symbol table. You can use the `/SYMBOL` qualifier whether you are analyzing a system dump or a running system. It is not normally necessary to use the `/SYMBOL` qualifier when analyzing the running system, since the default `SYS$BASE_IMAGE.EXE` is the one in use in the system. However if `SDA$READ_DIR` has been redefined during crash dump analysis, then the `/SYMBOL` qualifier can be used to ensure that the correct base image is found when analyzing the running system.

The `/SYMBOL` qualifier can be used with the `/CRASH_DUMP` and `/SYSTEM` qualifiers. It is ignored when `/OVERRIDE` or `/RELEASE` is specified.

### Example

```
$ ANALYZE/CRASH_DUMP/SYMBOL=SDA$READ_DIR:SYS$BASE_IMAGE.EXE SYSSYSTEM
```

This command invokes SDA to analyze the crash dump stored in `SYSSYSTEM:SYSDUMP.DMP`, using the base image in `SDA$READ_DIR`.

## **/SYSTEM**

Invokes SDA to analyze a running system.

Requires CMKRNL (change-mode-to-kernel) privilege. Also requires PFNMAP (map-by-PFN) privilege to access memory by physical address.

### **Format**

/SYSTEM

### **Parameters**

None.

### **Description**

See Chapter 2, Section 2.4 to use SDA to analyze a running system.

You cannot specify the /CRASH\_DUMP, /OVERRIDE, or /RELEASE qualifiers when you include the /SYSTEM qualifier in the ANALYZE command.

### **Example**

```
$ ANALYZE/SYSTEM
```

This command invokes SDA to analyze the running system.





---

## SDA Commands

This chapter describes the SDA commands that can be used to analyze a system dump or a running system. SDA CLUE extension commands, which can summarize information provided by certain SDA commands and provide additional detail for some SDA commands, are described in Chapter 5.

The SDA commands are as follows:

- @ (Execute Command)
- ATTACH
- COPY
- DEFINE
- DEFINE/KEY
- DUMP
- EVALUATE
- EXAMINE
- EXIT
- FORMAT
- HELP
- MAP
- MODIFY DUMP
- READ
- REPEAT
- SEARCH
- SET CPU
- SET ERASE\_SCREEN
- SET FETCH
- SET LOG
- SET OUTPUT
- SET PROCESS
- SET RMS
- SET SIGN\_EXTEND
- SET SYMBOLIZE
- SHOW ADDRESS
- SHOW BUGCHECK
- SHOW CALL\_FRAME
- SHOW CLUSTER
- SHOW CONNECTIONS
- SHOW CPU
- SHOW CRASH
- SHOW DEVICE
- SHOW DUMP
- SHOW EXECUTIVE
- SHOW GALAXY
- SHOW GCT
- SHOW GLOBAL\_SECTION\_TABLE

## SDA Commands

SHOW GLOCK  
SHOW GMDB  
SHOW GSD  
SHOW HEADER  
SHOW LAN  
SHOW LOCKS  
SHOW MACHINE\_CHECK  
SHOW MEMORY  
SHOW PAGE\_TABLE  
SHOW PARAMETER  
SHOW PFN\_DATA  
SHOW POOL  
SHOW PORTS  
SHOW PROCESS  
SHOW RAD  
SHOW RESOURCES  
SHOW RMD  
SHOW RMS  
SHOW RSPID  
SHOW SHM\_CPP  
SHOW SHM\_REG  
SHOW SPINLOCKS  
SHOW STACK  
SHOW SUMMARY  
SHOW SYMBOL  
SHOW TQE  
SHOW WORKING\_SET\_LIST  
SPAWN  
UNDEFINE  
VALIDATE PFN\_LIST  
VALIDATE QUEUE  
VALIDATE SHM\_CPP

## @(Execute Command)

Causes SDA to execute SDA commands contained in a file. Use this command to execute a set of frequently used SDA commands.

### Format

@filespec

### Parameter

**filespec**

Name of a file that contains the SDA commands to be executed. The default file type is .COM.

### Example

```
SDA> @USUAL
```

The Execute command executes the following commands, as contained in a file named USUAL.COM:

```
SET OUTPUT LASTCRASH.LIS
SHOW CRASH
SHOW PROCESS
SHOW STACK
SHOW SUMMARY
```

This command procedure first makes the file LASTCRASH.LIS the destination for output generated by subsequent SDA commands. Next, the command procedure sends information to the file about the system failure and its context, including a description of the process executing at the time of the failure, the contents of the stack on which the failure occurred, and a list of the processes active on the system.

An EXIT command within a command procedure terminates the procedure at that point, as would an end-of-file.

Command procedures cannot be nested.

## ATTACH

Switches control of your terminal from your current process to another process in your job (for example, one created with the SDA SPAWN command).

### Format

```
ATTACH [/PARENT] process-name
```

### Parameter

**process-name**

Name of the process to which you want to transfer control.

### Qualifier

**/PARENT**

Transfers control of the terminal to the current process parent process. When you specify this qualifier, you cannot specify the **process-name** parameter.

### Examples

1. SDA> ATTACH/PARENT

This ATTACH command attaches the terminal to the parent process of the current process.

2. SDA> ATTACH DUMPER

This ATTACH command attaches the terminal to a process named DUMPER in the same job as the current process.

---

## COPY

Copies the contents of the dump file to another file.

### Format

COPY [/qualifier...] output-filespec

### Parameter

#### **output-filespec**

Name of the device, directory, and file to which SDA copies the dump file. The default file specification is:

`SYSSDISK:[default-dir]filename.DMP`

`SYSSDISK` and `[default-dir]` represent the disk and directory specified in your last DCL command `SET DEFAULT`. You must specify a file name.

### Qualifiers

#### **/COMPRESS**

Causes SDA to compress dump data as it is writing a copy. If the dump being analyzed is already compressed, then SDA does a direct COPY, and issues an informational message indicating that it is ignoring the `/COMPRESS` qualifier.

#### **/DECOMPRESS**

Causes SDA to decompress dump data as it is writing a copy. If the dump being analyzed is already decompressed, then SDA does a direct COPY, and issues an informational message indicating that it is ignoring the `/DECOMPRESS` qualifier.

### Description

Each time the system fails, the contents of memory and the hardware context of the current process (as directed by the `DUMPSTYLE` parameter) are copied into the file `SYSSSYSTEM:SYSDUMP.DMP` (or the page file), overwriting its contents. If you do not save this crash dump elsewhere, it will be overwritten the next time that the system fails.

The `COPY` command allows you to preserve a crash dump by copying its contents to another file. It is generally useful to invoke SDA during system initialization to execute the `COPY` command. This ensures that a copy of the dump file is made only after the system has failed. The preferred method for doing this, using the logical name `CLUE$SITE_PROC`, is described in Section 2.2.3.

The `COPY` command does not affect the contents of the file containing the dump being analyzed.

If you are using the page file (`SYSSSYSTEM:PAGEFILE.SYS`) as the dump file instead of `SYSDUMP.DMP`, successful completion of the `COPY` command will automatically cause the blocks of the page file containing the dump to be released, thus making them available for paging. Even if the copy operation succeeds, the release operation requires that your process have change-mode-to-kernel (`CMKRNL`) privilege. Once the dump pages have been released from the page file, the dump information in these pages will be lost and SDA will

## SDA Commands

### COPY

immediately exit. You must perform subsequent analysis upon the copy of the dump created by the COPY command.

If you press Ctrl/T while using the COPY command, the system displays how much of the file has been copied.

### Example

```
SDA> COPY SYS$CRASH:SAVEDUMP
```

The COPY command copies the dump file into the file SYS\$CRASH:SAVEDUMP.DMP.

---

## DEFINE

Assigns a value to a symbol.

### Format

```
DEFINE [/qualifier...] symbol-name [=] expression
```

### Parameters

#### **symbol-name**

Name, containing from 1 to 31 alphanumeric characters, that identifies the symbol. See Chapter 2, Section 2.6.2.4 for a description of SDA symbol syntax and a list of default symbols.

#### **expression**

Definition of the symbol's value. See Chapter 2, Section 2.6.2 for a discussion of the components of SDA expressions.

### Qualifier

#### **/PD**

Defines a symbol as a procedure descriptor (PD). It also defines the routine address symbol corresponding to the defined symbol (the routine address symbol has the same name as the defined symbol, only with `_C` appended to the symbol name). See Section 2.6.2.4 for more information about symbols.

### Description

The `DEFINE` command causes SDA to evaluate an expression and then assign its value to a symbol. Both the `DEFINE` and `EVALUATE` commands perform computations to evaluate expressions. `DEFINE` adds symbols to the SDA symbol table but does not display the results of the computation. `EVALUATE` displays the result of the computation but does not add symbols to the SDA symbol table.

### Examples

1. SDA> DEFINE BEGIN = 80058E00  
SDA> DEFINE END = 80058E60  
SDA> EXAMINE BEGIN:END

In this example, `DEFINE` defines two addresses, called `BEGIN` and `END`. These symbols serve as reference points in memory, defining a range of memory locations for the `EXAMINE` command to inspect.

2. SDA> DEFINE NEXT = @PC  
SDA> EXAMINE/INSTRUCTION NEXT  
NEXT: HALT

The symbol `NEXT` defines the address contained in the program counter, so that the symbol can be used in an `EXAMINE/INSTRUCTION` command.

## SDA Commands

### DEFINE

```
3. SDA> DEFINE VEC SCH$GL_PCBVEC
   SDA> EXAMINE VEC
   SCH$GL_PCBVEC: 00000000.8060F2CC "ìð'....."
   SDA>
```

After the value of global symbol SCH\$GL\_PCBVEC has been assigned to the symbol VEC, the symbol VEC is used to examine the memory location or value represented by the global symbol.

```
4. SDA> DEFINE/PD VEC SCH$QAST
   SDA> EXAMINE VEC
   SCH$QAST: 0000002C.00003008 ".0....."
   SDA> EXAMINE VEC_C
   SCH$QAST_C: B75E0008.43C8153E ">.ÈC..^."
   SDA>
```

In this example, the DEFINE/PD command defines not only the symbol VEC, but also the corresponding routine address symbol (VEC\_C).



---

## DEFINE/KEY

Associates an SDA command with a terminal key.

### Format

DEFINE/KEY [/qualifier...] key-name command

### Parameters

#### key-name

Name of the key to be defined. You can define the following keys under SDA:

Key Name	Key Designation
PF1	LK201, VT100
PF2	LK201, VT100
PF3	LK201, VT100
PF4	LK201, VT100
KP0 . . . KP9	Keypad 0–9
PERIOD	Keypad period
COMMA	Keypad comma
MINUS	Keypad minus
ENTER	Keypad ENTER
UP	Up arrow
DOWN	Down arrow
LEFT	Left arrow
RIGHT	Right arrow
E1	LK201 Find
E2	LK201 Insert Here
E3	LK201 Remove
E4	LK201 Select
E5	LK201 Prev Screen
E6	LK201 Next Screen
HELP	LK201 Help
DO	LK201 Do
F7 . . . F20	LK201 Function keys

#### command

SDA command to define a key. The command must be enclosed in quotation marks (" ").

### Qualifiers

**/IF\_STATE=state\_list**

**/NOIF\_STATE**

Specifies a list of one or more states, one of which must be in effect for the key definition to work. The /NOIF\_STATE qualifier has the same meaning as /IF\_STATE=current\_state. The state name is an alphanumeric string. States are

## SDA Commands

### DEFINE/KEY

established with the /SET\_STATE qualifier. If you specify only one state name, you can omit the parentheses. By including several state names, you can define a key to have the same function in all the specified states.

#### **/KEY**

Defines a key as an SDA command. To issue the command, press the defined key and the Return key. If you use the /TERMINATE qualifier as well, you do not have to press the Return key. The /KEY qualifier must be specified.

#### **/LOCK\_STATE**

#### **/NOLOCK\_STATE**

Specifies that the state set by the /SET\_STATE qualifier remains in effect until explicitly changed. By default, the /SET\_STATE qualifier is in effect only for the next definable key you press or the next read-terminating character that you type. This qualifier can be specified only with the /SET\_STATE qualifier.

/NOLOCK\_STATE is the default.

#### **/SET\_STATE=state-name**

#### **/NOSET\_STATE**

Causes the key being defined to create a key state change instead of or in addition to issuing an SDA command. When you use the /SET\_STATE qualifier, you supply the name of a key state to be used with the /IF\_STATE qualifier in other key definitions.

For example, you can define the PF1 key as the GOLD key and use the /IF\_STATE=GOLD qualifier to allow two definitions for the other keys, one in the GOLD state and one in the non-GOLD state. For more information on using the /IF\_STATE qualifier, see the DEFINE/KEY command in the *OpenVMS DCL Dictionary: A-M*.

/NOSET\_STATE is the default.

#### **/TERMINATE**

#### **/NOTERMINATE**

Causes the key definition to include termination of the command, which causes SDA to execute the command when the defined key is pressed. Therefore, you do not have to press the Return key after you press the defined key if you specify the /TERMINATE qualifier.

## Description

The DEFINE/KEY command causes an SDA command to be associated with the specified key, in accordance with any of the specified qualifiers described previously.

If the symbol or key is already defined, SDA replaces the old definition with the new one. Symbols and keys remain defined until you exit from SDA.

## Examples

1. SDA> DEFINE/KEY PF1 "SHOW STACK"  
SDA> **PF1** SHOW STACK **RETURN**  
Process stacks (on CPU 00)  
-----  
Current operating stack (KERNEL):

The DEFINE/KEY command defines PF1 as the SHOW STACK command. When you press the PF1 key, SDA displays the command and waits for you to

press the Return key.

```
2. SDA> DEFINE/KEY/TERMINATE PF1 "SHOW STACK"
SDA> PF1 SHOW STACK
Process stacks (on CPU 00)
-----
Current operating stack (KERNEL):
00000000.7FF95D00 00000000.0000000B
00000000.7FF95D08 FFFFFFFF.804395C8 MMG$TBI_DATA_64+000B8
00000000.7FF95D10 00000000.00000000
00000000.7FF95D18 0000FE00.00007E04
SP => 00000000.7FF95D20 00000000.00000800 IRP$M_EXTEND
00000000.7FF95D28 00000001.000002F7 UCB$B_PI_FKB+0000B
00000000.7FF95D30 FFFFFFFF.804395C8 MMG$TBI_DATA_64+000B8
00000000.7FF95D38 00000002.00000000
.
.
.
```

The DEFINE/KEY command defines PF1 as the SDA SHOW STACK command. The /TERMINATE qualifier causes SDA to execute the SHOW STACK command without waiting for you to press the Return key.

```
3. SDA> DEFINE/KEY/SET_STATE="GREEN" PF1 ""
SDA> DEFINE/KEY/TERMINATE/IF_STATE=GREEN PF3 "SHOW STACK"
SDA> PF1 PF3 SHOW STACK
Process stacks (on CPU 00)
-----
Current operating stack (KERNEL):
.
.
.
```

The first DEFINE/KEY command defines PF1 as a key that sets a command state GREEN. The trailing pair of quotation marks is required syntax, indicating that no command is to be executed when this key is pressed.

The second DEFINE command defines PF3 as the SHOW STACK command, but using the /IF\_STATE qualifier makes the definition valid only when the command state is GREEN. Thus, you must press PF1 before pressing PF3 to issue the SHOW STACK command. The /TERMINATE qualifier causes the command to execute as soon as you press the PF3 key.

## SDA Commands

### DUMP

---

## DUMP

Displays the contents of a range of memory formatted as a comma-separated variable (CSV) list, suitable for inclusion in a spreadsheet.

### Format

```
DUMP range
[/LONGWORD (default) | /QUADWORD]
[/DECIMAL | /HEXADECIMAL (default)]
[/FORWARD (default) | /REVERSE]
[/RECORD_SIZE=size] (default = 512)
[/INDEX_ARRAY [= { LONGWORD (default) | QUADWORD } ] ]
[/INITIAL_POSITION={ ADDRESS = address | RECORD = number}]
[/COUNT = { ALL | records}] (default = all records)
[/PHYSICAL]
```

### Parameter

#### range

The range of locations to be displayed. The range is specified in one of the following formats:

*m:n* Range from address *m* to address *n* inclusive

*m;n* Range from address *m* for *n* bytes

### Qualifiers

#### **/COUNT={ ALL | records}**

Gives the number of records to be displayed. The default is to display all records.

#### **/DECIMAL**

Outputs data as decimal values.

#### **/FORWARD**

Causes SDA to display the records in the history buffer in ascending address order. This is the default.

#### **/HEXADECIMAL**

Outputs data as hexadecimal values. This is the default.

#### **/INDEX\_ARRAY [= { LONGWORD (default) | QUADWORD } ]**

Indicates to SDA that the range of addresses given is a vector of pointers to the records to be displayed. The vector can be a list of longwords (default) or quadwords. The size of the range must be an exact number of longwords or quadwords as appropriate.

#### **/INITIAL\_POSITION = { ADDRESS = address | RECORD = number}**

Indicates to SDA which record is to be displayed first. The default is the lowest addressed record if /FORWARD is used, and the highest addressed record if /REVERSE is used. The initial position may be given as a record number within the range, or the address at which the record is located.

#### **/LONGWORD**

Outputs each data item as a longword. This is the default.

**/PHYSICAL**

Indicates to SDA that all addresses (range and/or start position) are physical addresses. By default, virtual addresses are assumed.

**/QUADWORD**

Outputs each data item as a quadword.

**/RECORD\_SIZE=*size***

Indicates the size of each record within the history buffer, the default being 512 bytes. Note that this size must exactly divide into the total size of the address range to be displayed, unless /INDEX\_ARRAY is specified.

**/REVERSE**

Causes SDA to display the records in the history buffer in descending address order.

**Description**

The DUMP command displays the contents of a range of memory formatted as a comma-separated variable (CSV) list, suitable for inclusion in a spreadsheet. It is intended for use with a "history" buffer containing records of information of which the most recently written entry is in the middle of the memory range.

---

**Note**

---

See SET OUTPUT/NOHEADER for related information.

---

**Examples**

1. SDA> DUMP dump g;200/initial\_position=record=5/record\_size=20/reverse  
05,A77B0010,A79B0008,6B9C4001,47FF041F,A03E0000,47DF041C,201F0016,083  
04,A03E0000,47DF041C,201F0058,083,A77B0010,A79B0008,6B9C4001,47FF041F  
03,A03E0000,47DF041C,201F0075,083,A03E0000,47DF041C,201F001B,083  
02,A77B0010,A79B0008,6B9C4001,47FF041F,A03E0000,47DF041C,201F0074,083  
01,43E05120,083,6BFA8001,47FF041F,A77B0010,A79B0008,6B9C4001,47FF041F  
0,201F0104,6BFA8001,47FF041F,47FF041F,201F0001,6BFA8001,47FF041F,47FF041F  
0F,A03E0000,47DF041C,201F0065,083,A03E0000,47DF041C,201F0006,083  
0E,A03E0000,47DF041C,201F001C,083,A03E0000,47DF041C,201F001A,083  
0D,A03E0000,47DF041C,201F0077,083,A03E0000,47DF041C,201F0057,083  
0C,A03E0000,47DF041C,201F002B,083,A03E0000,47DF041C,201F003A,083  
0B,A03E0000,47DF041C,201F007D,083,A77B0010,A79B0008,6B9C4001,47FF041F  
0A,A03E0000,47DF041C,201F005A,083,A03E0000,47DF041C,201F0078,083  
09,A03E0000,47DF041C,201F0002,082,A03E0000,47DF041C,201F0037,083  
08,A03E0000,47DF041C,201F0035,083,A03E0000,47DF041C,201F007A,083  
07,A03E0000,47DF041C,201F0019,083,A03E0000,47DF041C,201F0034,083  
06,A77B0010,A79B0008,6B9C4001,47FF041F,A03E0000,47DF041C,201F0018,083

This example shows the dump of an area of memory treated as 16 records of 32 bytes each, beginning at record 5, and dumped in reverse order. Note the record number in the first field, and that the dump wraps to the end of the memory area once the first record has been output.

## SDA Commands

### DUMP

```
2. SDA> examine SMP$GL_CPU_DATA;80
00000000 00000000 8FE26000 8FE14000 00000000 00000000 8FE02000 811FE000 ...
00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 ...
00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 ...
00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 ...

SDA> dump SMP$GL_CPU_DATA;80/index_array/record_size=20/count=5
0,810C17C0,8EC7C180,026A09C0,02,0,FFFFFFFF,0,0
01,810C17C0,8EC7C400,026A09C0,02,0,FFFFFFFF,0,01
04,810C17C0,8EC7CB80,026A09C0,02,0,FFFFFFFF,0,04
```

This example shows the contents of the CPU database vector, then dumps the first 32 bytes of each CPU database entry. Note that only the first five entries in the array are requested, and those containing zero are ignored.

---

## EVALUATE

Computes and displays the value of the specified expression in both hexadecimal and decimal. Alternative evaluations of the expression are available with the use of the qualifiers defined for this command.

### Format

EVALUATE [{/CONDITION\_VALUE | /PS | /PTE | /SYMBOLS | /TIME}] expression

### Parameter

#### **expression**

SDA expression to be evaluated. Chapter 2, Section 2.6.2 describes the components of SDA expressions.

### Qualifiers

#### **/CONDITION\_VALUE**

Displays the message that the \$GETMSG system service obtains for the value of the expression.

#### **/PS**

Evaluates the specified expression in the format of a processor status.

#### **/PTE**

Interprets and displays the expression as a page table entry (PTE). The individual fields of the PTE are separated and an overall description of the PTE's type is provided.

#### **/SYMBOLS**

Specifies that all symbols known to be equal to the evaluated expression are to be listed in alphabetical order. The default behavior of the EVALUATE command displays only the first five symbols.

#### **/TIME**

Interprets and displays the expression as a 64-bit time value. Positive values are interpreted as absolute time; negative values are interpreted as delta time.

### Description

If you do not specify a qualifier, the EVALUATE command interprets and displays the expression as hexadecimal and decimal values. In addition, if the expression is equal to the value of a symbol in the SDA symbol table, that symbol is displayed. If no symbol with this value is known, the next lower valued symbol is displayed with an appropriate offset unless the offset is extremely large. (See Section 2.6.2.4 for a description of how SDA displays symbols and offsets.) The DEFINE command adds symbols to the SDA symbol table but does not display the results of the computation. EVALUATE displays the result of the computation but does not add symbols to the SDA symbol table.

## SDA Commands

### EVALUATE

#### Examples

1. SDA> EVALUATE -1  
Hex = FFFFFFFF.FFFFFFFF    Decimal = -1            I

The EVALUATE command evaluates a numeric expression, displays the value of that expression in hexadecimal and decimal notation, and displays a symbol that has been defined to have an equivalent value.

2. SDA> EVALUATE 1  
Hex = 00000000.00000001    Decimal = 1    CHF\$M\_CALEXT\_CANCEL  
   CHF\$M\_FPREGS\_VALID  
   CHF\$V\_CALEXT\_LAST  
   IRP\$M\_BUFIO  
   IRP\$M\_CLN\_READY  
   |  
   (remaining symbols suppressed by default)

The EVALUATE command evaluates a numeric expression and displays the value of that expression in hexadecimal and decimal notation. This example also shows the symbols that have the displayed value. A maximum of five symbols are displayed by default.

3. SDA> DEFINE TEN = A  
SDA> EVALUATE TEN  
Hex = 00000000.0000000A    Decimal = 10    IRP\$B\_TYPE  
   IRP\$S\_FMOD  
   IRP\$V\_MBXIO  
   TEN  
   UCB\$B\_TYPE  
   |  
   (remaining symbols suppressed by default)

This example shows the definition of a symbol named TEN. The EVALUATE command then shows the value of the symbol.

Note that A, the value assigned to the symbol by the DEFINE command, could be a symbol. When SDA evaluates a string that can be either a symbol or a hexadecimal numeral, it first searches its symbol table for a definition of the symbol. If SDA finds no definition for the string, it evaluates the string as a hexadecimal number.

4. SDA> EVALUATE (((TEN \* 6) + (-1/4)) + 6)  
Hex = 00000000.00000042    Decimal = 66

This example shows how SDA evaluates an expression of several terms, including symbols and rational fractions. SDA evaluates the symbol, substitutes its value in the expression, and then evaluates the expression. Note that the fraction -1/4 is truncated to 0.

5. SDA> EVALUATE/CONDITION 80000018  
%SYSTEM-W-EXQUOTA, exceeded quota

This example shows the output of an EVALUATE/CONDITION command.



```
6. SDA> EVALUATE/PS 0B03
      MBZ SPAL      MBZ      IPL VMM MBZ CURMOD INT PRVMOD
      0  00  000000000000 0B 0  0  KERN  0  USER
```

SDA interprets the entered value 0B03 as though it were a processor status (PS) and displays the resulting field values.

```
7. SDA> EVALUATE/PTE 0BCDFEED
```

```

3 3 2 2          2 1 1 1
1 0 9 7          0 8 6 5          7 6          0
+---+---+---+---+---+---+---+---+---+---+---+---+
|0|0|00|      005E  |0|X| 02|1|      FF      |X|  37  |0|
+---+---+---+---+---+---+---+---+---+---+---+---+
|                                     00000000
+---+---+---+---+---+---+---+---+---+---+
Global PTE:  Owner = S, Read Prot = KESU, Write Prot = KESU, CPY = 0
              GPT Index = 00000000
```

The EVALUATE/PTE command displays the expression 0BCDFEED as a page table entry (PTE) and labels the fields. It also describes the status of the page.

```
8. SDA> EVALUATE/TIME 009A9A4C.843DBA9F
10-OCT-1996 15:59:44.02
```

This example shows the use of the EVALUATE/TIME command.

## EXAMINE

Displays either the contents of a location or range of locations in physical memory, or the contents of a register. Use location parameters to display specific locations or use qualifiers to display the entire process and system regions of memory.

### Format

EXAMINE [/qualifier[,...]] [location]

### Parameter

#### location

Location in memory to be examined. A location can be represented by any valid SDA expression. (See Chapter 2, Section 2.6.2 for additional information about expressions.) To examine a range of locations, use the following syntax:

*m:n* Range of locations to be examined, from *m* to *n*

*m;n* Range of locations to be examined, starting at *m* and continuing for *n* bytes

The default location that SDA uses is initially 0 in the program region (P0) of the process that was executing at the time the system failed (if you are examining a crash dump) or your process (if you are examining the running system). Subsequent uses of the EXAMINE command with no parameter specified increase the last address examined by eight. Use of the /INSTRUCTION qualifier increases the default address by four. To examine memory locations of other processes, you must use the SET PROCESS command.

### Qualifiers

#### /ALL

Examines all the locations in the program, and control regions and system space, displaying the contents of memory in hexadecimal longwords and ASCII characters. Do not specify parameters when you use this qualifier.

#### /CONDITION\_VALUE

Examines the specified longword, displaying the message that the \$GETMSG system service obtains for the value in the longword.

#### /INSTRUCTION

Translates the specified range of memory locations into assembly instruction format. Each symbol in the EXAMINE expression that is defined as a procedure descriptor is replaced with the code entry point address of that procedure, unless you also specify the /NOPD qualifier.

#### /NOPD

Can be used with the /INSTRUCTION qualifier to override treating symbols as procedure descriptors. You can place the qualifier immediately after the /INSTRUCTION qualifier, or following a symbol name.

For more details on using the /NOPD qualifier, see the description for the /PD qualifier.

**/NOSUPPRESS**

Inhibits the suppression of zeros when displaying memory with one of the following qualifiers: /ALL, /P0, /P1, /SYSTEM, or when a range is specified.

**/P0**

Displays the entire program region for the default process. Do not specify parameters when you use this qualifier.

**/P1**

Displays the entire control region for the default process. Do not specify parameters when you use this qualifier.

**/PD**

Causes the EXAMINE command to treat the location specified in the EXAMINE command as a procedure descriptor (PD). PD can also be used to qualify symbols.

The /PD and /NOPD qualifiers can be used with the /INSTRUCTION qualifier to override treating symbols as procedure descriptors. Placing the qualifier right after a symbol will override how the symbol is treated. /PD will force it to be a procedure descriptor, and /NOPD will force it to not be a procedure descriptor.

Only the /PD qualifier can be placed right after the /INSTRUCTION qualifier. It treats the calculated value as a process descriptor.

In the following examples, TEST\_ROUTINE is a PD symbol. Its value is 500 and the code address in this procedure descriptor is 1000. The first example displays instructions starting at 520.

```
EXAMINE/INSTRUCTION TEST_ROUTINE/NOPD+20
```

The next example fetches code address from TEST\_ROUTINE PD, adds 20 and displays instructions at that address. In other words, it displays code starting at location 1020.

```
EXAMINE/INSTRUCTION TEST_ROUTINE+20
```

The final example treats the address TEST\_ROUTINE+20 as a procedure descriptor, so it fetches the code address out of a procedure descriptor at address 520. It then uses that address to display instructions.

```
EXAMINE/INSTRUCTION/PD TEST_ROUTINE/NOPD+20
```

**/PHYSICAL**

Examines physical addresses. The /PHYSICAL qualifier cannot be used in combination with the /P0, /P1, or /SYSTEM qualifiers.

**/PS**

Examines the specified quadword, displaying its contents in the format of a processor status. This qualifier must precede any parameters used in the command line.

**/PTE**

Interprets and displays the specified quadword as a page table entry (PTE). The display separates individual fields of the PTE and provides an overall description of the PTE's type.

**/SYSTEM**

Displays portions of the writable system region. Do not specify parameters when you use this qualifier.

## SDA Commands

### EXAMINE

#### **/TIME**

Examines the specified quadword, displaying its contents in the format of a system-date-and-time quadword.

### Description

The following sections describe how to use the EXAMINE command.

#### **Examining Locations**

When you use the EXAMINE command to look at a location, SDA displays the location in symbolic notation (symbolic name plus offset), if possible, and its contents in hexadecimal and ASCII formats:

```
SDA> EXAMINE G6605C0
806605C0: 64646464.64646464 "ddddddd"
```

If the ASCII character that corresponds to the value contained in a byte is not printable, SDA displays a period (.). If the specified location does not exist in memory, SDA displays this message:

```
%SDA-E-NOTINPHYS, address : virtual data not in physical memory
```

To examine a range of locations, you can designate starting and ending locations separated by a colon. For example:

```
SDA> EXAMINE G40:G200
```

Alternatively, you can specify a location and a length, in bytes, separated by a semicolon. For example:

```
SDA> EXAMINE G400;16
```

When used to display the contents of a range of locations, the EXAMINE command displays six or ten columns of information. Ten columns are used if the terminal width is 132 or greater, or if a SET OUTPUT has been entered; six columns are used otherwise. An explanation of the columns is as follows:

- Each of the first four or eight columns represents a longword of memory, the contents of which are displayed in hexadecimal format.
- The fifth or ninth column lists the ASCII value of each byte in each longword displayed in the previous four or eight columns.
- The sixth or tenth column contains the address of the first, or rightmost, longword in each line. This address is also the address of the first, or leftmost, character in the ASCII representation of the longwords. Thus, you read the hexadecimal dump display from right to left, and the ASCII display from left to right.

If a series of virtual addresses does not exist in physical memory, SDA displays a message specifying the range of addresses that were not translated.

If a range of virtual locations contains only zeros, SDA displays this message:

```
Zeros suppressed from 'loc1' to 'loc2'
```

#### **Decoding Locations**

You can translate the contents of memory locations into instruction format by using the /INSTRUCTION qualifier. This qualifier causes SDA to display the location in symbolic notation (if possible) and its contents in instruction format. The operands of decoded instructions are also displayed in symbolic notation. The location must be longword aligned.

### Examining Memory Regions

You can display an entire region of virtual memory by using one or more of the qualifiers /ALL, /SYSTEM, /P0, and /P1 with the EXAMINE command.

### Other Uses

Other uses of the EXAMINE command appear in the following examples.

## Examples

- SDA> EXAMINE/PS 7FF95E78  

MBZ	SPAL	MBZ	IPL	VMM	MBZ	CURMOD	INT	PRVMOD
0	00	000000000000	08	0	0	KERN	0	EXEC

This example shows the display produced by the EXAMINE/PS command.

- SDA> EXAMINE/PTE @^QMMG\$GQ\_L1\_BASE

```

      3 3 2 2          2 1 1 1
      1 0 9 7          0 8 6 5          7 6          0
+---+---+---+---+---+---+---+---+---+---+---+---+
|0|1|00|    0000    |0|x| 00|0|    11    |x|    04    |1|
+---+---+---+---+---+---+---+---+---+---+---+---+
|                                00000C37                                |
+---+---+---+---+---+---+---+---+---+---+---+---+
Valid PTE: Read Prot = K---, Write Prot = K---
           Owner = K, Fault on = -E--, ASM = 00, Granularity Hint = 00
           CPY = 00 PFN = 00000C37

```

The EXAMINE/PTE command displays and formats the level 1 page table entry at FFFFFFFF.FF7FC000.

## SDA Commands

### EXIT

---

## EXIT

Exits from an SDA display or exits from the SDA utility.

### Format

EXIT

### Parameters

None.

### Qualifiers

None.

### Description

If SDA is displaying information on a video display terminal—and if that information extends beyond one screen—SDA displays a **screen overflow prompt** at the bottom of the screen:

```
Press RETURN for more.  
SDA>
```

If you want to discontinue the current display at this point, enter the EXIT command. If you want SDA to execute another command, enter that command. SDA discontinues the display as if you entered EXIT, and then executes the command you entered.

When the SDA> prompt is not immediately preceded by the screen overflow prompt, entering EXIT causes your process to cease executing the SDA utility. When issued within a command procedure (either the SDA initialization file or a command procedure invoked with the execute command (@)), EXIT causes SDA to terminate execution of the procedure and return to the SDA prompt.

---

## FORMAT

Displays a formatted list of the contents of a block of memory.

### Format

FORMAT [/TYPE=*block-type*] location [/PHYSICAL]

### Parameter

#### location

Location of the beginning of the data block. The location can be given as any valid SDA expression.

### Qualifiers

#### /TYPE=*block-type*

Forces SDA to characterize and format a data block at **location** as the specified type of data structure. The /TYPE qualifier thus overrides the default behavior of the FORMAT command in determining the type and/or subtype of a data block, as described in the Description section. The *block-type* can be the symbolic prefix of any data structure defined by the operating system.

#### /PHYSICAL

Specifies that the location given is a physical address.

### Description

The FORMAT command performs the following actions:

- Characterizes a range of locations as a system data block
- Assigns, if possible, a symbol to each item of data within the block
- Displays all the data within the block

Most OpenVMS Alpha control blocks include two bytes that indicate the block type and/or subtype at offsets 0A<sub>16</sub> and 0B<sub>16</sub>, respectively. The type and/or subtype associate the block with a set of symbols that have a common prefix. Each symbol's name describes a field within the block, and the value of the symbol represents the offset of the field within the block.

If the type and/or subtype bytes contain a valid block type/subtype combination, SDA retrieves the symbols associated with that type of block (see \$DYNDDEF) and uses their values to format the block.

For a given block type, all associated symbols have the form

<block\_type>\${<field>}\_<name>

where field is one of the following:

## SDA Commands

### FORMAT

B Byte  
W Word  
L Longword  
Q Quadword  
O Octaword  
A Address  
C Constant  
G Global Longword  
P Pointer  
R Structure (variable size)  
T Counted ASCII string (up to 31 characters)

If SDA cannot find the symbols associated with the block type specified in the block-type byte or by the /TYPE qualifier, it issues this message:

```
%SDA-E-NOSYMBOLS, no <block type> symbols found to format this block
```

If you receive this message, you may want to read additional symbols into the SDA symbol table and retry the FORMAT command. Many symbols that define OpenVMS Alpha data structures are contained within SDA\$READ\_DIR:SYSDEF.STB. Thus, you would issue the following command:

```
SDA> READ SDA$READ_DIR:SYSDEF.STB
```

If SDA issues the same message again, try reading additional symbols. Table 2-4 lists additional modules provided by the OpenVMS operating system. Alternatively, you can create your own object modules with the MACRO-32 Compiler for OpenVMS Alpha. See the READ command description for instructions on creating such an object module.

Certain OpenVMS Alpha data structures do not contain a block type and/or subtype. If bytes contain information other than a block type/subtype—or do not contain a valid block type/subtype—SDA either formats the block in a totally inappropriate way, based on the contents of offsets 0A<sub>16</sub> and 0B<sub>16</sub>, or displays this message:

```
%SDA-E-INVBLKTYP, invalid block type in specified block
```

To format such a block, you must reissue the FORMAT command, using the /TYPE qualifier to designate a *block-type*.

The FORMAT command produces a 3-column display:

- The first column shows the virtual address of each item within the block.
- The second column lists each symbolic name associated with a location within the block.
- The third column shows the contents of each item in hexadecimal format, including symbolization if a suitable symbol exists.



**Example**

```

SDA> READ SDA$READ_DIR:SYSDEF.STB
%SDA-I-READSYM, 913 symbols read from SYS$COMMON:[SYS$LDR]SYSDEF.STB
SDA> FORMAT G41F818
FFFFFFFF.8041F818   UCB$L_FQFL                8041F818   UCB
                   UCB$L_MB_MSGQFL
                   UCB$L_RQFL
                   UCB$W_MB_SEED
                   UCB$W_UNIT_SEED
FFFFFFFF.8041F81C   UCB$L_FQBL                8041F818   UCB
                   UCB$L_MB_MSGQBL
                   UCB$L_RQBL
FFFFFFFF.8041F820   UCB$W_SIZE                0110
FFFFFFFF.8041F822   UCB$B_TYPE                10
FFFFFFFF.8041F823   UCB$B_FLCK                2C
FFFFFFFF.8041F824   UCB$L_ASTQFL              00000000
                   UCB$L_FPC
                   UCB$L_MB_W_AST
                   UCB$T_PARTNER
.
.
.

```

The READ command loads the symbols from SDA\$READ\_DIR:SYSDEF.STB into SDA's symbol table. The FORMAT command displays the data structure that begins at G41F818<sub>16</sub>, a unit control block (UCB). If a field has more than one symbolic name, all such names are displayed. Thus, the field that starts at 8041F824<sub>16</sub> has four designations: UCB\$L\_ASTQFL, UCB\$L\_FPC, UCB\$L\_MB\_W\_AST, and UCB\$T\_PARTNER.

The contents of each field appear to the right of the symbolic name of the field. Thus, the contents of UCB\$L\_FQBL are 8041F818<sub>16</sub>.

## SDA Commands

### HELP

---

## HELP

Displays information about the SDA utility, its operation, and the format of its commands.

### Format

HELP [topic-name]

### Parameter

#### topic-name

Topic for which you need information. A topic can be a command name or one of the following keywords.

Keyword	Function
ANALYZE_USAGE_SUMMARY	Describes the parameters and qualifiers for the ANALYZE/CRASH_DUMP and ANALYZE/SYSTEM DCL commands
CPU_CONTEXT	Describes the concept of CPU context as it governs the behavior of SDA
EXECUTE_COMMAND	Describes the use of @ file to execute SDA commands contained in a file
EXPRESSIONS	Prints a description of SDA expressions
INITIALIZATION	Describes the circumstances under which SDA executes an initialization file when first invoked
OPERATION	Describes how to operate SDA at your terminal and by means of the site-specific startup procedure
PROCESS_CONTEXT	Describes the concept of process context as it governs the behavior of SDA
SDA_CLUE_EXTENSION_COMMANDS	Provides an overview of SDA CLUE (Crash Log Utility Extractor)
SDA_EXTENSION_ROUTINES	Describes how to write, debug, and invoke an SDA extension and provides details of all callable routines
SDA_SPINLOCK_TRACING_COMMANDS	Provides an overview of SDA SPL (Spinlock Tracing Utility)
SYMBOLS	Describes the symbols used by SDA

### Qualifiers

None.

### Description

The HELP command displays brief descriptions of SDA commands and concepts on the terminal screen (or sends these descriptions to the file designated in a SET OUTPUT command). You can request additional information by specifying the name of a topic in response to the Topic? prompt.

If you do not specify a parameter in the **HELP** command, it lists the features of SDA and those commands and topics for which you can request help, as follows:

## Example

```
SDA> HELP
```

```
HELP
```

The System Dump Analyzer (SDA) allows you to inspect the contents of memory as saved in the dump taken at crash time or as exists in a running system. You can use SDA interactively or in batch mode. You can send the output from SDA to a listing file. You can use SDA to perform the following operations:

- Assign a value to a symbol
- Examine memory of any process
- Format instructions and blocks of data
- Display device data structures
- Display memory management data structures
- Display a summary of all processes on the system
- Display the SDA symbol table
- Copy the system dump file
- Send output to a file or device
- Read global symbols from any object module
- Send output to a file or device
- Read global symbols from any object module
- Search memory for a given value

For help on performing these functions, use the **HELP** command and specify a topic.

Format

```
HELP [topic-name]
```

Additional information available:

ANALYZE_Usage_Summary	ATTACH	CLUE	COPY	CPU_Context	
DEFINE	DUMP	EVALUATE	EXAMINE	Execute_Command	EXIT
Expressions		FORMAT	HELP	Initialization	MAP
MODIFY	Operation	Process_Context	READ	REPEAT	
SDA_CLUE_Extension_Commands			SDA_Extension_Routines		
SDA_Spinlock_Tracing_Commands		SEARCH	SET	SHOW	SPAWN
SPL	Symbols	UNDEFINE	VALIDATE		

Topic?

---

## MAP

Transforms an address into an offset in a particular image.

### Format

MAP address

### Parameter

**address**  
Address to be identified.

### Qualifiers

None.

### Description

The MAP command identifies the image name and offset corresponding to an address. With this information, you can examine the image map to locate the source module and program section offset corresponding to an address. MAP searches for the specified address in executive images first. It then checks activated images in process space to include those images installed using the /RESIDENT qualifier of the Install utility. Finally, it checks all image-resident sections in system space.

If the address cannot be found, MAP displays the following message:

```
%SDA-E-NOTINIMAGE, Address not within a system/installed image
```

### Examples

```
1. SDA> MAP G90308
Image                               Base      End      Image Offset
SYS$VM
Nonpaged read only                  80090000 800ABA00 00000308
```

Examining the image map identified by this MAP command (SYS\$VM.MAP) shows that image offset 308 falls within psect EXEC\$HI\_USE\_PAGEABLE\_CODE because the psect goes from offset 0 to offset 45D3:

```
.
.
.
EXEC$HI_USE_PAGEABLE_CODE           00000000 000045D3 000045D4 ( 17876.) 2 ** 5 . . .
  SYSCREDEL                          00000000 0000149B 0000149C (  5276.) 2 ** 5
  SYSCRMPCSC                          000014A0 000045D3 00003134 ( 12596.) 2 ** 5
EXEC$NONPAGED_CODE                  000045E0 0001B8B3 000172D4 ( 94932.) 2 ** 5 . . .
  EXECUTE_FAULT                       000045E0 0000483B 0000025C (   604.) 2 ** 5
  IOLOCK                              00004840 000052E7 00000AA8 (  2728.) 2 ** 5
  LOCK_SYSTEM_PAGES
.
.
.
```

Specifically, image offset 308 is located within source module SYSCREDEL. Therefore, to locate the corresponding code, you would look in SYSCREDEL for offset 308 in psect EXEC\$HI\_USE\_PAGEABLE\_CODE.

```
2. SDA> MAP G550000
Image                               Base      End      Image Offset
SYS$DKDRIVER                        80548000 80558000 00008000
```

In this example, the MAP command identifies the address as an offset into an executive image that is not sliced. The base and end addresses are the boundaries of the image.

```
3. SDA> MAP G550034
Image                               Base      End      Image Offset
SYS$DUDRIVER                          80550000 80551400 00008034
Nonpaged read/write
```

In this example, the MAP command identifies the address as an offset into an executive image that is sliced. The base and end addresses are the boundaries of the image section that contains the address of interest.

```
4. SDA> MAP GF0040
Image Resident Section              Base      End      Image Offset
MAILSHR                             800F0000 80119000 00000040
```

The MAP command identifies the address as an offset into an image-resident section residing in system space.

```
5. SDA> MAP 12000
Activated Image                     Base      End      Image Offset
MAIL                                 00010000 000809FF 00002000
```

The MAP command identifies the address as an offset into an activated image residing in process-private space.

```
6. SDA> MAP B2340
Compressed Data Section             Base      End      Image Offset
LIBRTL                               000B2000 000B6400 00080340
```

The MAP command identifies the address as being within a compressed data section. When an image is installed with the Install utility using the /RESIDENT qualifier, the code sections are mapped in system space. The data sections are compressed into process-private space to reduce null pages or holes in the address space left by the absence of the code section. The SHOW PROCESS/IMAGE=ALL display shows how the data has been compressed; the MAP command searches this information to map an address in a compressed data section to an offset in an image.

```
7. SDA> MAP 7FC06000
Shareable Address Data Section      Base      End      Image Offset
LIBRTL                             7FC06000 7FC16800 00090000
```

The MAP command identifies the address as an offset into a shareable address data section residing in P1 space.

```
8. SDA> MAP 7FC26000
Read-Write Data Section             Base      End      Image Offset
LIBRTL                             7FC26000 7FC27000 000B0000
```

The MAP command identifies the address as an offset into a read-write data section residing in P1 space.

## SDA Commands

### MAP

9. SDA> MAP 7FC36000  
Shareable Read-Only Data Section      Base      End      Image Offset  
LIBRTL                                    7FC36000 7FC3F600 000C0000

**The MAP command identifies the address as an offset into a shareable read-only data section residing in P1 space.**

10. SDA> MAP 7FC56000  
Demand Zero Data Section                Base      End      Image Offset  
LIBRTL                                    7FC56000 7FC57000 000E0000

**The MAP command identifies the address as an offset into a demand zero data section residing in P1 space.**

---

## MODIFY DUMP

Allows a given byte, word, longword, or quadword in the dump to be modified.

### Format

```
MODIFY DUMP {/BLOCK=n/OFFSET=n|/NEXT} [/CONFIRM=n]  
            {/BYTE|/WORD|/LONGWORD (d)|/QUADWORD} value
```

### Parameter

#### value

The new value deposited in the specified location in the dump file.

### Qualifiers

#### **/BLOCK=*n***

Indicates block number to be modified. Required unless the **/NEXT** qualifier is given.

#### **/OFFSET=*n***

Indicates byte offset within block to be modified. Required unless the **/NEXT** qualifier is given.

#### **/CONFIRM=*n***

Checks existing contents of location to be modified.

#### **/NEXT**

Indicates that the byte(s) immediately following the location altered by the previous **MODIFY DUMP** command is/are to be modified. Used instead of the **/BLOCK=*n*** and **/OFFSET=*n*** qualifiers.

#### **/BYTE**

Indicates that only a single byte is to be replaced.

#### **/WORD**

Indicates that a word is to be replaced.

#### **/LONGWORD**

Indicates that a longword is to be replaced. This is the default.

#### **/QUADWORD**

Indicates that a quadword is to be replaced.

### Description

The **MODIFY DUMP** command is used on a dump file that cannot be analyzed without specifying the **/OVERRIDE** qualifier on the **ANALYZE/CRASH\_DUMP** command. The **MODIFY DUMP** command can be used to correct the problem that prevents normal analysis of a dump file. The **MODIFY DUMP** command can only be used when SDA has been invoked with the **ANALYZE/CRASH\_DUMP/OVERRIDE** command.

## SDA Commands

### MODIFY DUMP

---

#### Important

---

This command is not intended for general use. It is provided for the benefit of Compaq support personnel when investigating crash dumps that cannot be analyzed in other ways.

---

If the block being modified is part of either the dump header, the error log buffers, or the compression map, the changes made are not seen when you issue the appropriate SHOW DUMP command, unless you first exit from SDA and then reissue the ANALYZE/CRASH\_DUMP command.

The MODIFY DUMP command sets a bit in the dump header to indicate that the dump has been modified. Subsequent ANALYZE/CRASH\_DUMP commands issued to that file produce the following warning message:

```
%SDA-W-DUMPMOD, dump has been modified
```

### Example

```
SDA>> MODIFY DUMP/BLOCK=10/OFFSET=100/WORD FF
```

This example shows the dump file modified with the word at offset 100 in block 00000010 replaced by 00FF.

```
SDA>> MODIFY DUMP/BLOCK=10/OFFSET=100/WORD 0/CONFIRM=EE
```

This example shows that the actual word value of 00FF at offset 100 in block 00000010 does not match the given value of 00EE. The following message is displayed:

```
%SDA-E-NOMATCH, expected value does not match value in dump; dump not updated
```

```
SDA>> MODIFY DUMP/BLOCK=10/OFFSET=100/WORD 0/CONFIRM=FF
```

This example shows the dump file modified with a word value of 00FF at offset 100 in block 00000010 replaced by 0000.



---

## READ

Loads the global symbols contained in the specified file into the SDA symbol table.

### Format

```
READ  [/[NO]LOG | /RELOCATE =expression | /SYMVA=expression]  
      {/EXECUTIVE [directory spec] | /FORCE filespec  
      | /IMAGE filespec | filespec}
```

### Parameters

#### **directory-spec**

The **directory-spec** is the name of the directory containing the loadable images of the executive. This parameter defaults to SDA\$READ\_DIR which is a search list of SYSS\$LOADABLE\_IMAGES and SYSS\$LIBRARY.

#### **filespec**

Name of the device, directory, and file that contains the file from which you want to read global symbols. The **filespec** defaults to SYSS\$DISK:[default-dir]filename.type, where SYSS\$DISK and [default-dir] represent the disk and directory specified in your last DCL command SET DEFAULT. If no type has been given in **filespec**, SDA first tries .STB and then .EXE.

If no device or directory is given in the file specification, and the file specification is not found in SYSS\$DISK:[default\_dir], then SDA attempts to open the file SDA\$READ\_DIR:filename.type. If no type has been given in **filespec**, SDA first tries .STB and then .EXE.

If the file name is the same as that of an execler or image, but the symbols in the file are not those of the execler or image, then you must use the /FORCE qualifier, and optionally /RELOCATE and /SYMVA qualifiers, to tell SDA how to interpret the symbols in the file.

### Qualifiers

#### **/EXECUTIVE directory-spec**

Reads into the SDA symbol table all global symbols and global entry points defined within all loadable images that make up the executive. For all the execlers in the system, SDA reads the .STB or .EXE files in the requested directory.

#### **/FORCE filespec**

Forces SDA to read the symbols file, regardless of what other information or qualifiers are specified. If you do not specify the /FORCE qualifier, SDA may not read the symbols file if the specified **filespec** matches the image name in either the executive loaded images or the current processes activated image list, and one of the following conditions is true:

- The image has a symbols vector (is a shareable image), and a symbols vector was not specified with the /SYMVA or /IMAGE qualifier.
- The image is sliced, and slicing information was not provided with the /IMAGE qualifier.

## SDA Commands

### READ

- The shareable or executive image is not loaded at the same address it was linked at, and the relocation information was not provided with either the /IMAGE or /RELOCATE qualifier.

The use of /FORCE [/SYMVA=*addr*]/[RELOCATE=*addr*] file spec is a variant of the /IMAGE qualifier and avoids fixing up the symbols to match an image of the same name.

#### **/IMAGE filespec**

Searches the executive loaded image list and the current process activated image list for the image specified by **filespec**. If the image is found, the symbols are read in using the image symbol vector (if there is one) and either slicing or relocation information.

This is the preferred way to read in the .STB files produced by the linker. These .STB files contain all universal symbols, unless SYMBOL\_TABLE=GLOBAL is in the linker options file, in which case the .STB file contains all universal and global symbols.

#### **/LOG**

#### **/NOLOG**

The /LOG qualifier causes SDA to output the %SDA-I-READSYM message for each symbol table file it reads. This is the default. The /LOG qualifier can be specified with any other combination of parameters and qualifiers.

The /NOLOG qualifier suppresses the output of the %SDA-I-READSYM messages. The /NOLOG qualifier can be specified with any other combination of parameters and qualifiers.

#### **/RELOCATE=*expression***

Changes the relative addresses of the symbols to absolute addresses by adding the value of **expression** to the value of each symbol in the symbol-table file to be read. This qualifier changes those addresses to absolute addresses in the address space into which the dump is mapped.

The relocation only applies to symbols with the relocate flag set. All universal symbols must be found in the symbol vector for the image. All constants are read in without any relocation.

If the image is sliced (image sections are placed in memory at different relative offsets than how the image is linked), then the /RELOCATE qualifier does not work. SDA compares the file name used as a parameter to the READ command against all the image names in the executive loaded image list and the current processes activated image list. If a match is found, and that image contains a symbol vector, an error results. At this point you can either use the /FORCE qualifier or the /IMAGE qualifier to override the error.

#### **/SYMVA=*expression***

Informs SDA whether the absolute symbol vector address is for a shareable image (SYSSPUBLIC\_VECTORS.EXE) or base system image (SYSSBASE\_IMAGE.EXE). All symbols found in the file with the universal flag are found by referencing the symbol vector (that is, the symbol value is a symbol vector offset).

## Description

The READ command symbolically identifies locations in memory and the definitions used by SDA for which the default files (SDA\$READ\_DIR:SYSS\$BASE\_IMAGE.EXE and SDA\$READ\_DIR:REQSYSDEF.STB) provide no definition. In other words, the required global symbols are located in modules and symbol tables that have been compiled and/or linked separately from the executive. SDA extracts no local symbols from the files.

The file specified in the READ command can be the output of a compiler or assembler (for example, an .OBJ file).

---

**Note**

---

READ can read both OpenVMS VAX and OpenVMS Alpha format files. READ should not be used to read OpenVMS VAX format files that contain VAX specific symbols, as this might change the behavior of other OpenVMS Alpha SDA commands.

---

Most often the file is provided in SYSS\$LOADABLE\_IMAGES. Many SDA applications, for instance, need to load the definitions of system data structures by issuing a READ command specifying SYSDEF.STB. Others require the definitions of specific global entry points within the executive image.

The files in SYSS\$LOADABLE\_IMAGES define global locations within executive images, including those listed in Table 4–1. The actual list of executive images used varies, depending on platform type, devices, and the settings of several system parameters.

**Table 4–1 Modules Defining Global Locations Within Executive Image**

File	Contents
ACME.EXE	\$ACM system service
CNX\$DEBUG.EXE	Connection Manager trace routines
DDIF\$RMS_EXTENSION.EXE	Support for Digital Document Interchange Format (DDIF) file operations
ERRORLOG.STB	Error-logging routines and system services
EXCEPTION.STB <sup>1</sup>	Bugcheck and exception-handling routines and those system services that declare condition and exit handlers
EXEC_INIT.STB	Initialization code
F11BXQP.STB	File system support
FC\$GLOGALS.STB	Fibrechannel symbols

---

<sup>1</sup>Variations of these files also exist, for example where the file name ends "\_MON." System parameters such as SYSTEM\_CHECK determine which image is loaded.

(continued on next page)

## SDA Commands

### READ

**Table 4–1 (Cont.) Modules Defining Global Locations Within Executive Image**

File	Contents
IMAGE_MANAGEMENT.STB	Image activator and the related system services
IO_ROUTINES.STB <sup>1</sup>	\$QIO system service, related system services (for example, \$CANCEL and \$ASSIGN), and supporting routines
LAT\$RATING.EXE	CPU load balancing routines for LAT
LCK\$DEBUG.EXE	Lock manager trace routines
LMF\$GROUP_TABLE.EXE	Data structures for licensed product groups
LOCKING.STB	Lock management routines and system services
LOGICAL_NAMES.STB	Logical name routines and system services
MESSAGE_ROUTINES.STB	System message routines and system services (including \$SENDJBC and \$GETTIM)
MSCP.EXE	Disk MSCP server
MULTIPATH.STB <sup>1</sup>	Fibrechannel multipath support routines
NET\$CSMACD.EXE	CSMA/CD LAN management module
NET\$FDDI.EXE	FDDI LAN management module
NT_EXTENSION.EXE	NT extensions for persona system services
PROCESS_MANAGEMENT.STB <sup>1</sup>	Scheduler, report system event, and supporting routines and system services
QSRV\$GLOBALS.STB	QIOserver symbols
RECOVERY_UNIT_SERVICES.STB	Recovery unit system services
RMS.EXE	Global symbols and entry points for RMS
SECURITY.STB <sup>1</sup>	Security management routines and system services
SHELL <sub>xx</sub> K.STB	Process shell
SPL\$DEBUG.EXE	Spinlock trace routines
SSPI.EXE	Security Support Provider Interface
SYSS <sub>xx</sub> DRIVER.EXE	Run-time device drivers

<sup>1</sup>Variations of these files also exist, for example where the file name ends "\_MON." System parameters such as SYSTEM\_CHECK determine which image is loaded.

(continued on next page)

**Table 4–1 (Cont.) Modules Defining Global Locations Within Executive Image**

File	Contents
SYSS\$ATMWORKS351.EXE	PCI-ATM driver
SYSS\$CLUSTER.EXE	OpenVMS Cluster support routines
SYSS\$CPU_ROUTINES_XXXX.EXE	Processor-specific data and initialization routines
SYSS\$EW1000A.EXE	Gigabit Ethernet driver
SYSS\$GALAXY.STB	OpenVMS Galaxy support routines
SYSS\$IPC_SERVICES.EXE	Interprocess communication for DECdtm and Batch/Print
SYSS\$LAN.EXE	Common LAN routines
SYSS\$LAN_ATM.EXE	LAN routines for ATM
SYSS\$LAN_ATM4.EXE	LAN routines for ATM (ForeThought)
SYSS\$LAN_CSMACD.EXE	LAN routines for CSMA/CD
SYSS\$LAN_FDDI.EXE	LAN routines for FDDI
SYSS\$LAN_TR.EXE	LAN routines for Token Ring
SYSS\$MME_SERVICES.STB	Media Management Extensions
SYSS\$NETWORK_SERVICES.EXE	DECnet support
SYSS\$NTA.STB	NT affinity routines and services
SYSS\$PUBLIC_VECTORS.EXE <sup>2</sup>	System service vector base image
SYSS\$QIOSERVER_KCLIENT.EXE <sup>1</sup>	QIOserver client
SYSS\$QIOSERVER_KSERVER.EXE	QIOserver server
SYSS\$SCS.EXE	System Communication Services
SYSS\$TRANSACTION_SERVICES.EXE	DECdtm services
SYSS\$UTC_SERVICES.EXE	Universal Coordinated Time services
SYSS\$VCC.STB <sup>1</sup>	Virtual I/O cache
SYSS\$VM.STB	System pager and swapper, along with their supporting routines, and management system services
SYSS\$XFCACHE.STB <sup>1</sup>	Extended File Cache
SYSDEVICE.STB	Mailbox driver and null driver
SYSGETSYI.STB	Get System Information system service (\$GETSYI)
SYSLDR_DYN.STB	Dynamic executive image loader
SYSLICENSE.STB	Licensing system service (\$LICENSE)

<sup>1</sup>Variations of these files also exist, for example where the file name ends "\_MON." System parameters such as SYSTEM\_CHECK determine which image is loaded.

<sup>2</sup>This file is located in SYSS\$LIBRARY.

(continued on next page)

## SDA Commands

### READ

**Table 4–1 (Cont.) Modules Defining Global Locations Within Executive Image**

File	Contents
SYSTEM_DEBUG.EXE	XDelta and SCD routines
SYSTEM_PRIMITIVES.STB <sup>1</sup>	Miscellaneous basic system routines, including those that allocate system memory, maintain system time, create fork processes, and control mutex acquisition
SYSTEM_SYNCHRONIZATION.STB <sup>1</sup>	Routines that enforce synchronization
TCPIP\$BGDRIVER.STB <sup>3</sup>	TCP/IP internet driver
TCPIP\$INETACP.STB <sup>3</sup>	TCP/IP internet ACP
TCPIP\$INETDRIVER.STB <sup>3</sup>	TCP/IP internet driver
TCPIP\$INTERNET_SERVICES.STB <sup>3</sup>	TCP/IP internet execlet
TCPIP\$NFS_SERVICES.STB <sup>3</sup>	Symbols for the TCP/IP NFS server
TCPIP\$PROXY_SERVICES.STB <sup>3</sup>	Symbols for the TCP/IP proxy execlet
TCPIP\$PWIPACP.STB <sup>3</sup>	TCP/IP PWIP ACP
TCPIP\$PWIPDRIVER.STB <sup>3</sup>	TCP/IP PWIP driver
TCPIP\$TNDRIVER.STB <sup>3</sup>	TCP/IP TELNET/RLOGIN server driver
TMSCP.EXE	Tape MSCP server
VMS_EXTENSION.EXE	VMS extensions for persona system services

<sup>1</sup>Variations of these files also exist, for example where the file name ends "\_MON." System parameters such as SYSTEM\_CHECK determine which image is loaded.

<sup>3</sup>Only available if TCP/IP has been installed. These are found in SYSSSYSTEM, and are not automatically read in when you issue a READ/EXEC command.

SDA can also read symbols from an image .EXE or .STB produced by the linker. The STB and EXE files only contain universal symbols. The STB file, however, can be forced to have global symbols for the image if you use the SYMBOL\_TABLE=GLOBAL option in the linker options file.

A number of ready-built symbol table files ship with OpenVMS Alpha. They can be found in the directory SYS\$LOADABLE\_IMAGES, and all have names of the form xyzDEF.STB. Of these files, SDA automatically reads REQSYSDEF.STB on activation. You can add the symbols in the other files to SDA's symbol table using the READ command. Table 2–4 lists the files that OpenVMS Alpha provides in SYS\$LOADABLE\_IMAGES that define data structure offsets.

The following MACRO program, GLOBALS.MAR, shows how to obtain symbols in addition to those in SYS\$BASE\_IMAGE.EXE, other executive images listed in Table 4–1, and the symbol table files that are listed in Table 2–4.

```
.TITLE GLOBALS
$PHDDEF GLOBAL          ; Process header definitions
$DDBDEF GLOBAL          ; Device data block
$UCBDEF GLOBAL          ; Unit control block
$VCBDEF GLOBAL          ; Volume control block
$ACBDEF GLOBAL          ; AST control block
$IRPDEF GLOBAL          ; I/O request packet
; more can be inserted here
.END
```

Use the command below to generate an object module file containing the globals defined in the program.

```
$MACRO GLOBALS+SYS$LIBRARY:LIB/LIBRARY /OBJECT=GLOBALS.STB
```

## Examples

1. SDA> READ SDA\$READ\_DIR:SYSDEF.STB  
%SDA-I-READSYM, 10010 symbols read from SYS\$COMMON:[SYSEXE]SYSDEF.STB;1

The READ command causes SDA to add all the global symbols in SDA\$READ\_DIR:SYSDEF.STB to the SDA symbol table. Such symbols are useful when you are formatting an I/O data structure, such as a unit control block or an I/O request packet.

2. SDA> SHOW STACK  
Process stacks (on CPU 00)

```
-----  
Current operating stack (KERNEL):
```

```
00000000.7FF95CD0 FFFFFFFF.80430CE0 SCH$STATE_TO_COM+00040
00000000.7FF95CD8 00000000.00000000
00000000.7FF95CE0 FFFFFFFF.81E9CB04 LNM$SEARCH_ONE_C+000E4
00000000.7FF95CE8 FFFFFFFF.8007A988 PROCESS_MANAGEMENT_NPRO+0E988
SP =>00000000.7FF95CF0 00000000.00000000
00000000.7FF95CF8 00000000.006080C1
00000000.7FF95D00 FFFFFFFF.80501FDC
00000000.7FF95D08 FFFFFFFF.81A5B720
```

```
.  
.  
.
```

```
SDA> READ/IMAGE SYS$LOADABLE_IMAGES:PROCESS_MANAGEMENT
%SDA-I-READSYM, 767 symbols read from SYS$COMMON:[SYS$LDR]PROCESS_MANAGEMENT.STB;1
```

```
SDA> SHOW STACK  
Process stacks (on CPU 00)
```

```
-----  
Current operating stack (KERNEL):
```

```
00000000.7FF95CD0 FFFFFFFF.80430CE0 SCH$FIND_NEXT_PROC
00000000.7FF95CD8 00000000.00000000
00000000.7FF95CE0 FFFFFFFF.81E9CB04 LNM$SEARCH_ONE_C+000E4
00000000.7FF95CE8 FFFFFFFF.8007A988 SCH$INTERRUPT+00068
SP =>00000000.7FF95CF0 00000000.00000000
00000000.7FF95CF8 00000000.006080C1
00000000.7FF95D00 FFFFFFFF.80501FDC
00000000.7FF95D08 FFFFFFFF.81A5B720
```

```
.  
.  
.
```

The initial SHOW STACK command contains an address that SDA resolves into an offset from the PROCESS\_MANAGEMENT executive image. The READ command loads the corresponding symbols into the SDA symbol table such that

## SDA Commands

### READ

the reissue of the `SHOW STACK` command subsequently identifies the same location as an offset within a specific process management routine.



---

## REPEAT

Repeats execution of the last command issued. On terminal devices, the KP0 key performs the same function as the REPEAT command with no parameter or qualifier.

### Format

REPEAT [count|/UNTIL=condition]

### Parameter

#### count

The number of times the previous command is to be repeated. The default is a single repeat.

### Qualifier

#### /UNTIL=condition

Defines a condition that terminates the REPEAT command. By default, there is no terminating condition.

### Description

The REPEAT command is useful for stepping through a linked list of data structures, or for examining a sequence of memory locations. When used with ANALYZE/SYSTEM, it allows the changing state of a system location or data structure to be monitored.

### Examples

```
1. SDA> SPAWN CREATE SDATEMP.COM
    SEARCH 0:3FFFFFFF 12345678
    SET PROCESS/NEXT
    ^Z
SDA> SET PROCESS NULL
SDA> @SDATEMP
SDA> REPEAT/UNTIL = BADPROC
```

This example demonstrates how the address space of each process in a system or dump can be searched for a given pattern.

```
2. SDA> SHOW CALL_FRAME
Call Frame Information
-----
Stack Frame Procedure Descriptor
Flags: Base Register = FP, Jacket, Native
Procedure Entry: FFFFFFFF.80080CE0          MMG$RETRANGE_C+00180
Return address on stack = FFFFFFFF.8004CF30  EXCEPTION_NPRO+00F30
```

## SDA Commands

### REPEAT

Registers saved on stack

```
-----  
7FF95E80 FFFFFFFF.FFFFFFFD Saved R2  
7FF95E88 FFFFFFFF.8042DBC0 Saved R3 EXCEPTION_NPRW+03DC0  
7FF95E90 FFFFFFFF.80537240 Saved R4  
7FF95E98 00000000.00000000 Saved R5  
7FF95EA0 FFFFFFFF.80030960 Saved R6 MMG$IMGRESET_C+00200  
7FF95EA8 00000000.7FF95EC0 Saved R7  
7FF95EB0 FFFFFFFF.80420E68 Saved R13 MMG$ULKGBLWSL E  
7FF95EB8 00000000.7FF95F70 Saved R29
```

.  
.  
.

SDA> SHOW CALL\_FRAME/NEXT\_FP

Call Frame Information

```
-----  
Stack Frame Procedure Descriptor  
Flags: Base Register = FP, Jacket, Native  
Procedure Entry: FFFFFFFF.80F018D0 IMAGE_MANAGEMENT_PRO+078D0  
Return address on stack = FFFFFFFF.8004CF30 EXCEPTION_NPRO+00F30
```

Registers saved on stack

```
-----  
7FF95F90 FFFFFFFF.FFFFFFFB Saved R2  
7FF95F98 FFFFFFFF.8042DBC0 Saved R3 EXCEPTION_ NPRW+03DC0  
7FF95FA0 00000000.00000000 Saved R5  
7FF95FA8 00000000.7FF95FC0 Saved R7  
7FF95FB0 FFFFFFFF.80EF8D20 Saved R13 ERL$DEVINF O+00C20  
7FF95FB8 00000000.7FFA0450 Saved R29
```

.  
.  
.

SDA> REPEAT

Call Frame Information

```
-----  
Stack Frame Procedure Descriptor  
Flags: Base Register = FP, Jacket, Native  
Procedure Entry: FFFFFFFF.80F016A0 IMAGE_MANAGEMENT_PRO+076A0  
Return address on stack = 00000000.7FF2451C
```

Registers saved on stack

```
-----  
7FFA0470 00000000.7FEA890 Saved R13  
7FFA0478 00000000.7FFA0480 Saved R29
```

.  
.  
.

The first SHOW CALL\_FRAME displays the call frame indicated by the current FP value. Because the /NEXT\_FP qualifier to the instruction displays the call frame indicated by the saved FP in the current call frame, you can use the REPEAT command to repeat the SHOW CALL\_FRAME/NEXT\_FP command and follow a chain of call frames.

---

## SEARCH

Scans a range of memory locations for all occurrences of a specified value.

### Format

SEARCH [/qualifier] range [=] expression

### Parameters

#### range

Location in memory to be searched. A location can be represented by any valid SDA expression. To search a range of locations, use the following syntax:

*m:n* Range of locations to be searched, from *m* to *n*

*m;n* Range of locations to be searched, starting at *m* and continuing for *n* bytes

#### expression

The value for which SDA is to search. SDA evaluates the **expression** and searches the specified **range** of memory for the resulting value. For a description of SDA expressions, see Section 2.6.2.

If you do not use an equals sign to separate **range** and **expression**, then you must insert a space between them.

### Qualifiers

**/LENGTH={QUADWORD|LONGWORD|WORD|BYTE}**

Specifies the size of the **expression** value that the SEARCH command uses for matching. If you do not specify the /LENGTH qualifier, the SEARCH command uses a longword length by default.

**/MASK=*n***

Allows the SEARCH command finer granularity in its matches. It compares only the given bits of a byte, word, longword, or quadword. To compare bits when matching, you set the bits in the mask; to ignore bits when matching, you clear the bits in the mask.

**/STEPS={QUADWORD|LONGWORD|WORD|BYTE|value}**

Specifies the step factor of the search through the specified memory **range**. After the SEARCH command has performed the comparison between the value of **expression** and memory location, it adds the specified step factor to the address of the memory location. The resulting location is the next location to undergo the comparison. If you do not specify the /STEPS qualifier, the SEARCH command uses a step factor of a longword.

**/PHYSICAL**

Specifies that the addresses used to define the range of locations to be searched are physical addresses.

### Description

SEARCH displays each location as each value is found. If you press Ctrl/T while using the SEARCH command, the system displays how far the search has progressed. The progress display is always output to the terminal even if a SET OUTPUT <file> command has previously been entered.

## SDA Commands

### SEARCH

#### Examples

1. SDA> SEARCH GB81F0;500 B41B0000  
Searching from FFFFFFFF.800B81F0 to FFFFFFFF.800B86EF in LONGWORD steps for B41B0000...  
Match at FFFFFFFF.800B86E4 B41B0000

**This SEARCH command finds the value B41B0000 in the longword at FFFFFFFF.800B86E4.**

2. SDA> SEARCH 80000000;200/STEPS=BYTE 82  
Searching from FFFFFFFF.80000000 to FFFFFFFF.800001FF in BYTE steps for 00000082...  
Match at FFFFFFFF.8000012C 00000082

**This SEARCH command finds the value 00000082 in the longword at FFFFFFFF.8000012C.**

3. SDA> SEARCH/LENGTH=WORD 80000000;100 10  
Match at FFFFFFFF.80000030 0010  
Match at FFFFFFFF.80000040 0010  
Match at FFFFFFFF.80000090 0010  
Match at FFFFFFFF.800000A0 0010  
Match at FFFFFFFF.800000C0 0010  
5 matches found

**This SEARCH command finds the value 0010 in the words at FFFFFFFF.80000030, FFFFFFFF.80000040, FFFFFFFF.80000090, FFFFFFFF.800000A0, FFFFFFFF.800000C0.**

4. SDA> SEARCH/MASK=FF000000 80000000;40 20000000  
Searching from FFFFFFFF.80000000 to FFFFFFFF.8000003F in LONGWORD steps for 20000000...  
(Using search mask of FF000000)  
Match at FFFFFFFF.80000000 201F0104  
Match at FFFFFFFF.80000010 201F0001  
2 matches found

**This SEARCH command finds the value 20 in the upper byte of the longwords at FFFFFFFF.80000000 and FFFFFFFF.80000010, regardless of the contents of the lower three bytes.**

---

## SET CPU

When analyzing a system dump, selects a processor to become the current CPU for SDA. (This command cannot be used when analyzing the running system.)

### Format

```
SET CPU  cpu-id
```

### Parameter

#### **cpu-id**

Numeric value from 00<sub>16</sub> to 1F<sub>16</sub> indicating the identity of the processor to be made the current CPU. If you specify a value outside this range or a **cpu-id** of a processor that was not active at the time of the system failure, SDA displays the following message:

```
%SDA-E-CPUNOTVLD, CPU not booted or CPU number out of range
```

### Qualifiers

None.

### Description

When you invoke SDA to examine a system dump, the current CPU context for SDA defaults to that of the processor that caused the system to fail. When analyzing a system failure from a multiprocessing system, you may find it useful to examine the context of another processor in the configuration.

The SET CPU command changes the current CPU context for SDA to that of the processor indicated by **cpu-id**. The CPU specified by this command becomes the current CPU for SDA until you either exit from SDA or change the CPU context for SDA by issuing one of the following commands:

```
SET CPU cpu-id  
SHOW CPU cpu-id  
SHOW CRASH  
SHOW MACHINE_CHECK cpu-id
```

The following commands also change the CPU context for SDA if the **process-name**, **pcb-address**, or index number (**nn**) refers to a current process:

```
SET PROCESS process-name  
SET PROCESS/ADDRESS=pcb-address  
SET PROCESS/INDEX=nn  
SHOW PROCESS process-name  
SHOW PROCESS/ADDRESS=pcb-address  
SHOW PROCESS/INDEX=nn
```

## SDA Commands

### SET CPU

Changing CPU context can cause an implicit change in process context under the following circumstances:

- If there is a current process on the CPU made current, SDA changes its process context to that of that CPU's current process.
- If there is no current process on the CPU made current, the SDA process context is undefined and no process-specific information is available until you set the SDA process context to that of a specific process.

See Chapter 2, Section 2.5 for further discussion of the way in which SDA maintains its context information.

## SET ERASE\_SCREEN

Enables or disables the automatic clearing of the screen before each new page of SDA output.

### Format

```
SET ERASE_SCREEN {ON|OFF}
```

### Parameters

#### ON

Enables the screen to be erased before SDA outputs a new heading. This setting is the default.

#### OFF

Disables the erasing of the screen.

### Qualifiers

None.

### Description

SDA's usual behavior is to erase the screen and then show the data. By setting the OFF parameter, the clear screen action is replaced by a blank line. This action does not affect what is written to a file when the SET LOG or SET OUTPUT commands are used.

### Examples

```
1. SDA> SET ERASE_SCREEN ON
```

The clear screen action is now enabled.

```
2. SDA> SET ERASE_SCREEN OFF
```

The clear screen action is disabled.

---

## SET FETCH

Sets the default size and access method of address data used when SDA evaluates an expression that includes the @ unary operator.

### Format

```
SET FETCH [{QUADWORD | LONGWORD | WORD | BYTE}][,][{(PHYSICAL | VIRTUAL)}
```

### Parameters

#### QUADWORD

Sets the default size to 8 bytes.

#### LONGWORD

Sets the default size to 4 bytes.

#### WORD

Sets the default size to 2 bytes.

#### BYTE

Sets the default size to 1 byte.

#### PHYSICAL

Sets the default access method to physical addresses.

#### VIRTUAL

Sets the default access method to virtual addresses.

Note that you can specify one and only one parameter out of each group. If you are changing both size and access method, separate the two parameters by spaces and/or a comma. Include a comma only if you are specifying a parameter from both groups. See examples 5 and 6.

### Qualifiers

None.

### Description

Sets the default size and/or default access method of address data used by the @ unary operator in commands such as EXAMINE and EVALUATE. SDA uses the current default size unless it is overridden by the ^Q, ^L, ^W, or ^B qualifier on the @ unary operator in an expression. SDA uses the current default access method unless it is overridden by the ^P or ^V qualifier on the @ unary operator in an expression.

### Examples

1. SDA> EXAMINE MMG\$GQ\_SHARED\_VA\_PTES  
MMG\$GQ\_SHARED\_VA\_PTES: FFFFFFFD.FF7FE000 ".`a....."

This shows the location's contents of a 64-bit virtual address.



## SDA Commands SET FETCH

2. SDA> SET FETCH LONG  
SDA> EXAMINE @MMG\$GQ\_SHARED\_VA\_PTES  
%SDA-E-NOTINPHYS, FFFFFFFF.FF7FE000 : virtual data not in physical memory

This shows a failure because the SET FETCH LONG causes SDA to assume that it should take the lower 32 bits of the location's contents as a longword value, sign-extend them, and use that value as an address.

3. SDA> EXAMINE ^QMMG\$GQ\_SHARED\_VA\_PTES  
FFFFFFFD.FF7FE000: 000001D0.40001119 "...@..."

This shows the correct results by overriding the SET FETCH LONG with the ^Q qualifier on the @ operator. SDA takes the full 64-bits of the location's contents and uses that value as an address.

4. SDA> SET FETCH QUAD  
SDA> EXAMINE @MMG\$GQ\_SHARED\_VA\_PTES  
FFFFFFFD.FF7FE000: 000001D0.40001119 "...@..."

This shows the correct results by changing the default fetch size to a quadword.

5. SDA> SET FETCH PHYSICAL  
SDA> EXAMINE /PHYSICAL @0

This command uses the contents of the physical location 0 as the physical address of the location to be examined.

6. SDA> SET FETCH QUADWORD, PHYSICAL

This command sets the default fetch size and default access method at the same time.

## SET LOG

Initiates or discontinues the recording of an SDA session in a text file.

### Format

SET [NO]LOG filespec

### Parameter

#### **filespec**

Name of the file in which you want SDA to log your commands and their output. The default **filespec** is SYSSDISK:[default\_dir]filename.LOG, where SYSSDISK and [default-dir] represent the disk and directory specified in your last DCL command SET DEFAULT. You must specify a file name.

### Qualifiers

None.

### Description

The SET LOG command echoes the commands and output of an SDA session to a log file. The SET NOLOG command terminates this behavior.

The following differences exist between the SET LOG command and the SET OUTPUT command:

- When logging is in effect, your commands and their results are still displayed on your terminal. The SET OUTPUT command causes the displays to be redirected to the output file and they no longer appear on the screen.
- If an SDA command requires that you press Return to produce successive screens of display, the log file produced by SET LOG will record only those screens that are actually displayed. SET OUTPUT, however, sends the entire output of any SDA commands to its listing file.
- The SET LOG command produces a log file with a default file type of .LOG; the SET OUTPUT command produces a listing file whose default file type is .LIS.
- The SET LOG command does not record output from the HELP command in its log file. The SET OUTPUT command can record HELP output in its listing file.
- The SET OUTPUT command can generate a table of contents, each item of which refers to a display written to its listing file. SET OUTPUT also produces running heads for each page of output. The SET LOG command does not produce these items in its log file.

Note that, if you use the SET OUTPUT command to redirect output to a listing file, a SET LOG command to direct the same output to a log file is ineffective until output is restored to the terminal.

---

## SET OUTPUT

Redirects output from SDA to the specified file or device.

### Format

```
SET OUTPUT  [/[NO]INDEX | /[/NO]HEADER | /SINGLE_COMMAND] filespec
```

### Parameter

#### **filespec**

Name of the file to which SDA is to send the output generated by its commands. The default **filespec** is SYSSDISK:[default\_dir]filename.LIS, where SYSSDISK and [default-dir] represent the disk and directory specified in your last DCL command SET DEFAULT. You must specify a file name.

### Qualifiers

#### **/INDEX**

#### **/NOINDEX**

The **/INDEX** qualifier causes SDA to include an index page at the beginning of the output file. This is the default, unless **/NOHEADER** is specified; see the **/NOHEADER** description. The **/NOINDEX** qualifier causes SDA to omit the index page from the output file.

#### **/HEADER**

#### **/NOHEADER**

The **/HEADER** qualifier causes SDA to include a heading at the top of each page of the output file. This is the default. The **/NOHEADER** qualifier causes SDA to omit the page headings. Use of **/NOHEADER** implies **/NOINDEX**.

#### **/SINGLE\_COMMAND**

Indicates to SDA that the output for a single command is to be written to the specified file and that subsequent output should be written to the terminal.

### Description

When you use the SET OUTPUT command to send the SDA output to a file or device, SDA continues displaying the SDA commands that you enter but sends the output generated by those commands to the file or device you specify. (See the description of the SET LOG command for a list of differences between the SET LOG and SET OUTPUT commands.)

When you finish directing SDA commands to an output file and want to return to interactive display, issue the following command:

```
SDA> SET OUTPUT SYS$OUTPUT
```

Note that this command is not needed when the **/SINGLE\_COMMAND** qualifier was specified on the original SET OUTPUT command.

If you use the SET OUTPUT command to send the SDA output to a listing file and do not specify **/NOINDEX** or **/NOHEADER**, SDA builds a table of contents that identifies the displays you selected and places the table of contents at the beginning of the output file. The SET OUTPUT command formats the output into pages and produces a running head at the top of each page, unless you specify **/NOHEADER**.

## SDA Commands

### SET OUTPUT

---

#### Note

---

See the description of the DUMP command for use of SET OUTPUT/NOHEADER.

---

---

## SET PROCESS

Selects a process to become the SDA current process.

### Format

```
SET PROCESS {/ADDRESS=pcb-address|process-name |/ID=nn |  
/INDEX=nn|/NEXT |/SYSTEM}
```

### Parameter

#### **process-name**

Name of the process to become the SDA current process. The **process-name** is a string containing up to 15 uppercase or lowercase characters; numerals, the dollar sign (\$), and the underscore (\_) can also be included in the string. If you include characters other than these, you must enclose the entire string in quotation marks (" ").

### Qualifiers

#### **/ADDRESS=*pcb-address***

Specifies the process control block (PCB) address of a process in order to display information about the process.

#### **/ID=*nn***

#### **/INDEX=*nn***

Specifies the process for which information is to be displayed by its index into the system's list of software process control blocks (PCBs), or by its process identification. You can supply the following values for *nn*:

- The process index itself.
- The process identification (PID) or extended PID longword, from which SDA extracts the correct index. The PID or extended PID of any thread of a process with multiple kernel threads may be specified. Any thread-specific data displayed by further commands will be for the given thread.

To obtain these values for any given process, issue the SDA command SHOW SUMMARY/THREADS. The */ID=nn* and */INDEX=nn* qualifiers can be used interchangeably.

#### **/NEXT**

Causes SDA to locate the next valid process in the process list and select that process. If there are no further valid processes in the process list, SDA returns an error.

#### **/SYSTEM**

Specifies the new current process by the system process control block (PCB). The system PCB and process header (PHD) parallel the data structures that describe processes. They contain the system working set list, global section table, and other systemwide data.

## SDA Commands

### SET PROCESS

#### Description

When you issue an SDA command such as EXAMINE, SDA displays the contents of memory locations in its current process. To display any information about another process, you must change the current process with the SET PROCESS command.

When you invoke SDA to analyze a crash dump, the process context defaults to that of the process that was current at the time of the system failure. If the failure occurred on a multiprocessing system, SDA sets the CPU context to that of the processor that caused the system to fail. The process context is set to that of the process that was current on that processor.

When you invoke SDA to analyze a running system, its process context defaults to that of the current process, that is, the one executing SDA.

The SET PROCESS command changes the current SDA process context to that of the process indicated by **process-name**, **pcb-address**, or **/INDEX=nn**. The process specified by this command becomes the current process for SDA until you either exit from SDA or change SDA process context by issuing one of the following commands:

```
SET PROCESS process-name
SET PROCESS/ADDRESS=pcb-address
SET PROCESS/INDEX=nn
SET PROCESS/SYSTEM
SHOW PROCESS process-name
SHOW PROCESS/ADDRESS=pcb-address
SHOW PROCESS/INDEX=nn
SHOW PROCESS/SYSTEM
```

When you analyze a crash dump from a multiprocessing system, changing process context may require a switch of CPU context as well. For instance, if you issue a SET PROCESS command for a process that is current on another CPU, SDA automatically changes its CPU context to that of the CPU on which that process is current. The following commands can have this effect if **process-name**, **pcb-address**, or index number (**nn**) refers to a current process:

```
SET PROCESS process-name
SET PROCESS/ADDRESS=pcb-address
SET PROCESS/INDEX=nn
SHOW PROCESS process-name
SHOW PROCESS/ADDRESS=pcb-address
SHOW PROCESS/INDEX=nn
```

The following commands will also switch process context when analyzing a system dump, if there was a current process on the target CPU at the time of the crash:

```
SET CPU cpu-id
SHOW CPU cpu-id
SHOW CRASH
SHOW MACHINE_CHECK cpu-id
```

See Chapter 2, Section 2.5 for further discussion of the way in which SDA maintains its context information.

**Example**

```
SDA> SHOW PROCESS
Process index: 0012   Name: ERRFMT   Extended PID: 00000052
-----
Process status: 02040001   RES,PHDRES,INTER
                status2: 00000001   QUANTUM_RESCHED

PCB address      80D772C0   JIB address      80556600
PHD address      80477200   Swapfile disk address 01000F01
KTB vector address 80D775AC   HWPCB address    81260080
Callback vector address 00000000   Termination mailbox      0000
Master internal PID 00010004   Subprocess count      0
Creator extended PID 00000000   Creator internal PID 00000000
Previous CPU Id 00000000   Current CPU Id 00000000
Previous ASNSEQ 0000000000000001   Previous ASN 000000000000002E
Initial process priority 4   Delete pending count 0
# open files allowed left 100   Direct I/O count/limit 150/150
UIC [00001,000004]   Buffered I/O count/limit 149/150
Abs time of last event 0069D34E   BUFIO byte count/limit 99424/99808
ASTs remaining 247   # of threads 1
Swapped copy of LEFC0 00000000   Timer entries allowed left 63
Swapped copy of LEFC1 00000000   Active page table count 4
Global cluster 2 pointer 00000000   Process WS page count 32
Global cluster 3 pointer 00000000   Global WS page count 31
```

**This SHOW PROCESS command shows the current process to be ERRFMT, and displays information from its PCB and job information block (JIB).**

**See the description of the REPEAT command for an example of the use of the SET PROCESS/NEXT command.**

## SDA Commands

### SET RMS

---

## SET RMS

Changes the options shown by the SHOW PROCESS/RMS command.

### Format

SET RMS =(option[,...])

### Parameter

#### option

Data structure or other information to be displayed by the SHOW PROCESS/RMS command. Table 4-2 lists those keywords that may be used as options.

**Table 4-2 SET RMS Command Keywords for Displaying Process RMS Information**

Keyword	Meaning
[NO]ALL[: <b>ifi</b> ] <sup>1</sup>	All control blocks (default)
[NO]ASB	Asynchronous save block
[NO]BDB	Buffer descriptor block
[NO]BDBSUM	BDB summary page
[NO]BLB	Buffer lock block
[NO]BLBSUM	Buffer lock summary page
[NO]CCB	Channel control block
[NO]DRC	Directory cache
[NO]FAB	File access block
[NO]FCB	File control block
[NO]FSB	File statistics block
[NO]FWA	File work area
[NO]GBD	Global buffer descriptor
[NO]GBDSUM	GBD summary page
[NO]GBH	Global buffer header
[NO]GBHSH	Global buffer hash table
[NO]GBSB	Global buffer synchronization block
[NO]IDX	Index descriptor
[NO]IFAB[: <b>ifi</b> ] <sup>1</sup>	Internal FAB
[NO]IFB[: <b>ifi</b> ] <sup>1</sup>	Internal FAB
[NO]IRAB	Internal RAB
[NO]IRB	Internal RAB
[NO]JFB	Journaling file block
[NO]KLTB	Key-less-than block

<sup>1</sup>The optional parameter **ifi** is an internal file identifier. The default **ifi** (**ALL**) is all the files the current process has opened.

(continued on next page)



**Table 4–2 (Cont.) SET RMS Command Keywords for Displaying Process RMS Information**

Keyword	Meaning
[NO]NAM	Name block
[NO]NWA	Network work area
[NO]PIO	Process-permanent I/O data structures used instead of process image data structures
[NO]RAB	Record access block
[NO]RLB	Record lock block
[NO]RU	Recovery unit structures, including the recovery unit block (RUB), recovery unit stream block (RUSB), and recovery unit file block (RUFB)
[NO]SFSB	Shared file synchronization block
[NO]WCB	Window control block
[NO]XAB	Extended attribute block
[NO]*	Current list of options displayed by the SHOW RMS command

The default **option** is **option=(ALL,NOPIO)**, designating for display by the SHOW PROCESS/RMS command all structures for all files related to the process image I/O.

To list more than one option, enclose the list in parentheses and separate options by commas. You can add a given data structure to those displayed by ensuring that the list of keywords begins with the asterisk (\*) symbol. You can delete a given data structure from the current display by preceding its keyword with "NO."

### Qualifiers

None.

### Description

The SET RMS command determines the data structures to be displayed by the SHOW PROCESS/RMS command. (See the examples included in the discussion of the SHOW PROCESS command for information provided by various displays.) You can examine the options that are currently selected by issuing a SHOW RMS command.

## SDA Commands

### SET RMS

#### Examples

1. SDA> SHOW RMS  
RMS Display Options: IFB,IRB,IDX,BDB,BDBSUM,ASB,CCB,WCB,FCB,FAB,RAB,NAM,XAB,RLB, BLB,BLBSUM,GBD,GBH,FWA,GBDSUM,JFB,NWA,RU,DRC,SFSB,GBSB

Display RMS structures for all IFI values.

```
SDA> SET RMS=IFB
SDA> SHOW RMS
```

RMS Display Options: IFB

Display RMS structures for all IFI values.

**The first SHOW RMS command shows the default selection of data structures that are displayed in response to a SHOW PROCESS/RMS command. The SET RMS command selects only the IFB to be displayed by subsequent SET/PROCESS commands.**

2. SDA> SET RMS=(\*,BLB,BLBSUM,RLB)  
SDA> SHOW RMS

RMS Display Options: IFB,RLB,BLB,BLBSUM

Display RMS structures for all IFI values.

**The SET RMS command adds the BLB, BLBSUM, and RLB to the list of data structures currently displayed by the SHOW PROCESS/RMS command.**

3. SDA> SET RMS=(\*,NORLB,IFB:05)  
SDA> SHOW RMS

RMS Display Options: IFB,BLB,BLBSUM  
Display RMS structures only for IFI=5.

**The SET RMS command removes the RLB from those data structures displayed by the SHOW PROCESS/RMS command and causes only information about the file with the **ifi** of 5 to be displayed.**

4. SDA> SET RMS=(\*,PIO)

**The SET RMS command indicates that the data structures designated for display by SHOW PROCESS/RMS be associated with process-permanent I/O instead of image I/O.**

---

## SET SIGN\_EXTEND

Enables or disables the sign extension of 32-bit addresses.

### Format

```
SET SIGN_EXTEND {ON|OFF}
```

### Parameters

**on**

Enables automatic sign extension of 32-bit addresses with bit 31 set. This is the default.

**off**

Disables automatic sign extension of 32-bit addresses with bit 31 set.

### Qualifiers

None.

### Description

The 32-bit S0/S1 addresses need to be sign-extended to access 64-bit S0/S1 space. To do this, specify explicitly sign-extended addresses, or set the sign-extend command to **on**, which is the default.

However, to access addresses in P2 space, addresses must not be sign-extended. To do this, specify a zero in front of the address, or set the sign-extend command to **off**.

### Examples

```
1. SDA> set sign_extend on
   SDA> examine 80400000
   FFFFFFFF.80400000: 23DEFF90.4A607621
```

This shows the SET SIGN\_EXTEND command as ON.

```
2. SDA> set sign_extend off
   SDA> examine 80400000
   %SDA-E-NOTINPHYS, 00000000.80400000: virtual data not in physical memory
```

This shows the SET SIGN\_EXTEND command as OFF.

## SDA Commands

### SET SYMBOLIZE

---

## SET SYMBOLIZE

Enables or disables symbolization of addresses in the display from an EXAMINE command.

### Format

```
SET SYMBOLIZE {ON|OFF}
```

### Parameters

#### ON

Enables symbolization of addresses.

#### OFF

Disables symbolization of addresses.

### Qualifiers

None.

### Examples

1. 

```
SDA> SET SYMBOLIZE ON
SDA> examine g1234
SYS$PUBLIC_VECTORS+01234: 47DF041C  "..BG"
```
2. 

```
SDA> SET SYMBOLIZE OFF
SDA> examine g1234
FFFFFFFF.80001234: 47DF041C  "..BG"
```

This example shows the effect of enabling (default) or disabling symbolization of addresses.

---

## SHOW ADDRESS

Displays the page table related information about a memory address.

### Format

SHOW ADDRESS address [/PHYSICAL]

### Parameter

**address**  
Displays the requested address.

### Qualifier

**/PHYSICAL**  
Indicates that a physical address has been given. The SHOW ADDRESS command displays the virtual address that maps to the given physical address.

### Description

The SHOW ADDRESS command displays the region of memory that contains the memory address. It also shows all the page table entries (PTEs) that map the page and can show the range of addresses mapped by the given address if it is the address of a PTE.

When the /PHYSICAL qualifier is given, the SHOW ADDRESS command displays the virtual address that maps to the given physical address. This provides you with a way to use SDA commands that do not have a /PHYSICAL qualifier when only the physical address of a memory location is known.

### Examples

- SDA> SHOW ADDRESS 80000000

```

FFFFFFFF.80000000 is an S0/S1 address

Mapped by Level-3 PTE at: FFFFFFFD.FFE00000
Mapped by Level-2 PTE at: FFFFFFFD.FF7FF800
Mapped by Level-1 PTE at: FFFFFFFD.FF7FDF0
Mapped by Selfmap PTE at: FFFFFFFD.FF7FDF0

Also mapped in SPT window at: FFFFFFFF.FFDF0000

The SHOW ADDRESS command in this example shows where the address
80000000 is mapped at different page table entry levels.
```
- SDA> SHOW ADDRESS 0

```

00000000.00000000 is a P0 address

Mapped by Level-3 PTE at: FFFFFFFC.00000000
Mapped by Level-2 PTE at: FFFFFFFD.FF000000
Mapped by Level-1 PTE at: FFFFFFFD.FF7FC000
Mapped by Selfmap PTE at: FFFFFFFD.FF7FDF0

The SHOW ADDRESS command in this example shows where the address 0
is mapped at different page table entry levels.
```

## SDA Commands

### SHOW ADDRESS

3. SDA> SHOW ADDRESS FFFFFFFD.FF000000  
FFFFFFFD.FF000000 is the address of a process-private Level-2 PTE  
Mapped by Level-1 PTE at: FFFFFFFD.FF7FC000  
Mapped by Selfmap PTE at: FFFFFFFD.FF7FDFF0  
Range mapped at level 2: FFFFFFFC.00000000 to FFFFFFFC.00001FFF (1 page)  
Range mapped at level 3: 00000000.00000000 to 00000000.007FFFFFFF (1024 pages)

**The SHOW ADDRESS command in this example shows where the address FFFFFFFD.FF7FC000 is mapped at page table entry and the range mapped by the PTE at this address.**

4. SDA> SHOW ADDRESS/PHYSICAL 0  
Physical address 00000000.00000000 is mapped to system-space address FFFFFFFF.828FC000

**The SHOW ADDRESS command in this example shows physical address 00000000.00000000 mapped to system-space address FFFFFFFF.828FC000.**

5. SDA> SHOW ADDRESS/PHYSICAL 029A6000  
Physical address 00000000.029A6000 is mapped to process-space address 00000000.00030000 (process index 0024)

**The SHOW ADDRESS command in this example shows physical address 00000000.029A6000 mapped to process-space address 00000000.00030000 (process index 0024).**

---

## SHOW BUGCHECK

Displays the value, name, and text associated with one or all bugcheck codes.

### Format

```
SHOW BUGCHECK {/ALL (d)|name|number}
```

### Parameters

#### name

Displays the value, name, and text of the named bugcheck code.

#### number

Displays the value, name, and text of the requested bugcheck code.

The parameters **name** and **number**, and the qualifier **/ALL**, are all mutually exclusive.

### Qualifier

#### /ALL

Displays complete list of all the bugcheck codes giving their value, name, and text. It is the default.

### Description

The SHOW BUGCHECK command displays the value, name, and text associated with bugcheck codes.

### Examples

1. SDA> show bugcheck 100  
0100 DIRENTRY ACP failed to find same directory entry

The SHOW BUGCHECK command in this example shows the requested bugcheck by number.

2. SDA> show bugcheck decnet  
08D0 DECNET DECnet detected a fatal error

The SHOW BUGCHECK command in this example shows the requested bugcheck by name.

3. SDA> show bugcheck  
BUGCHECK codes and texts  
-----  
0008 ACPMBFAIL ACP failure to read mailbox  
0010 ACPVAFAIL ACP failure to return virtual address space  
0018 ALCPHD Allocate process header error  
0020 ALCSMBCLR ACP tried to allocate space already allocated  
  
.  
.  
.

The SHOW BUGCHECK command in this example shows the requested bugcheck by displaying all codes.

## SDA Commands

### SHOW CALL\_FRAME

---

## SHOW CALL\_FRAME

Displays the locations and contents of the quadwords representing a procedure call frame.

### Format

```
SHOW CALL_FRAME {[starting-address]}/NEXT_FP}
```

### Parameter

#### starting-address

Expression representing the starting address of the procedure call frame to be displayed. The default **starting-address** is the contents of the FP register of the SDA current process.

### Qualifier

#### /NEXT\_FP

Displays the procedure call frame starting at the address stored in the FP longword of the last call frame displayed by this command. You must have issued a SHOW CALL\_FRAME command previously in the current SDA session in order to use the /NEXT\_FP qualifier to the command.

### Description

Whenever a procedure is called, information is stored on the stack of the calling routine in the form of a procedure call frame. The SHOW CALL\_FRAME command displays the locations and contents of the call frame. The starting address of the call frame is determined from the specified starting address, the /NEXT\_FP qualifier, or the address contained in the SDA current process FP register (the default action).

When using the SHOW CALL\_FRAME/NEXT\_FP command to follow a chain of call frames, SDA signals the end of the chain by this message:

```
%SDA-E-NOTINPHYS, 00000000.00000000 : not in physical memory
```

This message indicates that the saved FP in the previous call frame has a zero value.

### Example

```
SDA> SHOW CALL_FRAME
Call Frame Information
-----
          Stack Frame Procedure Descriptor
Flags:   Base Register = FP, No Jacket, Native
         Procedure Entry: FFFFFFFF.837E9F10           EXCEPTION_PRO+01F10
         Return address on stack = FFFFFFFF.837E8A1C   EXE$CONT SIGNAL_C+0019C
```



## SDA Commands SHOW CALL\_FRAME

Registers saved on stack

```
-----  
7FF95F98 FFFFFFFF.FFFFFFFB Saved R2  
7FF95FA0 FFFFFFFF.8042AEA0 Saved R3 EXCEPTION_NPRW+040A0  
7FF95FA8 00000000.00000002 Saved R5  
7FF95FB0 FFFFFFFF.804344A0 Saved R13 SCH$CLREF+00188  
7FF95FB8 00000000.7FF9FC00 Saved R29  
.  
.  
.
```

SDA> SHOW CALL\_FRAME/NEXT\_FP  
Call Frame Information

```
-----  
Stack Frame Procedure Descriptor  
Flags: Base Register = FP, No Jacket, Native  
Procedure Entry: FFFFFFFF.800FA388 RMS_NPRO+04388  
Return address on stack = FFFFFFFF.80040BFC EXCEPTION_NPRO+00BFC
```

Registers saved on stack

```
-----  
7FF99F60 FFFFFFFF.FFFFFFFD Saved R2  
7FF99F68 FFFFFFFF.80425BA0 Saved R3 EXCEPTION_NPRW+03DA0  
7FF99F70 FFFFFFFF.80422020 Saved R4 EXCEPTION_NPRW+00220  
7FF99F78 00000000.00000000 Saved R5  
7FF99F80 FFFFFFFF.835C24A8 Saved R6 RMS_PRO+004A8  
7FF99F88 00000000.7FF99FC0 Saved R7  
7FF99F90 00000000.7FF9FDE8 Saved R8  
7FF99F98 00000000.7FF9FDF0 Saved R9  
7FF99FA0 00000000.7FF9FE78 Saved R10  
7FF99FA8 00000000.7FF9FEB8 Saved R11  
7FF99FB0 FFFFFFFF.837626E0 Saved R13 EXE$OPEN_MESSAGE+00088  
7FF99FB8 00000000.7FF9FD70 Saved R29  
.  
.  
.
```

SDA> SHOW CALL\_FRAME/NEXT\_FP  
Call Frame Information

```
-----  
Stack Frame Procedure Descriptor  
Flags: Base Register = FP, No Jacket, Native  
Procedure Entry: FFFFFFFF.835C2438 RMS_PRO+00438  
Return address on stack = FFFFFFFF.83766020 EXE$OPEN_MESSAGE_C+00740
```

Registers saved on stack

```
-----  
7FF9FD88 00000000.7FF9FDA4 Saved R2  
7FF9FD90 00000000.7FF9FF00 Saved R3  
7FF9FD98 00000000.7FFA0050 Saved R29
```

The SHOW CALL\_FRAME commands in this SDA session follow a chain of call frames from that specified in the FP of the SDA current process.

## SHOW CLUSTER

Displays connection manager and system communications services (SCS) information for all nodes in a cluster.

### Format

```
SHOW CLUSTER {{{/ADDRESS=n|/CSID=csid|/NODE=name}}|/SCS}
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*n***

Displays only the OpenVMS Cluster system information for a specific OpenVMS Cluster member node, given the address of the cluster system block (CSB) for the node. This is mutually exclusive with the */CSID=*csid** and */NODE=*name** qualifiers.

#### **/CSID=*csid***

Displays only the OpenVMS Cluster system information for a specific OpenVMS Cluster member node. The value *csid* is the cluster system identification number (CSID) of the node to be displayed. You can find the CSID for a specific node in a cluster by examining the **CSB list** display of the SHOW CLUSTER command. Other SDA displays refer to a system's CSID. For instance, the SHOW LOCK command indicates where a lock is mastered or held by CSID. This is mutually exclusive with the */ADDRESS=*n** and */NODE=*name** qualifiers.

#### **/NODE=*name***

Displays only the OpenVMS Cluster system information for a specific OpenVMS Cluster member node, given its SCS node name. This is mutually exclusive with the */ADDRESS=*n** and */CSID=*csid** qualifiers.

#### **/SCS**

Displays a view of the cluster as seen by SCS.

### Description

The SHOW CLUSTER command provides a view of the OpenVMS Cluster system from either the perspective of the connection manager (the default behavior), or from the perspective of the port driver(s) (if the */SCS* qualifier is used).

#### **OpenVMS Cluster as Seen by the Connection Manager**

The SHOW CLUSTER command provides a series of displays.

The **OpenVMS Cluster summary** display supplies the following information:

- Number of votes required for a quorum
- Number of votes currently available
- Number of votes allocated to the quorum disk
- Status summary indicating whether or not a quorum is present

The **CSB list** displays information about the OpenVMS Cluster system blocks (CSBs) currently in operation; there is one CSB assigned to each node of the cluster. For each CSB, the **CSB list** displays the following information:

- Address of the CSB
- Name of the OpenVMS Cluster node it describes
- CSID associated with the node
- Number of votes (if any) provided by the node
- State of the CSB
- Status of the CSB

For information about the state and status of nodes, see the description of the ADD CLUSTER command of the SHOW CLUSTER utility in the *OpenVMS System Management Utilities Reference Manual*.

The **cluster block** display includes information recorded in the cluster block (CLUB), including a list of activated flags, a summary of quorum and vote information, and other data that applies to the cluster from the perspective of the node for which the SDA is being run.

The **cluster failover control block** display provides detailed information concerning the cluster failover control block (CLUFCB). The **cluster quorum disk control block** display provides detailed information from the cluster quorum disk control block (CLUDCB).

Subsequent displays provide information for each CSB listed previously in the **CSB list** display. Each display shows the state and flags of a CSB, as well as other specific node information. (See the ADD MEMBER command of the SHOW CLUSTER utility in the *OpenVMS System Management Utilities Reference Manual* for information about the flags for OpenVMS Cluster nodes.)

If any of the qualifiers /ADDRESS=*n*, /CSID=*csid*, or /NODE=*name* are specified, then the SHOW CLUSTER command displays only the information from the CSB of the specified node.

#### OpenVMS Cluster as Seen by the Port Driver

The SHOW CLUSTER/SCS command provides a series of displays.

The **SCS listening process directory** lists those processes that are listening for incoming SCS connect requests. For each of these processes, this display records the following information:

- Address of its directory entry
- Connection ID
- Name
- Explanatory information, if available

The **SCS systems summary** display provides the system block (SB) address, node name, system type, system ID, and the number of connection paths for each SCS system. An **SCS system** can be a OpenVMS Cluster member, storage controller, or other such device.

## SDA Commands

### SHOW CLUSTER

Subsequent displays provide detailed information for each of the system blocks and the associated path blocks. The system block displays include the maximum message and datagram sizes, local hardware and software data, and SCS poller information. Path block displays include information that describes the connection, including remote functions and other path-related data.

### Examples

1. SDA> SHOW CLUSTER  
OpenVMS Cluster data structures

```
--- OpenVMS Cluster Summary ---
  Quorum  Votes  Quorum Disk Votes  Status Summary
  -----  -
      2      2           1      qf_dynvote,qf_vote,quorum

--- CSB list ---
Address  Node   CSID      Votes  State  Status
-----  -
805FA780 FLAM5  00010006  0      local  member,qf_same,qf_noaccess
8062C400 ROMRDR 000100ED  1      open   member,qf_same,qf_watcher,qf_active
8062C780 VANDQ1 000100EF  0      open   member,qf_same,qf_noaccess

--- Cluster Block (CLUB) 805FA380 ---
Flags: 16080005 cluster,qf_dynvote,init,qf_vote,qf_newvote,quorum
Quorum/Votes           2/2      Last transaction code      02
Quorum Disk Votes      1      Last trans. number         596
Nodes                   3      Last coordinator CSID      000100EF
Quorum Disk             $1$DIA0  Last time stamp           31-DEC-1992
Found Node SYSID       00000000FC03  17:26:35
Founding Time          3-JAN-1993  Largest trans. id          00000254
                       21:04:21  Resource Alloc. retry      0
Index of next CSID     0007      Figure of Merit            00000000
Quorum Disk Cntrl Block 805FADC0  Member State Seq. Num      0203
Timer Entry Address    00000000  Foreign Cluster            00000000
CSP Queue              empty

--- Cluster Failover Control Block (CLUFCB) 805FA4C0 ---
Flags: 00000000
Failover Step Index    00000037  CSB of Synchr. System      8062C780
Failover Instance ID   00000254

--- Cluster Quorum Disk Control Block (CLUDCB) 805FADC0 ---
State      : 0002 qs_rem_act
Flags      : 0100 qf_noaccess
CSP Flags  : 0000

Iteration Counter       0          UCB address      00000000
Activity Counter        0          TQE address      805FAE00
Quorum file LBN        00000000  IRP address      00000000
                       Watcher CSID      000100ED

--- FLAM5 Cluster System Block (CSB) 805FA780 ---
State: 0B local
Flags: 070260AA member,qf_same,qf_noaccess,selected,local,status_rcvd,send_status
Cpblty: 00000000
SWVers: 7.0
HWName: DEC 3000 Model 400
```

## SDA Commands SHOW CLUSTER

Quorum/Votes	1/0	Next seq. number	0000	Send queue	00000000
Quor. Disk Vote	1	Last seq num rcvd	0000	Resend queue	00000000
CSID	00010006	Last ack. seq num	0000	Block xfer Q.	805FA7D8
Eco/Version	0/23	Unacked messages	0	CDT address	00000000
Reconn. time	00000000	Ack limit	0	PDT address	00000000
Ref. count	2	Incarnation	1-JAN-1993	TQE address	00000000
Ref. time	31-AUG-1992		00:00:00	SB address	80421580
	17:26:35	Lock mgr dir wgt	0	Current CDRP	00000001

--- ROMRDR Cluster System Block (CSB) 8062C400 ---

State: 01 open  
Flags: 0202039A member,qf\_same,cluster,qf\_active,selected,status\_rcvd  
Cpblty: 00000000  
SWVers: 7.0  
HWName: DEC 3000 Model 400

Quorum/Votes	2/1	Next seq. number	B350	Send queue	00000000
Quor. Disk Vote	1	Last seq num rcvd	E786	Resend queue	00000000
CSID	000100ED	Last ack. seq num	B350	Block xfer Q.	8062C458
Eco/Version	0/22	Unacked messages	1	CDT address	805E8870
Reconn. time	00000000	Ack limit	3	PDT address	80618400
Ref. count	2	Incarnation	19-AUG-1992	TQE address	00000000
Ref. time	19-AUG-1992		16:15:00	SB address	8062C140
	16:17:08	Lock mgr dir wgt	0	Current CDRP	00000000

--- VANDQ1 Cluster System Block (CSB) 8062C780 ---

State: 01 open  
Flags: 020261AA member,qf\_same,qf\_noaccess,cluster,selected,status\_rcvd  
Cpblty: 00000000  
SWVers: 7.0  
HWName: DEC 3000 Model 400

Quorum/Votes	1/0	Next seq. number	32B6	Send queue	00000000
Quor. Disk Vote	1	Last seq num rcvd	A908	Resend queue	00000000
CSID	000100EF	Last ack. seq num	32B6	Block xfer Q.	8062C7D8
Eco/Version	0/23	Unacked messages	1	CDT address	805E8710
Reconn. time	00000000	Ack limit	3	PDT address	80618400
Ref. count	2	Incarnation	17-AUG-1992	TQE address	00000000
Ref. time	19-AUG-1992		15:37:06	SB address	8062BCC0
	16:21:22	Lock mgr dir wgt	0	Current CDRP	00000000

--- SWPCTX Cluster System Block (CSB) 80D3B1C0 ---

State: 0B local  
Flags: 030A60AA member,qf\_same,qf\_noaccess,selected,send\_ext\_status,local,status\_rcvd  
Cpblty: 00000037 rm8sec,vcc,dts,cwcreprc,threads  
SWVers: V7.0  
HWName: DEC 3000 Model 400

Quorum/Votes	1/1	Next seq. number	0000	Send queue	00000000
Quor. Disk Vote	1	Last seq num rcvd	0000	Resend queue	00000000
CSID	00010001	Last ack. seq num	0000	Block xfer Q.	80D3B218
Eco/Version	0/26	Unacked messages	0	CDT address	00000000
Reconn. time	00000000	Ack limit	0	PDT address	00000000
Ref. count	2	Incarnation	12-JUL-1996	TQE address	00000000
Ref. time	16-JUL-1996		15:36:17	SB address	80C50800
	16:15:48	Lock mgr dir wgt	0	Current CDRP	00000001

**This example illustrates the default output of the SHOW CLUSTER command.**

# SDA Commands

## SHOW CLUSTER

2. SDA> SHOW CLUSTER/SCS

VMScluster data structures

-----

--- SCS Listening Process Directory ---

Entry Address	Connection ID	Process Name	Information
80C71EC0	74D20000	SCS\$DIRECTORY	Directory Server
80C72100	74D20001	MSCP\$TAPE	NOT PRESENT HERE
80E16940	74D20002	MSCP\$DISK	MSCP\$DISK
80E23B40	74D20003	VMS\$SDA_AXP	Remote SDA
80E23B40	74D20003	VMS\$SDA_AXP	Remote SDA
80E25540	74D20004	VMS\$VAXcluster	.....
80E29E80	74D20005	SCA\$TRANSPORT	
813020C0	74D20053	PATHWORKScluster	.....TurboServer

--- SCS Systems Summary ---

SB Address	Node	Type	System ID	Paths
8493BC00	ARUSHA	VMS	000000004CA1	2
80E23800	HSJ201	HSJ	4200101A1B20	1
80E3FF40	ORNOT	VMS	000000004CA7	2
80E43F40	LOADQ	VMS	000000004C31	2
80E473C0	HSJ300	HSJ	420010051D20	1
80E47CC0	HSJ101	HSJ	420010081720	1
80E47D40	HSJ100	HSJ	4200100B1520	1
80E478C0	HSJ600	HSJ	420010070920	1
80E49180	HSJ401	HSJ	4200100D0320	1
80E47DC0	HSJ301	HSJ	420010091F20	1
80E47E40	HSJ601	HSJ	4200100A0B20	1
80E49500	HSJ400	HSJ	4200100C0120	1
80E5BF80	CHOBE	VMS	000000004CD6	2
80E5F080	ETOSHA	VMS	000000004CF3	2
80E5FC00	VMS	VMS	000000004C7A	2
80E4FF80	HSJ501	HSJ	4200101C0720	1
80E5FD80	HSJ200	HSJ	420010191920	1
80E5FE80	HSJ500	HSJ	4200101B0520	1
80E5FE00	IPL31	VMS	000000004F52	2
80E59F80	ZAPNOT	VMS	000000004CBB	2
80E61F80	ALTOS	VMS	000000004D0F	2
80E72000	TSAVO	VMS	000000004CFE	2
80ED5D00	SLYTHE	VMS	000000004DD1	1
80EDDD00	AZSUN	VMS	000000004D56	1
80EDDE00	CALSUN	VMS	000000004EA4	1
80EDFC00	4X4TRK	VMS	00000000FF26	1
80EE93C0	GNRS	VMS	00000000FC2B	1
80EE94C0	IXIVIV	VMS	000000004E56	1
80EF1A80	CLAIR	VMS	000000004CDF	1
80EF1C00	INT4	VMS	00000000FD70	1
80EFDF80	SCOP	VMS	00000000FC87	1
80EFFAC0	MOCKUP	VMS	00000000FCD5	1

--- ARUSHA System Block (SB) 8493BC00 ---

System ID	000000004CA1	Local software type	VMS
Max message size	216	Local software vers.	V7.2
Max datagram size	576	Local software incarn.	DF4AC300
Local hardware type	ALPH		009F7570
Local hardware vers.	000000000003	SCS poller timeout	5AD3
	040400000000	SCS poller enable mask	27
Status:	00000000		

## SDA Commands SHOW CLUSTER

```
--- Path Block (PB) 80E55F80 ---  
Status: 0020 credit  
Remote sta. addr. 000000000016 Remote port type 00000010  
Remote state ENAB Number of data paths 2  
Remote hardware rev. 00000008 Cables state A-OK B-OK  
Remote func. mask ABFF0D00 Local state OPEN  
Reseting port 16 Port dev. name PNA0  
Handshake retry cnt. 2 SCS MSGBUF address 80E4C528  
Msg. buf. wait queue 80E55FB8 PDT address 80E2A180
```

```
--- Path Block (PB) 80ED0900 ---  
Status: 0020 credit  
Remote sta. addr. 0000000000DF Remote port type NI  
Remote state ENAB Number of data paths 2  
Remote hardware rev. 00000104 Cables state A-OK B-OK  
Remote func. mask 83FF0180 Local state OPEN  
Reseting port 00 Port dev. name PEA0  
Handshake retry cnt. 3 SCS MSGBUF address 80ED19A0  
Msg. buf. wait queue 80ED0938 PDT address 80EC3C70
```

```
.  
. .  
.
```

This example illustrates the output of the SHOW CLUSTER /SCS command.

## SHOW CONNECTIONS

Displays information about all active connections between System Communications Services (SCS) processes or a single connection.

### Format

```
SHOW CONNECTIONS [{/ADDRESS=cdt-address|/NODE=name|/SYSAP=name}]
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*cdt-address***

Displays information contained in the connection descriptor table (CDT) for a specific connection. You can find the **cdt-address** for any active connection on the system in the *CDT summary page* display of the SHOW CONNECTIONS command. In addition, CDT addresses are stored in many individual data structures related to SCS connections. These data structures include class driver request packets (CDRPs) and unit control blocks (UCBs) for class drivers that use SCS, and cluster system blocks (CSBs) for the connection manager.

#### **/NODE=*name***

Displays all CDTs associated with the specified remote SCS node name.

#### **/SYSAP=*name***

Displays all CDTs associated with the specified local SYSAP.

### Description

The SHOW CONNECTIONS command provides a series of displays.

The **CDT summary page** lists information regarding each connection on the local system, including the following:

- CDT address
- Name of the local process with which the CDT is associated
- Connection ID
- Current state
- Name of the remote node (if any) to which it is currently connected

The **CDT summary page** concludes with a count of CDTs that are free and available to the system.

SHOW CONNECTIONS next displays a page of detailed information for each active CDT listed previously.



## SDA Commands SHOW CONNECTIONS

### Example

SDA> SHOW CONNECTIONS

--- CDT Summary Page ---

CDT Address	Local Process	Connection ID	State	Remote Node
805E7ED0	SCS\$DIRECTORY	FF120000	listen	
805E8030	MSCP\$TAPE	FF120001	listen	
805E8190	VMS\$VMScluster	FF120002	listen	
805E82F0	MSCP\$DISK	FF120003	listen	
805E8450	SCA\$TRANSPORT	FF120004	listen	
805E85B0	MSCP\$DISK	FF150005	open	VANDQ1
805E8710	VMS\$VMScluster	FF120006	open	VANDQ1
805E8870	VMS\$VMScluster	FF120007	open	ROMRDR
805E89D0	MSCP\$DISK	FF120008	open	ROMRDR
805E8C90	VMS\$DISK_CL_DRVR	FF12000A	open	ROMRDR
805E8DF0	VMS\$DISK_CL_DRVR	FF12000B	open	VANDQ1
805E8F50	VMS\$TAPE_CL_DRVR	FF12000C	open	VANDQ1

Number of free CDT's: 188

--- Connection Descriptor Table (CDT) 80C44850 ---

```

State: 0001 listen          Local Process:      MSCP$TAPE
Blocked State: 0000

Local Con. ID  899F0003    Datagrams sent      0    Message queue      80C4488C
Remote Con. ID 00000000    Datagrams rcvd     0    Send Credit Q.    80C44894
Receive Credit 0          Datagram discard   0    PB address         00000000
Send Credit    0          Message Sends      0    PDT address        00000000
Min. Rec. Credit 0        Message Recvs     0    Error Notify      822FFCC0
Pend Rec. Credit 0        Mess Sends NoFP   0    Receive Buffer     00000000
Initial Rec. Credit 0      Mess Recvs NoFP  0    Connect Data      00000000
Rem. Sta.      000000000000  Send Data Init.   0    Aux. Structure    00000000
Rej/Disconn Reason 0      Req Data Init.    0    Fast Recvmsg Rq  00000000
Queued for BDLT 0          Bytes Sent        0    Fast Recvmsg PM  00000000
Queued Send Credit 0      Bytes rcvd        0    Change Affinity  00000000
Total bytes map 0

```

--- Connection Descriptor Table (CDT) 805E8030 ---

```

State: 0001 listen          Local Process:      MSCP$TAPE
Blocked State: 0000

Local Con. ID  FF120001    Datagrams sent      0    Message queue      805E8060
Remote Con. ID 00000000    Datagrams rcvd     0    Send Credit Q.    805E8068
Receive Credit 0          Datagram discard   0    PB address         00000000
Send Credit    0          Messages Sent      0    PDT address        00000000
Min. Rec. Credit 0        Messages Rcvd.    0    Error Notify      804540D0
Pend Rec. Credit 0        Send Data Init.   0    Receive Buffer     00000000
Initial Rec. Credit 0      Req Data Init.    0    Connect Data      00000000
Rem. Sta.      000000000000  Bytes Sent        0    Aux. Structure    00000000
Rej/Disconn Reason 0      Bytes rcvd        0
Queued for BDLT 0          Total bytes map    0
Queued Send Credit 0
.
.
.

```

This example shows the default output of the SHOW CONNECTIONS command.

---

## SHOW CPU

When analyzing a dump, displays information about the state of a CPU at the time of the system failure.

---

### Note

SHOW CPU is only valid when you are analyzing a crash dump. It is not a valid command when you are analyzing the running system, because all the CPU-specific information may not be available.

---

### Format

SHOW CPU [cpu-id]

### Parameter

#### cpu-id

Numeric value from 00 to 1F<sub>16</sub> indicating the identity of the CPU for which context information is to be displayed. If you specify a value outside this range, or you specify the **cpu-id** of a CPU that was not active at the time of the system failure, SDA displays the following message:

```
%SDA-E-CPUNOTVLD, CPU not booted or CPU number out of range
```

If you use the **cpu-id** parameter, the SHOW CPU command performs an implicit SET CPU command, making the CPU indicated by **cpu-id** the current CPU for subsequent SDA commands. (See the description of the SET CPU command and Chapter 2, Section 2.5 for information on how this can affect the CPU context—and process context—in which SDA commands execute.)

### Qualifiers

None.

### Description

The SHOW CPU command displays system failure information about the CPU specified by **cpu-id** or, by default, the SDA current CPU, as defined in Chapter 2, Section 2.5. You cannot use the SHOW CPU command when examining the running system with SDA.

The SHOW CPU command produces several displays. First, there is a brief description of the system failure and its environment that includes the following:

- Reason for the bugcheck.
- Name of the currently executing process. If no process has been scheduled on this CPU, SDA displays the following message:

```
Process currently executing: no processes currently scheduled on the processor
```

- File specification of the image executing within the current process (if there is a current process).
- Interrupt priority level (IPL) of the CPU at the time of the system failure.
- The CPU database address.

- The CPU's capability set.

Next, the **general registers** display shows the contents of the CPU's integer registers (R0 to R30), and the AI, RA, PV, FP, PC, and PS at the time of the system failure.

The **processor registers** display consists of the following parts:

- Common processor registers
- Processor-specific registers
- Stack pointers

The first part of the processor registers display includes registers common to all Alpha processors, which are used by the operating system to maintain the current process virtual address space, system space, or other system functions. This part of the display includes the following registers:

- Hardware privileged context block base register (PCBB)
- System control block base register (SCBB)
- Software interrupt summary register (SISR)
- Address space number register (ASN)
- AST summary register (ASTSR)
- AST enable register (ASTEN)
- Interrupt priority level register (IPL)
- Processor priority level register (PRBR)
- Page table base register (PTBR)
- Virtual page table base register (VPTB)
- Floating point control register (FPCR)
- Machine check error summary register (MCES)

The last part of the display includes the four stack pointers: the pointers of the kernel, executive, supervisor, and user stacks (KSP, ESP, SSP, and USP, respectively).

The SHOW CPU command concludes with a listing of the spinlocks, if any, owned by the CPU at the time of the system failure, reproducing some of the information given by the SHOW SPINLOCKS command. The spinlock display includes the following information:

- Name of the spinlock.
- Address of the spinlock data structure (SPL).
- The owning CPU's CPU ID.
- IPL of the spinlock.
- Indication of the depth of this CPU's ownership of the spinlock. A number greater than 1 indicates that this CPU has nested acquisitions of the spinlock.
- Rank of the spinlock.
- Timeout interval for spinlock acquisition (in terms of 10 milliseconds).
- Shared array (shared spinlock context block pointers)

## SDA Commands

### SHOW CPU

#### Example

```
SDA> SHOW CPU 0
CPU 00 Processor crash information
-----

CPU 00 reason for Bugcheck: CPUEXIT, Shutdown requested by another CPU

Process currently executing on this CPU:  None

Current IPL: 31 (decimal)

CPU database address: 81414000

CPUs Capabilities:  PRIMARY,QUORUM,RUN

General registers:

R0  = FFFFFFFF.81414000  R1  = FFFFFFFF.81414000  R2  = 00000000.00000000
R3  = FFFFFFFF.810AD960  R4  = 00000000.01668E90  R5  = 00000000.00000001
R6  = 66666666.66666666  R7  = 77777777.77777777  R8  = FFFFFFFF.814FB040
R9  = 99999999.99999999  R10 = FFFFFFFF.814FB0C0  R11 = BBBBBBBB.BBBBBBBB
R12 = CCCCCCCC.CCCCCCCC  R13 = FFFFFFFF.810AD960  R14 = FFFFFFFF.81414018
R15 = 00000000.00000004  R16 = 00000000.000006AC  R17 = 00000000.00000047
R18 = 00000000.00000000  R19 = 00000000.00000000  R20 = FFFFFFFF.8051A494
R21 = 00000000.00000000  R22 = 00000000.00000001  R23 = 00000000.00000010
R24 = FFFFFFFF.81414000  AI  = FFFFFFFF.81414000  RA  = FFFFFFFF.81006000
PV  = 00000001.FFFFFFFF  R28 = 00000000.00000000  FP  = FFFFFFFF.88ABDFD0
PC  = FFFFFFFF.8009C95C  PS  = 18000000.00001F04

Processor Internal Registers:

ASN  = 00000000.00000000          ASTSR/ASTEN =          00000000
IPL  =          0000001F  PCBB = 00000000.01014080  PRBR = FFFFFFFF.81414000
PTBR = 00000000.0000FFBF  SCBB = 00000000.000001E8  SISR = 00000000.00000100
VPTB = FFFFFFFEFC.00000000  FPCR = 00000000.00000000  MCES = 00000000.00000000

      KSP  = FFFFFFFF.88ABDCD8
      ESP  = FFFFFFFF.88ABF000
      SSP  = FFFFFFFF.88AB9000
      USP  = FFFFFFFF.88AB9000

      Spinlocks currently owned by CPU 00

SCS                                Address      810AF300
Owner CPU ID      00000000          IPL          00000008
Ownership Depth   00000000          Rank         0000001A
Timeout Interval  002DC6C0          Share Array   00000000
```

**This example shows the default output of the SHOW CPU command.**

---

## SHOW CRASH

Displays information about the state of the system at the time of failure. Provides a system information identifying a running system.

### Format

SHOW CRASH [/CPU=*n*]

### Parameters

None.

### Qualifier

**/CPU=*n***

Allows exception data to be displayed from CPUs other than the one considered as the crash CPU when more than one CPU crashes simultaneously.

### Description

The SHOW CRASH command has two different functions, depending on whether you use it to analyze a running system or a system failure.

When used during the analysis of a running system, the SHOW CRASH command produces a display that describes the system and the version of OpenVMS Alpha that it is running. The **system crash information** display contains the following information:

- Name and version number of the operating system
- Major and minor IDs of the operating system
- Identity of the Alpha system, including an indication of its cluster membership
- CPU ID of the primary CPU
- Address of all CPU databases

When used during the analysis of a system failure, the SHOW CRASH command produces several displays that identify the system and describe its state at the time of the failure.

If the current CPU context for SDA is not that of the processor that signaled the bugcheck, or the CPU specified with the /CPU=*n* qualifier, the SHOW CRASH command first performs an implicit SET CPU command to make that processor the current CPU for SDA. (See the description of the SET CPU command and Chapter 2, Section 2.5 for a discussion of how this can affect the CPU context—and process context—in which SDA commands execute.)

The **system crash information** display in this context provides the following information:

- Date and time of the system failure.
- Name and version number of the operating system.
- Major and minor IDs of the operating system.
- Identity of the system.

## SDA Commands

### SHOW CRASH

- CPU IDs of both the primary CPU and the CPU that initiated the bugcheck. In a uniprocessor Alpha system, these IDs are identical.
- Bitmask of the active and available CPUs in the system.
- For each active processor in the system, the name of the bugcheck that caused the system failure. Generally, there will be only one significant bugcheck in the system. All other processors typically display the following as their reason for taking a bugcheck:

CPUEXIT, Shutdown requested by another CPU

Subsequent screens of the SHOW CRASH command display information about the state of each active processor on the system at the time of the system failure. The information in these screens is identical to that produced by the SHOW CPU command, including the general-purpose registers, processor-specific registers, stack pointers, and records of spinlock ownership. The first such screen presents information about the processor that caused the failure; others follow according to the numeric order of their CPU IDs.

### Examples

#### 1. SDA> SHOW CRASH

System crash information

-----  
Time of system crash: 1-JAN-2001 00:00:00.00

Version of system: OpenVMS (TM) Alpha Operating System, Version X901-SSB

System Version Major ID/Minor ID: 3/0

VMSccluster node: VMSTS6, a

Crash CPU ID/Primary CPU ID: 00/00

Bitmask of CPUs active/available: 00000001/00000001

CPU bugcheck codes:

CPU 00 -- INVEXCEPTN, Exception while above ASTDEL

System State at Time of Exception

-----  
Exception Frame:

-----  
R2 = FFFFFFFF.810416C0 SCS\$GA\_LOCALSB+005C0  
R3 = FFFFFFFF.81007E60 EXE\$GPL\_HWRPB\_L  
R4 = FFFFFFFF.850AEB80  
R5 = FFFFFFFF.81041330 SCS\$GA\_LOCALSB+00230  
R6 = FFFFFFFF.81038868 CON\$INITLINE  
R7 = FFFFFFFF.81041330 SCS\$GA\_LOCALSB+00230  
PC = FFFFFFFF.803EF81C SYS\$TTDRIVER+0F81C  
PS = 30000000.00001F04

FFFFFFF.803EF80C: STL R24,#X0060(R5)  
FFFFFFF.803EF810: LDL R28,#X0138(R5)  
FFFFFFF.803EF814: BIC R28,R27,R28  
FFFFFFF.803EF818: 00000138  
PC => FFFFFFFF.803EF81C: HALT  
FFFFFFF.803EF820: HALT  
FFFFFFF.803EF824: BR R31,#XFF0000  
FFFFFFF.803EF828: LDL R24,#X0138(R5)  
FFFFFFF.803EF82C: BIC R24,#X40,R24

PS =>

MBZ SPAL MBZ IPL VMM MBZ CURMOD INT PRVMOD de 0 30 0000000000 1F 0 0 KERN 1 K

```
Signal Array
-----
      Length = 00000003
      Type   = 0000043C
      Arg    = FFFFFFFF.803EF81C  SYS$TTDRIVER+0F81C
      Arg    = 30000000.00001F04
%SYSTEM-F-OPCDEC, opcode reserved to Digital fault at PC=FFFFFFFF803EF81C, PS=00001F04

Saved Scratch Registers in Mechanism Array
-----
R0  = 00000000.00000000  R1  = FFFFFFFF.811998B8  R16 = 00000000.00001000
R17 = FFFFFFFF.8119B1F0  R18 = 00000000.00000010  R19 = FFFFFFFF.810194F0
R20 = 00000000.00000000  R21 = 0000000F.00000000  R22 = 00000000.00000000
R23 = 00000000.00004000  R24 = 00000000.00001000  R25 = 00000000.00000000
R26 = FFFFFFFF.81041474  R27 = 00000000.00004000  R28 = 00000000.00001000

.
.
.
(CPU-specific display omitted)
.
.
.
```

**This long display reflects the output of the SHOW CRASH command within the analysis of a system failure.**

2. SDA> SHOW CRASH

```
System crash information
-----
Time of system crash: 12-OCT-2000 11:27:58.02
Version of system: OpenVMS (TM) Alpha Operating System, Version X74B-FT2
System Version Major ID/Minor ID: 3/0
System type: DEC 3000 Model 400
Crash CPU ID/Primary CPU ID: 00/00
Bitmask of CPUs active/available: 00000001/00000001
CPU bugcheck codes:
      CPU 00 -- PGFIPLHI, Pagefault with IPL too high
System State at Time of Page Fault:
-----
Page fault for address 00000000.00046000 occurred at IPL: 8
Memory management flags: 00000000.00000001 (instruction fetch)
Exception Frame:
-----
      R2 = 00000000.00000003
      R3 = FFFFFFFF.810B9280  EXCEPTION_MON+39C80
      R4 = FFFFFFFF.81564540  PCB
      R5 = 00000000.00000088
      R6 = 00000000.000458B0
      R7 = 00000000.7FFA1FC0
      PC = 00000000.00046000
      PS = 20000000.00000803
```

## SDA Commands

### SHOW CRASH

```
00000000.00045FF0: LDQ      R2,#X0050(FP)
00000000.00045FF4: LDQ      R12,#X0058(FP)
00000000.00045FF8: LDQ      R13,#X0060(FP)
00000000.00045FFC: LDQ      R14,#X0068(FP)
PC => 00000000.00046000: BIS      R1,R17,R1
00000000.00046004: BIS      R31,#X01,R25
00000000.00046008: STQ_U    R1,#X0002(R10)
00000000.0004600C: BSR      R26,#X00738C
00000000.00046010: LDQ_U    R16,#X0002(R10)

PS =>
MBZ SPAL      MBZ      IPL VMM MBZ CURMOD INT PRVMOD de  0  20  000000000000 08  0  0  KERN  0  U
```

```
.
.
.
.
.
.
```

(CPU-specific display omitted)

**This display reflects the output of a SHOW CRASH command within the analysis of a PGFIPLHI bugcheck.**



---

## SHOW DEVICE

Displays a list of all devices in the system and their associated data structures, or displays the data structures associated with a given device or devices.

### Format

```
SHOW DEVICE [device-name | /ADDRESS=ucb-address | /CDT=cdt_address |
            /CHANNELS | /HOMEPAGE | /PDT | /UCB=ucb-address]
```

### Parameter

#### **device-name**

Device or devices for which data structures are to be displayed. There are several uses of the **device-name** parameter.

---

To Display the Structures For . . .	Action
All devices in the system	Do not specify a <b>device-name</b> (for example, SHOW DEVICE).
A single device	Specify an entire <b>device-name</b> (for example, SHOW DEVICE VTA20).
All devices of a certain type on a single controller	Specify only the device type and controller designation (for example, SHOW DEVICE RTA or SHOW DEVICE RTB).
All devices of a certain type on any controller	Specify only the device type (for example, SHOW DEVICE RT).
All devices whose names begin with a certain character or character string	Specify the character or character string (for example, SHOW DEVICE D).
All devices on a single node or HSC	Specify only the node name or HSC name (for example, SHOW DEVICE GREEN\$).
All devices with a certain allocation class	Specify the allocation class including leading and trailing \$, for example, SHOW DEVICE \$63\$.

---

### Qualifiers

#### **/ADDRESS=ucb-address**

Indicates the device for which data structure information is to be displayed by the address of its unit control block (UCB). The /ADDRESS qualifier is an alternate method of supplying a device name to the SHOW DEVICE command. If both the **device-name** parameter and the /ADDRESS qualifier appear in a single SHOW DEVICE command, SDA responds only to the parameter or qualifier that appears first.

#### **/CDT=cdt\_address**

Identifies the device by the address of its Connector Descriptor Table (CDT). This applies to cluster port devices only.

#### **/CHANNELS**

Displays information on active Memory Channel channel blocks. This qualifier is ignored for devices other than memory channel.

## SDA Commands

### SHOW DEVICE

#### **/HOMEPAGE**

Displays fields from the Memory Channel Home Page. This qualifier is ignored for devices other than memory channel.

#### **/PDT**

Displays the Memory Channel Port Descriptor Table. This qualifier is ignored for devices other than memory channel.

#### **/UCB=ucb-address**

This is a synonym for /ADDRESS=ucb-address as described above.

## Description

The SHOW DEVICE command produces several displays taken from system data structures that describe the devices in the system configuration.

If you use the SHOW DEVICE command to display information for more than one device or one or more controllers, it initially produces the **DDB (device data block) list** to provide a brief summary of the devices for which it renders information in subsequent screens.

Information in the **DDB list** appears in five columns, the contents of which are as follows:

- Address of the device data block (DDB)
- Controller name
- Name of the ancillary control process (ACP) associated with the device
- Name of the device driver
- Address of the driver prologue table (DPT)

The SHOW DEVICE command then produces a display of information pertinent to the device controller. This display includes information gathered from the following structures:

- Device data block (DDB)
- Primary channel request block (CRB)
- Interrupt dispatch block (IDB)
- Driver dispatch table (DDT)

If the controller is an HSC controller, SHOW DEVICE also displays information from its system block (SB) and each path block (PB).

Many of these structures contain pointers to other structures and driver routines. Most notably, the DDT display points to various routines located within driver code, such as the start I/O routine, unit initialization routine, and cancel I/O routine.

For each device unit subject to the SHOW DEVICE command, SDA displays information taken from its unit control block, including a list of all I/O request packets (IRPs) in its I/O request queue. For certain mass storage devices, SHOW DEVICE also displays information from the primary class driver data block (CDDDB), the volume control block (VCB), and the ACP queue block (AQB). For units that are part of a shadow set, SDA displays a summary of shadow set membership.

As it displays information for a given device unit, SHOW DEVICE defines the following symbols as appropriate:

Symbol	Meaning
UCB	Address of unit control block
SB	Address of system block
ORB	Address of object rights block
DDB	Address of device data block
DDT	Address of driver dispatch table
CRB	Address of channel request block
AMB	Associated mailbox UCB pointer
IRP	Address of I/O request packet
2P_UCB	Address of alternate UCB for dual-pathed device
LNM	Address of logical name block for mailbox
PDT	Address of port descriptor table
CDDB	Address of class driver descriptor block for MSCP served device
2P_CDDB	Address of alternate CDDB for MSCP served device
RWAITCNT	Resource wait count for MSCP served device
VCB	Address of volume control block for mounted device

If you are examining a driver-related system failure, you may find it helpful to issue a SHOW STACK command after the appropriate SHOW DEVICE command, to examine the stack for any of these symbols. Note, however, that although the SHOW DEVICE command defines those symbols relevant to the last device unit it has displayed, and redefines symbols relevant to any subsequently displayed device unit, it does not undefine symbols. (For instance, SHOW DEVICE DUA0 defines the symbol PDT, but SHOW DEVICE MBA0 does not undefine it, even though the PDT structure is not associated with a mailbox device.) To maintain the accuracy of such symbols that appear in the stack listing, use the DEFINE command to modify the symbol name. For example:

```
SDA> DEFINE DUA0_PDT PDT
SDA> DEFINE MBA0_UCB UCB
```

See the descriptions of the READ and FORMAT commands for additional information on defining and examining the contents of device data structures.

## Examples

- ```
SDA> SHOW DEVICE/ADDRESS=8041E540
OPA0                                VT300_Series      UCB address      8041E540

Device status:  00000010 online
Characteristics: 0C040007 rec,ccl,trm,avl,idv,odv
                00000200 nnm
```

## SDA Commands

### SHOW DEVICE

```

Owner UIC [000001 ,000004] Operation count      160   ORB address   8041E4E8
      PID      00010008 Error count          0     DDB address   8041E3F8
Class/Type      42/70 Reference count        2     DDT address   8041E438
Def. buf. size   80   BOFF      00000001   CRB address   8041E740
DEVDEPEND      180093A0 Byte count     0000012C   I/O wait queue 8041E5AC
DEVDEPN2       FB101000 SVAPTE      80537B80
DEVDEPN3       00000000 DEVSTS      00000001
FLCK index      3A
DLCK address    8041E880

```

\*\*\* I/O request queue is empty \*\*\*

This example reproduces the SHOW DEVICE display for a single device unit, OPA0. Whereas this display lists information from the UCB for OPA0, including some addresses of key data structures and a list of pending I/O requests for the unit, it does not display information about the controller or its device driver. To display the latter information, specify the **device-name** as OPA (for example, SHOW DEVICE OPA).

2. SDA> SHOW DEVICE DU  
I/O data structures

```

-----
                          DDB list
                          -----
Address  Controller  ACP  Driver  DPT
-----  -
80D0B3C0  BLUES$DUA  F11XQP  SYS$DKDRIVER  807735B0
8000B2B8  RED$DUA    F11XQP  SYS$DKDRIVER  807735B0
80D08BA0  BIGTOP$DUA F11XQP  SYS$DKDRIVER  807735B0
80D08AE0  TIMEIN$DUA F11XQP  SYS$DKDRIVER  807735B0
.
.
.
Press RETURN for more.
.
.
.

```

This excerpt from the output of the SHOW DEVICE DU command illustrates the format of the **DDB list**. In this case, the **DDB list** concerns itself with those devices whose device type begins with DU. It displays devices of these types attached to various HSCs (RED\$ and BLUES\$) and systems in a cluster (BIGTOP\$ and TIMEIN\$).

---

## SHOW DUMP

Displays formatted information from the header, error log buffers, logical memory blocks (LMBs), memory map, compression data, and a summary of the dump. Also displays hexadecimal information of individual blocks.

### Format

```
SHOW DUMP {/ALL | /BLOCK[=m{: | ;}n]  
| [/COMPRESSION_MAP[=m:n]] | /ERROR_LOGS | /HEADER  
| /LMB[={ALL | n}] | /SUMMARY  
| /MEMORY_MAP}}
```

### Parameters

None.

### Qualifiers

#### **/ALL**

Displays the equivalent to specifying all the /SUMMARY, /HEADER, /ERROR\_LOGS, /COMPRESSION\_MAP, /LMB=ALL, and /MEMORY\_MAP qualifiers.

#### **/BLOCK[=*m*{: | ;}*n*]**

Displays a hexadecimal dump of one or more blocks. You can specify ranges by using the following syntax:

|                 |                                                                                    |
|-----------------|------------------------------------------------------------------------------------|
| <i>no value</i> | Displays next block                                                                |
| <i>m</i>        | Displays single block                                                              |
| <i>m:n</i>      | Displays a range of blocks from <i>m</i> to <i>n</i> , inclusive                   |
| <i>m;n</i>      | Displays a range of blocks starting at <i>m</i> and continuing for <i>n</i> blocks |

#### **/COMPRESSION\_MAP[=*m*:*n*]**

In a compressed dump, displays details of the compression data. You can specify levels of detail by using the following syntax:

|                 |                                                     |
|-----------------|-----------------------------------------------------|
| <i>no value</i> | Displays a summary of all compression map blocks    |
| <i>m</i>        | Displays contents of a single compression map block |
| <i>m:n</i>      | Displays details of single compression map entry    |

#### **/ERROR\_LOGS**

Displays a summary of the error log buffers.

#### **/HEADER**

Displays the formatted contents of the dump header.

#### **/LMB[={ALL | *n*}]**

In a selective dump, displays the formatted contents of logical memory block (LMB) headers and the virtual address (VA) ranges within the LMB. LMBs to be displayed can be expressed by using the following syntax:

|                 |                   |
|-----------------|-------------------|
| <i>no value</i> | Displays next LMB |
|-----------------|-------------------|

## SDA Commands

### SHOW DUMP

*n* Displays LMB at block *n* of the dump  
 ALL Displays all LMBs

#### /MEMORY\_MAP

In a full dump, displays the contents of the memory map.

#### /SUMMARY

Displays a summary of the dump. This is the default.

## Description

The SHOW DUMP command displays information about the structure of the dump file. It displays the header, the error log buffers, and, if appropriate, the compression map, the logical memory block (LMB) headers and/or the memory map. Use this command when troubleshooting dump analysis problems.

## Examples

1. SDA> SHOW DUMP/SUMMARY

```
Summary of dump file DKA300:[SYS0.SYSEXE]SYSDUMP.DMP;8
```

```
-----
Dump type:                Compressed selective
Size of dump file:        000203A0/000203A0 (132000./132000.)
Highest VBN written:      0000D407 (54279.)
Uncompressed equivalent:  0001AF1C (110364.)
Compression ratio:        2.03:1 (49.2%)
```

| Dump file section                                | VBN      | Blocks   | Uncomp VBN | Uncomp blocks |
|--------------------------------------------------|----------|----------|------------|---------------|
| Dump header                                      | 00000001 | 00000002 |            |               |
| Error log buffers                                | 00000003 | 00000020 |            |               |
| Compression map                                  | 00000023 | 00000010 |            |               |
| LMB 0000 (PT space)                              | 00000033 | 00000038 | 00000033   | 000000D2      |
| LMB 0001 (S0/S1 space)                           | 0000006B | 0000621B | 00000105   | 000095A5      |
| LMB 0002 (S2 space)                              | 00006286 | 000001A3 | 000096AA   | 00000352      |
| LMB 0003 (Page tables of key process "SYSTEM")   | 00006429 | 00000005 | 000099FC   | 00000062      |
| LMB 0004 (Memory of key process "SYSTEM")        | 0000642E | 00000071 | 00009A5E   | 00000342      |
| .                                                |          |          |            |               |
| .                                                |          |          |            |               |
| .                                                |          |          |            |               |
| LMB 0003 (Page tables of key process "NETACP")   | 0000697B | 00000009 | 0000AE14   | 00000052      |
| LMB 0004 (Memory of key process "NETACP")        | 00006984 | 000013F7 | 0000AE66   | 00001F42      |
| LMB 0005 (Key global pages)                      | 00007D7B | 000002BA | 0000CDA8   | 00000312      |
| LMB 0006 (Page tables of process "DTWM")         | 00008035 | 00000013 | 0000D0BA   | 00000082      |
| LMB 0007 (Memory of process "DTWM")              | 00008048 | 000013A3 | 0000D13C   | 000022E4      |
| .                                                |          |          |            |               |
| .                                                |          |          |            |               |
| .                                                |          |          |            |               |
| LMB 0006 (Page tables of process "Milord_FTAL:") | 0000C5E3 | 00000005 | 00019A44   | 00000062      |
| LMB 0007 (Memory of process "Milord_FTAL:")      | 0000C5E8 | 00000074 | 00019AA6   | 00000222      |
| LMB 0008 (Remaining global pages)                | 0000C65C | 00000DAC | 00019CC8   | 00001255      |

This example of the SHOW DUMP/SUMMARY command gives a summary of a selective dump.

## SDA Commands SHOW DUMP

2. SDA> SHOW DUMP/HEADER

Dump header

-----

| Header field          | Meaning                                         | Value                     |
|-----------------------|-------------------------------------------------|---------------------------|
| -----                 |                                                 |                           |
| DMP\$W_FLAGS          | Flags                                           | 0FC1                      |
|                       | DMP\$V_OLDDUMP: Dump has been analyzed          |                           |
|                       | DMP\$V_WRITECOMP: Dump write was completed      |                           |
|                       | DMP\$V_ERRLOGCOMP: Error log buffers written    |                           |
|                       | DMP\$V_DUMP_STYLE: Selective dump               |                           |
|                       | Verbose messages                                |                           |
|                       | Dump off system disk                            |                           |
|                       | Compressed                                      |                           |
| DMP\$B_FLAGS2         | Additional flags                                | 09                        |
|                       | DMP\$V_COMPRESSED: Dump is compressed           |                           |
|                       | DMP\$V_ALPHADUMP: This is an OpenVMS Alpha dump |                           |
| DMP\$Q_SYSIDENT       | System version                                  | "X69G-FT1"                |
| DMP\$Q_LINKTIME       | Base image link date/time                       | " 8-JUN-1996 02:07:27.31" |
| DMP\$L_SYSVER         | Base image version                              | 03000000                  |
| DMP\$W_DUMPVER        | Dump version                                    | 0704                      |
| DMP\$L_DUMPBLOCKCNT   | Count of blocks dumped for memory               | 0000D3D5                  |
| DMP\$L_NOCOMPBLOCKCNT | Uncompressed blocks dumped for memory           | 0001AEEA                  |
| DMP\$L_SAVEPRCNT      | Number of processes saved                       | 00000014                  |
| .                     |                                                 |                           |
| .                     |                                                 |                           |
| .                     |                                                 |                           |
| EMB\$Q_CR_TIME        | Crash date/time                                 | " 3-JUL-1996 09:30:13.36" |
| EMB\$L_CR_CODE        | Bugcheck code                                   | "SSRVEXCEPT"              |
| EMB\$B_CR_SCS_NAME    | Node name                                       | "SWPCTX "                 |
| EMB\$T_CR_HW_NAME     | Model name                                      | "DEC 3000 Model 400"      |
| EMB\$T_CR_LNAME       | Process name                                    | "SYSTEM"                  |
| DMP\$L_CHECKSUM       | Dump header checksum                            | 439E5E91                  |

**This example of the SHOW DUMP/HEADER command shows the information in the header.**

## SHOW EXECUTIVE

Displays the location and size of each loadable image that makes up the executive.

### Format

SHOW EXECUTIVE [execlet-name|/SUMMARY]

### Parameter

#### **execlet-name**

Displays only the data for the specified loadable image. You can use wildcards in **execlet-name**, in which case SDA displays data for all matching loadable images. The default action is for SDA to display data for all loadable images.

### Qualifier

#### **/SUMMARY**

Displays a single line of output for all loadable images.

### Description

The executive consists of two base images and a number of other executive images.

The base image called SYSS\$BASE\_IMAGE.EXE contains:

- Symbol vectors for universal executive routines and data cells
- Procedure descriptors for universal executive routines
- Globally referenced data cells

The base image called SYSS\$PUBLIC\_VECTORS.EXE contains:

- Symbol vectors for system service procedures
- Procedure descriptors for system services
- Transfer routines for system services

The base images are the pathways to routines and system service procedures in the other executive images.

The SHOW EXECUTIVE command lists the location and size of each executive image. It can enable you to determine whether a given memory address falls within the range occupied by a particular image. (Table 4-1 describes the contents of each executive image.)

SHOW EXECUTIVE also displays the base address and length for each nonzero length image section.

On OpenVMS Alpha the execlets may be sliced. This means each different image section can be relocated in system memory so that they are no longer contiguous. The SHOW EXECUTIVE display contains information on where each image section resides.

The difference between a sliced image and a non-sliced image in the display is that the base, the end, and the length of a sliced image are blank. Only the image section base, end, and length are valid.



There are six different image section types: non-paged read only, non-paged read-write, paged read only, paged read-write, init and fixup. Only the image sections loaded into system memory are displayed.

The MAP command makes it easier to find out in which executable an address resides. See the description of the MAP command for details.

By default, SDA displays each location within an executive image as an offset from the beginning of the image, for instance, EXCEPTION+00282. Similarly, those symbols that represent system services point to the transfer routine in SYS\$PUBLIC\_VECTORS.EXE and not to the actual system service procedure. When tracing the course of a system failure through the listings of modules contained within a given executive image, you may find it useful to load into the SDA symbol table all global symbols and global entry points defined within one or all executive images. See the description of the READ command for additional information.

The SHOW EXECUTIVE command usually shows all components of the executive, as illustrated in the following example. In rare circumstances, you may obtain a partial listing. For instance, once it has loaded the EXCEPTION module (in the INIT phase of system initialization), the system can successfully post a bugcheck exception and save a crash dump before loading all the executive images that are normally loaded.

## Examples

1. SDA> SHOW EXECUTIVE  
VMS Executive layout

```
-----
Image                               Base      End      Length  SymVec
-----
SYS$WSDRIVER                         A21B2000 A21BA000 00008000
  Nonpaged read only                 A21B2000 A21B3600 00001600
  Nonpaged read/write                A21B6000 A21B6800 00000800
  Linked 5-APR-1998 12:08             LDRIMG 80DA0700 --< not sliced >--
SYS$LTDRIVER                         A217A000 A21B2000 00038000
  Nonpaged read only                 A217A000 A21A8800 0002E800
  Nonpaged read/write                A21AA000 A21AEA00 00004A00
  Linked 4-APR-1998 22:42             LDRIMG 80D8F600 --< not sliced >--
LAT$RATING                           A2172000 A217A000 00008000
  Nonpaged read only                 A2172000 A2172600 00000600
  Nonpaged read/write                A2176000 A2176600 00000600
  Linked 4-APR-1998 22:45             LDRIMG 80D8F740 --< not sliced >--
SYS$RTTDRIVER                       A216A000 A2172000 00008000
  Nonpaged read only                 A216A000 A216D600 00003600
  Nonpaged read/write                A216E000 A216EA00 00000A00
  Linked 4-APR-1998 22:56             LDRIMG 80D86C80 --< not sliced >--
.
.
.
.
SYS$OPDRIVER                         80022000 80025800 00003800
  Nonpaged read only                 9E92F000 9E92FA00 00000A00
  Nonpaged read/write                LDRIMG 80C1E8C0 --< sliced >--
  Linked 4-APR-1998 22:42
```

## SDA Commands

### SHOW EXECUTIVE

```

SYS$CNBTDRIVER
  Nonpaged read only      80020000 80021000 00001000
  Nonpaged read/write    9E92EC00 9E92F000 00000400
  Linked 4-APR-1998 22:35  LDRIMG 80C1D7C0 --< sliced >--

SYS$CPU_ROUTINES_1605
  Nonpaged read only      8000E000 8001EE00 00010E00
  Nonpaged read/write    9E92AA00 9E92EC00 00004200
  Linked 8-APR-1998 10:04  LDRIMG 80C1DB80 --< sliced >--

SYS$BASE_IMAGE
  Nonpaged read only      80002000 8000D000 0000B000
  Nonpaged read/write    9E905C00 9E92AA00 00024E00
  Linked 6-APR-1998 16:00  LDRIMG 80C1DA40 --< sliced >--
                                     9E916320

SYS$PUBLIC_VECTORS
  Nonpaged read only      80000000 80002000 00002000
  Nonpaged read/write    9E900000 9E905C00 00005C00
  Linked 4-APR-1998 22:22  LDRIMG 80C1D900 --< sliced >--
                                     9E903CB8

```

The SHOW EXECUTIVE command displays the location and length of executive images.

- SDA> SHOW EXECUTIVE SYS\$GAL\*

```

VMS Executive layout
-----
Image              Base      End      Length  SymVec
-----
SYS$GALAXY
  Nonpaged read only  A1A62000 A1A8A000 00028000
  Nonpaged read/write A1A62000 A1A83600 00021600
  Nonpaged read/write A1A86000 A1A89A00 00003A00
  Linked 4-APR-1998 22:43  LDRIMG 80CCA280 --< not sliced >--

```

This example displays the use of the wildcard with the SHOW EXECUTIVE command.

## SDA Commands SHOW EXECUTIVE

3. SDA> SHOW EXECUTIVE/SUMMARY

VMS Executive layout summary

```
-----
Image                               LDRIMG   Base      End      Length  SymVec
-----
SYS$MADDRIVER                       80D2A900 83848000 83860000 00018000
SYS$DADDRIVER                       80E00C80 83838000 83848000 00010000
SYS$LASTDRIVER                      80E3C600 8381C000 83838000 0001C000
SYS$LTDRIVER                        80E305C0 837E4000 8381C000 00038000
LAT$RATING                          80E35500 837DC000 837E4000 00008000
SYS$RTTDRIVER                       80DCDF00 837D4000 837DC000 00008000
SYS$CTDRIVER                        80D7BFC0 837C4000 837D4000 00010000
NDDRIVER                            80D86000 8377A000 83782000 00008000
SYS$FTDRIVER                        80DD4280 83772000 8377A000 00008000
.
.
.
.
.
SYSTEM_PRIMITIVES                   80D13580      --< sliced >--
SYSTEM_DEBUG                        80D12840 82FA4000 82FF4000 00050000
SYS$OPDRIVER                        80D11B00      --< sliced >--
SYS$ESBTDRIVER                      80D10DC0      --< sliced >--
SYS$NISCA_BTDRIVER                  80D10080      --< sliced >--
SYS$CNBTDRIVER                      80D0EF80      --< sliced >--
SYS$CPU_ROUTINES_0402              80D0F340      --< sliced >--
SYS$BASE_IMAGE                      80D0F200      --< sliced >--          80C16300
SYS$PUBLIC_VECTORS                  80D0F0C0      --< sliced >--          80C03C78
-----
```

This example displays the list of executive images, giving base, end, and length information for those that are not sliced.

## SDA Commands

### SHOW GALAXY

---

## SHOW GALAXY

Displays a brief one-page summary of the state of the Galaxy and all the instances in the Galaxy.

### Format

SHOW GALAXY

### Parameters

None.

### Qualifiers

None.

### Example

```
SDA> SHOW GALAXY
```

```
Galaxy summary
```

```
-----  
  GMDB address      Creator node ID  Revision      Creation time      State  
-----  
FFFFFFFF.7F234000      00000001         1.0      31-MAR-1999 13:15:08.08      OPERATIONAL  
  
Node ID      NODEB address      Name      Version      Join time      State  
-----  
00000000      FFFFFFFF.7F236000      ANDA1A      1.0      31-MAR-1999 14:11:09.08      MEMBER (current instance)  
00000001      FFFFFFFF.7F236200      ANDA2A      1.0      31-MAR-1999 14:10:49.06      MEMBER  
00000002      FFFFFFFF.7F236400      ANDA3A      1.0      31-MAR-1999 14:13:26.16      MEMBER  
00000003      FFFFFFFF.7F236600      - Node block is empty -
```

---

## SHOW GCT

Displays the contents of the Galaxy configuration tree either in summary (hierarchical) or in detail, node by node.

### Format

```
SHOW GCT [/ADDRESS=n] [/ALL] [/CHILDREN] |
          |[/HANDLE=n] [/OWNER=n] [/SUMMARY (default)] |[/TYPE=n]
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*n***

Provides a detailed display of the Galaxy configuration tree (GCT) node at the given address.

#### **/ALL**

Provides a detailed display of all nodes in the tree.

#### **/CHILDREN**

When used with /ADDRESS=*n* or /HANDLE=*n*, the /CHILDREN qualifier causes SDA to display all nodes in the configuration tree that are children of the specified node.

#### **/HANDLE=*n***

Provides a detailed display of the Galaxy configuration tree (GCT) node with the given handle.

#### **/OWNER=*n***

Provides a detailed display of all nodes in the tree currently owned by the node with the given handle.

#### **/SUMMARY**

Provides a summary display of the Galaxy configuration tree (GCT) in hierarchical form. This qualifier is the default.

#### **/TYPE=*type***

Provides a detailed display of all nodes in the tree of the given type, which can be one of the following:

|                |             |                  |               |
|----------------|-------------|------------------|---------------|
| BUS            | CAB         | COMMUNITY        | CPU           |
| CPU_MODULE     | EXP_CHASSIS | FRU_DESC         | FRU_ROOT      |
| HARD_PARTITION | HOSE        | HW_ROOT          | IO_CTRL       |
| IOP            | MEMORY_CTRL | MEMORY_DESC      | MEMORY_SUB    |
| PARTITION      | POWER_ENVIR | PSEUDO           | RISER         |
| ROOT           | SBB         | SLOT             | SMB           |
| SW_ROOT        | SYS_CHASSIS | SYS_INTER_SWITCH | TEMPLATE_ROOT |

# SDA Commands

## SHOW GCT

The type given may be an exact match, in which case just that type is displayed (for example, a CPU); or a partial match, in which case all matching types are displayed (for example, /TYPE=CP displays both CPU and CPU\_MODULE nodes).

### Examples

1. SDA> SHOW GCT

Galaxy Configuration Tree summary

Base address of Config Tree: FFFFFFFF.83694040 (2 pages)

| Handle   | Hierarchy      | Id                | Initial Owner | Current Owner | Name/Min PA/<br>Base PA       | OS type/Max PA/<br>Size (bytes) | Flags                |
|----------|----------------|-------------------|---------------|---------------|-------------------------------|---------------------------------|----------------------|
| 00000000 | Root           | 00000000.00000000 |               |               | 414C4147-5958-0030-0000-..... |                                 |                      |
| 00000240 | _HW_Root       | 00000000.00000000 |               |               |                               |                                 |                      |
| 00000280 | _IOP           | 00000000.00000006 | 00001800      |               | 000000A0.00000000             | 000000AF.FFFFFFFF               |                      |
| 00000300 | _IOP           | 00000000.00000007 | 00001700      |               | 000000B0.00000000             | 000000BF.FFFFFFFF               |                      |
| 00000380 | _IOP           | 00000000.00000008 | 00001600      |               | 000000C0.00000000             | 000000CF.FFFFFFFF               |                      |
| 00000400 | _CPU_Module    | 00000000.00000000 | 00001580      |               |                               |                                 |                      |
| 00000440 | _CPU           | 00000000.09000000 | 00001600      |               |                               |                                 | Primary              |
| 00000480 | _CPU           | 00000000.1B000001 | 00001600      | 00001800      |                               |                                 |                      |
| 000004C0 | _CPU_Module    | 00000000.00000001 | 00001580      |               |                               |                                 |                      |
| 00000500 | _CPU           | 00000000.1B000002 | 00001600      | 00001800      |                               |                                 |                      |
| 00000540 | _CPU           | 00000000.10000003 | 00001600      | 00001700      |                               |                                 |                      |
| 00000580 | _CPU_Module    | 00000000.00000002 | 00001580      |               |                               |                                 |                      |
| 000005C0 | _CPU           | 00000000.07000004 | 00001700      |               |                               |                                 | Primary              |
| 00000600 | _CPU           | 00000000.0A000005 | 00001700      | 00001800      |                               |                                 |                      |
| 00000640 | _CPU_Module    | 00000000.00000003 | 00001580      |               |                               |                                 |                      |
| 00000680 | _CPU           | 00000000.07000006 | 00001800      |               |                               |                                 | Primary              |
| 000006C0 | _CPU           | 00000000.0C000007 | 00001800      | 00001600      |                               |                                 |                      |
| 00000700 | _Memory_Sub    | 00000000.00000000 | 00001580      |               | 00000000.00000000             | 00000000.FFFFFFFF               |                      |
| 00000780 | _Memory_Ctrl   | 00000000.00000005 | 00001600      |               |                               |                                 |                      |
| 000007C0 | _Memory_Desc   | 00000000.00000000 | 00001600      |               | 00000000.00000000             | 00000000.40000000               |                      |
|          | _Fragment      |                   | 00001600      |               | 00000000.00000000             | 00000000.00200000               | Console Private Base |
|          | _Fragment      |                   | 00001600      |               | 00000000.00200000             | 00000000.3FD7E000               | Private Base         |
|          | _Fragment      |                   | 00001600      |               | 00000000.3FF7E000             | 00000000.00082000               | Console Private Base |
| 00000A40 | _Memory_Desc   | 00000000.40000000 | 00001700      |               | 00000000.40000000             | 00000000.40000000               |                      |
|          | _Fragment      |                   | 00001700      |               | 00000000.40000000             | 00000000.00200000               | Console Private Base |
|          | _Fragment      |                   | 00001700      |               | 00000000.40200000             | 00000000.3FD7E000               | Private Base         |
|          | _Fragment      |                   | 00001700      |               | 00000000.7FF7E000             | 00000000.00082000               | Console Private Base |
| 00000CC0 | _Memory_Desc   | 00000000.80000000 | 00001800      |               | 00000000.80000000             | 00000000.40000000               |                      |
|          | _Fragment      |                   | 00001800      |               | 00000000.80000000             | 00000000.00200000               | Console Private Base |
|          | _Fragment      |                   | 00001800      |               | 00000000.80200000             | 00000000.3FD7E000               | Private Base         |
|          | _Fragment      |                   | 00001800      |               | 00000000.BFF7E000             | 00000000.00082000               | Console Private Base |
| 00000F40 | _Memory_Desc   | 00000000.C0000000 | 00001580      |               | 00000000.C0000000             | 00000000.40000000               |                      |
|          | _Fragment      |                   | 00001580      |               | 00000000.C0000000             | 00000000.40000000               | Shared               |
| 000011C0 | _SW_Root       | 00000000.00000000 |               |               |                               |                                 |                      |
| 00001580 | _Community     | 00000000.00000000 | 000011C0      |               |                               |                                 |                      |
| 00001600 | _Partition     | 00000000.00000000 | 00001580      |               | ANDA1A                        | OpenVMS Alpha                   |                      |
| 00001700 | _Partition     | 00000000.00000001 | 00001580      |               | ANDA2A                        | OpenVMS Alpha                   |                      |
| 00001800 | _Partition     | 00000000.00000002 | 00001580      |               | ANDA3A                        | OpenVMS Alpha                   |                      |
| 00001200 | _Template_Root | 00000000.00000000 |               |               |                               |                                 |                      |
| 00001240 | _IOP           | 00000000.00000000 |               |               |                               |                                 |                      |
| 000012C0 | _CPU           | 00000000.00000000 |               |               |                               |                                 |                      |
| 00001300 | _Memory_Desc   | 00000000.00000000 |               |               |                               | 00000000.02000000               |                      |

VM-0770A-AI

This command shows the summary (hierarchical) display of the configuration tree.

2. SDA> SHOW GCT/HANDLE=00000700

Galaxy Configuration Tree

```
-----
Handle:                00000700  Address:  FFFFFFFF.83694740
Node type:             Memory_Sub  Size:     0080
Id:                   00000000.00000000  Flags:    00000000.00000001  Hardware
```

Related nodes:

| Node relationship     | Handle   | Type        | Id                |
|-----------------------|----------|-------------|-------------------|
| Initial owner         | 00001580 | Community   | 00000000.00000000 |
| Current owner         | -<Same>- |             |                   |
| Parent                | 00000240 | HW_Root     | 00000000.00000000 |
| Previous sibling      | 00000640 | CPU_Module  | 00000000.00000003 |
| Next sibling          | -<None>- |             |                   |
| Child                 | 00000780 | Memory_Ctrl | 00000000.00000005 |
| Configuration binding | 00000240 | HW_Root     | 00000000.00000000 |
| Affinity binding      | 00000240 | HW_Root     | 00000000.00000000 |

```
Min. physical address: 00000000.00000000
Max. physical address: 00000000.FFFFFFFF
```

**This command shows the detailed display of the specified node.**

## SDA Commands

### SHOW GLOBAL\_SECTION\_TABLE, SHOW GST

---

## SHOW GLOBAL\_SECTION\_TABLE, SHOW GST

Displays information contained in the global section table.

### Format

SHOW GLOBAL\_SECTION\_TABLE or SHOW GST [/SECTION\_INDEX=*n*]

### Parameters

None.

### Qualifiers

**/SECTION\_INDEX=*n***

Displays only the global section table entry for the specified section.

### Description

Displays the entire contents of the global section table, unless you specify the qualifier /SECTION\_INDEX. This command is equivalent to SHOW PROCESS/PROCESS\_SECTION\_TABLE/SYSTEM. See the SHOW PROCESS command and Table 4-18 for more information.



# SDA Commands

## SHOW GLOBAL\_SECTION\_TABLE, SHOW GST

### Example

SDA> SHOW GST

Global Section Table

Global section table information

```

Last entry allocated 00000210
First free entry    00000000
  
```

Global section table

| Index    | Address  | Sect/GPTE Addr    | Pagelets | Window   | VEN      | CCB/GSD  | Refcnt   | Flink | Blink | Flags                                                                                                                           |
|----------|----------|-------------------|----------|----------|----------|----------|----------|-------|-------|---------------------------------------------------------------------------------------------------------------------------------|
| 00000001 | 81409FD8 | FFFFFFFF.839E8000 | 00000025 | 81419B40 | 00000003 | 00000000 | 00000003 | 0000  | 0000  | AMOD=KRNL                                                                                                                       |
| 00000002 | 81409FB0 | FFFFFFFF.83A10000 | 00000063 | 81419D40 | 00000208 | 00000000 | 00000007 | 0000  | 0000  | AMOD=KRNL                                                                                                                       |
| 00000003 | 81409F88 | FFFFFFFE.0A004010 | 0000000C | 814DED00 | 00000004 | 826B2DD0 | 00000000 | 0003  | 0003  | WRTMOD=EXEC AMOD=USER PERM<br>SYSGBL<br>Name = INS\$826B2D50_002<br>File = DISK\$X901_K5L:[VMS\$COMMON.SYSLIB]SYSS\$SISHR.EXE;1 |
| 00000004 | 81409F60 | FFFFFFFF.83A44000 | 00000011 | 81432F80 | 00000022 | 00000000 | 00000002 | 0000  | 0000  | AMOD=KRNL                                                                                                                       |
| 00000005 | 81409F38 | FFFFFFFE.0A004028 | 00000026 | 814DF080 | 00000018 | 826B3320 | 00000003 | 0005  | 0005  | WRTMOD=EXEC AMOD=USER PERM<br>SYSGBL<br>Name = INS\$826B32A0_006<br>File = DISK\$X901_K5L:[VMS\$COMMON.SYSLIB]DISMNTSHR.EXE;1   |
| 00000006 | 81409F10 | FFFFFFFF.83A5E000 | 000000B4 | 8144E480 | 00000003 | 00000000 | 0000000C | 0000  | 0000  | AMOD=KRNL                                                                                                                       |
| 00000007 | 81409EE8 | FFFFFFFF.83A76000 | 00000038 | 8144E480 | 000000B7 | 00000000 | 00000001 | 0000  | 0000  | CRF WRT AMOD=KRNL                                                                                                               |
| 00000008 | 81409EC0 | FFFFFFFE.0A004050 | 0000007A | 814DF280 | 00000004 | 826B37A0 | 00000008 | 0008  | 0008  | WRTMOD=EXEC AMOD=USER PERM<br>SYSGBL<br>Name = INS\$826B36B0_002<br>File = DISK\$X901_K5L:[VMS\$COMMON.SYSLIB]DTI\$SHARE.EXE;1  |
| 00000009 | 81409E98 | FFFFFFFE.0A0040A0 | 00000001 | 814DF280 | 00000091 | 826B37F0 | 00000001 | 0009  | 0009  | WRTMOD=EXEC AMOD=USER PERM<br>SYSGBL<br>Name = INS\$826B36B0_005<br>File = DISK\$X901_K5L:[VMS\$COMMON.SYSLIB]DTI\$SHARE.EXE;1  |
| 0000000A | 81409E70 | FFFFFFFE.0A0040B8 | 00000010 | 00000000 | 00000000 | 826B40F0 | 00000001 | 000A  | 000A  | DZRO WRTMOD=EXEC AMOD=USER PERM<br>SYSGBL PAGFIL<br>Name = INS\$826B36B0_001                                                    |

.  
.

VM-0750A-AI

---

## SHOW GLOCK

Displays the Galaxy locks for the Galaxy Management Database (GMDB), process tables, and/or system tables.

### Format

```
SHOW GLOCK  [/BRIEF]
             [/GMDB_TABLE]
             [/PROCESS_TABLE [=n]]
             [/SYSTEM_TABLE [=n]]
             [/ALL]
             [/ADDRESS=n [/PHYSICAL]]
             [/HANDLE=n [/LINKED]]
```

### Parameters

None.

### Qualifiers

#### **/BRIEF**

Displays a single line for each Galaxy lock, regardless of any other qualifiers.

#### **/GMDB\_TABLE**

Displays the Galaxy lock table for the Galaxy Management Database (GMDB) including the embedded and attached Galaxy locks.

#### **/PROCESS\_TABLE [=n]**

Displays all the process Galaxy lock tables with the embedded and attached Galaxy locks, as well as a summary table. The `/PROCESS_TABLE=n` qualifier displays the single Galaxy lock table without a summary page.

#### **/SYSTEM\_TABLE [=n]**

Displays all the system Galaxy lock tables with the embedded and attached Galaxy locks, as well as a summary table. The `/SYSTEM_TABLE=n` qualifier displays the single Galaxy lock table without a summary page.

#### **/ALL**

Displays information provided by the `/GMDB_TABLE`, `/PROCESS_TABLE`, and `/SYSTEM_TABLE` qualifiers. The `/ALL` qualifier also displays information from the base GMDB Galaxy lock.

#### **/ADDRESS=n [/PHYSICAL]**

Displays the single Galaxy lock at address *n*. Because process Galaxy locks are located by their physical address, you must use the `/PHYSICAL` qualifier to enter such an address.

#### **/HANDLE=n [/LINKED]**

Displays the single Galaxy lock whose handle is *n*. The optional qualifier `/LINKED` causes SDA to display all Galaxy locks linked to the one specified.

## Examples

1. SDA> SHOW GLOCK

Galaxy Lock Database

-----

```

Base address of GLock segment of GMDB:  FFFFFFFF.7F238000
Length:                                00000000.00082000

  Nodes:                                00000000.00000007  Flags:                00000000.00000000
Process tables:                          00000000.00000400  System tables:       00000000.00000400
  First free:                             00000002                00000001
  First used:                              00000001                00000000

Embedded GLocks:

GLock address:                           FFFFFFFF.7F238020  Handle:              80000000.00000805
  GLock name:                             GMDB_GLOCK_LOCK   Flags:                00
  Owner count:                             00                Owner node:          00
  Node sequence:                           0000              Owner:                000000
  IPL:                                       08                Previous IPL:        00
  Wait bitmask:                            00000000.00000000  Timeout:              00000000
  Thread ID:                               00000000.00000000

GLock address:                           FFFFFFFF.7F238190  Handle:              80000000.00000833
  GLock name:                             PRC_LCKTBL_LOCK   Flags:                00
  Owner count:                             00                Owner node:          00
  Node sequence:                           0000              Owner:                000000
  IPL:                                       08                Previous IPL:        00
  Wait bitmask:                            00000000.00000000  Timeout:              00000000
  Thread ID:                               00000000.00000000

GLock address:                           FFFFFFFF.7F2381D0  Handle:              80000000.0000083B
  GLock name:                             SYS_LCKTBL_LOCK   Flags:                00
  Owner count:                             00                Owner node:          00
  Node sequence:                           0000              Owner:                000000
  IPL:                                       08                Previous IPL:        00
  Wait bitmask:                            00000000.00000000  Timeout:              00000000
  Thread ID:                               00000000.00000000

```

**This example shows the summary of the Galaxy lock database.**

2. SDA> SHOW GLOCK/PROCESS\_TABLE

Galaxy Lock Database: Process Lock Table #0001

-----

```

Base address of Process Lock Table #0001:  FFFFFFFF.7F23A000

  Lock size:                                0040                Flags:                01  VALID
  Region Index/Sequence:                    0008/00000001       Access mode:          03
  Region physical size:                     00000000.00002000  Virtual size:        00000000.00002000
  Number of locks:                          00000000.00000080  Nodes:               00000000.00000007

```

Per-node reference counts:

```

  Node   Count
  ----   -
  0000   0001
  0001   0001
  0002   0001

```

Embedded GLock:

```

GLock address:                           FFFFFFFF.7F23A040  Handle:              80000000.00000C09

```

## SDA Commands

### SHOW GLOCK

```
Glock name:          PLCKTBL_LOCK001    Flags:                00
Owner count:         00                 Owner node:           00
Node sequence:       0000                Owner:                000000
IPL:                 00                 Previous IPL:         00
Wait bitmask:        00000000.00000000  Timeout:              00000000
Thread ID:           00000000.00000000

Attached GLocks:

Glock address:       P00000000.C05EC7C0  Handle:               00000001.000000F9
Glock name:          CPU_BAL_LOCK        Flags:                00
Owner count:         00                 Owner node:           00
Node sequence:       0000                Owner:                000000
IPL:                 00                 Previous IPL:         00
Wait bitmask:        00000000.00000000  Timeout:              00000000
Thread ID:           00000000.00000000

.
.
.
Glock address:       P00000000.C05EC000  Handle:               00000001.00000001
Glock name:          CPU_BAL_LOCK        Flags:                00
Owner count:         00                 Owner node:           00
Node sequence:       0000                Owner:                000000
IPL:                 00                 Previous IPL:         00
Wait bitmask:        00000000.00000000  Timeout:              00000000
Thread ID:           00000000.00000000

Used GLock count = 0020
Free GLock count = 0060

Galaxy Lock Database: Process Lock Table Summary
-----
Total used Process Lock Tables:          00000001
Total free Process Lock Tables:          000003FF
```

**This example shows the Galaxy locks for all processes.**

---

## SHOW GMDB

Displays the contents of the Galaxy management data base (GMDB) and/or the node blocks of the instances in the Galaxy system.

### Format

```
SHOW GMDB  [/ALL]
           [/NODE [=name | =n | /ADDRESS=n] [/SUMMARY]
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS**

Specifies the address of a single node block to be displayed when used with the /NODE qualifier. See the description of the /NODE qualifier.

#### **/ALL**

Displays the contents of the Galaxy Management Database and all node blocks that have ever been used (contents nonzero).

#### **/NODE [=name | =n | /ADDRESS=n]**

Displays the contents of the specified node block, given by either the name of the instance, the partition number, or the address of the node block. If the /NODE qualifier is given alone, then the node block for the current instance is displayed.

#### **/SUMMARY**

Displays a one-page summary of the GMDB and all node blocks.

---

#### Note

The default action displays the contents of the Galaxy Management Database.

---

### Examples

1. SDA> SHOW GMDB

Galaxy Management Database

-----

|                                          |                         |
|------------------------------------------|-------------------------|
| Base address of GMDB:                    | FFFFFFFF.7F234000       |
| Base address of NODEB for this instance: | FFFFFFFF.7F236000       |
| Revision:                                | 1.0                     |
| Creation time:                           | 31-MAR-1999 13:15:08.08 |
| State:                                   | OPERATIONAL             |
| Base size:                               | 00000000.00004000       |
| Last joiner ID:                          | 00000002                |
| Last leaver ID:                          | 00000002                |
| Lock owner:                              | 00000002                |
| Break owner:                             | FFFFFFFF                |
| Maximum node ID:                         | 00000003                |
| Incarnation:                             | 00000000.00000003       |
| Creator node:                            | 00000001                |
| Total size:                              | 00000000.000A6000       |
| Remover node ID:                         | FFFFFFFF                |
| Node timeout (msec)                      | 5000                    |
| Lock flags:                              | 0000                    |
| Breaker ID:                              | FFFFFFFF                |

Version Information:

|                         |     |                     |     |
|-------------------------|-----|---------------------|-----|
| Min Version Operational | 1.0 | Min Version Allowed | 1.0 |
| Max Version Operational | 1.0 |                     |     |

Membership bitmask: FFFFFFFFF.7F236800

## SDA Commands

### SHOW GMDB

```

Valid bits:          00000004 State:          00000000.0000001E AUTO_LOCK TIMEOUT_CRASH...
Unit count:         0001 Unit size:         QUADWORD
Lock IPL:           16 Saved IPL:          00000008
Count of bits set:  00000003
Timeout count:     000186A0
Summary bitmask:   00000000.00000001

Unit bitmask:
.....7 00000000
Remove node bitmask: FFFFFFFF.7F236880

Valid bits:          00000004 State:          00000000.00000018 SUMMARY_BITS SET_COUNT
Unit count:         0001 Unit size:         QUADWORD
Count of bits set:  00000000
Summary bitmask:   00000000.00000000

Unit bitmask:
.....0 00000000
Subfacility validation flags: 00000000

Galaxy locks segment: FFFFFFFF.7F238000 Length:          00000000.00082000
Shared memory segment: FFFFFFFF.7F2BA000 Length:          00000000.0000A000
CPU comms segment:    FFFFFFFF.7F2C4000 Length:          00000000.00014000
CPU info segment:     FFFFFFFF.7F2D8000 Length:          00000000.00002000
Membership segment:   FFFFFFFF.7F2DA000 Length:          (empty)

MMAP address:        FFFFFFFF.7F234200

Level count:         0000 Flags:          0001 VALID
Top page count:     00000053 Virtual size:   00000000.000A6000
PFN list page count: 00000000 First PFN:     00060000
Data page count:    00000053)

```

This example shows the overall summary of the galaxy management database.

2. SDA> SHOW GMDB/NODE=0

GMDB: Node ID 00000000 (current instance)

```

-----
Base address of node block: FFFFFFFF.7F236000

Version:              1.0 Node name:         ANDA1A
Join time:            31-MAR-1999 14:11:09.08 Incarnation:      00000000.00000005
State:                MEMBER Crash_all acknowledge: 00000000
Validation done:      00000000 Reform done:        00000000

IP interrupt mask:    00000000.00000000

Little brother:       00000002 Heartbeat:         00000000.0019EAD1
Big brother:          00000001 Last watched_node: 00000000

Watched_node #0:     FFFFFFFF.7F236078 Node watched:     00000002
Last heartbeat:      00000000.0017C1AD Miss count:        00000000)

```

This example shows galaxy management database information for the specified instance.

---

## SHOW GSD

Displays information contained in the global section descriptors.

### Format

```
SHOW GSD [/ADDRESS=n]/ALL|/DELETED|/GLXGRP  
          |/GLXSYS|/GROUP|/SYSTEM]
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*n***

Displays a specific global section descriptor entry, given its address.

#### **/ALL**

Displays information in all the global section descriptors, that is, the system, group, and deleted global section descriptors, plus the Galaxy group and Galaxy system global section descriptors, if the system or dump being analyzed is a member of an OpenVMS Galaxy system. This qualifier is the default.

#### **/DELETED**

Displays information in the deleted (that is, delete pending) global section descriptors.

#### **/GLXGRP**

Displays information in the group global section descriptors of a Galaxy system.

#### **/GLXSYS**

Displays information in the system global section descriptors of a Galaxy system.

#### **/GROUP**

Displays information in the group global section descriptors.

#### **/SYSTEM**

Displays information in the system global section descriptors.

### Description

The SHOW GSD command displays information that resides in the global section descriptors. Table 4-3 shows the fields and their meaning.

# SDA Commands

## SHOW GSD

**Table 4-3 GSD Fields**

| Field                | Meaning                                                                                                                |
|----------------------|------------------------------------------------------------------------------------------------------------------------|
| ADDRESS              | Gives the address of the global section descriptor                                                                     |
| NAME                 | Gives the name of the global section                                                                                   |
| GSTX                 | Gives the global section table index                                                                                   |
| FLAGS                | Gives the settings of flags for specified global section, as a hexadecimal number; also displays key flag bits by name |
| BASEPFN <sup>1</sup> | Gives physical page frame number at which the section starts                                                           |
| PAGES <sup>1</sup>   | Gives number of pages (not pagelets) in section                                                                        |
| REFCNT <sup>1</sup>  | Gives number of times this global section is mapped                                                                    |

<sup>1</sup>This field only applies to PFN mapped global sections.

### Example

```
SDA > SHOW GSD
```

```
System Global Section Descriptor List
```

```
-----PFNMAP-----
ADDRESS      NAME          GSTX  FLAGS
817DAF30     SECIDX_422    02DD  0082C3C9  WRT AMOD=USER PERM
817DAE60     SECIDX_421    02DC  008A83CD  DZRO WRT AMOD=USER PAGFIL
817DAD90     SECIDX_420    02DB  0088C3CD  DZRO WRT AMOD=USER PERM PAGFIL
817DACC0     SECIDX_419    02DA  008883DC  DZRO WRT AMOD=USER PAGFIL
817DABE0     SECIDX_418    0000  0001C3C1  AMOD=USER PERM          00000B0B  00000002  00000000
817DAB00     SECIDX_417    0000  0001C3C1  AMOD=USER PERM          00000B0B  00000002  00000000
817DA890     SECIDX_412    02D6  0080C3CD  DZRO WRT AMOD=USER PERM
817DA850     SECIDX_411    02D5  008083CD  DZRO WRT AMOD=USER
```

```
.
.
.
```

ZK-8830A-GE



---

## SHOW HEADER

Displays the header of the dump file.

### Format

SHOW HEADER

### Parameters

None.

### Qualifiers

None.

### Description

The SHOW HEADER command produces a 10-column display, each line of which displays both the hexadecimal and ASCII representation of the contents of the dump file header in 32-byte intervals. Thus, the first eight columns, when read right to left, represent the hexadecimal contents of 32 bytes of the header; the ninth column, when read left to right, records the ASCII equivalent of the contents. (Note that the period [.] in this column indicates an ASCII character that cannot be displayed.)

After it displays the contents of the header blocks, the SHOW HEADER command displays the hexadecimal contents of the saved error log buffers.

See the *OpenVMS AXP Internals and Data Structures* manual for a discussion of the information contained in the dump file header. See also the SHOW DUMP and CLUE ERRLOG commands, which can be used to obtain formatted displays of the dump header and error log buffers.

### Example

```
SDA> SHOW HEADER
```

```
Dump file header
```

```
-----
00000000 7FFA6000 00000000 7FFA1C98 00000000 0000187C 08090FC1 00000004 . . . Ã . . . | . . . . . ú . . . . ' ú . . . . 00000000
00001FFF 0000000D 00002000 80D0A000 00000000 7AFFBADO 00000000 7FFAC100 . Ã ú . . . . Ð ° . z . . . . Ð . . . . . 00000020
0000B162 00000000 00000001 00000000 00040704 FCFFFFFFFF 03000000 80C13670 p6Ã . . . . . ù . . . . . b ± . . . . . 00000040
00000000 00000400 00000008 00000000 3154462D 31393658 00000011 00000000 . . . . . X691-FTL . . . . . 00000060
00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 . . . . . 00000080
00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 . . . . . 00000040
FF7FC000 FFFFFFFFD FF000000 80C220F0 00000000 00000000 00000000 00000000 . . . . . ð Ã . . . . . ý . . . . . Æ . . . . . 000000C0
.
.
.
```

```
Saved error log messages
```

```
-----
0004FFF9 0000040B 00000001 00000000 00000070 80D0B000 80D0A00C 00000000 . . . . . Ð . . ° Ð . p . . . . . ù . . . . . 80D0A000
B4510020 60030000 00000000 00000020 20585443 50575308 00000000 00020000 . . . . . SWPCTX . . . . . ' Q ' . . . . . 80D0A020
30303320 43454412 00000002 00000000 3154462D 31393658 0000009A 2C31075A Z . l . . . . . X691-FTL . . . . . DEC 300 80D0A040
000000AA 59EC7C0A 00000000 00000000 00000000 00303034 206C6564 6F4D2030 0 Model 400 . . . . . | ÿ ^ . . . . . 80D0A060
20585443 50575308 00000000 00020000 0004FFF9 0000040B 00000001 00000000 . . . . . ù . . . . . SWPCTX . . . . . 80D0A080
3154462D 31393658 0001009A 2C3107FD 1DDB0040 60030000 00000000 00000020 . . . . . ' @ . Ÿ . ý . l . . . . . X691-FTL 80D0A0A0
00000000 00303034 206C6564 6F4D2030 30303320 43454412 00000003 00000000 . . . . . DEC 3000 Model 400 . . . . . 80D0A0C0
4B442458 54435057 530A0064 000001AB 00000000 00010001 00000000 00000000 . . . . . < . . . . d . SWPCTX$DK 80D0A0E0
.
.
.
```

ZK-8861A-GE

The SHOW HEADER command displays the contents of the dump file's header. Ellipses indicate hexadecimal information omitted from the display.

---

## SHOW LAN

Displays information contained in various local area network (LAN) data structures.

### Format

```
SHOW LAN [/qualifier[,...]]
```

### Parameters

None.

### Qualifiers

#### **/CLIENT=*name***

Specifies that information be displayed for the specified client. Valid client designators are SCA, DECNET, LAT, MOPRC, TCPIP, DIAG, ELN, BIOS, LAST, USER, ARP, MOPDL, LOOP, BRIDGE, DNAME, ENCRY, DTIME, and LTM. The /CLIENT, /DEVICE, and /UNIT qualifiers are synonymous and mutually exclusive.

#### **/CLUEXIT**

Specifies that cluster protocol information be displayed.

#### **/COUNTERS**

Specifies that the LAN station block (LSB) and unit control block (UCB) counters be displayed.

#### **/CSMACD**

Specifies that Carrier Sense Multiple Access with Collision Detect (CSMA/CD) information for the LAN be displayed. By default, both CSMA/CD and Fiber Distributed Data Interface (FDDI) information is displayed.

#### **/DEVICE=*name***

Specifies that information be displayed for the specified device, unit, or client. For each LAN adapter on the system there is one **device** and multiple users of that device called **units** or **clients**. Device designators are specified in the format **XXdn**, where **XX** is the type of device, **d** is the device letter, and **n** is the unit number. The device letter and unit number are optional. The first unit, which is always present, is the template unit. These are specified as indicated in this example, for a DEMNA which is called EX:

```
/DEVICE=EX—display all EX devices on the system
```

```
/DEVICE=EXA—display the first EX device only
```

```
/DEVICE=EXA0—display the first EXA unit
```

```
/DEVICE=SCA—display SCA unit
```

```
/DEVICE=LAT—display LAT units
```

Valid client names are listed in the /CLIENT=*name* qualifier. The /CLIENT, /DEVICE, and /UNIT qualifiers are synonymous and mutually exclusive.

#### **/ELAN**

Specifies information from an Emulated LAN (ELAN) that runs over an asynchronous transfer mode (ATM) network. The /ELAN qualifier displays the LAN Station Block (LSB) address, device state, and the LSB fields pertinent

to an ELAN for both the parent ATM device and the ELAN pseudo-device drivers. It also specifies the name, description, parent device, state, and LAN emulation client (LEC) attributes of the ELAN.

The qualifier `/ELAN` used with the device qualifier (`/LAN/device=ELA`) will only display information for the specified device or pseudo-device.

**/ERRORS**

Specifies that the LSB and UCB error counters be displayed.

**/FDDI**

Specifies that Fiber Distributed Data Interface (FDDI) information for the LAN be displayed. By default, both CSMA/CD and FDDI information is displayed.

**/FULL**

Specifies that all information from the LAN, LSB, and UCB data structures be displayed.

**/ICOUNTERS**

Specifies internal counters of the drivers by displaying the internal counters. If the `/ICOUNTERS` qualifier is used with the `/DEVICE` qualifier, the `/ICOUNTERS` specifies the internal counters of a specific driver.

**/QUEUE**

Specifies a listing of all queues, whether their status is valid or invalid, and all elements of the queues. If the `/QUEUE` qualifier is used with the `/DEVICE` qualifier, the `/QUEUE` specifies a specific queue.

**/SUMMARY**

Specifies that only a summary of LAN information (a list of flags, LSBs, UCBs, and base addresses) be printed. This is the default.

**/TIMESTAMPS**

Specifies that time information (such as start and stop times and error times) from the device and unit data structures be printed. SDA displays the data in chronological order.

**/UNIT=*name***

Specifies that information be displayed for the specified unit. See the descriptions for `/CLIENT=name` and `/DEVICE=name` qualifiers.

**/VCI**

Specifies that information be displayed for the VMS Communication Interface Block (VCIB) for each LAN device with an active VCI user. If you use the `/VCI` qualifier with the `/DEVICE` qualifier, the VCIB is only displayed for the specified device.

## **Description**

The `SHOW LAN` command displays information contained in various local area network (LAN) data structures. By default, or when the `/SUMMARY` qualifier is specified, `SHOW LAN` displays a list of flags, LSBs, UCBs, and base addresses. When the `/FULL` qualifier is specified, `SHOW LAN` displays all information found in the LAN, LSB, and UCB data structures.

# SDA Commands

## SHOW LAN

### Examples

```
1. SDA> SHOW LAN/FULL
LAN Data Structures
-----
-- LAN Information Summary 23-MAY-1996 13:07:52 --
LAN flags: 00000004 LAN_INIT
LAN block address      80DB7140   Timer DELTA time      10000000
Number of stations     2       DAT sequence number   1
LAN module version     1       First SVAPTE          FFDF60F0
LANIDEF version        51      Number of PTEs        3
LANUDEF version        26      SVA of first page     8183C000
First LSB address      80DCA980

-- LAN CSMACD Network Management 23-MAY-1996 13:07:52 --
Creation time          None     Times created         0
Deletion time         None     Times deleted         0
Module EAB             00000000 Latest EIB             00000000
Port EAB               00000000
Station EAB            00000000
NM flags: 00000000

-- LAN FDDI Network Management 23-MAY-1996 13:07:52 --
Creation time          None     Times created         0
Deletion time         None     Times deleted         0
Module EAB             00000000 Link EAB              00000000
Port EAB               00000000 PHY port EAB          00000000
Station EAB            00000000 Module EIB            00000000
NM flags: 00000000

LAN Data Structures
-----
-- ESA Device Information 23-MAY-1996 13:07:52 --
LSB address           80DCA980   Driver code address   80CAE838
Driver version        00000001.07010037 Device1 code address  00000000
Device1 version       00000000.00000000 Device2 code address  00000000
Device2 version       00000000.00000000 LAN code address     80CAFA00
LAN version           00000001.07010112 DLL type              CSMACD
Device name           EY_NITC2   MOP name              MXE
MOP ID                94         HW serial             Not supplied
HW version             00000000   Promiscuous mode     OFF
Controller mode       NORMAL     Promiscuous UCB      00000000
Internal loopback     OFF       All multicast state  OFF
Hardware address      08-00-03-DE-00-12 CRC generation mode  ON
Physical address      AA-00-04-00-88-FE Full Duplex Enable    OFF
Active unit count     1         Full Duplex State    OFF
Line speed            10

Flags: 00000000
Char: 00000000
Status: 00000003 RUN,INITED
```

# SDA Commands SHOW LAN

## LAN Data Structures

```

-----
-- ESA Device Information (cont) 23-MAY-1996 13:07:52 --
Put rcv ptr/index          00000000    Get rcv ptr/index          00000015
Put xmt ptr/index          80DCB620    Get xmt ptr/index          80DCB620
Put cmd ptr/index          00000000    Get cmd ptr/index          00000000
Put uns ptr/index          00000000    Get uns ptr/index          00000000
Put smt ptr/index          00000000    Get smt ptr/index          00000000
RBufs owned by dev         0          Rcv packet limit           32
XEnts owned by dev         0          XEnts owned by host        4
CEnts owned by dev         0          Transmit timer              0
UEnts owned by dev         0          Control timer                0
SEnts owned by dev         0          Periodic SYSID timer        599
Current rcv buffers        17         Ring unavail timer          0
Rqst MAX rcv buffers       32         USB timer                    26
Rqst MIN rcv buffers       16         Receive alignment            0
Curr MAX rcv buffers       32         Receive buffer size         1518
Curr MIN rcv buffers       16         Min lst chain segment        0
FILL rcv buffers           16         Min transmit length          0
ADD rcv buffers            32         Dev xmt header size          0

```

## LAN Data Structures

```

-----
-- ESA Device Information (cont) 23-MAY-1996 13:07:52 --
Last receive                23-MAY 13:07:51    Last transmit                23-MAY 13:07:50
ADP address                  80D4B280            IDB address                   80DCA880
DAT stage                    00000000            DAT xmt status                0000003C.003C0001
DAT number started           1                  DAT xmt complete              23-MAY 13:07:19
DAT number failed           0                  DAT rcv found                  None
DAT VCRP                    80DCBB80            DAT UCB                       00000000
Mailbox enable flag         0                  CRAM read comma               00000000
CSR base phys addr 00000000.00000000    CRAM write comma              00000000
Mailboxes in use            0                  Media                          UNDF
2nd LW status flags         00000000

```

## LAN Data Structures

```

-----
-- ESA Network Management Information 23-MAY-1996 13:07:52 --
Creation time                None                Create count                   0
Deletion time                None                Enable count                   0
Enabled time                  None                Number of ports                0
Disabled time                 None                Events logged                   0
EIB address                   00000000            NMgmt assigned addr            None
LLB address                   00000000            Station name itmlst            00000000
LHB address                   00000000            Station itmlst len             0
First LPB address             00000000

```

## LAN Data Structures

```

-----
-- ESA Fork Information 23-MAY-1996 13:07:52 --
ISR   FKB sched              23-MAY 13:07:51    ISR   FKB in use flag          FREE
ISR   FKB time                23-MAY 13:07:51    ISR   FKB count                 200
IPL8  FKB sched              23-MAY 13:07:20    IPL8  FKB in use flag          FREE
IPL8  FKB time                23-MAY 13:07:20    IPL8  FKB count                 1
RESET FKB sched              None                RESET FKB in use flag          FREE
RESET FKB time                None                RESET FKB count                 0
NM    FKB sched              None                NM    FKB in use flag          FREE
NM    FKB time                None                NM    FKB count                 0
Fork status code              0

```

## SDA Commands

### SHOW LAN

#### LAN Data Structures

```

-----
-- ESA Queue Information 23-MAY-1996 13:07:52 --
Control hold queue      80DCACF0  Status: Valid, empty
Control request queue   80DCACF8  Status: Valid, empty
Control pending queue   80DCAD00  Status: Valid, empty
Transmit request queue  80DCACE8  Status: Valid, empty
Transmit pending queue  80DCAD18  Status: Valid, empty
Receive buffer list     80DCAD38  Status: Valid, 17 elements
Receive pending queue   80DCAD20  Status: Valid, empty
Post process queue      80DCAD08  Status: Valid, empty
Delay queue             80DCAD10  Status: Valid, empty
Auto restart queue      80DCAD28  Status: Valid, empty
Netwrk mgmt hold queue  80DCAD30  Status: Valid, empty

```

```

-- ESA Multicast Address Information 23-MAY-1996 13:07:52 --
AB-00-00-04-00-00

```

```

-- ESA Unit Summary 23-MAY-1996 13:07:52 --
UCB      UCB Addr  Fmt  Value      Client      State
---      -
ESA0     80D4F6C0
ESA1     80E35400  Eth  60-03      DECNET      0017 STRTN,LEN,UNIQ,STRTD

```

#### LAN Data Structures

```

-----
-- ESA Counters Information 23-MAY-1996 13:07:52 --
Octets received          596  Octets sent              230
PDUs received            8    PDUs sent                5
Mcast octets received   596  Mcast octets sent        138
Mcast PDUs received     8    Mcast PDUs sent          3
Unrec indiv dest PDUs   0    PDUs sent, deferred      0
Unrec mcast dest PDUs  1    PDUs sent, one coll      0
Data overruns           0    PDUs sent, mul coll      0
Unavail station buffs   0    Excessive collisions     0
Unavail user buffers    0    Late collisions          0
CRC errors              0    Carrier check failure    0
Alignment errors        0    Last carrier failure     None
Rcv data length err     0    Coll detect chk fail     5
Frame size errors       0    Short circuit failure    0
Frames too long         0    Open circuit failure     0
Seconds since zeroed    34   Transmits too long       0
Station failures        0    Send data length err     0

```

## SDA Commands SHOW LAN

### LAN Data Structures

```

-----
-- ESA Counters Information (cont) 23-MAY-1996 13:07:52 --
No work transmits                0      Ring avail transitions          0
Buffer_Addr transmits            0      Ring unavail transitions        0
SVAPTE/BOFF transmits           0      Loopback sent                   0
Global page transmits            0      System ID sent                  0
Bad PTE transmits                0      ReqCounters sent                0
Restart pending counter          0      Internal counters size          40
+00 MCA not enabled              187    +2C Generic (or unused)         00000000
+04 Xmt underflows               0      +30 Generic (or unused)         00000000
+08 Rcv overflows                0      +34 Generic (or unused)         00000000
+0C Memory errors                0      +38 Generic (or unused)         80DCAD18
+10 Babbling errors              0      +3C Generic (or unused)         80DCAD18
+14 Local buffer errors          0      +40 Generic (or unused)         004E0840
+18 LANCE interrupts             202    +44 Generic (or unused)         61616161
+1C Xmt ring <31:0>              00000000 +48 Generic (or unused)         61616161
+20 Xmt ring <63:32>            00000000 +4C Generic (or unused)         61616161
+24 Soft errors handled           0      +50 Generic (or unused)         61616161
+28 Generic (or unused)          00000000 +54 Generic (or unused)         61616161

```

### LAN Data Structures

```

-----
-- ESA Error Information 23-MAY-1996 13:07:52 --
Fatal error count                0      Last error CSR                  00000000
Fatal error code                 None    Last fatal error                None
Prev error code                  None    Prev fatal error                None
Transmit timeouts                0      Last USB time                   None
Control timeouts                 0      Last UUB time                   None
Restart failures                 0      Last CRC time                   None
Power failures                   0      Last CRC srcadr                 None
Bad PTE transmits                0      Last length erro                None
Loopback failures                0      Last exc collisi                None
System ID failures               0      Last carrier fai                None
ReqCounters failures             0      Last late collis                None

```

### LAN Data Structures

```

-----
-- ESA0 Template Unit Information 23-MAY-1996 13:07:52 --
LSB address                      80DCA980  Error count                      0
VCIB address                      00000000  Parameter mask                    00000000
Stop IRP address                  00000000  Promiscuous mode                  OFF
Restart IRP address               00000000  All multicast mode                OFF
LAN medium                        CSMACD   Source Routing mode              TRANSPARENT
Packet format                     Ethernet Access mode                       EXCLUSIVE
Eth protocol type                  00-00   Shared user DES                   None
802E protocol ID                  00-00-00-00-00 Padding mode                       ON
802.2 SAP                          00      Automatic restart                 DISABLED
802.2 Group SAPs                   00,00,00,00 Allow prom client                  ON
Controller mode                    NORMAL   Can change address                OFF
Internal loopback                  OFF     802.2 service                     User
CRC generation mode                ON      Rcv buffers to save                1
Functional Addr mod                ON      Minimum rcv buffers                4
Hardware address                   08-00-03-DE-00-12 User transmit FC/AC                ON
Physical address                   FF-FF-FF-FF-FF-FF User receive FC/AC                 OFF

```

## SDA Commands

### SHOW LAN

```

LAN Data Structures
-----
-- ESA1 60-03 (DECNET) Unit Information 23-MAY-1996 13:07:52 --
LSB address          80DCA980      Error count          0
VCIB address         00000000      Parameter mask      00DA8695
Stop IRP address     80E047C0      Promiscuous mode    OFF
Restart IRP address  00000000      All multicast mode  OFF
LAN medium           CSMACD        Source Routing mode  TRANSPARENT
Packet format        Ethernet       Access mode         EXCLUSIVE
Eth protocol type    60-03        Shared user DES     None
802E protocol ID    00-00-00-00-00 Padding mode        ON
802.2 SAP            00           Automatic restart    DISABLED
802.2 Group SAPs    00,00,00,00 Allow prom client    ON
Controller mode     NORMAL        Can change address  OFF
Internal loopback    OFF          802.2 service       User
CRC generation mode  ON           Rcv buffers to save 10
Functional Addr mod  ON           Minimum rcv buffers 4
Hardware address    08-00-03-DE-00-12 User transmit FC/AC  ON
Physical address    AA-00-04-00-88-FE User receive FC/AC   OFF

```

```

LAN Data Structures
-----
-- ESA1 60-03 (DECNET) Unit Information (cont) 23-MAY-1996 13:07:52 --
Last receive         23-MAY 13:07:47 Starter's PID        0001000F
Last transmit        23-MAY 13:07:50 Maximum header size 16
Last start attempt   23-MAY 13:07:20 Maximum buffer size 1498
Last start done      23-MAY 13:07:20 Rcv quota charged   15040
Last start failed    None           Default FC value    00
MCA match enabled    01           Default AC value    00
Last MCA filtered    AB-00-00-04-00-00 Maintenance state    ON

UCB status: 00000017 STRTN,LEN,UNIQ,STRTD

Receive IRP queue    80E356E8      Status: Valid, 1 element
Receive pending queue 80E356E0      Status: Valid, empty

Multicast address table, embedded:
  AB-00-00-04-00-00

```

```

LAN Data Structures
-----
-- ESA1 60-03 (DECNET) Counters Information 23-MAY-1996 13:07:52 --
Octets received      483          Octets sent          180
PDUs received        7            PDUs sent            3
Mcast octets received 483          Mcast octets sent    180
Mcast PDUs received  7            Mcast PDUs sent      3
Unavail user buffer  0            Multicast not enabled 0
Last UUB time        None         User buffer too small 0

```

The SHOW LAN/FULL command displays information for all LAN, LSB, and UCB data structures.



## SDA Commands SHOW LAN

2. SDA> SHOW LAN/TIME

```
-- LAN History Information 12-FEB-1995 11:08:48 --

12-FEB 11:08:47.92 ESA          Last receive
12-FEB 11:08:47.92 ESA          Last fork scheduled
12-FEB 11:08:47.92 ESA          Last fork time
12-FEB 11:08:47.77 ESA5        LAST      Last receive
12-FEB 11:08:47.72 ESA3        LAT       Last receive
12-FEB 11:08:41.25 ESA          Last transmit
12-FEB 11:08:41.25 ESA5        LAST      Last transmit
12-FEB 11:08:40.02 ESA2        DECnet    Last receive
12-FEB 11:08:39.14 ESA2        DECnet    Last transmit
12-FEB 11:08:37.39 ESA3        LAT       Last transmit
12-FEB 10:19:25.31 ESA          Last unavail user buffer
12-FEB 10:19:25.31 ESA2        DECnet    Last unavail user buffer
11-FEB 14:10:20.09 ESA5        LAST      Last start completed
11-FEB 14:10:02.16 ESA3        LAT       Last start completed
11-FEB 14:09:58.44 ESA2        DECnet    Last start completed
11-FEB 14:09:57.44 ESA          Last DAT transmit
```

**The SHOW LAN/TIME command displays print time information from device and unit data structures.**

3. SDA> SHOW LAN/VCI/DEVICE=ICB

```
-- ICB VCI Information 17-APR-1996 14:22:07 --

LSB address = 80A1D580
Device state = 00000003 RUN,INITED

-- ICB2 80-41 (LAST) VCI Information 17-APR-1996 14:22:07 --

VCIB address = 8096F238
CLIENT flags: 00000001 RCV_DCB
LAN flags:    00000004 LAN_INIT
DLL flags:    00000005 XMT_CHAIN,PORT_STATUS
UCB status:   00000015 STRTN,UNIQ,STRTD

VCI ID          LAST      VCI version      00010001
UCB address     80A4C5C0 DP VCRP address  00000000
Hardware address 00-00-93-08-52-CF LDC address      80A1D720
Physical address 00-00-93-08-52-CF LAN medium       TR
Transmit available 80A1D670 Outstanding operations 0
Maximum receives 0 Outstanding receives 0
Max xmt size 4444 Header size 52
Build header rtn 808BF230 Report event rtn 86327130
XMT initiate rtn 808BF200 Transmit complete rtn 86326D80
XMT frame rtn 808BF210 Receive complete rtn 86326A80

-- ICB2 80-41 (LAST) VCI Information (cont) 17-APR-1996 14:22:07 --

Portmgmt initiate rtn 808BF0C0 Portmgmt complete rtn 86327100
Monitor request rtn 00000000 Monitor transmit rtn 00000000
Monitor flags 00000000 Monitor receive rtn 00000000
Port usable 00000000 Port unusable 00000000
```

**The SHOW LAN/VCI/DEVICE=ICB command displays the VCIB for a Token Ring device (ICB) which has an active VCI user (LAST).**

## SDA Commands

### SHOW LAN

```
4. SDA> SHOW LAN/ELAN

-- HCA Emulated LAN LSB Information 17-APR-1996 14:08:02 --
LSB address = 8098D200
Device state = 00000101 RUN,RING_AVAIL

Driver CM VC setup adr      808986A0      Driver CM VC teardown adr      80898668
NIPG CM handle adr         8096C30C      NIPG CM SVC handle             00000000
NIPG CM agent handle adr   809B364C      NIPG CM mgr lineup handle     809B394C
NIPG CM ILMI IO handle     809B378C      MIB II handle adr             809B94CC
MIB handle adr             809B3ACC      Queue header for EL LSBs     00000000
DEC MIB handle adr         809BBD8C      NIPG current TQEs used        00000000
Count of allocated TQEs    0000000D      NIPG current pool used        0000D2C0
NIPG pool allocations      00075730

-- ELA Emulated LAN LSB Information 17-APR-1996 14:08:02 --
LSB address = 80AB08C0
Device state = 00000001 RUN

ELAN name = ELAN 1
ELAN description = ATM ELAN
ELAN parent = HCA0
ELAN state = 00000001 ACTIVE

MAX transmit size          MTU_1516          ELAN media type          LAN_802_3
LEC attr buff adr          80AB1FC0          LEC attr buff size      00000328
Event mask                  00000000          PVC identifier           00000000
Extended sense              00000000

-- ELA Emulated LAN LEC Attributes 17-APR-1996 14:08:02 --
LAN type                    00000000          LAN MTU                  00000001
Proxy flag                  00000000          Control timeout          0000000A
Max UF count                00000001          Max UF time              00000001
VCC timeout                 000004B0          Max retry count          00000002
LEC id                      00000002          Forw delay time          0000000F
Flush timeout               00000004          Path switch delay        00000006
SM state                    00000070          Illegal CTRL frames      00000000
CTRL xmt failures           00000000          CTRL frames sent         0000000C
CTRL frames_rcvd           00000012          LEARPs sent              00000000
LEARPs rcvd                 00000000          UCASTs sent direct       00000000
UCASTs flooded              00000006          UCASTs discarded         00000001
NUCASTs sent                00000000
Local ESI                   00000000.00000000
BUS ATM addr                3999990000000008002BA57E80.AA000302FF12.00
LES ATM addr                3999990000000008002BA57E80.AA000302FF14.00
My ATM addr                 3999990000000008002BA57E80.08002B2240A0.00
```

The SHOW LAN/ELAN command displays information for the parent ATM device (HCA) driver and the ELAN pseudo-device (ELA) driver.

## SDA Commands SHOW LAN

```
5. SDA> SHOW LAN/ELAN/DEV=ELA
    -- ELA Emulated LAN LSB Information 17-APR-1996 14:08:22 --
LSB address = 80AB08C0
Device state = 00000001 RUN

ELAN name = ELAN 1
ELAN description = ATM ELAN
ELAN parent = HCA0
ELAN state = 00000001 ACTIVE

MAX transmit size      MTU_1516          ELAN media type      LAN_802_3
LEC attr buff adr     80AB1FC0          LEC attr buff size   00000328
Event mask             00000000          PVC identifier        00000000
Extended sense         00000000

    -- ELA Emulated LAN LEC Attributes 17-APR-1996 14:08:22 --
LAN type                00000000          LAN MTU                00000001
Proxy flag              00000000          Control timeout        0000000A
Max UF count           00000001          Max UF time            00000001
VCC timeout            000004B0          Max retry count        00000002
LEC id                 00000002          Forw delay time       0000000F
Flush timeout          00000004          Path switch delay     00000006
SM state               00000070          Illegal CTRL frames   00000000
CTRL xmt failures      00000000          CTRL frames sent      0000000C
CTRL frames_rcvd       00000012          LEARPs sent           00000000
LEARPs rcvd           00000000          UCASTs sent direct    00000000
UCASTs flooded         00000006          UCASTs discarded      00000001
NUCASTs sent           00000000
Local ESI              00000000.00000000
BUS ATM addr           3999990000000008002BA57E80.AA000302FF12.00
LES ATM addr           39999900000000008002BA57E80.AA000302FF14.00
My ATM addr            39999900000000008002BA57E80.08002B2240A0.00
```

The SHOW LAN/ELAN/DEVICE=ELA command displays information for the ELAN pseudo-device (ELA) driver only.

```
6. SDA> SHOW LAN/ELAN/DEVICE=HCA
    -- HCA Emulated LAN LSB Information 17-APR-1996 14:08:25 --
LSB address = 8098D200
Device state = 00000101 RUN,RING_AVAIL

Driver CM VC setup adr  808986A0    Driver CM VC teardown adr  80898668
NIPG CM handle adr     8096C30C    NIPG CM SVC handle        00000000
NIPG CM agent handle adr 809B364C    NIPG CM mgr lineup handle  809B394C
NIPG CM ILMI IO handle 809B378C    MIB II handle adr         809B94CC
MIB handle adr         809B3ACC    Queue header for EL LSBs  00000000
DEC MIB handle adr     809BBD8C    NIPG current TQEs used    00000000
Count of allocated TQEs 0000000D    NIPG current pool used    0000D2C0
NIPG pool allocations  000757B2
```

The SHOW LAN/ELAN/DEVICE=HCA command displays information for the ATM device (HCA) driver only.

---

## SHOW LOCKS

Displays information about all lock management locks in the system, or about a specified lock.

### Format

```
SHOW LOCKS {lock-id|/ADDRESS=n|/ALL (d)|  
/BLOCKING|/BRIEF|/CACHED|/CONVERT|/GRANTED  
|/NAME=name|/POOL|  
/STATUS=(keyword [,keyword...])|/SUMMARY|  
/WAITING}
```

### Parameter

**lock-id**  
Name of a specific lock.

### Qualifiers

**/ADDRESS=*n***  
Displays a specific lock, given the address of the lock block.

**/ALL**  
Lists all locks that exist in the system. This is the default behavior of the SHOW LOCK command.

**/BLOCKING**  
Displays only the locks that have a blocking AST specified or attached.

**/BRIEF**  
Displays a single line of information for each lock.

**/CACHED**  
Displays locks that are no longer valid. The memory for these locks is saved so that later requests for locks can use them. Cached locks are not displayed in the other SHOW LOCK commands.

**/CONVERT**  
Displays only the locks that are on the conversion queue.

**/GRANTED**  
Displays only the locks that are on the granted queue.

**/NAME=*name***  
Displays a specified lock with the given name.

**/POOL**  
Displays the lock manager's poolzone information, which contains the lock blocks (LKB) and resource blocks (RSB).

**/STATUS=(*keyword*[,*keyword*...])**  
Displays only the locks that have the specified status bits set in the LKB\$\_STATUS field. Status keywords are as follows:

| Keyword   | Meaning                                     |
|-----------|---------------------------------------------|
| 2PC_IP    | Indicates a two-phase operation in progress |
| 2PC_PEND  | Indicates a two-phase operation pending     |
| ASYNC     | Completes request asynchronously            |
| BLKASTFLG | Specifies a blocking AST                    |
| BLKASTQED | Indicates a blocking AST is queued          |
| BRL       | Indicates a byte range lock                 |
| CACHED    | Indicates a lock block in cache             |
| CVTSUBRNG | Indicates a sub-range convert request       |
| CVTTOSYS  | Converts back to system-owned lock          |
| DBLKAST   | Delivers a blocking AST                     |
| DCPLAST   | Delivers a completion AST                   |
| DPC       | Indicates a delete pending cache lock       |
| FLOCK     | Indicates a fork lock                       |
| GRSUBRNG  | Grants sub-range lock                       |
| IP        | Indicates operation in process              |
| MSTCPY    | Indicates a lock block is a master copy     |
| NEWSUBRNG | Indicates a new sub-range request           |
| NOQUOTA   | Does not charge quota                       |
| PCACHED   | Indicates lock block needs to be cached     |
| PROTECT   | Indicates a protected lock                  |
| RESEND    | Resends during failover                     |
| RM_RBRQD  | Requires remaster rebuild                   |
| RNGBLK    | Specifies a range block                     |
| RNGCHG    | Indicates a changing range                  |
| TIMOUTQ   | Indicates lock block is on timeout queue    |
| VALBLKRD  | Indicates read access to lock value block   |
| VALBLKWRT | Indicates write access to lock value block  |
| WASSYSOWN | Indicates was system-owned lock             |

**/SUMMARY**

Displays summary data and performance counters.

**/WAITING**

Displays only the waiting locks.

**Description**

The SHOW LOCKS command displays the information described in Table 4–4 for each lock management lock in the system, or for the lock indicated by **lock-id**, an address or name. (Use the SHOW SPINLOCKS command to display information about spinlocks.) You can obtain a similar display for the locks owned by a specific process by issuing the appropriate SHOW PROCESS/LOCKS command. See the *OpenVMS Programming Concepts Manual* for additional information.

## SDA Commands

### SHOW LOCKS

You can display information about the resource to which a lock is queued by issuing the SHOW RESOURCES command specifying the resource's **lock-id**.

**Table 4–4 Contents of the SHOW LOCK and SHOW PROCESS/LOCKS Displays**

| Display Element            | Description                                                                                                                                                                                                                                                                                                            |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Process Index <sup>1</sup> | Index in the PCB array to a pointer to the process control block (PCB) of the process that owns the lock.                                                                                                                                                                                                              |
| Name <sup>1</sup>          | Name of the process that owns the lock.                                                                                                                                                                                                                                                                                |
| Extended PID <sup>1</sup>  | Clusterwide identification of the process that owns the lock.                                                                                                                                                                                                                                                          |
| Lock ID                    | Identification of the lock.                                                                                                                                                                                                                                                                                            |
| PID                        | Systemwide identification of the lock.                                                                                                                                                                                                                                                                                 |
| Flags                      | Information specified in the request for the lock.                                                                                                                                                                                                                                                                     |
| Par. ID                    | Identification of the lock's parent lock.                                                                                                                                                                                                                                                                              |
| Sublocks                   | Count of the locks that the lock owns.                                                                                                                                                                                                                                                                                 |
| LKB                        | Address of the lock block (LKB). If a blocking AST has been enabled for this lock, the notation "BLKAST" appears next to the LKB address.                                                                                                                                                                              |
| Priority                   | The lock priority.                                                                                                                                                                                                                                                                                                     |
| Granted at                 | Lock mode at which the lock was granted.                                                                                                                                                                                                                                                                               |
| RSB                        | Address of the resource block.                                                                                                                                                                                                                                                                                         |
| Resource                   | Dump of the resource name. The two leftmost columns of the dump show its contents as hexadecimal values, the least significant byte being represented by the rightmost two digits. The rightmost column represents its contents as ASCII text, the least significant byte being represented by the leftmost character. |
| Status                     | Status of the lock, information used internally by the lock manager.                                                                                                                                                                                                                                                   |
| Length                     | Length of the resource name.                                                                                                                                                                                                                                                                                           |
| Mode                       | Processor access mode of the namespace in which the resource block (RSB) associated with the lock resides.                                                                                                                                                                                                             |
| Owner                      | Owner of the resource. Certain resources owned by the operating system list "System" as the owner. Resources owned by a group have the number (in octal) of the owning group in this field.                                                                                                                            |
| Copy                       | Indication of whether the lock is mastered on the local system or is a process copy.                                                                                                                                                                                                                                   |

---

<sup>1</sup>This display element is produced only by the SHOW PROCESS/LOCKS command.

---

Examples

1. SDA> SHOW LOCKS

Lock Database

-----

```
Lock id: 3E000002          PID: 00000000   Flags: CONVERT NOQUEUE SYNCSTS
Par. id: 00000000          SUBLCKs: 0           NOQUOTA CVTSYS
LKB: FFFFFFFF.7DF48150    BLKAST: 81107278
Priority: 0000
```

Granted at CR 00000000-FFFFFFF

```
RSB: FFFFFFFF.7DF68D50
Resource: 494D6224 42313146 F11B$bMI Status: NOQUOTA VALBLKR VALBLKW
Length 18 4D55445F 5944414C LADY_DUM
Kernel mode 00000000 00005350 PS.....
System 00000000 00000000 .....
```

Local copy

Lock Database

-----

```
Lock id: 3F000003          PID: 00000000   Flags: VALBLK CONVERT SYNCSTS
Par. id: 0100007A          SUBLCKs: 0           CVTSYS
LKB: FFFFFFFF.7DF48250    BLKAST: 00000000
Priority: 0000
```

Granted at NL 00000000-FFFFFFF

```
RSB: FFFFFFFF.7DF51D50
Resource: 01F77324 42313146 F11B$s+. Status: NOQUOTA VALBLKR VALBLKW
Length 10 00000000 00000000 .....
```

Local copy

Lock Database

-----

```
Lock id: 0A000004          PID: 0001000F   Flags: VALBLK CONVERT SYNCSTS
Par. id: 00000000          SUBLCKs: 0           SYSTEM NODLCKW NODLCKB
LKB: FFFFFFFF.7DF48350    BLKAST: 81190420   QUECVT
Priority: 0000
```

Granted at EX 00000000-FFFFFFF

```
RSB: FFFFFFFF.7DF50850
Resource: 004F0FDF 24534D52 RMS$b.O. Status: VALBLKR VALBLKW
Length 26 5F313039 58020000 ...X901_
Exec. mode 00202020 204C354B K5L .
System 00000000 00000000 .....
```

Local copy

.  
.
.  
.

# SDA Commands

## SHOW LOCKS

2. SDA> SHOW RESOURCES/LOCKID=0A000004

Resource Database

```

-----
RSB:          FFFFFFFF.7DF50850  GGMODE:      EX  Status: DIRENTR VALID
Parent RSB:   00000000.00000000  CGMODE:      EX
Sub-RSB count: 0                  FGMODE:      EX
Lock Count:   1                   RQSEQNM:    0000
BLKAST count: 1                   CSID: 00000000 (MILADY)

Resource:     004F0FDF 24534D52  RMS$$8.O.  Valblk: 00000000 00000000
Length 26    5F313039 58020000  ...X901_      00000000 00000000
Exec. mode   00202020 204C354B  K5L      .
System       00000000 00000000  ....     Seqnum: 00000000
  
```

Granted queue (Lock ID / Gr mode / Range):

0A000004 EX 00000000-FFFFFFFF

Conversion queue (Lock ID / Gr mode / Range -> Rq mode / Range):

\*\*\* EMPTY QUEUE \*\*\*

Waiting queue (Lock ID / Rq mode / Range):

\*\*\* EMPTY QUEUE \*\*\*

This SDA session shows the output of the SHOW LOCKS command for several locks. The SHOW RESOURCES command, executed for the last displayed lock, verifies that the lock is in the resource's granted queue. (See Table 4-21 for a full explanation of the contents of the display of the SHOW RESOURCES command.)

3. SDA> SHOW LOCK/BRIEF/BLOCKING

Lock Database

```

-----
LKB Address      Lockid  ParentId  PID    BLKAST  SubLocks RQ GR Queue      RSB Address      Resource Name      Mode
-----
FFFFFFFF.7FF42450 51000003 00000000 00000000 80CC7648 0 CR Granted FFFFFFFF.7FF45050 F11B$bSWPCTX_DUMPS Kern
FFFFFFFF.7FF42850 01000005 00000000 00000000 80CB5020 111 CR Granted FFFFFFFF.7FF42950 F11B$vX6JU_R3N      Kern
FFFFFFFF.7FF42A50 01000006 00000000 00000000 80CD3D98 0 PR Granted FFFFFFFF.7FF42B50 VCC$vX6JU_R3N      Kern
FFFFFFFF.7FF42E50 4D000008 00000000 00000000 80CC7648 0 CR Granted FFFFFFFF.7FF43150 F11B$bX6JU_R3N      Kern
FFFFFFFF.7FF43E50 13000010 00000000 00000000 80CD3D98 0 PR Granted FFFFFFFF.7FF53D50 VCC$vSWPCTX_DUMPS Kern
FFFFFFFF.7FF48750 12000033 03000094 00010008 80CE7220 0 PW Granted FFFFFFFF.7FF48E50 APPENDER           Exec
FFFFFFFF.7FF49550 1500003A 00000000 00010008 00010B20 0 CR Granted FFFFFFFF.7FF54E50 AUDRSV$DJ.....X6JU_R3N ... User
FFFFFFFF.7FF49B50 1300003D 00000000 00010007 00035EF8 0 CR Granted FFFFFFFF.7FF56250 OPC$opcom-restart   User
FFFFFFFF.7FF4BE50 2100004F 00000000 0001000B 80CE66F0 4 NL Granted FFFFFFFF.7FF4DC50 RMS$$y.....X6JU_R3N ... Exec
FFFFFFFF.7FF4C950 13000054 00000000 0001000B 80CE66F0 0 EX Granted FFFFFFFF.7FF4CE50 RMS$$8.O...X6JU_R3N ... Exec
FFFFFFFF.7FF4E050 0B00005F 00000000 00010009 80CE66F0 4 NL Granted FFFFFFFF.7FF4AD50 RMS$$e.....X6JU_R3N ... Exec
FFFFFFFF.7FF4EA50 0C000064 00000000 00010007 00035F30 0 CR Granted FFFFFFFF.7FF56150 OPC$opcom-abort     User
FFFFFFFF.7FF51350 18000078 00000000 00010011 0000B930 0 PR Granted FFFFFFFF.7FF44E50 NET$NETPROXY_MODIFIED Kern
FFFFFFFF.7FF52850 0C000082 00000000 00000000 80CB5020 0 CR Granted FFFFFFFF.7FF43550 F11B$vSWPCTX_DUMPS Kern
FFFFFFFF.7FF53250 09000087 00000000 00010008 80CE66F0 4 EX Granted FFFFFFFF.7FF49850 RMS$$J.....X6JU_R3N ... Exec
FFFFFFFF.7FF46C50 2700008E 00000000 0001000A 80CE66F0 2 EX Granted FFFFFFFF.7FF53750 RMS$.....X6JU_R3N ... Exec
FFFFFFFF.7FF54750 03000094 00000000 00010008 80CE66F0 2 EX Granted FFFFFFFF.7FF4A950 RMS$$K.....X6JU_R3N ... Exec
FFFFFFFF.7FF54B50 04000098 10000042 00010008 00011358 0 CR Granted FFFFFFFF.7FF55050 WRITER             User
FFFFFFFF.7FF54D50 05000099 11000047 00010009 00010F48 0 PR Granted FFFFFFFF.7FF56F50 JBC$_CHECK_DB      User
FFFFFFFF.7FF55150 0100009A 10000042 00010008 000112E0 0 CR Granted FFFFFFFF.7FF55250 DOORBELL           User
FFFFFFFF.7FF55350 0200009B 00000000 00010008 00010B20 0 CR Granted FFFFFFFF.7FF55450 AUDRSV$DK.....X6JU_R3N ... User
FFFFFFFF.7FF55550 0200009C 00000000 00010008 80CE66F0 2 EX Granted FFFFFFFF.7FF55850 RMS$$L.....X6JU_R3N ... Exec
FFFFFFFF.7FF55D50 020000A0 00000000 00010008 000123E0 0 CR Granted FFFFFFFF.7FF55C50 AUDRSV$OL.....X6JU_R3N ... User
FFFFFFFF.7FF57250 040000A9 00000000 0001000A 80CE66F0 2 EX Granted FFFFFFFF.7FF4AD50 RMS$$E.....X6JU_R3N ... Exec
FFFFFFFF.7FF57A50 030000AF 110000AA 0001000A 00012628 0 PR Granted FFFFFFFF.7FF57D50 QMAN$REF.....     User
FFFFFFFF.7FF58150 010000B2 110000AA 0001000A 000109C0 0 PR Granted FFFFFFFF.7FF58050 QMAN$NEW_JOBCTL    User
FFFFFFFF.7FF58E50 050000B9 110000AA 0001000A 000147F8 0 PR Granted FFFFFFFF.7FF58F50 QMAN$MASTER_QUEUE User
  
```

ZK-9158A-AI

This example shows the brief display for all locks with a blocking AST.



---

## SHOW MACHINE\_CHECK

Displays the contents of the stored machine check frame. This command is valid for the DEC 4000 Alpha, DEC 7000 Alpha, and DEC 10000 Alpha computers only.

### Format

```
SHOW MACHINE_CHECK [/FULL] [cpu-id]
```

### Parameter

#### **cpu-id**

Numeric value from 00 to 1F<sub>16</sub> indicating the identity of the CPU for which context information is to be displayed. This parameter changes the SDA current CPU (the default) to the CPU specified with **cpu-id**. If you specify a value outside this range, or you specify the **cpu-id** of a processor that was not active at the time of the system failure, SDA displays the following message:

```
%SDA-E-CPUNOTVLD, CPU not booted or CPU number out of range
```

If you use the **cpu-id** parameter, the SHOW MACHINE\_CHECK command performs an implicit SET CPU command, making the CPU indicated by **cpu-id** the current CPU for subsequent SDA commands. (See the description of the SET CPU command and Chapter 2, Section 2.5 for information on how this can affect the CPU context—and process context—in which SDA commands execute.)

### Qualifier

#### **/FULL**

Specifies that a detailed version of the machine check information be displayed. This is currently identical to the default summary display.

### Description

The SHOW MACHINE\_CHECK command displays the contents of the stored machine check frame. A separate frame is allocated at boot time for every CPU in a multiple-CPU system. This command is valid for the DEC 4000 Alpha, DEC 7000 Alpha, and DEC 10000 Alpha computers only.

If you do not specify a qualifier, a summary version of the machine check frame is displayed.

The default **cpu-id** is the SDA current CPU.

## SDA Commands

### SHOW MACHINE\_CHECK

#### Examples

1. SDA> SHOW MACHINE\_CHECK  
CPU 00 Stored Machine Check Crash Data

-----  
Processor specific information:  
-----

|                       |                   |                     |                   |
|-----------------------|-------------------|---------------------|-------------------|
| Exception address:    | FFFFFFFF.800B0250 | Exception Summary:  | 00000000.00000000 |
| Pal base address:     | 00000000.00008000 | Exception Mask:     | 00000000.00000000 |
| HW Interrupt Request: | 00000000.00000342 | HW Interrupt Ena:   | 00000001.FFC01CE0 |
| MM_CSR                | 00000000.00003640 | ICCSR:              | 00000002.381F0000 |
| D-cache address:      | 00000007.FFFFFFFF | D-cache status:     | 00000000.000002E0 |
| BIU status:           | 00000000.00000050 | BIU address [7..0]: | 00000000.000060E0 |
| BIU control:          | 00000008.50006447 | Fill Address:       | 00000000.00006120 |
| Single-bit syndrome:  | 00000000.00000000 | Processor mchck VA: | 00000000.00006190 |
| A-box control:        | 00000000.0000040E | B-cache TAG:        | 00106100.83008828 |

-----  
System specific information:  
-----

|                   |                   |                     |                   |
|-------------------|-------------------|---------------------|-------------------|
| Garbage bus info: | 00200009 00000038 | Device type:        | 000B8001          |
| LCNR:             | 00000001          | Memory error:       | 00000000          |
| LBER:             | 00000009          | Bus error synd 0,1: | 00000000 00000000 |
| Bus error cmd:    | 00048858 00AB1C88 | Bus error synd 2,3: | 00000000 0000002C |
| LEP mode:         | 00010010          | LEP lock address:   | 00041108          |

**The SHOW MACHINE\_CHECK command in this SDA display shows the contents of the stored machine check frame.**

2. SDA> SHOW MACHINE\_CHECK 1  
CPU 01 Stored Machine Check Crash Data

-----  
Processor specific information:  
-----

|                       |                   |                     |                   |
|-----------------------|-------------------|---------------------|-------------------|
| Exception address:    | FFFFFFFF.800868A0 | Exception Summary:  | 00000000.00000000 |
| Pal base address:     | 00000000.00008000 | Exception Mask:     | 00000000.00000000 |
| HW Interrupt Request: | 00000000.00000342 | HW Interrupt Ena:   | 00000000.1FFE1CE0 |
| MM_CSR                | 00000000.00005BF1 | ICCSR:              | 00000000.081F0000 |
| D-cache address:      | 00000007.FFFFFFFF | D-cache status:     | 00000000.000002E0 |
| BIU status:           | 00000000.00000050 | BIU address [7..0]: | 00000000.000063E0 |
| BIU control:          | 00000008.50006447 | Fill Address:       | 00000000.00006420 |
| Single-bit syndrome:  | 00000000.00000000 | Processor mchck VA: | 00000000.00006490 |
| A-box control:        | 00000000.0000040E | B-cache TAG:        | 35028EA0.50833828 |

-----  
System specific information:  
-----

|                   |                   |                     |                   |
|-------------------|-------------------|---------------------|-------------------|
| Garbage bus info: | 00210001 00000038 | Device type:        | 000B8001          |
| LCNR:             | 00000001          | Memory error:       | 00000080          |
| LBER:             | 00040209          | Bus error synd 0,1: | 00000000 00000000 |
| Bus error cmd:    | 00048858 00AB1C88 | Bus error synd 2,3: | 00000000 0000002C |
| LEP mode:         | 00010010          | LEP lock address:   | 00041108          |

**The SHOW MACHINE\_CHECK command in this SDA display shows the contents of the stored machine check frame for **cpu-id 01**.**

---

## SHOW MEMORY

Displays the availability and usage of memory resources.

### Format

```
SHOW MEMORY [/ALL][/BUFFER_OBJECTS][/CACHE][/FILES]
             [/FULL][/GH_REGIONS][/PHYSICAL_PAGES][/POOL]
             [/RESERVED][/SLOTS]
```

### Parameters

None.

### Qualifiers

#### **/ALL**

Displays all available information, that is, information displayed by the following qualifiers:

```
/BUFFER_OBJECTS
/CACHE
/FILES
/GH_REGIONS
/PHYSICAL_PAGES
/POOL
/RESERVED
/SLOTS
```

This is the default display.

#### **/BUFFER\_OBJECTS**

Displays information about system resources used by buffer objects.

#### **/CACHE**

Displays information about either the Virtual I/O Cache facility, or the Extended File Cache facility. The system parameter `VCC_FLAGS` determines which is used. The cache facility information is displayed as part of the `SHOW MEMORY` and `SHOW MEMORY/CACHE/FULL` commands.

#### **/FILES**

Displays information about the use of each paging and swapping file currently installed.

#### **/FULL**

Displays additional information about each pool area or paging or swapping file currently installed, when used with the `/POOL` or the `/FILES` qualifier. This qualifier is ignored unless the `/FILES` or the `/POOL` qualifier is specified explicitly. When used with the `/CACHE` qualifier, `/FULL` displays additional information about the use of the Virtual I/O Cache facility, but is ignored if the Extended File Cache facility is in use.

#### **/GH\_REGIONS**

Displays information about the granularity hint regions (GHR) that have been established. For each of these regions, information is displayed about the size of the region, the amount of free memory, the amount of memory in use, and

## SDA Commands

### SHOW MEMORY

the amount of memory released to OpenVMS from the region. The granularity hint regions information is also displayed as part of SHOW MEMORY, SHOW MEMORY/ALL, and SHOW MEMORY/FULL commands.

#### **/PHYSICAL\_PAGES**

Displays information about the amount of physical memory and the number of free and modified pages.

#### **/POOL**

Displays information about the usage of each dynamic memory (pool) area, including the amount of free space and the size of the largest contiguous block in each area.

#### **/RESERVED**

Displays information about memory reservations.

#### **/SLOTS**

Displays information about the availability of partition control block (PCB) vector slots and balance slots.

## Description

For more details on the SHOW MEMORY command, see the description in *OpenVMS DCL Dictionary: N-Z*.

---

## SHOW PAGE\_TABLE

Displays a range of system page table entries, the entire system page table, or the entire global page table.

### Format

```
SHOW PAGE_TABLE {range|/FREE [/HEADER=address]
                |/GLOBAL|/GPT|/PT
                |/INVALID_PFN [=option]
                |/NONMEMORY_PFN [=option]
                |/PTE_ADDRESS|/SECTION_INDEX=n
                |/S0S1 (d)|/S2|/SPTW|=ALL}
                {/L1|/L2|/L3 (d)}
```

### Parameter

#### range

Range of virtual addresses or PTE addresses for which SDA displays page table entries. If the qualifier `/PTE_ADDRESS` is given, then the range is of PTE addresses; otherwise, the range is of virtual addresses.

If `/PTE_ADDRESS` is given, the range is expressed using the following syntax:

*m* Displays the single page table entry at address *m*  
*m:n* Displays the page table entries from address *m* to address *n*  
*m;n* Displays *n* bytes of page table entries starting at address *m*

If `/PTE_ADDRESS` is not given, then range is expressed using the following syntax:

*m* Displays the single page table entry that corresponds to virtual address *m*  
*m:n* Displays the page table entries that correspond to the range of virtual addresses from *m* to *n*  
*m;n* Displays the page table entries that correspond to a range of *n* bytes starting at virtual address *m*

### Qualifiers

#### /FREE

Causes the starting addresses and sizes of blocks of pages in the free page list to be displayed. The qualifiers `/S0S1` (default), `/S2`, `/GLOBAL`, and `/HEADER` determine which free page list is to be displayed.

#### /GLOBAL

Lists the global page table. When used with the `/FREE` qualifier, `/GLOBAL` indicates the free page list to be displayed.

#### /HEADER=address

When used with the `/FREE` qualifier, the `/HEADER=address` qualifier displays the free list for the specified private page table.

#### /GPT

Specifies the portion of page table space that maps the global page table as the address range.

## SDA Commands

### SHOW PAGE\_TABLE

#### **/INVALID\_PFN [=option]**

The /INVALID\_PFN qualifier, which is valid on platforms that supply an I/O memory map, causes SDA to display only page table entries that map to PFNs that are not in the system's private memory, nor in Galaxy shared memory, nor are I/O access pages.

See the /NONMEMORY\_PFN qualifier definition for a description of the options.

#### **/L1**

Lists the Level 1 page table entries for the portion of memory specified.

#### **/L2**

Lists the Level 2 page table entries for the portion of memory specified.

#### **/L3**

Lists the Level 3 page table entries for the portion of memory specified. This qualifier is the default level.

#### **/NONMEMORY\_PFN [=option]**

The /NONMEMORY\_PFN qualifier, supported on all platforms, causes SDA to display only page table entries that are neither in the system's private memory nor in Galaxy shared memory.

Both /INVALID\_PFN and /NONMEMORY\_PFN qualifiers allow two optional keywords, READONLY and WRITABLE. If neither keyword is given, all relevant pages are displayed. If READONLY is given, only pages marked for no write access are displayed. If WRITABLE is given, only pages that allow write access are displayed. For example, SHOW PAGE\_TABLE=ALL/INVALID\_PFN=WRITABLE would display all system pages whose protection allows write, but which map to PFNs that do not belong to this system.

#### **/PT**

Specifies page table space, as viewed from system context, as the address range.

#### **/PTE\_ADDRESS**

Specifies that the range given is of PTE addresses instead of the virtual addresses mapped by the PTEs.

#### **/SECTION\_INDEX=*n***

Displays the page table for the range of pages in the global section or pageable part of a loaded image. For pageable portions of loaded images, one of the qualifiers /L1, /L2, or /L3 can also be specified.

#### **/SOS1**

Specifies S0 and S1 space as the address range. When used with the /FREE qualifier, /SOS1 indicates the free page list to be displayed. This is the default portion of memory or free page list to be displayed.

#### **/S2**

Specifies S2 space as the address range. When used with the /FREE qualifier, /S2 indicates the free page list to be displayed.

#### **/SPTW**

Displays the contents of the system page table window.

## Option

### **=ALL**

The SHOW PAGE = ALL command displays the page table entries for all shared (system) addresses, without regard to the section of memory being referenced. It is equivalent to specifying all of /S0S1, /S2, /SPTW, /PT, /GPT, and /GLOBAL. This option can be qualified by only one of the /L1, /L2, or /L3 qualifiers.

## Description

If the /FREE qualifier is not specified, this command displays page table entries for the specified range of addresses or section of memory. For each virtual address displayed by the SHOW PAGE\_TABLE command, the first eight columns of the listing provide the associated page table entry and describe its location, characteristics, and contents. SDA obtains this information from the system page table. Table 4–5 describes the information displayed by the SHOW PAGE\_TABLE command.

If the /FREE qualifier is specified, this command displays the free PTE list for the specified section of memory.

Note that the /L1, /L2, and /L3 qualifiers are ignored when used with the /FREE, /GLOBAL, and /SPTW qualifiers.

**Table 4–5 Virtual Page Information in the SHOW PAGE\_TABLE Display**

| <b>Value</b>   | <b>Meaning</b>                                                                                                                                                           |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MAPPED ADDRESS | Virtual address that marks the base of the virtual page(s) mapped by the PTE.                                                                                            |
| PTE ADDRESS    | Virtual address of the page table entry that maps the virtual page(s).                                                                                                   |
| PTE            | Contents of the page table entry, a quadword that describes a system virtual page.                                                                                       |
| TYPE           | Type of virtual page. Table 4–6 shows the eight types and their meanings.                                                                                                |
| READ           | A code, derived from bits in the PTE, that designates the processor access modes (kernel, executive, supervisor, or user) for which read access is granted.              |
| WRIT           | A code, derived from bits in the PTE, that designates the processor access modes (kernel, executive, supervisor, or user) for which write access is granted.             |
| BITS           | Letters that represent the setting of a bit or a combination of bits in the PTE. These bits indicate attributes of a page. Table 4–7 shows the codes and their meanings. |
| GH             | Contents of granularity hint bits.                                                                                                                                       |

## SDA Commands

### SHOW PAGE\_TABLE

**Table 4–6 Type of Virtual Pages**

| Type  | Meaning                                                                                                                                                                       |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| VALID | Valid page (in main memory).                                                                                                                                                  |
| TRANS | Transitional page (on free or modified page list).                                                                                                                            |
| DZERO | Demand-allocated, zero-filled page.                                                                                                                                           |
| PGFIL | Page within a paging file.                                                                                                                                                    |
| STX   | Section table's index page.                                                                                                                                                   |
| GPTX  | Index page for a global page table.                                                                                                                                           |
| IOPAG | Page in I/O address space.                                                                                                                                                    |
| NXMEM | Page not represented in physical memory. The page frame number (PFN) of this page is not mapped by any of the system's memory controllers. This indicates an error condition. |

**Table 4–7 Bits In the PTE**

| Code | Meaning                            |
|------|------------------------------------|
| A    | Address space match is set.        |
| M    | Page has been modified.            |
| L    | Page is locked into a working set. |
| K    | Owner is kernel mode.              |
| E    | Owner is executive mode.           |
| S    | Owner is supervisor mode.          |
| U    | Owner is user mode.                |

If the virtual page has been mapped to a physical page, the last six columns of the listing include information from the page frame number (PFN) database; otherwise, the section is left blank. Table 4–8 describes the physical page information displayed by the SHOW PAGE\_TABLE command.

**Table 4–8 Physical Page Information in the SHOW PAGE\_TABLE Display**

| Category | Meaning                                                                                                                                                                         |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PGTYP    | Type of physical page. Table 4–9 shows the types of physical pages.                                                                                                             |
| LOC      | Location of the page within the system. Table 4–10 shows the possible locations with their meaning.                                                                             |
| BAK      | Place to find information on this page when all links to this PTE are broken: either an index into a process section table or the number of a virtual block in the paging file. |
| REFCNT   | Number of references being made to this page.                                                                                                                                   |

(continued on next page)



**Table 4–8 (Cont.) Physical Page Information in the SHOW PAGE\_TABLE Display**

| Category | Meaning                                                                                                                                                                                                                                            |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FLINK    | Forward link within PFN database that points to the next physical page (if the page is on one of the lists: FREE, MODIFIED, BAD, or ZEROED); this longword also acts as the count of the number of processes that are sharing this global section. |
| BLINK    | Backward link within PFN database (if the page is on one of the lists: FREE, MODIFIED, BAD, or ZEROED); also acts as an index into the working set list.                                                                                           |

**Table 4–9 Types of Physical Pages**

| Page Type            | Meaning                                               |
|----------------------|-------------------------------------------------------|
| PROCESS              | Page is part of process space.                        |
| SYSTEM               | Page is part of system space.                         |
| GLOBAL               | Page is part of a global section.                     |
| PPGTBL               | Page is part of a process page table.                 |
| PHD <sup>1</sup>     | Page is part of a process PHD.                        |
| PPT(Ln) <sup>1</sup> | Page is a process page table page at level <i>n</i> . |
| SPT(Ln) <sup>1</sup> | Page is a system page table page at level <i>n</i> .  |
| GPGTBL               | Page is part of a global page table.                  |
| GBLWRT               | Page is part of a global, writable section.           |
| SHPT <sup>2</sup>    | Page is part of a shared page table.                  |
| UNKNOWN              | Unknown.                                              |

<sup>1</sup>These page types are variants of the PPGTBL page type.

<sup>2</sup>The SHPT page type is a variant of the GBLWRT page type.

**Table 4–10 Location of the Page**

| Location | Meaning                                                   |
|----------|-----------------------------------------------------------|
| ACTIVE   | Page is in a working set.                                 |
| MFYLST   | Page is in the modified page list.                        |
| FRELST   | Page is in the free page list.                            |
| BADLST   | Page is in the bad page list.                             |
| RELPNP   | Release of the page is pending.                           |
| RDERR    | Page has had an error during an attempted read operation. |
| PAGOUT   | Page is being written into a paging file.                 |
| PAGIN    | Page is being brought into memory from a paging file.     |
| ZROLST   | Page is in the zeroed-page list.                          |
| UNKNWN   | Location of page is unknown.                              |

SDA indicates pages are inaccessible by displaying one of the following messages:

## SDA Commands

### SHOW PAGE\_TABLE

```

----- 1 null page:      VA  FFFFFFFE.00064000   PTE  FFFFFFFD.FF800190
----- 974 null pages:   VA  FFFFFFFE.00064000   PTE  FFFFFFFD.FF800190
                          -to- FFFFFFFE.007FDFFF     -to- FFFFFFFD.FF801FF8

```

In this case, the page table entries are not in use (page referenced is inaccessible).

```

----- 1 entry not in memory:  VA  FFFFFFFE.00800000   PTE  FFFFFFFD.FF802000
----- 784384 entries not in memory: VA  FFFFFFFE.00800000   PTE  FFFFFFFD.FF802000
                          -to- FFFFFFFF.7F7FDFFF     -to- FFFFFFFD.FFDFFF8

```

In this case, the page table entries do not exist (PTE itself is inaccessible).

```

----- 1 free PTE:      VA  FFFFFFFF.7F800000   PTE  FFFFFFFD.FFDFF000
----- 1000 free PTEs:  VA  FFFFFFFF.7F800000   PTE  FFFFFFFD.FFDFF000
                          -to- FFFFFFFF.7FFCDFFF     -to- FFFFFFFD.FFDFFF38

```

In this case, the page table entries are in the list of free system pages.

In each case, "VA" is the MAPPED ADDRESS of the skipped entry, and "PTE" is the PTE ADDRESS of the skipped entry.

## Examples

1.

For an example of SHOW PAGE\_TABLE output when the qualifier /FREE has not been given, see the SHOW PROCESS/PAGE\_TABLES command.

2. SDA> SHOW PAGE\_TABLE/FREE

S0/S1 Space Free PTEs

```

-----
MAPPED ADDRESS      PTE ADDRESS      PTE      COUNT
FFFFFFFF.82A08000   FFFFFFFD.FFE0A820 0001FFE0.A8580000 00000003
FFFFFFFF.82A16000   FFFFFFFD.FFE0A858 0001FFE0.A8900000 00000003
FFFFFFFF.82A24000   FFFFFFFD.FFE0A890 0001FFE0.B3C00000 00000003
FFFFFFFF.82CF0000   FFFFFFFD.FFE0B3C0 0001FFE0.B4010000 00000001
FFFFFFFF.82D00000   FFFFFFFD.FFE0B400 0001FFE0.B4680000 00000002
.
.
.
FFFFFFFF.82E48000   FFFFFFFD.FFE0B920 0001FFE0.B9390000 00000001
FFFFFFFF.82E4E000   FFFFFFFD.FFE0B938 0001FFE0.BA200000 00000002
FFFFFFFF.82E88000   FFFFFFFD.FFE0BA20 0001FFE0.C9780000 00000003
FFFFFFFF.8325E000   FFFFFFFD.FFE0C978 0001FFE0.CC980000 00000003
FFFFFFFF.83326000   FFFFFFFD.FFE0CC98 00000000.00000000 0000066D

```

This example shows the output when you invoke the SHOW PAGE\_TABLE/FREE command.

---

## SHOW PARAMETER

Displays the name, location, and value of one or more SYSGEN parameters at the time that the system dump is taken.

### Format

```
SHOW PARAMETER [SYSGEN_parameter]
                [/ACP][/ALL][/CLUSTER][/DYNAMIC][/GALAXY]
                [/GEN][/JOB][/LGI][/MAJOR][/MULTIPROCESSING]
                [/PQL][/RMS][/SCS][/SPECIAL][/SYS][/STARTUP]
                [/TTY]
```

### Parameter

#### **SYSGEN\_parameter**

The name of a parameter to be displayed. The name given may include wildcards. However, a truncated name is not recognized, unlike the equivalent SYSGEN and SYSMAN commands.

### Qualifiers

#### **/ACP**

Displays all Files-11 ACP parameters.

#### **/ALL**

Displays the values of all parameters except the special control parameters.

#### **/CLUSTER**

Displays all parameters specific to clusters.

#### **/DYNAMIC**

Displays all parameters that can be changed on a running system.

#### **/GALAXY**

Displays all parameters specific to Galaxy systems.

#### **/GEN**

Displays all general parameters.

#### **/JOB**

Displays all Job Controller parameters.

#### **/LGI**

Displays all LOGIN security control parameters.

#### **/MAJOR**

Displays the most important parameters.

#### **/MULTIPROCESSING**

Displays parameters specific to multiprocessing.

#### **/PQL**

Displays the parameters for all default and minimum process quotas.

## SDA Commands

### SHOW PARAMETER

#### **/RMS**

Displays all parameters specific to OpenVMS Record Management Services (RMS).

#### **/SCS**

Displays all parameters specific to OpenVMS Cluster System Communications Services.

#### **/SPECIAL**

Displays all special control parameters.

#### **/STARTUP**

Displays the name of the site-independent startup procedure.

#### **/SYS**

Displays all active system parameters.

#### **/TTY**

Displays all parameters for terminal drivers.

### Description

The SHOW PARAMETER command displays the name, location and value of one or more SYSGEN parameters at the time that the system dump is taken. You can specify either a parameter name, or one or more qualifiers, but not both a parameter and qualifiers. If you do not specify a parameter nor qualifiers, then the last parameter displayed is displayed again.

The qualifiers are the equivalent to those available for the SHOW [parameter] command in the SYSGEN utility and the PARAMETERS SHOW command in the SYSMAN utility. See the *OpenVMS System Management Utilities Reference Manual: M-Z* for more information about these two commands. You can combine qualifiers, and all appropriate SYSGEN parameters are displayed.

---

#### **Note**

---

To see the entire set of parameters, use the SDA command SHOW PARAMETER /ALL /SPECIAL /STARTUP.

---

# SDA Commands SHOW PARAMETER

## Examples

1. SDA> SHOW PARAMETER \*SCS\*

| Parameter        | Variable                 | Address  | Value     | (decimal) | Offset                     |
|------------------|--------------------------|----------|-----------|-----------|----------------------------|
| SCSBUFFCNT       | SCS\$GW_BDTCNT           | 80C159A0 | 0032      | 50        |                            |
| SCSCONNCNT       | SCS\$GW_CDTCNT           | 80C159A8 | 0005      | 5         |                            |
| SCSRESPCNT       | SCS\$GW_RDTCNT           | 80C159B0 | 012C      | 300       |                            |
| SCSMAXDG         | SCS\$GW_MAXDG            | 80C159B8 | 0240      | 576       |                            |
| SCSMAXMSG        | SCS\$GW_MAXMSG           | 80C159C0 | 00D8      | 216       |                            |
| SCSFLOWCUSH      | SCS\$GW_FLOWCUSH         | 80C159C8 | 0001      | 1         |                            |
| SCSSYSTEMID      | SCS\$GB_SYSTEMID         | 80C159D0 | 0000FE88  | 65160     |                            |
| SCSSYSTEMIDH     | SCS\$GB_SYSTEMIDH        | 80C159D8 | 00000000  | 0         |                            |
| SCSNODE          | SCS\$GB_NODENAME         | 80C159E0 | "SWPCTX " |           |                            |
| NISCS_CONV_BOOT  | CLU\$GL_SGN_FLAGS        | 80C15E68 | 0         | 0         | CLU\$V_NISCS_CONV_BOOT (1) |
| NISCS_LOAD_PEA0  | CLU\$GL_SGN_FLAGS        | 80C15E68 | 0         | 0         | CLU\$V_NISCS_LOAD_PEA0 (0) |
| NISCS_PORT_SERV  | CLU\$GL_NISCS_PORT_SERV  | 80C15E70 | 00000000  | 0         |                            |
| SCSICLUSTER_P1   | SGN\$GB_SCSICLUSTER_P1   | 80C15EF8 | " "       |           |                            |
| SCSICLUSTER_P2   | SGN\$GB_SCSICLUSTER_P2   | 80C15F00 | " "       |           |                            |
| SCSICLUSTER_P3   | SGN\$GB_SCSICLUSTER_P3   | 80C15F08 | " "       |           |                            |
| SCSICLUSTER_P4   | SGN\$GB_SCSICLUSTER_P4   | 80C15F10 | " "       |           |                            |
| NISCS_MAX_PKT SZ | CLU\$GL_NISCS_MAX_PKT SZ | 80C16070 | 000005DA  | 1498      |                            |
| NISCS_LAN_OVRHD  | CLU\$GL_NISCS_LAN_OVRHD  | 80C16078 | 00000012  | 18        |                            |

VM-0060A-AI

This example shows all parameters that have the string "SCS" in their name. Note that for parameters defined as a single bit, the name and value of the bit offset within the location used for the parameter are also given.

2. SDA> SHOW PARAMETER WS\*

| Parameter  | Variable                  | Address  | Value    | (decimal) | Offset |
|------------|---------------------------|----------|----------|-----------|--------|
| WSMAX      | SGN\$GL_MAXWSCNT_PAGELETS | 80C15710 | 00006800 | 26624     |        |
| (internal) | SGN\$GL_MAXWSCNT_PAGES    | 80C15718 | 00000680 | 1664      |        |
| WSINC      | SCH\$GL_WSINC_PAGELETS    | 80C157F8 | 00000960 | 2400      |        |
| (internal) | SCH\$GL_WSINC_PAGES       | 80C15800 | 00000096 | 150       |        |
| WSDEC      | SCH\$GL_WSDEC_PAGELETS    | 80C15808 | 00000FA0 | 4000      |        |
| (internal) | SCH\$GL_WSDEC_PAGES       | 80C15810 | 000000FA | 250       |        |

VM-0764A-AI

This example shows all parameters whose names begin with the string "WS". Note that for parameters that have both an external value (pagelets) and an internal value (pages), both are displayed.

3. SDA> SHOW PARAMETER /MULTIPROCESSING /STARTUP

SYSGEN parameters

| Parameter       | Variable                    | Address  | Value    | (decimal) | Offset |
|-----------------|-----------------------------|----------|----------|-----------|--------|
| SMP_CPUS        | SGN\$GL_SMP_CPUS            | 80C15688 | FFFFFFFF | -1        |        |
| MULTIPROCESSING | SGN\$GB_MULTIPROCESSING     | 80C15698 | 03       | 3         |        |
| SMP_SANITY_CNT  | SGN\$GL_SMP_SANITY_CNT      | 80C156A8 | 0000012C | 300       |        |
| SMP_SPINWAIT    | SGN\$GL_SMP_SPINWAIT        | 80C156B8 | 000186A0 | 100000    |        |
| SMP_LNGSPINWAIT | SGN\$GL_SMP_LNGSPINWAIT     | 80C156C0 | 002DC6C0 | 3000000   |        |
| IO_PREFER_CPUS  | SMP\$GL_AVAILABLE_PORT_CPUS | 80C16130 | FFFFFFFF | -1        |        |

Startup command file = SYS\$SYSTEM:STARTUP.COM

VM-0765A-AI

This example shows all the parameters specific to multiprocessing, plus the name of the site-independent startup command procedure.

## SHOW PFN\_DATA

Displays information that is contained in the page lists and PFN database.

### Format

```
SHOW PFN_DATA {[/qualifier] | pfn [{:end-pfn | ;length}]}
```

or

```
SHOW PFN_DATA/MAP
```

### Parameters

#### **pfn**

Specifies the page frame number (PFN) of the physical page for which information is to be displayed.

#### **length**

Specifies the length of the PFN list to be displayed. When you specify the **length** parameter, a range of PFNs is displayed. This range starts at the PFN specified by the **pfn** parameter and contains the number of entries specified by the **length** parameter.

#### **end-pfn**

Specifies the last PFN to be displayed. When you specify the **end-pfn** parameter, a range of PFNs is displayed. This range starts at the PFN specified by the **pfn** parameter and ends with the PFN specified by the **end-pfn** parameter.

### Qualifiers

#### **/ADDRESS=<PFN-entry-address>**

Displays the PFN database entry at the address specified. The address specified is rounded to the nearest entry address so if you have an address that points to one of the fields of the entry, the correct database entry will still be found.

#### **/ALL**

Displays the following lists:

- free page list
- zeroed free page list
- modified page list
- bad page list
- untested page list
- private page lists, if any
- per-color free and zeroed free page lists
- entire database in order by page frame number

This is the default behavior of the SHOW PFN\_DATA command. SDA precedes each list with a count of the pages it contains and its low and high limits.

#### **/BAD**

Displays the bad page list. SDA precedes the list with a count of the pages it contains, its low limit, and its high limit.

**/COLOR [= {n | ALL}]**

Displays data on page coloring. Table 4–11 shows the command options available with this qualifier.

**Table 4–11 Command Options with the /COLOR and /RAD Qualifiers**

| Options                                                                                          | Meaning                                                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| /COLOR <sup>1</sup> with no value                                                                | Displays a summary of the lengths of the color <sup>1</sup> page lists for both free pages and zeroed pages.                                                                                                             |
| /COLOR= <i>n</i> where <i>n</i> is a color number                                                | Displays the data in the PFN lists (for the specified color) for both free and zeroed pages.                                                                                                                             |
| /COLOR=ALL                                                                                       | Displays the data in the PFN lists (for all colors), for both free and zeroed free pages.                                                                                                                                |
| /COLOR= <i>n</i> or /COLOR=ALL with /FREE or /ZERO                                               | Displays only the data in the PFN list (for the specified color or all colors), for either free or zeroed free pages as appropriate. The qualifiers /BAD and /MODIFIED are ignored with /COLOR= <i>n</i> and /COLOR=ALL. |
| /COLOR without an option specified together with one or more of /FREE, /ZERO, /BAD, or /MODIFIED | Displays the color summary in addition to the display of the requested list(s).                                                                                                                                          |

<sup>1</sup>Wherever COLOR is used in this table, RAD is equally applicable, both in the qualifier name and the meaning.

For more information on page coloring, see *OpenVMS System Management Utilities Reference Manual: M–Z*.

**/FREE**

Displays the free page list. SDA precedes the list with a count of the pages it contains, its low limit, and its high limit.

**/MAP**

Displays the contents of the PFN memory map. On platforms that support it, the I/O space map is also displayed. The /MAP qualifier cannot be combined with any parameters or other qualifiers.

**/MODIFIED**

Displays the modified page list. SDA precedes the list with a count of the pages it contains, its low limit, and its high limit.

**/PRIVATE [=address]**

Displays private PFN lists. If no address is given, all private PFN lists are displayed; if an address is given, only the PFN list whose head is at the given address is displayed.

**/RAD [= {n | ALL}]**

Displays data on the disposition of pages among the Resource Affinity Domains on applicable systems. See Table 4–11 for the command options available with this qualifier.

## SDA Commands

### SHOW PFN\_DATA

#### **/SYSTEM**

Displays the entire PFN database in order by page frame number, starting at PFN 0000.

#### **/UNTESTED**

Displays the state of the untested PFN list that was set up for deferred memory testing.

#### **/ZERO**

Displays the contents of the zeroed free page list.

## Description

For each page frame number it displays, the SHOW PFN\_DATA command lists information used in translating physical page addresses to virtual page addresses. The display has two lines of information. Table 4–12 shows the first line's fields; Table 4–13 shows the second line's fields.

**Table 4–12 Page Frame Number Information—Line One Fields**

| Item       | Contents                                                                                                                                                                                                                                           |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PFN        | Page frame number.                                                                                                                                                                                                                                 |
| DB ADDRESS | Address of PFN structure for this page.                                                                                                                                                                                                            |
| PT PFN     | PFN of the page page table page that maps this page.                                                                                                                                                                                               |
| BAK        | Place to find information on this page when all links to this PTE are broken: either an index into a process section table or the number of a virtual block in the paging file.                                                                    |
| FLINK      | Forward link within PFN database that points to the next physical page (if the page is on one of the lists: FREE, MODIFIED, BAD, or ZEROED); this longword also acts as the count of the number of processes that are sharing this global section. |
| BLINK      | Backward link within PFN database (if the page is on one of the lists: FREE, MODIFIED, BAD, or ZEROED); also acts as an index into the working set list.                                                                                           |
| SWP/BO     | Either a swap file page number or a buffer object reference count, depending on a flag set in the page state field.                                                                                                                                |
| LOC        | Location of the page within the system. Table 4–10 shows the possible locations with their meaning.                                                                                                                                                |
| FLAGS      | The flags in text form that are set in page state. Table 4–14 shows the possible flags and their meaning.                                                                                                                                          |



**Table 4–13 Page Frame Number Information—Line Two Fields**

| Item        | Contents                                                                                                                                                                                                                                                                                                     |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blank       |                                                                                                                                                                                                                                                                                                              |
| PTE ADDRESS | Virtual address of the page table entry that describes the virtual page mapped into this physical page. If no virtual page is mapped into this physical page then "<no backpointer>" is displayed.                                                                                                           |
| PTE Type    | If a virtual page is mapped into this physical page, a description of the type of PTE is provided in the next two or three columns: one of "System-space PTE", "Global PTE", "Process PTE (process index <i>nnnn</i> )". If no virtual page is mapped into this physical page, these columns are left blank. |
| REFCNT      | Number of references being made to this page.                                                                                                                                                                                                                                                                |
| PAGETYP     | Type of physical page. See Table 4–9 for the types of physical pages and their meanings.                                                                                                                                                                                                                     |
| FLAGS       | If the page is a page table page, then the contents of the PRN\$W_PT_VAL_CNT, PFN\$W_PT_LCK_CNT, and PFN\$W_PT_WIN_CNT fields are displayed. The format is as follows:<br><br>VALCNT = <i>nnnn</i> LCKCNT = <i>nnnn</i> WINCNT = <i>nnnn</i>                                                                 |

**Table 4–14 Flags Set in Page State**

| Flag        | Meaning                                                       |
|-------------|---------------------------------------------------------------|
| BUFOBJ      | Set if any buffer objects reference this page                 |
| COLLISION   | Indicates an empty collision queue when page read is complete |
| BADPAG      | Indicates a bad page                                          |
| RPTEVT      | Indicates a report event on I/O completion                    |
| DELCON      | Indicates a delete PFN when REFCNT=0                          |
| MODIFY      | Indicates a dirty page (modified)                             |
| UNAVAILABLE | Indicates PFN is unavailable; most likely a console page      |

# SDA Commands

## SHOW PFN\_DATA

### Examples

1. SDA> SHOW PFN\_DATA/MAP

System Memory Map

-----

| Start PFN | PFN count | Flags              |
|-----------|-----------|--------------------|
| 00000000  | 000000FA  | 0009 Console Base  |
| 000000FA  | 00003306  | 000A OpenVMS Base  |
| 00003C00  | 000003FF  | 000A OpenVMS Base  |
| 00003FFF  | 00000001  | 0009 Console Base  |
| 00003400  | 00000800  | 0010 Galaxy_Shared |

This example shows the output when you invoke the SHOW PFN/MAP command.

2. SDA> SHOW PFN 1B5:1C1

PFN data base

-----

| PFN      | DB ADDRESS<br>PTE ADDRESS                | PT PFN   | BAK               | FLINK    | BLINK    | SWP/BO<br>REFCNT | LOC<br>PAGETYP           | FLAGS                               |
|----------|------------------------------------------|----------|-------------------|----------|----------|------------------|--------------------------|-------------------------------------|
| 000001B5 | FFFFFFFFE.00004448<br>FFFFFFFFD.FFFFF7E8 | 000001AB | 00000000.00000000 | 00000000 | 00000000 | ----             | ACTIVE<br>SPT(L3)        | VALCNT=0002 LCKCNT=FFFF WINCNT=FFFF |
| 000001B6 | FFFFFFFFE.00004470<br>FFFFFFFFD.FFFFF7F0 | 000001AB | 00000000.00000000 | 00000000 | 00000000 | ----             | ACTIVE<br>SPT(L3)        | VALCNT=00D7 LCKCNT=FFFF WINCNT=FFFF |
| 000001B7 | FFFFFFFFE.00004498<br>FFFFFFFFD.FFFFF7F8 | 000001AB | 00000000.00000000 | 00000000 | 00000000 | ----             | ACTIVE<br>SPT(L3)        | VALCNT=FFFF LCKCNT=FFFF WINCNT=FFFF |
| 000001B8 | FFFFFFFFE.000044C0<br>FFFFFFFFE.00056430 | 00000EAC | 000000ED.00010000 | 00000001 | 00000000 | ----             | ACTIVE<br>GLOBAL         |                                     |
| 000001B9 | FFFFFFFFE.000044E8<br><no backpointer>   | 00000000 | 00000000.00000000 | 00000000 | 00000000 | ----             | ACTIVE<br>SYSTEM         |                                     |
| 000001BA | FFFFFFFFE.00004510<br>FFFFFFFFC.001EBE98 | 00001662 | 03000000.00000000 | 00001134 | 000016EC | ----             | MFYLST modify<br>PROCESS |                                     |
| 000001BB | FFFFFFFFE.00004538<br>FFFFFFFFE.00055F18 | 00000DF7 | 000000DD.00010000 | 0000126A | 00000C7B | ----             | FRELST<br>GLOBAL         |                                     |
| 000001BC | FFFFFFFFE.00004560<br>FFFFFFFFE.0005BBC0 | 000017A8 | 03000000.00000000 | 00000001 | 00000000 | ----             | ACTIVE modify<br>GLOBAL  |                                     |
| 000001BD | FFFFFFFFE.00004588<br>FFFFFFFFC.000009A8 | 00000185 | 03000000.00000000 | 00000000 | 00000183 | ----             | ACTIVE<br>PROCESS        |                                     |
| 000001BE | FFFFFFFFE.000045B0<br>FFFFFFFFD.FF7FE000 | 000001AA | 00000000.00000000 | 00000000 | 00000000 | ----             | ACTIVE<br>SPT(L3)        | VALCNT=FFFF LCKCNT=FFFF WINCNT=FFFF |
| 000001BF | FFFFFFFFE.000045D8<br>FFFFFFFFD.FFE078C0 | 000001B3 | 00000000.00000000 | 00000000 | 00000000 | ----             | ACTIVE<br>SYSTEM         |                                     |
| 000001C0 | FFFFFFFFE.00004600<br>FFFFFFFFC.000021E0 | 000012A2 | 00000017.00010000 | 000012D8 | 000011E3 | ----             | FRELST<br>PROCESS        |                                     |
| 000001C1 | FFFFFFFFE.00004628<br>FFFFFFFFE.0005BAC8 | 000017A8 | 0000016B.00010000 | 00000002 | 00000000 | ----             | ACTIVE<br>GLOBAL         |                                     |

VM-0766A-AI

This example shows the output from SHOW PFN for a range of pages.

---

## SHOW POOL

Displays the contents of the nonpaged dynamic storage pool, the bus-addressable pool, and the paged dynamic storage pool. You can display part or all of each pool. If you do not specify a range or qualifiers, the default is SHOW POOL/ALL. Optionally, you can display the pool history ring buffer and pool statistics.

### Format

```
SHOW POOL  {{range|/ALL (d)|/BAP |/NONPAGED|/PAGED}  
            [/BRIEF|/CHECK|/FREE|/HEADER  
            |/MAXIMUM_BYTES [=n]|/SUMMARY |/TYPE=packet-type  
            |/SUBTYPE=packet-type|/UNUSED] |/RING_BUFFER  
            |/STATISTICS [= ALL] [{/NONPAGED|/BAP|/PAGED}]}
```

### Parameter

#### range

Range of virtual addresses in pool that SDA is to examine. You can express a range using the following syntax:

*m:n* Range of virtual addresses in pool from *m* to *n*

*m;n* Range of virtual addresses in pool starting at *m* and continuing for *n* bytes

### Qualifiers

#### /ALL

Displays the entire contents of dynamic storage pool, except for those portions that are free (available). This is the default behavior of the SHOW POOL command.

#### /BAP

Displays the contents of the bus-addressable dynamic storage pool currently in use.

#### /BRIEF

Displays only general information about dynamic storage pool and its addresses.

#### /CHECK

Checks all free packets for POOLCHECK-style corruption, in exactly the same way that the system does when generating a POOLCHECK crashdump.

#### /FREE

Displays the entire contents, both allocated and free, of the specified region or regions of pool. Use the /FREE qualifier with a **range** to show all of the used and free pool in the given range.

#### /HEADER

Displays only the first 16 longwords of each data packet found within the specified region or regions of pool.

#### /MAXIMUM\_BYTES [=n]

Displays only the first *n* bytes of a pool packet; default is 64 bytes.

#### /NONPAGED

Displays the contents of the nonpaged dynamic storage pool currently in use.

## SDA Commands

### SHOW POOL

#### **/PAGED**

Displays the contents of the paged dynamic storage pool currently in use.

#### **/RING\_BUFFER**

Displays the contents of the nonpaged pool history ring buffer if pool checking has been enabled. Entries are displayed in reverse chronological order, that is, most to least recent.

#### **/STATISTICS [= ALL]**

Displays usage statistics about each lookaside list and the variable free list. For each lookaside list, its queue header address, packet size, the number of packets, attempts, fails, and deallocations are displayed. (If pool checking is disabled, the attempts, fails, and deallocations are not displayed.) For the variable free list, its queue header address, the number of packets and the size of the smallest and largest packets are displayed. /STATISTICS can be further qualified by using either /NONPAGED, /BAP, or /PAGED to display statistics for a specified pool area. (Note that paged pool has no lookaside lists; therefore, only variable free list statistics are displayed.)

If /STATISTICS is specified without the ALL keyword, only active lookaside lists are displayed. Use /STATISTICS = ALL to display all lookaside lists.

#### **/SUBTYPE=*packet-type***

Displays the packets within the specified region or regions of pool that are of the indicated **packet-type**. For information on packet-type, see packet-type in the Description section.

#### **/SUMMARY**

Displays only an allocation summary for each specified region of pool.

#### **/TYPE=*packet-type***

Displays the packets within the specified region or regions of pool that are of the indicated **packet-type**. For information on packet-type, see packet-type in the Description section.

#### **/UNUSED**

Displays only variable free packets and lookaside list packets, not used packets.

## Description

The SHOW POOL command displays information about the contents of any specified region of dynamic storage pool. There are several distinct display formats, as follows:

- Pool layout display. This display includes the addresses of the pool structures and lookaside lists, and the ranges of memory used for pool.
- Full pool packet display. This display has a section for each packet, consisting of a summary line (the packet type, its start address and size, and, on systems that have multiple Resource Affinity Domains (RADs), the RAD number), followed by a dump of the contents of the packet in hexadecimal and ASCII.
- Header pool packet display. This display has a single line for each packet. This line contains the packet type, its start address and size, and, on systems that have multiple RADs, the RAD number, followed by the first sixteen bytes of the packet, in hexadecimal and ASCII.

- Pool summary display. This display consists of a single line for each packet type, and includes the type, the number of occurrences and the total size, and the percentage of used pool consumed by this packet type.
- Pool statistics display. This display consists of statistics for variable free pool and for each lookaside list. For variable free pool, it includes the number of packets, the total bytes available, and the sizes of the smallest and largest packets. In addition, if pool checking is enabled, the total bytes allocated from the variable list and the number of times pool has been expanded are also displayed.

For lookaside lists, the display includes the listhead address and size, the number of packets (both the maintained count and the actual count), the operation sequence number for the list, the allocation attempts and failures, and the number of deallocations.

On systems with multiple RADs, statistics for on-RAD deallocations are included in the display for the first RAD.

- Ring buffer display. This display is only available when pool checking is enabled. It consists of one line for each packet in the ring buffer and includes the address and size of the pool packet being allocated or deallocated, its type, the PC of the caller and the pool routine called, the CPU and IPL of the call, and the system time.

The qualifiers used on the SHOW POOL command determine which displays are generated. The default is the pool layout display, followed by the full pool packet display, followed by the pool summary display, these being generated in turn for Nonpaged Pool, Bus-Addressable Pool (if it exists in the system or dump being analyzed), and then Paged Pool.

If a range, type, or subtype is specified, then the pool layout display is not generated, and the pool summary display is a summary only for the range and/or type/subtype, and not for the entire pool.

Note that not all displays are relevant for all pool types. For example, Paged Pool has no lookaside lists, so the Paged Pool statistics display consists only of variable free pool information. And since there is a single ring buffer for all pools, only one ring buffer display is generated even if all pools are being displayed.

### **Packet-type**

Each packet of pool has a type field (a byte containing a value in the range of 0-255). Many of these type values have names associated that are defined in \$DYNDDEF in SYSSLIBRARY:LIB.MLB. The packet-type specified in the /TYPE qualifier of the SHOW POOL command can either be the value of the pool type or its associated name.

Some pool packet-types have an additional subtype field (also a byte containing a value in the range of 0-255), many of which also have associated names. The packet-type specified in the /SUBTYPE qualifier of the SHOW POOL command can either be the value of the pool type or its associated name. However, if given as a value, a /TYPE qualifier (giving a value or name) must also be specified. Note also that /TYPE and /SUBTYPE are interchangeable if the packet-type is given by name. Table 4-15 shows several examples.

## SDA Commands

### SHOW POOL

**Table 4–15 /TYPE and /SUBTYPE Qualifier Examples**

| <b>/TYPE and /SUBTYPE Qualifiers</b> | <b>Meaning</b>                                       |
|--------------------------------------|------------------------------------------------------|
| /TYPE = CI                           | All CI packets regardless of subtype                 |
| /TYPE = CI_MSG                       | All CI packets with subtype CI_MSG                   |
| /TYPE = MISC/SUBTYPE = 120           | All MISC packets with subtype 120                    |
| /TYPE = 0 or /TYPE = UNKNOWN         | All packets with an unknown TYPE/SUBTYPE combination |

# SDA Commands SHOW POOL

## Examples

1. SDA> SHOW POOL

Non-Paged Dynamic Storage Pool

```

-----
NPOOL address:                81009088
Pool map address:             81562900
Number of lookaside lists:    128
Granularity size:             64
Ring buffer address:          81552200
Most recent ring buffer entry: 815553A0

```

LSTHDS(s)

```

-----
RAD          LSTHDS          Variable          Lookaside
            address         listhead         listheads
-----
00  FFFFFFFF.81008830  FFFFFFFF.8100883C  FFFFFFFF.81008868
01  FFFFFFFF.7FFFE000  FFFFFFFF.7FFFE00C  FFFFFFFF.7FFFE038
02  FFFFFFFF.7FFFC000  FFFFFFFF.7FFFC00C  FFFFFFFF.7FFFC038
03  FFFFFFFF.7FFFA000  FFFFFFFF.7FFFA00C  FFFFFFFF.7FFFA038

```

Segment(s)

```

-----
          Start          End          Length  RAD
-----
81548000  8172B9FF  001E3A00  00
81735A00  8173D53F  00007B40  00
81747540  8174BDBF  00004880  00
81755DC0  81AFDFFF  003A8240  00
81AFE000  81C43FFF  00146000  01
81C44000  81D89FFF  00146000  02
81D8A000  81ECFFFF  00146000  03
81ED0000  81F1FFFF  00050000  02

```

Per-RAD Totals

```

-----
RAD          Length
---
00           00598000
01           00146000
02           00196000
03           00146000

Non-Paged total:    009BA000

```

Dump of packets allocated from Non-Paged Pool

```

-----
Packet: MP_CPU                               Start address: 81548000      Length: 000009C0      RAD: 00
00000000 00000000 0000003E 00000001 00000002 026A09C0 ACD1A180 81C52F40 @/Ã..jÑ-Ã.j.....>..... 81548000
81548038 81548038 81548030 81548030 81548028 81548028 00000000 00000001 .....(T.(T.O.T.O.T.8.T.8.T. 81548020
81548058 81548058 81548050 81548050 81548048 81548048 81548040 81548040 @.T.@.T.H.T.H.T.P.T.P.T.X.T.X.T. 81548040
.
.
.
Packet: Unknown                               Start address: 815489C0      Length: 00000180      RAD: 00
FFFFFFFF AD332000 00500000 00008020 FFFFFFFF 81548B00 FFFFFFFF 81548A80 ..T.....T.... ..P.. 3-... 815489C0
.
.
.
Packet: DDB                                   Start address: 81548B40      Length: 00000300      RAD: 00
AD410000 81564480 81548BC0 000F4240 00000000 63060300 008B798F 962DA431 1p-.y....c....@B..Ã.T..DV...A- 81548B40
.
.
.

```

Continued  
VM-0767A-AI

# SDA Commands

## SHOW POOL

Summary of Non-Paged Pool contents

| Packet type/subtype | Packet count | Packet bytes | Percent |
|---------------------|--------------|--------------|---------|
| Unknown             | 000001E4     | 00145BC0     | (50.7%) |
| ADP                 | 00000009     | 00000A00     | (0.1%)  |
| ACB                 | 0000008D     | 00002500     | (0.4%)  |
| AQB                 | 00000002     | 00001080     | (0.2%)  |
| .                   |              |              |         |
| .                   |              |              |         |
| .                   |              |              |         |
| LOADCODE            | 0000003D     | 00004C40     | (0.7%)  |
| LDRIMG              | 0000003D     | 00004C40     | (0.7%)  |
| INIT                | 00000008     | 00003B80     | (0.6%)  |
| PCBVEC              | 00000001     | 00001BC0     | (0.3%)  |
| PHVEC               | 00000001     | 00000700     | (0.1%)  |
| MPWMAP              | 00000005     | 00001840     | (0.2%)  |
| PRCMAP              | 00000001     | 00000080     | (0.0%)  |

Total space used: 002825C0 (2631104.) bytes out of 009BA000 (10199040.) bytes  
in 0000184C (6220.) packets

Total space utilization: 25.8%

VM-0768A-AI

**This example shows the Nonpaged Pool portion of the default SHOW POOL display.**

2. SDA> SHOW POOL/TYPE=IPC/HEADER 8156E140:815912C0

Non-Paged Dynamic Storage Pool

Dump of packets allocated from Non-Paged Pool

| Packet type/subtype | Start    | Length   | RAD | Header contents                                      |
|---------------------|----------|----------|-----|------------------------------------------------------|
| IPC_TDB             | 8156E140 | 00000040 | 00  | 81591180 057B0040 00000040 81591180 ..Y.@...@.{...Y. |
| IPC_LIST            | 815838C0 | 00009840 | 00  | 004C0200 087B9840 0057A740 8158D100 .ÑX.@\$W.@{...L. |
| IPC_LIST            | 8158D100 | 00001840 | 00  | 00040400 087B1840 00570F00 8158E940 @éX...W.@{.....  |
| IPC_LIST            | 8158E940 | 00002840 | 00  | 00140200 087B2840 0056F6C0 81591180 ..Y.ÄöV.@{.....  |
| IPC_TPCB            | 81591180 | 00000080 | 00  | 00000000 067B0080 0056CE80 81591200 ..Y.ÎV...{.....  |
| IPC                 | 81591200 | 000000C0 | 00  | 00000000 007B00C0 0056CE00 815912C0 Ä.Y...ÎV.Ä{..... |

Summary of Non-Paged Pool contents

| Packet type/subtype | Packet count | Packet bytes | Percent  |
|---------------------|--------------|--------------|----------|
| IPC                 | 00000006     | 0000DA40     | (100.0%) |
| IPC                 | 00000001     | 000000C0     | (0.3%)   |
| IPC_TDB             | 00000001     | 00000040     | (0.1%)   |
| IPC_TPCB            | 00000001     | 00000080     | (0.2%)   |
| IPC_LIST            | 00000003     | 0000D8C0     | (99.3%)  |

Total space used: 0000DA40 (55872.) bytes out of 00023180 (143744.) bytes  
in 00000006 (6.) packets

Total space utilization: 38.9%

**This example shows how a pool packet type and a range of addresses can be specified.**



# SDA Commands SHOW POOL

## 3. SDA> SHOW POOL/STATISTICS

Non-Paged Pool statistics for RAD 00

```
-----
On-RAD deallocations (all RADs):      1221036
Total deallocations (all RADs):       1347991
Percentage of on-RAD deallocations:    90.6%
```

Variable list statistics

```
-----
Number of packets on variable list:    7
Total bytes on variable list:         3613376
Smallest packet on variable list:      256
Largest packet on variable list:      3598016
Bytes allocated from variable list:    2140480
Times pool expanded:                  0
```

Lookaside list statistics

```
-----
Listhead address  List size  Packets  Packets  Operation  Allocation  Allocation  Deallocs
                 size    (approx) (actual) sequence # attempts failures
-----
FFFFFFFF.81008870  64         5         5      10057      10549      492      10062
FFFFFFFF.81008878  128        21        21       366       4881     4515      387
FFFFFFFF.81008880  192        33        33     27376     27542     166     27409
FFFFFFFF.81008888  256         4         4      8367      8476     118     8362
```

.  
.
  
.

This example shows the Nonpaged Pool portion of the SHOW POOL/STATISTICS display.

## 4. SDA> SHOW POOL/RING\_BUFFER

Pool History Ring-Buffer

```
-----
(2048 entries: Most recent first)
Packet      Size  Type/Subtype      Caller's PC      Operation      IPL CPU      Time
-----
FFFFFFFF.81C65F40  320 SECURITY_PSB      80283A9C NSA_STD$FREE_PSB_C+0024C  DEALLO_POOL_NPP  0 8 009F1E47.549449F0
FFFFFFFF.81C44E00  192 SECURITY_PXB_ARRAY 80283A30 NSA_STD$FREE_PSB_C+001E0  DEALLO_POOL_NPP  0 8 009F1E47.549449F0
FFFFFFFF.81C45A40   64 ACB              8014A09C SCH$INIT_C+00F18        DEALLO_POOL_NPP_SIZ  2 8 009F1E47.549449F0
FFFFFFFF.81C44E00  140 SECURITY_PXB_ARRAY 80283B8C NSA$GET_PSB_C+0005C      ALLO_POOL_NPP      0 8 009F1E47.549449F0
FFFFFFFF.81C65F40  320 SECURITY_PSB      80283B70 NSA$GET_PSB_C+00040      ALLO_POOL_NPP      0 8 009F1E47.549449F0
FFFFFFFF.81C45A40   64 ACB              801281F8 PROCESS_MANAGEMENT_MON+001F ALLO_POOL_NPP      2 8 009F1E47.549449F0
FFFFFFFF.81C52380  576 IRP              8014A09C SCH$INIT_C+00F18        DEALLO_POOL_NPP_SIZ  2 8 009F1E47.549449F0
FFFFFFFF.81C65F40  320 SECURITY_PSB      80283A9C NSA_STD$FREE_PSB_C+0024C  DEALLO_POOL_NPP      2 8 009F1E47.549449F0
FFFFFFFF.81C44E00  192 SECURITY_PXB_ARRAY 80283A30 NSA_STD$FREE_PSB_C+001E0  DEALLO_POOL_NPP      2 8 009F1E47.549449F0
FFFFFFFF.81C47400  256 BUFIO          800F6270 IOC_STD$WAKACP_C+00650   DEALLO_POOL_NPP_SIZ  2 8 009F1E47.549449F0
```

.  
.

VM-0772A-AI

This example shows the output of the SHOW POOL/RING\_BUFFER display.

## SHOW PORTS

Displays those portions of the port descriptor table (PDT) that are port independent.

### Format

```
SHOW PORTS [/qualifier[,...]]
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=pdt-address**

Displays the specified port descriptor table (PDT). You can find the **pdt-address** for any active connection on the system in the **PDT summary page** display of the SHOW PORTS command. This command also defines the symbol PE\_PDT. The connection descriptor table (CDT) addresses are also stored in many individual data structures related to System Communications Services (SCS) connections, for instance, in the path block displays of the SHOW CLUSTER/SCS command.

#### **/BUS=bus-address**

Displays bus (LAN device) structure data.

#### **/CHANNEL=channel-address**

Displays channel (CH) data.

#### **/DEVICE**

Displays the network path description for a channel.

#### **/MESSAGE**

Displays the message data associated with a virtual circuit (VC).

#### **/NODE=node**

Shows only the virtual circuit block associated with the specific node. When you use the /NODE qualifier, you must also specify the address of the PDT using the /ADDRESS qualifier.

#### **/VC=vc-address**

Displays the virtual circuit data.

### Description

The SHOW PORTS command provides port-independent information from the port descriptor table (PDT) for those CI ports with full System Communications Services (SCS) connections. This information is used by all SCS port drivers.

Note that the SHOW PORTS command does not display similar information about UDA ports, BDA ports, and similar controllers.

The SHOW PORTS command also defines symbols for PEDRIVER based on the cluster configuration. These symbols include the following information:

- Virtual circuit (VC) control blocks for each of the remote systems
- Bus data structure for each of the local LAN adapters
- Some of the data structures used by both PEDRIVER and the LAN drivers

The following symbols are defined automatically:

- VC\_nodename—Example: VC\_NODE1, address of the local node's virtual circuit to node NODE1.
- CH\_nodename—The preferred channel for the virtual circuit. For example, CH\_NODE1, address of the local node's preferred channel to node NODE1.
- BUS\_busname—Example: BUS\_ETA, address of the local node's bus structure associated with LAN adapter ETA0.
- PE\_PDT—Address of PEDRIVER's port descriptor table.
- MGMT\_VCRP\_busname—Example: MGMT\_VCRP\_ETA, address of the management VCRP for bus ETA.
- HELLO\_VCRP\_busname—Example: HELLO\_VCRP\_ETA, address of the HELLO message VCRP for bus ETA.
- VCIB\_busname—Example: VCIB\_ETA, address of the VCIB for bus ETA.
- UCB\_LAVC\_busname—Example: UCB\_LAVC\_ETA, address of the LAN device's UCB used for the local-area OpenVMS Cluster protocol.
- UCB0\_LAVC\_busname—Example: UCB0\_LAVC\_ETA, address of the LAN device's template UCB.
- LDC\_LAVC\_busname—Example: LDC\_LAVC\_ETA, address of the LDC structure associated with LAN device ETA.
- LSB\_LAVC\_busname—Example: LSB\_LAVC\_ETA, address of the LSB structure associated with LAN device ETA.

These symbols equate to system addresses for the corresponding data structures. You can use these symbols, or an address, in SHOW PORTS qualifiers that require an address, as for example:

```
SDA >SHOW PORTS/BUS=BUS_ETA
```

The SHOW PORTS command produces several displays. The initial display, the **PDT summary page**, lists the PDT address, port type, device name, and driver name for each PDT. Subsequent displays provide information taken from each PDT listed on the summary page.

You can use the /ADDRESS qualifier to the SHOW PORTS command to produce more detailed information about a specific port. The first display of the SHOW PORTS/ADDRESS command duplicates the last display of the SHOW PORTS command, listing information stored in the port's PDT. Subsequent displays list information about the port blocks and virtual circuits associated with the port.

# SDA Commands

## SHOW PORTS

### Examples

1. SDA > SHOW PORTS

VMScluster data structures

-----

--- PDT Summary Page ---

| PDT Address | Type | Device | Driver Name   |
|-------------|------|--------|---------------|
| -----       | ---- | -----  | -----         |
| 80E2A180    | pn   | PNA0   | SYS\$PNDRIVER |
| 80EC3C70    | pe   | PEA0   | SYS\$PEDRIVER |

--- Port Descriptor Table (PDT) 80E2A180 ---

Type: 09 pn

Characteristics: 0000

|                 |          |                 |          |                 |          |
|-----------------|----------|-----------------|----------|-----------------|----------|
| Msg Header Size | 104      | Flags           | 0000     | Message Sends   | 3648575  |
| Max Xfer Bcnt   | 00100000 | Counter CDRP    | 00000000 | Message Recvs   | 4026887  |
| Poller Sweep    | 21       | Load Vector     | 80E2DFCC | Mess Sends NoFP | 3020422  |
| Fork Block W.Q. | 80E2A270 | Load Class      | 60       | Mess Recvs NoFP | 3398732  |
| UCB Address     | 80E23380 | Connection W.Q. | 80E4BF94 | Datagram Sends  | 0        |
| ADP Address     | 80E1BF00 | Yellow Q.       | 80E2A2E0 | Datagram Recvs  | 0        |
| Max VC timeout  | 16       | Red Q.          | 80E2A2E8 | Portlock        | 80E1ED80 |
| SCS Version     | 2        | Disabled Q.     | 80FABB74 | Res Bundle Size | 208      |
|                 |          | Port Map        | 00000001 |                 |          |

--- Port Descriptor Table (PDT) 80EC3C70 ---

Type: 03 pe

Characteristics: 0000

|                 |          |                 |          |                 |          |
|-----------------|----------|-----------------|----------|-----------------|----------|
| Msg Header Size | 32       | Flags           | 0000     | Message Sends   | 863497   |
| Max Xfer Bcnt   | FFFFFFFF | Counter CDRP    | 00000000 | Message Recvs   | 886284   |
| Poller Sweep    | 30       | Load Vector     | 80EDBF8C | Mess Sends NoFP | 863497   |
| Fork Block W.Q. | 80EC3D60 | Load Class      | 10       | Mess Recvs NoFP | 886284   |
| UCB Address     | 80EC33C0 | Connection W.Q. | 80EFF5D4 | Datagram Sends  | 0        |
| ADP Address     | 00000000 | Yellow Q.       | 80EC3DD0 | Datagram Recvs  | 0        |
| Max VC timeout  | 16       | Red Q.          | 80EC3DD8 | Portlock        | 00000000 |
| SCS Version     | 2        | Disabled Q.     | 812E72B4 | Res Bundle Size | 0        |
|                 |          | Port Map        | 00000000 |                 |          |

This example illustrates the default output of the SHOW PORTS command.

## SDA Commands SHOW PORTS

2. SDA > SHOW PORTS/ADDRESS=80EC3C70

VMScluster data structures

-----

--- Port Descriptor Table (PDT) 80EC3C70 ---

Type: 03 pe

Characteristics: 0000

|                 |          |                 |          |                 |          |
|-----------------|----------|-----------------|----------|-----------------|----------|
| Msg Header Size | 32       | Flags           | 0000     | Message Sends   | 864796   |
| Max Xfer Bcnt   | FFFFFFFF | Counter CDRP    | 00000000 | Message Recv    | 887086   |
| Poller Sweep    | 30       | Load Vector     | 80EDBF8C | Mess Sends NoFP | 864796   |
| Fork Block W.Q. | 80EC3D60 | Load Class      | 10       | Mess Recv NoFP  | 887086   |
| UCB Address     | 80EC33C0 | Connection W.Q. | 80EFF5D4 | Datagram Sends  | 0        |
| ADP Address     | 00000000 | Yellow Q.       | 80EC3DD0 | Datagram Recv   | 0        |
| Max VC timeout  | 16       | Red Q.          | 80EC3DD8 | Portlock        | 00000000 |
| SCS Version     | 2        | Disabled Q.     | 812E72B4 | Res Bundle Size | 0        |
|                 |          | Port Map        | 00000000 |                 |          |
|                 |          | Port Map        | 00000000 |                 |          |

--- Port Block 80EC4540 ---

Status: 0001 authorize

VC Count: 20

Secs Since Last Zeroed: 77020

|                     |         |                  |       |                |          |
|---------------------|---------|------------------|-------|----------------|----------|
| SBUF Size           | 824     | LBUF Size        | 5042  | Fork Count     | 1943885  |
| SBUF Count          | 28      | LBUF Count       | 1     | Refork Count   | 0        |
| SBUF Max            | 768     | LBUF Max         | 384   | Last Refork    | 00000000 |
| SBUF Quo            | 28      | LBUF Quo         | 1     | SCS Messages   | 1154378  |
| SBUF Miss           | 1871    | LBUF Miss        | 3408  | VC Queue Cnt   | 361349   |
| SBUF Allocs         | 1676801 | LBUF Allocs      | 28596 | TQE Received   | 770201   |
| SBUFs In Use        | 2       | LBUFs In Use     | 0     | Timer Done     | 770201   |
| Peak SBUF In Use    | 101     | Peak LBUF In Use | 10    | RWAITQ Count   | 30288    |
| SBUF Queue Empty    | 0       | LBUF Queue Empty | 0     | LDL Buf/Msg    | 32868    |
| TR SBUF Queue Empty | 0       | Ticks/Second     | 10    | ACK Delay      | 1000000  |
| No SBUF for ACK     | 0       | Listen Timeout   | 8     | Hello Interval | 30       |

| Bus Addr | Bus | LAN Address       | Error Count | Last Error | Time of Last Error |
|----------|-----|-------------------|-------------|------------|--------------------|
| 80EC4C00 | LCL | 00-00-00-00-00-00 | 0           |            |                    |
| 80EC5400 | EXA | 08-00-2B-17-CF-92 | 0           |            |                    |
| 80EC5F40 | FXA | 08-00-2B-29-E1-40 | 0           |            |                    |

--- Virtual Circuit (VC) Summary ---

| VC Addr  | Node   | SCS ID | Lcl ID | Status Summary | Last Event Time        |
|----------|--------|--------|--------|----------------|------------------------|
| 80E566C0 | ARUSHA | 19617  | 223/DF | open,path      | 8-FEB-2001 16:01:57.58 |
| 80E98840 | ETOSHA | 19699  | 222/DE | open,path      | 8-FEB-2001 16:01:58.41 |
| 80E98A80 | VMS    | 19578  | 221/DD | open,path      | 8-FEB-2001 16:01:58.11 |
| .        |        |        |        |                |                        |
| .        |        |        |        |                |                        |

This example illustrates the output produced by the SHOW PORTS command for the PDT at address 80EC3C70.

---

## SHOW PROCESS

Displays the software and hardware context of any process in the balance set.

### Format

```
SHOW PROCESS {[process-name | ALL]
              | /ADDRESS=pcb_address | /ID=nn | /INDEX=nn | /SYSTEM}
              [/ALL | /BUFFER_OBJECTS | /CHANNEL
              | /FANDLES | /FID_ONLY | /GSTX=index | /IMAGES [=ALL]
              | /INVALID_PFN [=option] | /NEXT
              | /NONMEMORY_PFN [=option]
              | /LOCKS [/BRIEF] | /L1 | /L2 | /L3
              | /PAGE_TABLES | /P0 | /P1 | /P2 | /PT | /PCB
              | /PERSONA [=address] [/RIGHTS [/AUTHORIZED]]
              | /PHD | /PROCESS_SECTION_TABLE | /PST
              | /PTE_ADDRESS | /RDE [=id]
              | /REGIONS [=id]
              | /REGISTERS | /RMS [=option[,...]] | /SECTION_INDEX=n
              | /SEMAPHORE | /THREADS
              | /WORKING_SET_LIST]
```

### Parameters

#### ALL

Information about all processes that exist in the system.

#### process-name

Name of the process for which information is to be displayed. Use of the **process-name** parameter, the /ADDRESS qualifier, the /INDEX qualifier, or the /SYSTEM qualifier causes the SHOW PROCESS command to perform an implicit SET PROCESS command, making the indicated process the current process for subsequent SDA commands. You can determine the names of the processes in the system by issuing a SHOW SUMMARY command.

The **process-name** can contain up to 15 letters and numerals, including the underscore (\_) and dollar sign (\$). If it contains any other characters, you must enclose the **process-name** in quotation marks (" ").

### Qualifiers

#### /ADDRESS=*pcb-address*

Specifies the process control block (PCB) address of a process in order to display information about the process.

#### /ALL

Displays all information shown by the following qualifiers:

```
/CHANNEL
/BUFFER_OBJECTS
/FANDLES
/IMAGES=ALL
/LOCKS
/PAGE_TABLES
/PCB
/PERSONA/RIGHTS
```

**/PHD**  
**/PROCESS\_SECTION\_TABLE**  
**/REGIONS**  
**/REGISTERS**  
**/RMS**  
**/SEMAPHORE**  
**/THREADS**  
**/WORKING\_SET\_LIST**

**/AUTHORIZED**

Used with the **/PERSONA/RIGHTS** qualifiers. See the **/PERSONA/RIGHTS/AUTHORIZED** description for the use of the **/AUTHORIZED** qualifier.

**/BRIEF**

When used with the **/LOCKS** qualifier, causes SDA to display each lock owned by the current process in brief format, that is, one line for each lock.

**/BUFFER\_OBJECTS**

Displays all the buffer objects that a process has created.

**/CHANNEL**

Displays information about the I/O channels assigned to the process.

**/FANDLES**

Displays the data on the process's fast I/O handles.

**/FID\_ONLY**

When used with **/CHANNEL** or **/PROCESS\_SECTION\_TABLE (/PST)**, causes SDA to not attempt to translate the FID (File ID) to a file name when invoked with **ANALYZE/SYSTEM**.

**/GSTX=index**

When used with the **/PAGE\_TABLES** qualifier, causes SDA to display only page table entries for the specific global section.

**/IMAGES [= ALL]**

For all images in use by this process, displays the address of the image control block, the start and end addresses of the image, the activation code, the protected and shareable flags, the image name, and the major and minor IDs of the image. The **/IMAGES = ALL** qualifier also displays the base, end, image offset, and section type for installed resident images in use by this process.

See the *OpenVMS Linker Utility Manual* and the *Install utility chapter* in the *OpenVMS System Management Utilities Reference Manual* for more information on images installed using the **/RESIDENT** qualifier.

**/ID=nn**

**/INDEX=nn**

Specifies the process for which information is to be displayed by its index into the system's list of software process control blocks (PCBs), or by its process identification (ID). You can supply the following values for *nn*:

- The process index itself

## SDA Commands

### SHOW PROCESS

- The process identification (PID) or extended PID longword, from which SDA extracts the correct index. The PID or extended PID of any thread of a process with multiple kernel threads may be specified. Any thread-specific data displayed by SHOW PROCESS will be for the given thread.

To obtain these values for any given process, issue the SDA command SHOW SUMMARY/THREADS. The /ID=*nn* and /INDEX=*nn* qualifiers can be used interchangeably.

#### **/INVALID\_PFN [=option]**

See the /PAGE\_TABLES qualifier description for an explanation of /INVALID\_PFN.

#### **/L1**

#### **/L2**

#### **/L3**

When used with the /PAGE\_TABLES qualifier, /L1, /L2, /L3 cause SDA to display the page table entries at the level specified. /L3 is the default.

#### **/LOCKS [/BRIEF]**

Displays the lock management locks owned by the current process.

The /LOCKS [/BRIEF] qualifier produces a display similar in format to that produced by the SHOW LOCK command. See also the /BRIEF qualifier description. Also, Table 4–4 contains additional information.

#### **/NEXT**

Causes SDA to locate the next valid process in the process list and select that process. If there are no further valid processes in the process list, SDA returns an error.

#### **/NONMEMORY\_PFN [=option]**

See the /PAGE\_TABLES qualifier description for an explanation of /NONMEMORY\_PFN.

#### **/P0**

#### **/P1**

#### **/P2**

When used with the /PAGE\_TABLES qualifier, /P0, /P1, /P2 cause SDA to display only page table entries for the specified region. /P0 is the default.

#### **/PAGE\_TABLES**

The /PAGE\_TABLES qualifier has the following format:

```
/PAGE_TABLES {range|[ /P0(d)|/P1|/P2|/PT]
                |/GSTX=index|/RDE=id
                |/REGIONS=id
                |/SECTION_INDEX=n|=ALL}
                [ /PTE_ADDRESS ]
                [ /INVALID_PFN [= {READONLY|WRITABLE} ] ]
                [ /NONMEMORY_PFN [= {READONLY|WRITABLE} ] ]
                { /L1|/L2|/L3(d) }
```

Displays the page tables of the process P0 (process), P1 (control), P2, or PT (page table) region, or, optionally, page table entries for a **range** of addresses. The page table entries at the level specified by /L1, /L2, or /L3 (the default) are displayed.



When `/RDE=id` or `/REGIONS=id` is used with `/PAGE_TABLES`, SDA displays the page tables for the address range of the specified address region. When you do not specify an ID, the page tables are displayed for all the process-permanent and user-defined regions.

You can express a **range** using the following syntax:

*m* Displays the single page table entry that corresponds to virtual address *m*.

*m:n* Displays the page table entries that correspond to the range of virtual addresses from *m* to *n*.

*m;n* Displays the page table entries that correspond to a range of *n* bytes, starting at virtual address *m*.

`=ALL` Use `/PAGE_TABLES=ALL` to display the entire page table or the process from address zero to the end of process-private page table space.

The `/PTE_ADDRESS` qualifier causes SDA to treat the specified range as PTE addresses instead of virtual addresses.

The `/SECTION_INDEX=n` qualifier causes SDA to display only the page table entries for the pages in the specified process section.

The `/GSTX=index` qualifier causes SDA to display only the page table entries for the pages in the specified global section.

The `/INVALID_PFN` qualifier which is valid on platforms that supply an I/O memory map, causes SDA to display only page table entries that map to PFNs that are not in the system's private memory, nor in Galaxy shared memory, nor are I/O access pages.

The `/NONMEMORY_PFN` qualifier, supported on all platforms, causes SDA to display only page table entries that are neither in the system's private memory nor in Galaxy shared memory.

Both `/INVALID_PFN` and `/NONMEMORY_PFN` qualifiers allow two optional keywords, `READONLY` and `WRITABLE`. If neither keyword is given, all relevant pages are displayed. If you specify `READONLY`, only pages marked for no write access are displayed. If you specify `WRITABLE`, only pages that allow write access are displayed. For example, `SHOW PROCESS ALL/PAGE_TABLE=ALL/INVALID_PFN=WRITABLE` would display all process pages (for all processes) whose protection allows write, but which map to PFNs that do not belong to this system.

### **/PCB**

Displays the information contained in the process control block (PCB). This is the default behavior of the `SHOW PROCESS` command.

### **/PERSONA [=address]**

Displays all persona security blocks (PSBs) held in the `PERSONA ARRAY` of the process, and then lists selected information contained in each initially listed PSB. The selected information includes the contents of the following cells inside the PSB:

- Flags
- Reference count
- Execution mode
- Audit status
- Account name
- UIC

## SDA Commands

### SHOW PROCESS

Privileges  
Rights enabled mask

If you specify a PSB address, the above information is provided for that specific PSB only.

#### **/PERSONA/RIGHTS**

Displays all the /PERSONA [=address] information and additional selected information, including all the Rights and their attributes currently held and active for each persona security block (PSB).

#### **/PERSONA/RIGHTS/AUTHORIZED**

Displays all the /PERSONA [=address] information and additional selected information, including all the Rights and their attributes authorized for each persona security block (PSB).

#### **/PHD**

Lists the information included in the process header (PHD).

#### **/PPT**

Is a synonym for /PAGE\_TABLES.

#### **/PROCESS\_SECTION\_TABLE [/SECTION\_INDEX=*id*]**

Lists the information contained in the process section table (PST). The /SECTION\_INDEX=*id* qualifier used with /PROCESS\_SECTION\_TABLE displays the process section table entry for the specified section.

#### **/PST**

Is a synonym for /PROCESS\_SECTION\_TABLE.

#### **/PT**

When used with the /PAGE\_TABLES qualifier, causes SDA to display the page table entries for the page table space of the process.

#### **/PTE\_ADDRESS**

When used with the /PAGE\_TABLES qualifier, specifies that the range is of PTE addresses instead of the virtual addresses mapped by the PTE.

#### **/RDE [=*id*]**

#### **/REGIONS [=*id*]**

Lists the information contained in the process region table for the specified region. If no region is specified, the entire table is displayed, including the process-permanent regions. The qualifiers /RDE [=*id*] and /REGIONS [=*id*] may be used interchangeably. When used with the /PAGE\_TABLES, causes SDA to display on the page tables for the region given or all regions.

#### **/REGISTERS**

Lists the hardware context of the process, as reflected in the process registers stored in the hardware privileged context block (HWPCB), in its kernel stack, and possibly, in its PHD.

#### **/RIGHTS**

Used with the /PERSONA qualifier. See the /PERSONA/RIGHTS description for use of the /RIGHTS qualifier.

**/RMS [=option[,...]]**

Displays certain specified RMS data structures for each image I/O or process permanent I/O file the process has open. To display RMS data structures for process-permanent files, specify the PIO option to this qualifier.

SDA determines the structures to be displayed according to either of the following methods:

- If you provide the name of a structure or structures in the **option** parameter, SHOW PROCESS/RMS displays information from only the specified structures. (See Table 4–2 for a list of keywords that may be supplied as options.)
- If you do not specify an **option**, SHOW PROCESS/RMS displays the current list of options as shown by the SHOW\_RMS command and set by the SET RMS command.

**/SECTION\_INDEX=*n***

When used with the /PAGE\_TABLES qualifier, displays the page table for the range of pages in the specified process section. One of the qualifiers /L1, /L2, or /L3 can also be specified.

When used with the /PROCESS\_SECTION\_TABLE qualifier, displays the PST for the specified process section.

The /SECTION\_INDEX=*n* qualifier is ignored if you do not specify either the /PAGE\_TABLES or the /PROCESS\_SECTION\_TABLE qualifier.

**/SEMAPHORE**

Displays the Inner Mode Semaphore for a multithreaded process.

**/SYSTEM**

Displays the system process control block. Use of the **process-name** parameter, the /INDEX qualifier, or the /SYSTEM qualifier causes the SHOW PROCESS command to perform an implicit SET PROCESS command, making the indicated process the current process for subsequent SDA commands. (See the description of the SET PROCESS command and Section 2.5 for information on how this can affect the process context—and CPU context—in which SDA commands execute.) The system PCB and process header (PHD) parallel the data structures that describe processes. They contain the system working set, global section table, global page table, and other systemwide data.

**/THREADS**

Displays the software and hardware context of all the threads associated with the current process.

**/WORKING\_SET\_LIST [= {PPT | PROCESS | LOCKED | GLOBAL | MODIFIED | *n*}]**

Displays the contents of the requested entries of the working set list for the process. If you do not specify an option, then all working set list entries are displayed. Table 4–16 shows the options available with SHOW PROCESS/WORKING\_SET\_LIST.

## SDA Commands

### SHOW PROCESS

Table 4–16 Options for the /WORKING\_SET\_LIST Qualifier

| Options  | Results                                                                                                                  |
|----------|--------------------------------------------------------------------------------------------------------------------------|
| PPT      | Displays process page table pages                                                                                        |
| PROCESS  | Displays process private pages                                                                                           |
| LOCKED   | Displays pages locked into the process's working set                                                                     |
| GLOBAL   | Displays global pages currently in the working set of the process                                                        |
| MODIFIED | Displays working set list entries marked modified                                                                        |
| <i>n</i> | Displays a specific working set list entry, where <i>n</i> is the working set list index (WSLX) of the entry of interest |

### Description

The SHOW PROCESS command displays information about the process specified by **process-name**, the process specified in the /INDEX qualifier, the system process, or all processes. The SHOW PROCESS command performs an implicit SET PROCESS command under certain uses of its qualifiers and parameters, as noted previously. By default, the SHOW PROCESS command produces information about the SDA current process, as defined in Section 2.5.

The default of the SHOW PROCESS command provides information taken from the software process control block (PCB) and the kernel threads block (KTB) of the SDA current thread. This is the first display provided by the /ALL qualifier and the only display provided by the /PCB qualifier. This information describes the following characteristics of the process:

- Software context
- Condition-handling information
- Information on interprocess communication
- Information on counts, quotas, and resource usage

Among the displayed information are the process PID, EPID, priority, job information block (JIB) address, and process header (PHD) address. SHOW PROCESS also describes the resources owned by the process, such as event flags and mutexes. The “State” field records current scheduling state for the thread, and indicates the CPU ID of any thread whose state is CUR.

The /THREADS qualifier (also part of SHOW PROCESS/ALL), displays information from the KTBs of all threads in the process, instead of only the SDA current thread.

The SHOW PROCESS/ALL command displays additional process-specific information, also provided by several of the individual qualifiers to the command.

The **process registers** display, also produced by the /REGISTERS qualifier, describes the process hardware context, as reflected in its registers. The registers displayed are those of the SDA current thread, or of all threads if either the /THREADS or the /ALL qualifier have been specified.

There are two places where a process hardware context is stored:

- If the process is currently executing on a processor in the Alpha system (that is, in the CUR scheduling state), its hardware context is contained in that processor's registers. (That is, the process registers and the processor's registers contain identical values, as illustrated by a SHOW CPU command

for that processor or a SHOW CRASH command, if the process was current at the time of the system failure).

- If the process is not executing, its privileged hardware context is stored in the part of the PHD known as the HWPCB. Its integer register context is stored on its kernel stack. Its floating-point registers are stored in its PHD.

The **process registers** display first lists those registers stored in the HWPCB, kernel stack, and PHD (“Saved process registers”). If the process to be displayed is currently executing on a processor in the Alpha system, the display then lists the processor’s registers (“Active registers for the current process”). In each section, the display lists the registers in the following groups:

- Integer registers (R0 through R29)
- Special-purpose registers (PC and PS)
- Stack pointers (KSP, ESP, SSP, and USP)
- Page table base register (PTBR)
- AST enable and summary registers (ASTEN and ASTSR)
- Address space number register (ASN)

The **semaphore** display, also produced by the /SEMAPHORE qualifier, provides information on the inner-mode semaphore used to synchronize kernel threads. The PC history log, recorded if the system parameter SYSTEM\_CHECK is enabled, is also displayed.

The **process header** display, also produced by the /PHD qualifier, provides information taken from the PHD, which is swapped into memory when the process becomes part of the balance set. Each item listed in the display reflects a quantity, count, or limit for the process use of the following resources:

- Process memory
- The pager
- The scheduler
- Asynchronous system traps
- I/O activity
- CPU activity

The **working set information** and **working set list** displays, also produced by the /WORKING\_SET\_LIST qualifier, describe those virtual pages that the process can access without a page fault. After a brief description of the size, scope, and characteristics of the working set list itself, SDA displays information for each entry in the working set list as shown in Table 4–17.

**Table 4–17 Working Set List Entry Information in the SHOW PROCESS Display**

| Column  | Contents                                                                         |
|---------|----------------------------------------------------------------------------------|
| INDEX   | Index into the working set list at which information for this entry can be found |
| ADDRESS | Virtual address of the page that this entry describes                            |

(continued on next page)

## SDA Commands

### SHOW PROCESS

**Table 4–17 (Cont.) Working Set List Entry Information in the SHOW PROCESS Display**

| Column | Contents                                                                                                                                                                                                                                                                                                                |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| STATUS | Four columns that list the following status information: <ul style="list-style-type: none"> <li>• Page status of VALID</li> <li>• Type of physical page (See Table 4–9)</li> <li>• Indication of whether the page has been modified</li> <li>• Indication of whether the page is locked into the working set</li> </ul> |

When SDA locates either one or more unused working set entries, or entries that do not match the specified option, it issues the following message:

```
---- n entries not displayed
```

In this message, *n* is the number (in decimal) of contiguous entries not displayed.

The **process section table information** and **process section table** displays, also produced by the /PROCESS\_SECTION\_TABLE or /PST qualifier, list each entry in the process section table (PST) and display the offsets to, and the indexes of, the first free entry and last used entry.

SDA displays the information listed in Table 4–18 for each PST entry.

**Table 4–18 Process Section Table Entry Information in the SHOW PROCESS Display**

| Part            | Definition                                                                                                                                                |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| INDEX           | Index number of the entry. Entries in the process section table begin at the highest location in the table, and the table expands toward lower addresses. |
| ADDRESS         | Address of the process section table entry.                                                                                                               |
| SECTION ADDRESS | Virtual address that marks the beginning of the first page of the section described by this entry.                                                        |
| PAGELETS        | Length of the process section. This is in units of pagelets, except for a PFN-mapped section in which the units are pages.                                |
| WINDOW          | Address of the window control block on which the section file is open.                                                                                    |
| VBN             | Virtual block number. The number of the file's virtual block that is mapped into the section's first page.                                                |
| CCB             | Address of the channel control block on which the section file is open.                                                                                   |
| REFCNT          | Number of pages of this section that are currently mapped.                                                                                                |

(continued on next page)

Table 4–18 (Cont.) Process Section Table Entry Information in the SHOW PROCESS Display

| Part  | Definition                                                                 |
|-------|----------------------------------------------------------------------------|
| FLINK | Forward link. The pointer to the next entry in the PST list.               |
| BLINK | Backward link. The pointer to the previous entry in the PST list.          |
| FLAGS | Flags that describe the access that processes have to the process section. |

In addition, for each process section that has an associated file, the device and/or filename is displayed. For details of this display, see Table 4–19.

The **regions** display, also produced by the either of the /RDE or /REGIONS qualifiers, shows the contents of the region descriptors. This includes the three default regions (P0, P1, P2), plus any others created by the process. A single region will be displayed if its identifier is specified. The information displayed for each region includes the RDE address, the address range of the region, its identifiers and protection, and links to other RDEs.

If the /PAGE\_TABLE or /PPT qualifer is given with /RDE or /REGION, the page table for the region(s) are also displayed, as described below.

The **P0 page table**, **P1 page table**, **P2 page table**, and **PT page table** displays, also produced by the /PAGE\_TABLES qualifier, display listings of the process page table entries in the same format as that produced by the SHOW PAGE\_TABLE command (see Tables 4–5 through Table 4–10).

The **RMS** display, also produced by the /RMS qualifier, provides information on the RMS internal data structures for all RMS-accessed open files. The data structures displayed depend on the current setting of RMS options, as described under the SET RMS command and Table 4–2.

The **locks** display, also produced by the /LOCKS qualifier, provides information on the locks held by the process. For a full description of the information displayed for process locks, see the SHOW LOCKS command and Table 4–4. The /BRIEF qualifier may also be specified, giving a single line summary of each process lock; however, no other qualifiers from SHOW LOCKS apply to SHOW PROCESS/LOCKS.

The **process active channels** display, also produced by the /CHANNEL qualifier, displays the following information for each I/O channel assigned to the process:

| Column               | Contents                                                                                                       |
|----------------------|----------------------------------------------------------------------------------------------------------------|
| Channel              | Number of the channel                                                                                          |
| Window               | Address of the window control block (WCB) for the file if the device is a file-oriented device; zero otherwise |
| Status               | Status of the device: “Busy” if the device has an I/O operation outstanding; blank otherwise                   |
| Device/file accessed | Name of the device and, if applicable, name of the file being accessed on that device                          |

## SDA Commands

### SHOW PROCESS

The information listed under the heading “Device/file accessed” varies from channel to channel and from process to process. SDA displays certain information according to the conditions listed in Table 4–19.

**Table 4–19 Process I/O Channel Information in the SHOW PROCESS Display**

| Information Displayed <sup>1</sup> | Type of Process                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>dcuu:</i>                       | SDA displays this information for devices that are not file structured, such as terminals, and for processes that do not open files in the normal way.                                                                                                                                                                                                             |
| <i>dcuu.filespec</i>               | SDA displays this information only if you are examining a running system, and only if your process has enough privilege to translate the <i>file-id</i> into the <i>filespec</i> .                                                                                                                                                                                 |
| <i>dcuu:(file-id)filespec</i>      | SDA displays this information only when you are examining a dump. The <i>filespec</i> corresponds to the <i>file-id</i> on the device listed. If you are examining a dump from your own system, the <i>filespec</i> is probably valid. If you are examining a dump from another system, the <i>filespec</i> is probably meaningless in the context of your system. |
| <i>dcuu:(file-id)</i>              | The <i>file-id</i> no longer points to a valid <i>filespec</i> , as when you look at a dump from another system; or the process in which you are running SDA does not have enough privilege to translate the <i>file-id</i> into the corresponding <i>filespec</i> .                                                                                               |
| <i>section file</i>                | The file in question is mapped into the process’s memory.                                                                                                                                                                                                                                                                                                          |

<sup>1</sup>This table uses the following conventions to identify the information displayed:  
*dcuu:(file-id)filespec*  
 where:  
*dcuu:* is the name of the device.  
*file-id* is the RMS file identification.  
*filespec* is the full file specification, including directory name.

The **images** display, also produced by the /IMAGES qualifier, describes the activated images in the process. SDA displays the information listed in Table 4–20 for each image, plus a summary line giving the total image and total page counts.

**Table 4–20 Image Information in the SHOW PROCESS Display**

| Item                      | Description                                                                                                                                                                                   |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Image Name                | The name of the image.                                                                                                                                                                        |
| Link Time <sup>1</sup>    | The date and time the image was linked.                                                                                                                                                       |
| Section Type <sup>1</sup> | For shareable images, the data for each image section is displayed on a separate line. For privileged shareable images, data for the change mode vector is also displayed on a separate line. |

<sup>1</sup>These items are only displayed with SHOW PROCESS/IMAGE=ALL or SHOW PROCESS/ALL.

(continued on next page)



Table 4–20 (Cont.) Image Information in the SHOW PROCESS Display

| Item                      | Description                                                                                                                                       |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Start                     | Start address of the image in process memory. For resident shareable images, this is the start address of the process-space portion of the image. |
| End                       | End address of the image in process memory. For resident shareable images, this is the end address of the process-space portion of the image.     |
| Type                      | The image type and/or activation method, plus "PROT" for protected images and "SHR" for shareable images.                                         |
| IMCB                      | The address of the Image Management Control Block.                                                                                                |
| Sym Vect <sup>1</sup>     | The address of the image's symbol vector, if any.                                                                                                 |
| Maj,Minor ID <sup>1</sup> | The major and minor revision IDs for the image.                                                                                                   |
| Base <sup>1</sup>         | For shareable images, the base address of each image section and/or the change mode vector.                                                       |
| Fnd <sup>1</sup>          | For shareable images, the end address of each image section and/or the change mode vector.                                                        |
| ImageOff <sup>1</sup>     | For shareable images, the virtual offset within the image file for each image section.                                                            |

<sup>1</sup>These items are only displayed with SHOW PROCESS/IMAGE=ALL or SHOW PROCESS/ALL.

The **buffer objects** display, also produced by the /BUFFER\_OBJECTS qualifier, describes the buffer objects in use by the process. Information displayed by SDA for each buffer object includes its address, access mode, size, flags, plus the base virtual address of the object in process space and system space.

The **fast I/O handles** display, also produced by the /FANDLES qualifier, describes the fast I/O handles used by the process. Information displayed by SDA includes the address and size of the fast I/O handle vector header, then the address, corresponding IRP, state, and buffer object handles for each Fast I/O handle, plus information on free vector entries.

The **persona** display, also produced by the /PERSONA qualifier, describes the Persona status block data structures. The default output of /PERSONA consists of summary information for all personae in use by the process (the PSB address, flags, username) and information for each persona (privilege masks, UIC, and so on). When /PERSONA/RIGHTS is specified (as in SHOW PROCESS/ALL), all the rights currently held and active for each persona are also displayed. When /PERSONA/RIGHTS/AUTHORIZED is specified, all the rights authorized for each persona are displayed instead.

# SDA Commands

## SHOW PROCESS

### Examples

```
1. SDA> SHOW PROCESS
Process index: 001A   Name: VERIFICATION   Extended PID: 0000051A
-----
Process status: 22040023   RES,PHDRES,INTER
          status2: 00000001   QUANTUM_RESCHED

PCB address          80613240   JIB address          805B1B40
PHD address          80C3A000   Swapfile disk address 00000000
KTB vector address   80D775AC   HWPCB address        81260080
Callback vector address 00000000   Termination mailbox   0000
Master internal PID  0005001A   Subprocess count      0
Creator extended PID 00000000   Creator internal PID  00000000
Previous CPU Id      00000000   Current CPU Id        00000000
Previous ASNSEQ 0000000000000001   Previous ASN 000000000000002E
Initial process priority 4   Delete pending count  0
# open files allowed left 100   Direct I/O count/limit 150/150
UIC [00001,000004]   Buffered I/O count/limit 149/150
Abs time of last event 005D9941   BUFIO byte count/limit 32128/32128
ASTs remaining 247   # of threads 1
Swapped copy of LEFC0 00000000   Timer entries allowed left 20
Swapped copy of LEFC1 00000000   Active page table count 0
Global cluster 2 pointer 00000000   Process WS page count 250
Global cluster 3 pointer 00000000   Global WS page count 0

Extended PID: 00000052   Thread index: 0000
-----
Current capabilities:   System: 0000000C   QUORUM,RUN
                      User: 00000000

Permanent capabilities: System: 0000000C   QUORUM,RUN
                      User: 00000000

Current affinities:    00000000
Permanent affinities: 00000000
Thread status:        02040001
          status2:    00000001

KTB address          80D772C0   HWPCB address        81260080
PKTA address        7FFEFFC0   Callback vector address 00000000
Internal PID        00010012   Callback error        00000000
Extended PID        00000052   Current CPU id        00000000
State               LEF       Flags                 00000000
Base priority        4         Current priority       9
Waiting EF cluster   0         Event flag wait mask  DFFFFFFF
CPU since last quantum FFF1   Mutex count           0
ASTs active          NONE
```

The **SHOW PROCESS** command displays information taken from the software PCB of **VERIFICATION**, the SDA current process. According to the “State” field in the display, process **VERIFICATION** is in Local Event Flag Wait.

# SDA Commands SHOW PROCESS

## 2. SDA> SHOW PROCESS/ALL

```

Process index: 0013 Name: ACME_SERVER Extended PID: 00000413
-----
Process status: 00040011 RES,PSWAPM,PHDRES
status2: 00000010 TCB

PCB address 815D0880 JIB address 815CEB40
PHD address 83F62000 Swapfile disk address 00000000
KTB vector address 815CF840 HWPCB address 83F62080
Callback vector address 815BB780 Termination mailbox 0000
Master internal PID 00010013 Subprocess count 0
Creator extended PID 00000000 Creator internal PID 00000000
Previous CPU Id 00000000 Current CPU Id 00000000
Previous ASNSEQ 00000000000000075 Previous ASN 000000000000000FD
Initial process priority 8 Delete pending count 0
# open files allowed left 97 Direct I/O count/limit 200/200
UIC [00001,000004] Buffered I/O count/limit 199/200
Abs time of last event 0004BD6F BUPIO byte count/limit 66272/66272
ASTs remaining 199 # of threads 2
Swapped copy of LEFC0 00000000 Timer entries allowed left 64
Swapped copy of LEFC1 00000000 Active page table count 0
Global cluster 2 pointer 00000000 Process WS page count 343
Global cluster 3 pointer 00000000 Global WS page count 101

```

```

Process index: 0013 Name: ACME_SERVER Extended PID: 00000413
-----

```

```

Thread index: 0000
-----

```

```

Current capabilities: System: 0000002C QUORUM,RUN
User: 00000000
Permanent capabilities: System: 0000002C QUORUM,RUN
User: 00000000
Current affinities: 00000000
Permanent affinities: 00000000
Thread status: 00040011
status2: 00000010

```

```

KTB address 815D0880 HWPCB address 83F62080
PKTA address 7FFEFF98 Callback vector address 815BB780
Internal PID 00010013 Callback error 00000000
Extended PID 00000413 Current CPU id 00000000
State HIB Flags 00000080
Base priority 8 Current priority 13
Waiting EF cluster 0 Event flag wait mask 00130013
CPU since last quantum 0286 Mutex count 0
ASTs active NONE

```

```

Current process registers
-----

```

```

R0 = 00000000.00000001 R1 = FFFFFFFF.815D0880 R2 = 00000000.7BC1CF0
R3 = 00000000.7BC1CF0 R4 = 00000000.0009D740 R5 = 00000000.7BC22E38
R6 = 00000000.00000080 R7 = 00000000.00000040 R8 = 00000000.00000001
R9 = 00000000.00000000 R10 = 00000000.00000000 R11 = 00000000.00000004
R12 = 00000000.0009DC80 R13 = FFFFFFFF.810D0B20 R14 = 00000000.7BC230B0
R15 = 00000000.7BC65558 R16 = 00000000.00000001 R17 = 00000000.0009BBE8
R18 = 00000000.00000000 R19 = 00000000.00000000 R20 = FFFFFFFF.FFFFFFFE
R21 = 00000000.00000006 R22 = 00000000.00000000 R23 = 00000000.00000001
R24 = 00000000.0009BBE8 R25 = 00000000.00000000 R26 = FFFFFFFF.801270C8
R27 = FFFFFFFF.810CD888 R28 = 00000000.00000006 FP = 00000000.0009BC20
PC = FFFFFFFF.80001934 PS = 00000000.0000001B
KSP = 00000000.7FFA1EF0 ESP = 00000000.7FFA6000 SSP = 00000000.7FFAE000
USP = 00000000.0009BC20 PTBR = 00000000.00004F65
AST{SR/EN} = 0000000F ASN = 00000000.000000FD
F0 = 00000000.00000000 F1 = 00000000.00000000 F2 = 00000000.00000000
F3 = 00000000.00000000 F4 = 00000000.00000000 F5 = 00000000.00000000
F6 = 00000000.00000000 F7 = 00000000.00000000 F8 = 00000000.00000000
F9 = 00000000.00000000 F10 = 00000000.00000000 F11 = 00000000.00000000
F12 = 00000000.00000000 F13 = 00000000.00000000 F14 = 00000000.00000000
F15 = 00000000.00000000 F16 = 00000000.00000000 F17 = 00000000.00000000
F18 = 00000000.00000000 F19 = 00000000.00000000 F20 = 00000000.00000000
F21 = 00000000.00000000 F22 = 00000000.00000000 F23 = 00000000.00000000
F24 = 00000000.00000000 F25 = 00000000.00000000 F26 = 00000000.00000000
F27 = 00000000.00000000 F28 = 00000000.00000000 F29 = 00000000.00000000
F30 = 00000000.00000000 FPCR = 00000000.00000000

```

continued  
VM-0754A-AI

# SDA Commands

## SHOW PROCESS

```

Thread index: 0001
-----
Current capabilities:  System: 0000002C QUORUM,RUN
                      User: 00000000
Permanent capabilities: System: 0000002C QUORUM,RUN
                      User: 00000000
Current affinities:   00000000
Permanent affinities: 00000000
Thread status:       00040011
                    status2: 00000010

KTB address          8153DA80  HWPCB address          84026200
PKTA address         40015F98  Callback vector address 815BB780
Internal PID         00020013  Callback error          00000000
Extended PID         00000813  Current CPU id          00000000
State                HIB       Flags                   00000000
Base priority         8         Current priority         13
Waiting BF cluster   0         Event flag wait mask    7FFFFFFF
CPU since last quantum 0036   Mutex count             0
ASTs active          NONE

Current process registers
-----
R0 = 00000000.00000001 R1 = FFFFFFFF.815D0880 R2 = 00000000.7BC1CFF0
R3 = 00000000.7BC1CFF0 R4 = 00000000.000CB740 R5 = 00000000.7BC22E38
R6 = 00000000.00000080 R7 = 00000000.00000040 R8 = 00000000.00000001
R9 = 00000000.00000000 R10 = 00000000.00000000 R11 = 00000000.00000004
R12 = 00000000.000C8C80 R13 = FFFFFFFF.810D0B20 R14 = 00000000.7BC230B0
R15 = 00000000.7BC65558 R16 = 00000000.00000001 R17 = 00000000.000C9BE8
R18 = 00000000.00000000 R19 = 00000000.00000000 R20 = FFFFFFFF.FFFFFFFF
R21 = 00000000.00000006 R22 = 00000000.00000000 R23 = 00000000.00000001
R24 = 00000000.000C9BE8 R25 = 00000000.00000000 R26 = FFFFFFFF.801270C8
R27 = FFFFFFFF.810CD888 R28 = 00000000.00000006 FP = 00000000.000C9C20
PC = FFFFFFFF.80001934 PS = 00000000.0000001B
KSP = 00000000.40003EF0 ESP = 00000000.40008000 SSP = 00000000.4000C000
USP = 00000000.000C9C20 PTBR = 00000000.00004F65
AST{SR/EN} = 0000000F ASN = 00000000.000000F7
F0 = 00000000.00000000 F1 = 00000000.00000000 F2 = 00000000.00000000
F3 = 00000000.00000000 F4 = 00000000.00000000 F5 = 00000000.00000000
F6 = 00000000.00000000 F7 = 00000000.00000000 F8 = 00000000.00000000
F9 = 00000000.00000000 F10 = 00000000.00000000 F11 = 00000000.00000000
F12 = 00000000.00000000 F13 = 00000000.00000000 F14 = 00000000.00000000
F15 = 00000000.00000000 F16 = 00000000.00000000 F17 = 00000000.00000000
F18 = 00000000.00000000 F19 = 00000000.00000000 F20 = 00000000.00000000
F21 = 00000000.00000000 F22 = 00000000.00000000 F23 = 00000000.00000000
F24 = 00000000.00000000 F25 = 00000000.00000000 F26 = 00000000.00000000
F27 = 00000000.00000000 F28 = 00000000.00000000 F29 = 00000000.00000000
F30 = 00000000.00000000 FPCR = 00000000.00000000

Process index: 0013 Name: ACME_SERVER Extended PID: 00000413
-----
Inner Mode Semaphore Address: 84026000
Owner: 0000
Ownership Depth: 0000
Tolerant count: 0000
Flags: 0000
History Buffer Is Empty

Process index: 0013 Name: ACME_SERVER Extended PID: 00000413
-----

Process header
-----
First free P0 VA 00000000.00822000 Accumulated CPU time 0000004D
First free P1 VA 00000000.7AFCE000 Subprocess quota 10
First free P2 VA 00000000.80000000 ASTs enabled KESU
Free page file pages 1565 ASN sequence # 0000000000000075
Page fault cluster size 4 AST limit 200
Page table cluster size 1 Process header index 000D
Flags 00000026 Backup address vector 0005C9A8
Direct I/O count 17 PTs having locked WSLEs 3
Buffered I/O count 55 PTs having valid WSLEs 10
Limit on CPU time 00000000 Active page tables 10
Maximum page file count 2500 Maximum active PTs 8
Total page faults 345 Guaranteed fluid WS pages 20
File limit 100 Extra dynamic WS entries 1529
Local event flag cluster 0 E0000001 Local event flag cluster 1 80000000
Timer queue limit 64 Pagefile refcnt 00000000.000000F0
Page Table Base Register 00004F65 Virtual PT Base FFFFFFFC.00000000

```

continued  
VM-0755A-AI

# SDA Commands SHOW PROCESS

Process index: 0013 Name: ACME\_SERVER Extended PID: 00000413

-----  
Working set information

```

First WSL entry      00000001  Current authorized working set size  3144
First locked entry   00000009  Default (initial) working set size   1572
First dynamic entry  00000010  Maximum working set allowed (quota)  3144
Last entry replaced  000001BC
Last entry in list   00000624
  
```

Working set list

```

-----
INDEX          ADDRESS          STATUS
00000001      FFFFFFFD.BF6FC000  VALID PPT(L1) WSLOCK
00000002      FFFFFFFD.BF000000  VALID PPT(L2) WSLOCK
00000003      FFFFFFFC.001FE000  VALID PPT(L3) WSLOCK
00000004      00000000.7FFA0000  VALID PROCESS MODIFIED WSLOCK
00000005      00000000.7FFF0000  VALID PROCESS WSLOCK
00000006      FFFFFFFF.83F62000  VALID PHD   WSLOCK
00000007      FFFFFFFF.83F64000  VALID PHD   WSLOCK
00000008      FFFFFFFF.83F66000  VALID PHD   WSLOCK
  
```

Locked entries:

```

00000009      00000000.7AFE0000  VALID PROCESS WSLOCK
0000000A      00000000.7AFE2000  VALID PROCESS WSLOCK
0000000B      FFFFFFFF.84026000  VALID PHD   WSLOCK
0000000C      00000000.7FEE0000  VALID PROCESS WSLOCK
0000000D      00000000.40002000  VALID PROCESS WSLOCK
0000000E      00000000.40014000  VALID PROCESS WSLOCK
0000000F      00000000.40016000  VALID PROCESS WSLOCK
  
```

Dynamic entries:

```

00000010      00000000.7FFCE000  VALID PROCESS
00000011      FFFFFFFC.001EA000  VALID PPT(L3) WSLOCK
00000012      00000000.7AFDC000  VALID PROCESS
00000013      00000000.7FEB8000  VALID PROCESS
00000014      00000000.7AFDE000  VALID PROCESS
00000015      00000000.7FFD0000  VALID PROCESS MODIFIED
00000016      00000000.7FFBA000  VALID PROCESS
.
.
.
000001B4      FFFFFFFC.00002000  VALID PPT(L3) WSLOCK
000001B5      00000000.00806000  VALID PROCESS
000001B6      00000000.006F2000  VALID PROCESS
000001B7      00000000.006F4000  VALID PROCESS
000001B8      00000000.00804000  VALID PROCESS
000001B9      00000000.0081E000  VALID PROCESS
000001BA      00000000.0080A000  VALID PROCESS
000001BB      00000000.0080C000  VALID PROCESS
000001BC      00000000.0081C000  VALID PROCESS
  
```

---- 1128 entries not displayed

Process index: 0013 Name: ACME\_SERVER Extended PID: 00000413

-----  
Process section table information

```

Last entry allocated  00000009
First free entry      00000009
  
```

continued  
VM-0756A-AI

# SDA Commands

## SHOW PROCESS

### Process section table

| Index    | Address  | Section Address   | Pagelets | Window   | VBN      | CCB      | Refcnt   | Flink | Blink | Flags                                                                                    |
|----------|----------|-------------------|----------|----------|----------|----------|----------|-------|-------|------------------------------------------------------------------------------------------|
| 00000001 | 83F67FD8 | 00000000.00108000 | 0000005D | 815BAA40 | 00000004 | 7FEB8180 | 00000006 | 0008  | 0006  | AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSLIB]VMS\$VMS_ACMESHR.EXE;1         |
| 00000002 | 83F67FB0 | 00000000.7B88C000 | 00000001 | 815BF840 | 00000003 | 7FEB8260 | 00000000 | 0005  | 0005  | CRF WRT AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSLIB]TRACE.EXE;1            |
| 00000003 | 83F67F88 | 00000000.00030000 | 000000A3 | 815C9440 | 0000002B | 7FEB8020 | 0000000B | 0004  | 0004  | AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSEXE]ACME_SERVER.EXE;1              |
| 00000004 | 83F67F60 | 00000000.00050000 | 0000000A | 815C9440 | 000000CE | 7FEB8020 | 00000001 | 0003  | 0003  | AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSEXE]ACME_SERVER.EXE;1              |
| 00000005 | 83F67F38 | 00000000.7B91C000 | 00000013 | 815BF840 | 00000343 | 7FEB8260 | 00000000 | 0002  | 0002  | CRF WRT AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSLIB]TRACE.EXE;1            |
| 00000006 | 83F67F10 | 00000000.00148000 | 00000087 | 815BAA40 | 00000145 | 7FEB8180 | 00000000 | 0001  | 0007  | CRF WRT AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSLIB]VMS\$VMS_ACMESHR.EXE;1 |
| 00000007 | 83F67EE8 | 00000000.00168000 | 00000C23 | 815BAA40 | 000001CC | 7FEB8180 | 000000C3 | 0006  | 0008  | AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSLIB]VMS\$VMS_ACMESHR.EXE;1         |
| 00000008 | 83F67EC0 | 00000000.00378000 | 00000003 | 815BAA40 | 00000DF0 | 7FEB8180 | 00000001 | 0007  | 0001  | AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSLIB]VMS\$VMS_ACMESHR.EXE;1         |
| 00000009 | 83F67E98 | 00000000.7B92C000 | 00000001 | 815BF840 | 00000356 | 00000000 | FFFFFFFF | 0005  | 0002  | CRF WRT AMOD=KRNL<br>File = DISK\$WFGLX0_X907:[VMS\$COMMON.SYSLIB]TRACE.EXE;1            |

Process index: 0013 Name: ACME\_SERVER Extended PID: 00000413

### Process Region Table

| RDE Addr | Flink    | Blink    | T Link   | Flags    | Protect  | Region Ident      | Starting Address  | Region Size       | First Free VA     |
|----------|----------|----------|----------|----------|----------|-------------------|-------------------|-------------------|-------------------|
| 7FEBA328 | 7FEBA328 | 7FEBA328 | 00000000 | 0000000A | 00000030 | 00000000.00000000 | 00000000.00000000 | 00000000.40000000 | 00000000.00822000 |
| 7FEBA360 | 7FE99960 | 7FE99960 | 00000000 | 0000001D | 00000030 | 00000000.00000001 | 00000000.40168000 | 00000000.3FE98000 | 00000000.7AFCE000 |
| 7FEBA398 | 7FEBA398 | 7FEBA398 | 00000000 | 00000008 | 00000030 | 00000000.00000002 | 00000000.80000000 | 000006FB.80000000 | 00000000.80000000 |
| 7FE99960 | 7FEBA360 | 7FEBA360 | 00000000 | 00000004 | 00000030 | 00000000.00000010 | 00000000.40000000 | 00000000.00168000 | 00000000.40018000 |

Process index: 0013 Name: ACME\_SERVER Extended PID: 00000413

### P0 space

| Mapped Address    | PTE Address                   | PTE                    | Type  | Read | Writ | Bits | GH | PgTyp   | Loc                    | Bak               | RefCnt | Flink    | Blink    |
|-------------------|-------------------------------|------------------------|-------|------|------|------|----|---------|------------------------|-------------------|--------|----------|----------|
| -----             | 8 null pages:                 | VA 00000000.00000000   |       |      |      |      |    |         | PTE FFFFFFFC.00000000  |                   |        |          |          |
|                   |                               | -to- 00000000.0000FFFF |       |      |      |      |    |         | -to- FFFFFFFC.00000038 |                   |        |          |          |
| 00000000.00010000 | FFFFFFFC.00000040             | 0000376A.00160F09      | VALID | KESU | NONE | M-U- | 0  | PROCESS | ACTIVE                 | FF000000.00000000 | 0001   | 00000000 | 0000003B |
| -----             | 7 null pages:                 | VA 00000000.00012000   |       |      |      |      |    |         | PTE FFFFFFFC.00000048  |                   |        |          |          |
|                   |                               | -to- 00000000.0001FFFF |       |      |      |      |    |         | -to- FFFFFFFC.00000078 |                   |        |          |          |
| 00000000.00020000 | FFFFFFFC.00000080             | 00005060.0016FF09      | VALID | KESU | KESU | M-U- | 0  | PROCESS | ACTIVE                 | FF000000.00000000 | 0001   | 00000000 | 00000093 |
| 00000000.00022000 | FFFFFFFC.00000088             | 00005061.0016FF09      | VALID | KESU | KESU | M-U- | 0  | PROCESS | ACTIVE                 | FF000000.00000000 | 0001   | 00000000 | 00000094 |
| -----             | 6 null pages:                 | VA 00000000.00024000   |       |      |      |      |    |         | PTE FFFFFFFC.00000090  |                   |        |          |          |
|                   |                               | -to- 00000000.0002FFFF |       |      |      |      |    |         | -to- FFFFFFFC.000000B8 |                   |        |          |          |
| 00000000.00030000 | FFFFFFFC.000000C0             | 0000503D.00060F01      | VALID | KESU | NONE | --U- | 0  | PROCESS | ACTIVE                 | 00000003.00010000 | 0001   | 00000000 | 00000085 |
| 00000000.00032000 | FFFFFFFC.000000C8             | 0000503E.00060F01      | VALID | KESU | NONE | --U- | 0  | PROCESS | ACTIVE                 | 00000003.00010000 | 0001   | 00000000 | 00000086 |
| 00000000.00034000 | FFFFFFFC.000000D0             | 0000503F.00060F01      | VALID | KESU | NONE | --U- | 0  | PROCESS | ACTIVE                 | 00000003.00010000 | 0001   | 00000000 | 00000087 |
| :                 |                               |                        |       |      |      |      |    |         |                        |                   |        |          |          |
| 00000000.0081C000 | FFFFFFFC.00002070             | 000038E4.0016FF09      | VALID | KESU | KESU | M-U- | 0  | PROCESS | ACTIVE                 | FF000000.00000000 | 0001   | 00000000 | 000001BC |
| 00000000.0081E000 | FFFFFFFC.00002078             | 000038E1.0016FF09      | VALID | KESU | KESU | M-U- | 0  | PROCESS | ACTIVE                 | FF000000.00000000 | 0001   | 00000000 | 000001B9 |
| 00000000.00820000 | FFFFFFFC.00002080             | 00000000.0006FF00      | DZERO | KESU | KESU | --U- | 0  |         |                        |                   |        |          |          |
| -----             | 1007 null pages:              | VA 00000000.00822000   |       |      |      |      |    |         | PTE FFFFFFFC.00002088  |                   |        |          |          |
|                   |                               | -to- 00000000.00FFFFFF |       |      |      |      |    |         | -to- FFFFFFFC.00003FF8 |                   |        |          |          |
| -----             | 129024 entries not in memory: | VA 00000000.01000000   |       |      |      |      |    |         | PTE FFFFFFFC.00004000  |                   |        |          |          |
|                   |                               | -to- 00000000.3FFFFFFF |       |      |      |      |    |         | -to- FFFFFFFC.0000FFFF |                   |        |          |          |

continued  
VM-0757A-AI

# SDA Commands SHOW PROCESS

P1 space  
-----

| Mapped Address                            | PTE Address       | PTE               | Type  | Read | Writ | Bits | GH | PgTyp   | Loc    | Bak               | RefCnt | Flink    | Blink    |
|-------------------------------------------|-------------------|-------------------|-------|------|------|------|----|---------|--------|-------------------|--------|----------|----------|
| ----- 1 null page: -----                  |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| 00000000.40002000                         | FFFFFEFC.00100008 | 000037DC.00101709 | VALID | KES- | K--- | MLK- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 0000000D |
| 00000000.40004000                         | FFFFFEFC.00100010 | 00000000.00023700 | DZERO | KES- | KE-- | --E- | 0  |         |        |                   |        |          |          |
| 00000000.40006000                         | FFFFFEFC.00100018 | 00003861.00123709 | VALID | KES- | KE-- | M-E- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 0000000B |
| 00000000.40008000                         | FFFFFEFC.00100020 | 00000000.00047F00 | DZERO | KESU | KES- | --S- | 0  |         |        |                   |        |          |          |
| 00000000.4000A000                         | FFFFFEFC.00100028 | 00000000.00047F00 | DZERO | KESU | KES- | --S- | 0  |         |        |                   |        |          |          |
| 00000000.4000C000                         | FFFFFEFC.00100030 | 00000000.00001100 | DZERO | K--- | K--- | --K- | 0  |         |        |                   |        |          |          |
| 00000000.4000E000                         | FFFFFEFC.00100038 | 00000000.0000FF00 | DZERO | KESU | KESU | --K- | 0  |         |        |                   |        |          |          |
| 00000000.40010000                         | FFFFFEFC.00100040 | 00000000.0000FF00 | DZERO | KESU | KESU | --K- | 0  |         |        |                   |        |          |          |
| 00000000.40012000                         | FFFFFEFC.00100048 | 00000000.0000FF00 | DZERO | KESU | KESU | --K- | 0  |         |        |                   |        |          |          |
| 00000000.40014000                         | FFFFFEFC.00100050 | 000037DD.0010FF09 | VALID | KESU | KESU | MLK- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 0000000E |
| 00000000.40016000                         | FFFFFEFC.00100058 | 000037DE.00103F09 | VALID | KESU | KE-- | MLK- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 0000000F |
| ----- 1012 null pages: -----              |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| ----- 118784 entries not in memory: ----- |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| ----- 1000 null pages: -----              |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| 00000000.7AFD0000                         | FFFFFEFC.001EBF40 | 000038BF.0016FF09 | VALID | KESU | KESU | M-U- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 00000195 |
| 00000000.7AFD2000                         | FFFFFEFC.001EBF48 | 00003883.0016FF09 | VALID | KESU | KESU | M-U- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 0000011A |
| 00000000.7AFD4000                         | FFFFFEFC.001EBF50 | 000038BE.0016FF09 | VALID | KESU | KESU | M-U- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 00000190 |
| .                                         |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| .                                         |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| 00000000.7FEE0000                         | FFFFFEFC.001FFFB8 | 00003753.0010FF09 | VALID | KESU | KESU | MLK- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 0000000C |
| 00000000.7FFF0000                         | FFFFFEFC.001FFFC0 | 00004FAB.10103F09 | VALID | KESU | KE-- | MLK- | 0  | PROCESS | ACTIVE | FF000000.00000000 | 0001   | 00000000 | 00000005 |
| ----- 7 null pages: -----                 |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |

P2 space  
-----

| Mapped Address                               | PTE Address       | PTE               | Type  | Read | Writ | Bits | GH | PgTyp   | Loc    | Bak               | RefCnt | Flink    | Blink    |
|----------------------------------------------|-------------------|-------------------|-------|------|------|------|----|---------|--------|-------------------|--------|----------|----------|
| ----- 937164800 entries not in memory: ----- |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| ----- 126 null pages: -----                  |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| FFFFFEFC.00100000                            | FFFFFEFD.BF000000 | 00003784.40101309 | VALID | KE-- | K--- | MLK- | 0  | PPT(L3) | ACTIVE | FF000000.00000000 | 0001   | 000000F3 | 0000001F |
| FFFFFEFC.00002000                            | FFFFFEFD.BF000008 | 000038DC.40101309 | VALID | KE-- | K--- | MLK- | 0  | PPT(L3) | ACTIVE | FF000000.00000000 | 0001   | 00000006 | 000001B4 |
| ----- 116 null pages: -----                  |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |
| FFFFFEFC.001EA000                            | FFFFFEFD.BF0007A8 | 00003758.40101309 | VALID | KE-- | K--- | MLK- | 0  | PPT(L3) | ACTIVE | FF000000.00000000 | 0001   | 0000000B | 00000011 |
| FFFFFEFC.001EC000                            | FFFFFEFD.BF0007B0 | 00003755.40101309 | VALID | KE-- | K--- | MLK- | 0  | PPT(L3) | ACTIVE | FF000000.00000000 | 0001   | 00000024 | 000000A1 |
| FFFFFEFC.001EE000                            | FFFFFEFD.BF0007B8 | 00003785.40101309 | VALID | KE-- | K--- | MLK- | 0  | PPT(L3) | ACTIVE | FF000000.00000000 | 0001   | 0000005F | 00000022 |
| FFFFFEFC.001F0000                            | FFFFFEFD.BF0007C0 | 0000387B.40101309 | VALID | KE-- | K--- | MLK- | 0  | PPT(L3) | ACTIVE | FF000000.00000000 | 0001   | 00000015 | 000000E5 |
| ----- 6 null pages: -----                    |                   |                   |       |      |      |      |    |         |        |                   |        |          |          |

continued  
VM-0758A-AI

# SDA Commands

## SHOW PROCESS

```

FFFFFEFC.001FE000 FFFFFEFD.BF0007F8 00004FAD.40001309 VALID KE-- K--- -LK- 0 PPT(L3) ACTIVE FF000000.00000000 0001 0000000E 00000003
-----
768 null pages:          VA FFFFFEFC.00200000          PTE FFFFFEFD.BF000800
                        -to- FFFFFEFC.007FFFFFFF          -to- FFFFFEFD.BF001FF8

-----
914432 entries not in memory: VA FFFFFEFC.00800000          PTE FFFFFEFD.BF002000
                        -to- FFFFFEFD.BEFFFFFFF          -to- FFFFFEFD.BF6FBFF8

FFFFFEFD.BF000000 FFFFFEFD.BF6FC000 00004FAE.40001109 VALID K--- K--- -LK- 0 PPT(L2) ACTIVE FF000000.00000000 0001 00000008 00000002
-----
893 null pages:          VA FFFFFEFD.BF002000          PTE FFFFFEFD.BF6FC008
                        -to- FFFFFEFD.BF6FBFFF          -to- FFFFFEFD.BF6FDBE8

FFFFFEFD.BF6FC000 FFFFFEFD.BF6FDBF0 00004F65.40000109 VALID K--- NONE -LK- 0 PPT(L1) ACTIVE 00000000.83F62000 0001 00000001 00000001

```

Process index: 0013 Name: ACME\_SERVER Extended PID: 00000413

ASB Address: 7B02E000

```

LTP_POOL: 7B030800          IMPURE:          7FFD00C4
BLN:          00002600          9728.
BID:          00000032          50.

FP:          7FFA5118 7FFD00C4
SP:          7FFA5118 7FFD00C4
FLAGS:          00000000
PERSONA_ID:          2
SAVED_ID:          1

```

```

IO_OPERATION/OLD_FAB:          00000000
P4_PARM: 00000880
STS: 00018292
EFN: 0000001D
STALL_STRUCT: 00000000
ERRAST: 00000000
SUCAST: 00000000
FAB: 7FFD1000
STACK: 7B02F200
STKTOP: 7B02E070
STKBOT: 7B02F200
STKLEN: 00001190          4496.
MODE_OFFSET:          00000001          1.
SAVED_ASB:          00000000
BKP:          00002008 ASY_THREAD,STALL_WITH_PERSONA

```

BDB Address: 7B028710

```

FLINK:          7B02726C          BID:          0C          12.
BLINK:          7B02726C          BLN:          1C          28.
FLGS:          00
USERS:          0000          0. BLB_PTR: 00000000
CACHE_VAL:00          0. BUFF_ID: 0000          0.
SIZE:          00000000          NUMB:          0000003B
ADDR:          00000000          VBN:          00000000
VBNSEQNO: 00000000          WAIT:          00000000
WK1:          00000000          CURBUFADR:00000000000FC000
REL_VBN: 00000000          PRE_CCTL: 00
ASB:          00000000
ALLOC_ADDR: 00000000          BI_BDB:          00000000
ALLOC_SIZE: 0000          0 AI_BDB:          00000000
VAL_VBNS: 00000000          POST_CCTL:00
IOSB:          00000000          WAIT_O_FLINK: 00000000
          00000000          WAIT_O_BLINK: 00000000
REUSE_COUNT: 00000000          IDX_BKT_LEVEL: 00

```

Process index: 0013 Name: ACME\_SERVER Extended PID: 00000413

continued  
VM-0759A-AI



# SDA Commands SHOW PROCESS

Process active channels  
-----

| Channel | Window   | Status | Device/file accessed                                                      |
|---------|----------|--------|---------------------------------------------------------------------------|
| 0010    | 00000000 |        | WFGLX0\$DKB400:                                                           |
| 0020    | 815C9440 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSEXE]ACME_SERVER.EXE;1                      |
| 0030    | 815C0580 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]PTHREAD\$RTL.EXE;1 (section file)      |
| 0040    | 815BDE00 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]LIBOTS.EXE;1 (section file)            |
| 0050    | 815BDD80 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]LIBRTL.EXE;1 (section file)            |
| 0060    | 815BF480 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]CMA\$TIS_SHR.EXE;1 (section file)      |
| 0070    | 815C0980 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]DECC\$SHR.EXE;1 (section file)         |
| 0080    | 815C0500 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]DPML\$SHR.EXE;1 (section file)         |
| 0090    | 815C7240 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYMSG]SHRIMGMSG.EXE;1 (section file)          |
| 00A0    | 815C6980 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYMSG]DECC\$MSG.EXE;1 (section file)          |
| 00B0    | 00000000 | Busy   | MBAL5:                                                                    |
| 00C0    | 815D2480 |        | WFGLX0\$DKB400:[SYS12.SYSMGR]ACME\$SERVER.LOG;21                          |
| 00D0    | 815BAA40 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]VMS\$VMS_ACMESHR.EXE;1                 |
| 00E0    | 815BF1C0 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]SECURESHR.EXE;1 (section file)         |
| 00F0    | 815BD440 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]SECURESHRP.EXE;1 (section file)        |
| 0100    | 815BDC40 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]PTD\$SERVICES_SHR.EXE;1 (section file) |
| 0110    | 815BF640 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]CRF\$SHR.EXE;1 (section file)          |
| 0120    | 815C1140 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]ADARTL.EXE;1 (section file)            |
| 0130    | 815C0D40 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]CMA\$RTL.EXE;1 (section file)          |
| 0140    | 815BF840 |        | WFGLX0\$DKB400:[VMS\$COMMON.SYSLIB]TRACE.EXE;1 (section file)             |

Total number of open channels : 20.

Process index: 0013 Name: ACME\_SERVER Extended PID: 00000413  
-----

Process activated images  
-----

| Image Name/Link     | Time/Section           | Type                     | Start                 | End      | Type     | IMCB         | Sym Vect | Maj,Minor    | ID | Base     | End      | ImageOff |
|---------------------|------------------------|--------------------------|-----------------------|----------|----------|--------------|----------|--------------|----|----------|----------|----------|
| ACME_SERVER         | 3-FEB-2001 22:56:22.00 |                          | 00010000              | 000705FF | MAIN     | 7FE98060     |          | 113,12385697 |    |          |          |          |
| SHRIMGMSG           | 3-FEB-2001 23:11:29.25 |                          | 000B4000              | 000BA9FF | MRGD     | SHR 7FE99840 | 000B4000 | 113,12524133 |    |          |          |          |
| DECC\$MSG           | 3-FEB-2001 23:20:49.27 |                          | 000BC000              | 000BFFFF | MRGD     | SHR 7FE98A30 | 000BC000 | 113,12609585 |    |          |          |          |
| VMS\$VMS_ACMESHR    | 3-FEB-2001 23:15:50.06 |                          | 00108000              | 00389FFF | MRGD     | 7FE992A0     | 0012DE80 | 113,12563930 |    |          |          |          |
| SECURESHRP          | 3-FEB-2001 22:42:02.12 |                          | 7B2B4000              | 7B335FFF | GLBL PRT | SHR 7FE99A20 | 7B2B9640 | 1,4          |    |          |          |          |
|                     |                        | System Resident Code     |                       |          |          |              |          |              |    | 80800000 | 808271FF | 00030000 |
|                     |                        | Shareable Address Data   |                       |          |          |              |          |              |    | 7B2B4000 | 7B2B9FFF | 00000000 |
|                     |                        | Read-Write Data          |                       |          |          |              |          |              |    | 7B2C4000 | 7B2C59FF | 00010000 |
|                     |                        | Shareable Read-Only Data |                       |          |          |              |          |              |    | 7B2D4000 | 7B2D47FF | 00020000 |
|                     |                        | Shareable Address Data   |                       |          |          |              |          |              |    | 7B314000 | 7B314717 | 00060000 |
|                     |                        | Demand Zero Data         |                       |          |          |              |          |              |    | 7B324000 | 7B3241FF | 00070000 |
|                     |                        | Compressed Data          |                       |          |          |              |          |              |    | 7B334000 | 7B334BFF | 00080000 |
|                     |                        | .                        |                       |          |          |              |          |              |    |          |          |          |
|                     |                        | .                        |                       |          |          |              |          |              |    |          |          |          |
|                     |                        | .                        |                       |          |          |              |          |              |    |          |          |          |
| ADARTL              | 3-FEB-2001 22:50:26.28 |                          | 7C030000              | 7C07BFFF | GLBL     | SHR 7FE98B50 | 7C037320 | 1,3          |    |          |          |          |
|                     |                        | Shareable Address Data   |                       |          |          |              |          |              |    | 7C030000 | 7C0385FF | 00000000 |
|                     |                        | Shareable Address Data   |                       |          |          |              |          |              |    | 7C03A000 | 7C03D5FF | 00010000 |
|                     |                        | Shareable Code           |                       |          |          |              |          |              |    | 7C03E000 | 7C0709FF | 00020000 |
|                     |                        | Read-Write Data          |                       |          |          |              |          |              |    | 7C072000 | 7C0727FF | 00060000 |
|                     |                        | Shareable Read-Only Data |                       |          |          |              |          |              |    | 7C074000 | 7C0745FF | 00070000 |
|                     |                        | Read-Write Data          |                       |          |          |              |          |              |    | 7C076000 | 7C0761FF | 00080000 |
|                     |                        | Demand Zero Data         |                       |          |          |              |          |              |    | 7C078000 | 7C0781FF | 00090000 |
|                     |                        | Compressed Data          |                       |          |          |              |          |              |    | 7C07A000 | 7C07AFFF | 000A0000 |
| SYS\$PUBLIC_VECTORS |                        |                          | 81003E78              | 81005E37 | GLBL     | 7FE98840     | 81003E78 | 113,12237208 |    |          |          |          |
| SYS\$BASE_IMAGE     |                        |                          | 81019D90              | 8102C23F | GLBL     | 7FE98720     | 81019D90 | 113,12239366 |    |          |          |          |
| Total images = 19   |                        |                          | Pages allocated = 885 |          |          |              |          |              |    |          |          |          |

continued  
VM-0760A-AI

# SDA Commands

## SHOW PROCESS

```

Process index: 0013  Name: ACME_SERVER  Extended PID: 00000413
-----
No buffer objects for this process

Process index: 0013  Name: ACME_SERVER  Extended PID: 00000413
-----

The fandle vector is empty.

Process index: 0013  Name: ACME_SERVER  Extended PID: 00000413
-----
PROCESS PERSONAE
-----

  ID      PSB      Refcnt      Flags      Username
-----
0001  815C8F00  005      PERMANENT      SYSTEM

Persona ID: 0001      PSB: 815C8F00      Username: SYSTEM
-----
Flags : 00000001      Refcount : 005
Mode  : User          Noaudit  : 1
Account: <start>      UIC      : [00001,000004]

Privileges:
  Authorized      : 000000208009D025
  Permanent       : 000000208009D025
  Working (Persona): 00000060D009D025
  Working (Image) : 0000000000000000

Enabled rights: 0000000000000003 ( PERSONA,SYSTEM )

Rights Chain: PERSONA (Enabled) :

  ID      Flags
-----
00010004  00000001

Rights Chain: SYSTEM (Enabled) :

  ID      Flags
-----
80010001  00000000

```

VM-0761A-AI

The SHOW PROCESS/ALL command displays information taken from the PCB and KTBS of process ACME\_SERVER, and then proceeds to display the process registers, inner mode semaphores, the process header and working set, the process section table, process regions, the page tables of the process, RMS data structures, information about I/O channels owned by the process, images activated by the process, and process persona data structures. These displays may also be obtained using the /PCB, /THREADS, /REGISTERS, /SEMAPHORE, /PHD, /WORKING\_SET\_LIST, /PST, /RDE, /PAGE=ALL, /RMS, /CHANNELS, /IMAGES=ALL, and PERSONA/RIGHTS qualifiers, respectively. This process had no locks, buffer objects or fast I/O handles to be displayed.

# SDA Commands SHOW PROCESS

3. SDA> SHOW PROCESS/PAGE\_TABLES/ADDRESS=805E7980

PO page table

| MAPPED ADDRESS    | PTE ADDRESS                   | PTE               | TYPE  | READ              | WRIT | BITS | GH | PGTYP   | LOC    | BAK               | REFCNT | FLINK    | BLINK    |
|-------------------|-------------------------------|-------------------|-------|-------------------|------|------|----|---------|--------|-------------------|--------|----------|----------|
| -----             | 8 null pages:                 |                   | VA    | 00000000.00000000 |      |      |    |         | PTE    | FFFFFFFF.00000000 |        |          |          |
|                   |                               |                   | -to-  | 00000000.0000E000 |      |      |    |         | -to-   | FFFFFFFF.00000038 |        |          |          |
| 00000000.00010000 | FFFFFFFFC.00000040            | 000003E7.00160F09 | VALID | KESU              | NONE | M-U- | 0  | PROCESS | ACTIVE | 03000000.00000000 | 0001   | 00000000 | 00000034 |
| -----             | 7 null pages:                 |                   | VA    | 00000000.00012000 |      |      |    |         | PTE    | FFFFFFFF.00000048 |        |          |          |
|                   |                               |                   | -to-  | 00000000.0001E000 |      |      |    |         | -to-   | FFFFFFFF.00000078 |        |          |          |
| 00000000.00020000 | FFFFFFFFC.00000080            | 0000046E.0016FF09 | VALID | KESU              | KESU | M-U- | 0  | PROCESS | ACTIVE | 03000000.00000000 | 0001   | 00000000 | 00000037 |
| -----             | 7 null pages:                 |                   | VA    | 00000000.00022000 |      |      |    |         | PTE    | FFFFFFFF.00000088 |        |          |          |
|                   |                               |                   | -to-  | 00000000.0002E000 |      |      |    |         | -to-   | FFFFFFFF.000000B8 |        |          |          |
| 00000000.00030000 | FFFFFFFFC.000000C0            | 0000015C.00060F01 | VALID | KESU              | NONE | --U- | 0  | PROCESS | ACTIVE | 00000002.00090000 | 0001   | 00000000 | 00000036 |
| -----             | 7 null pages:                 |                   | VA    | 00000000.00032000 |      |      |    |         | PTE    | FFFFFFFF.000000C8 |        |          |          |
|                   |                               |                   | -to-  | 00000000.0003E000 |      |      |    |         | -to-   | FFFFFFFF.000000F8 |        |          |          |
| 00000000.00040000 | FFFFFFFFC.00000100            | 0000014D.00163F09 | VALID | KESU              | KE-- | M-U- | 0  | PROCESS | ACTIVE | 03000000.00000000 | 0001   | 00000000 | 00000032 |
| -----             | 991 null pages:               |                   | VA    | 00000000.00042000 |      |      |    |         | PTE    | FFFFFFFF.00000108 |        |          |          |
|                   |                               |                   | -to-  | 00000000.007FE000 |      |      |    |         | -to-   | FFFFFFFF.00001FF8 |        |          |          |
| -----             | 130048 entries not in memory: |                   | VA    | 00000000.00800000 |      |      |    |         | PTE    | FFFFFFFF.00002000 |        |          |          |
|                   |                               |                   | -to-  | 00000000.3FFFE000 |      |      |    |         | -to-   | FFFFFFFF.000FFFF8 |        |          |          |

ZK-8864A-GE

This example displays the page tables of a process whose PCB address is 805E7980.

4. SDA> SHOW PROCESS/BUFFER\_OBJECTS/FANDLES

Process index: 0022 Name: Milord\_RTAl: Extended PID: 00000062

## Process Buffer Objects

| ADDRESS  | ACMODE | SEQUENCE | REFCNT   | PID      | PAGCNT   | BASE PVA          | BASE SVA          |           |
|----------|--------|----------|----------|----------|----------|-------------------|-------------------|-----------|
| 8151AE00 | User   | 00000011 | 00000031 | 00010022 | 00000001 | 00000000.00084000 | FFFFFFFF.7DE68000 | S2_WINDOW |
| 814A6CC0 | User   | 00000012 | 00000009 | 00010022 | 00000001 | 00000000.80000000 | FFFFFFFF.7DE66000 | S2_WINDOW |
| 814FBA00 | User   | 00000013 | 00000009 | 00010022 | 00000001 | 00000000.80000000 | FFFFFFFF.FFFFFFFF | NOSVA     |
| 81512200 | User   | 00000014 | 00000009 | 00010022 | 00000001 | 00000000.80028000 | FFFFFFFF.7DE64000 | S2_WINDOW |
| 8151A8C0 | User   | 00000015 | 00000009 | 00010022 | 00000001 | 00000000.80028000 | FFFFFFFF.FFFFFFFF | NOSVA     |
| 81438580 | User   | 00000016 | 00000009 | 00010022 | 00000001 | FFFFFFFB.FF800000 | FFFFFFFF.7DE62000 | S2_WINDOW |
| 81464480 | User   | 00000017 | 00000009 | 00010022 | 00000001 | FFFFFFFB.FF800000 | FFFFFFFF.FFFFFFFF | NOSVA     |
| 81416F00 | Kernel | 00000018 | 00000001 | 00010022 | 00000001 | 00000000.7FF76000 | FFFFFFFF.8120C000 | NOQUOTA   |

## Fandle Vector Header

| Address  | Maxfix   | Real_Size | CCB buffer handle |
|----------|----------|-----------|-------------------|
| 7FF68290 | 00000043 | 00000880  | 00000018.81416F00 |

## Fandles

| Address  | IRP      | fastio_done | Orgfun   | Data bo handle    | IOSA bo handle    | DBYLEN            |
|----------|----------|-------------|----------|-------------------|-------------------|-------------------|
| 7FF682B0 | 815CEF40 | set         | 00020031 | 00000016.81438580 | 00000011.8151AE00 | 00000000.00002000 |
| 7FF682D0 | 815CE4C0 | set         | 00020030 | 00000016.81438580 | 00000011.8151AE00 | 00000000.00002000 |
| 7FF682F0 | 815CE200 | set         | 00000031 | 00000016.81438580 | 00000011.8151AE00 | 00000000.00002000 |
| 7FF68310 | 815D4B80 | set         | 00000030 | 00000016.81438580 | 00000011.8151AE00 | 00000000.00002000 |
| 7FF68330 | 815D65C0 | set         | 00020031 | 00000015.8151A8C0 | 00000011.8151AE00 | 00000000.00002000 |
| 7FF68350 | 815D6880 | set         | 00020030 | 00000015.8151A8C0 | 00000011.8151AE00 | 00000000.00002000 |

## SDA Commands

### SHOW PROCESS

```
.  
:  
:  
7FF68810 815D6B40 set 00020031 00000013.814FBA00 00000011.8151AE00 00000000.00002000  
7FF68830 815D5880 set 00020030 00000013.814FBA00 00000011.8151AE00 00000000.00002000  
----- 00000013 free FVEs (IRP = 00000000) VA 7FF68850  
-to- 7FF68A90  
7FF68AB0 815D9840 set 00020031 00000017.81464480 00000011.8151AE00 00000000.00002000  
7FF68AD0 815CD040 set 00020030 00000017.81464480 00000011.8151AE00 00000000.00002000  
7FF68AF0 815CB480 set 00000031 00000017.81464480 00000011.8151AE00 00000000.00002000
```

The **SHOW PROCESS/BUFFER\_OBJECTS/FANDLES** command displays all the buffered objects and fast I/O handles that a process has created.

## SHOW RAD

Displays the settings and explanations of the RAD\_SUPPORT system parameter fields, and the assignment of CPUs and memory to the Resource Affinity Domains (RADs). This command is only useful on platforms that support RADs. By default, the SHOW RAD command displays the settings of the RAD\_SUPPORT system parameter fields.

### Format

SHOW RAD [number|/ALL]

### Parameter

#### number

Displays information on CPUs and memory for the specified RAD.

### Qualifier

#### /ALL

Displays settings of the RAD\_SUPPORT parameter fields and the CPU and memory assignments for all RADs.

### Examples

1. SDA> SHOW RAD

```
Resource Affinity Domains
```

```
-----
RAD information header address: FFFFFFFF.81032340
Maximum RAD count:                00000008
RAD containing SYS$BASE_IMAGE:    00000000
RAD support flags:                 0000004F
```

```

  3      2 2      1 1
  1      4 3      6 5      8 7      0
+-----+-----+-----+-----+
|..|..| skip|ss|gg|ww|pp|..|..|..|..|.p|fs|cr|ae|
+-----+-----+-----+-----+
|..|..|  0| 0| 0| 0| 0|..|..|..|..|.1|00|11|11|
+-----+-----+-----+-----+
```

```
Bit 0 = 1:      RAD support is enabled
Bit 1 = 1:      Soft RAD affinity support is enabled
                  (Default scheduler skip count of 16 attempts)
Bit 2 = 1:      System-space replication support is enabled
Bit 3 = 1:      Copy on soft fault is enabled
Bit 4 = 0:      Default RAD-based page allocation in use
```

| Allocation Type              | RAD choice |
|------------------------------|------------|
| -----                        | -----      |
| Process-private pagefault    | Home       |
| Process creation or inswap   | Random     |
| Global pagefault             | Random     |
| System-space page allocation | Current    |

```
Bit 5 = 0:      RAD debug feature is disabled
```

## SDA Commands

### SHOW RAD

Bit 6 = 1: Per-RAD non-paged pool is enabled

This example shows the settings of the RAD\_SUPPORT system parameter fields.

2. SDA> SHOW RAD 2

Resource Affinity Domain 0002

-----

CPU sets:

|           |             |
|-----------|-------------|
| Active    | 08 09 10 11 |
| Configure | 08 09 10 11 |
| Potential | 08 09 10 11 |

PFN ranges:

| Start PFN | End PFN  | PFN count | Flags              |
|-----------|----------|-----------|--------------------|
| -----     | -----    | -----     | -----              |
| 01000000  | 0101FFFF | 00020000  | 000A OpenVMS Base  |
| 01020000  | 0103FFFF | 00020000  | 0010 Galaxy_Shared |
| SYSPTBR:  | 01003C00 |           |                    |

This example shows information on the CPUs and memory for RAD 2.

---

## SHOW RESOURCES

Displays information about all resources in the system, or about a resource associated with a specific lock.

### Format

```
SHOW RESOURCES {/ADDRESS=n|/ALL (d)|
                /BRIEF|/CACHED|/CONTENTION [=ALL]|
                /LOCKID=lock-id|/NAME=resource-name|
                /OWNED|/STATUS=(keyword [keyword,])}
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*n***

Displays information from the resource block at the specified address.

#### **/ALL**

Displays information from all resource blocks (RSBs) in the system. This is the default behavior of the SHOW RESOURCES command.

#### **/BRIEF**

Displays a single line of information for each resource.

#### **/CACHED**

Displays resource blocks that are no longer valid. The memory for these resources is saved so that later requests for resources can use them.

#### **/CONTENTION [=ALL]**

Displays only resources that have at least one lock on either the waiting or conversion queue. Unless you specify the ALL keyword, resources with locks on the waiting or conversion queues that are not participating in deadlock searches are ignored. (Locks not participating in deadlock searches are requested with either the LCK\$M\_NODLCKWT or LCK\$M\_NODLCKBLK flags.)

#### **/LOCKID=*lock-id***

Displays information on the resource associated with the lock with the specified *lock-id*.

#### **/NAME=*resource-name***

Displays information about a specific resource.

#### **/OWNED**

Causes SDA to display only owned resources.

#### **/STATUS=(*keyword* [*keyword*,])**

Displays only resources that have the specified status bits set in the RSB\$LSL\_STATUS field. Status keywords are as follows:

## SDA Commands

### SHOW RESOURCES

| Keyword    | Meaning                                             |
|------------|-----------------------------------------------------|
| 2PC_IP     | Indicates a two-phase convert operation in progress |
| BRL        | Indicates byte range resource                       |
| CHK_BTR    | Checks for better master                            |
| CVTFULRNG  | Indicates full-range requests in convert queue      |
| CVTSUBRNG  | Indicates sub-range requests in convert queue       |
| DIRENTRY   | Indicates entered in directory during failover      |
| DIR_IP     | Creates directory entry                             |
| DIR_RQD    | Indicates directory entry required                  |
| INVPEND    | Checks for value block invalidation                 |
| RBLD_ACT   | Indicates lock rebuild active for this tree         |
| RBLD_IP    | Indicates rebuild operation in progress             |
| RBLD_RQD   | Indicates rebuild required for this resource tree   |
| RM_ACCEPT  | Accepts new master                                  |
| RM_DEFLECT | Deflects remote interest                            |
| RM_IP      | Indicates resource remaster in progress             |
| RM_PEND    | Indicates a pending resource remaster operation     |
| RM_RBLD    | Indicates to always rebuild resource tree           |
| RM_WAIT    | Blocks local activity                               |
| VALCUR     | Indicates value block is current                    |
| VALINVLD   | Indicates value block invalid                       |
| WTFULRNG   | Indicates full-range requests in wait queue         |
| WTSUBRNG   | Indicates a full-range requests in wait queue       |

### Description

The SHOW RESOURCES command displays the information listed in Table 4–21 either for each resource in the system or for the specific resource associated with the specified **lock-id**, address or name.

**Table 4–21 Resource Information in the SHOW RESOURCES Display**

| Field          | Contents                                                                                                                                                                                                                                                                                                                                                            |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Address of RSB | Address of the resource block (RSB) that describes this resource.                                                                                                                                                                                                                                                                                                   |
| GGMODE         | Indication of the most restrictive mode in which a lock on this resource has been granted. Table 4–22 shows the fields and values and their meanings. They are shown in order from the least restrictive mode to the most restrictive.<br><br>For information on conflicting and incompatible lock modes, see the <i>OpenVMS System Services Reference Manual</i> . |
| Status         | The contents of the resource block status field.                                                                                                                                                                                                                                                                                                                    |

(continued on next page)



**Table 4–21 (Cont.) Resource Information in the SHOW RESOURCES Display**

| Field         | Contents                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Parent RSB    | Address of the RSB that is the parent of this RSB. This field is 00000000 if the RSB itself is a parent block.                                                                                                                                                                                                                                                                                                                                                                            |
| CGMODE        | Indication of the most restrictive lock mode to which a lock on this resource is waiting to be converted. This does not include the mode for which the lock at the head of the conversion queue is waiting. See Table 4–22.                                                                                                                                                                                                                                                               |
| Sub-RSB count | Number of RSBs of which this RSB is the parent. This field is 0 if the RSB has no sub-RSBs.                                                                                                                                                                                                                                                                                                                                                                                               |
| FGMODE        | Indication of the full-range grant mode. See Table 4–22.                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Lock Count    | The total count of all locks on the resource.                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| RQSEQNM       | Sequence number of the request.                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| BLKAST count  | Number of locks on this resource that have requested a blocking AST.                                                                                                                                                                                                                                                                                                                                                                                                                      |
| CSID          | Cluster system identification number (CSID) and name of the node that owns the resource.                                                                                                                                                                                                                                                                                                                                                                                                  |
| Resource      | Dump of the name of this resource, as stored at the end of the RSB. The first two columns are the hexadecimal representation of the name, with the least significant byte represented by the rightmost two digits in the rightmost column. The third column contains the ASCII representation of the name, the least significant byte being represented by the leftmost character in the column. Periods in this column represent values that correspond to nonprinting ASCII characters. |
| Valblk        | Hexadecimal dump of the 16-byte block value block associated with this resource.                                                                                                                                                                                                                                                                                                                                                                                                          |
| Length        | Length in bytes of the resource name.                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Mode          | Processor mode of the namespace in which this RSB resides.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Owner         | Owner of the resource. Certain resources, owned by the operating system, list “System” as the owner. Locks owned by a group have the number (in octal) of the owning group in this field.                                                                                                                                                                                                                                                                                                 |
| Seqnum        | Sequence number associated with the resource’s value block. If the number indicates that the value block is not valid, the words “Not valid” appear to the right of the number.                                                                                                                                                                                                                                                                                                           |
| Granted queue | List of locks on this resource that have been granted. For each lock in the list, SDA displays the number of the lock and the lock mode in which the lock was granted.                                                                                                                                                                                                                                                                                                                    |

(continued on next page)

## SDA Commands

### SHOW RESOURCES

**Table 4–21 (Cont.) Resource Information in the SHOW RESOURCES Display**

| Field            | Contents                                                                                                                                                                                                                   |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Conversion queue | List of locks waiting to be converted from one mode to another. For each lock in the list, SDA displays the number of the lock, the mode in which the lock was granted, and the mode to which the lock is to be converted. |
| Waiting queue    | List of locks waiting to be granted. For each lock in the list, SDA displays the number of the lock and the mode requested for that lock.                                                                                  |

**Table 4–22 Lock on Resources**

| Value | Meaning               |
|-------|-----------------------|
| NL    | Null mode             |
| CR    | Concurrent-read mode  |
| CW    | Concurrent-write mode |
| PR    | Protected-read mode   |
| PW    | Protected-write mode  |
| EX    | Exclusive mode        |

## Examples

1. SDA> SHOW RESOURCES

Resource database

-----

```
RSB:          FFFFFFFF.7FD47950  GGMODE:    PR  Status: VALID
Parent RSB:   00000000.00000000  CGMODE:    PR
Sub-RSB count: 0                FGMODE:    PR
Lock Count:   1                RQSEQNM:   0000
BLKAST count: 1                CSID: 00000000 (SWORKS)
```

```
Resource:     6D632445 48434143  CACHE$cm  Valblk: 00000000 00000000
Length 24     525F534B 524F5753  SWORKS_R   00000000 00000000
Kernel mode   000027DA 4E455641  AVENÚ'..
System        00000000 00000000  .....  Seqnum: 00000000
```

Granted queue (Lock ID / Gr mode / Range):

0100042F PR 00000000-FFFFFFFF

Conversion queue (Lock ID / Gr mode / Range -> Rq mode / Range):

\*\*\* EMPTY QUEUE \*\*\*

Waiting queue (Lock ID / Rq mode / Range):

\*\*\* EMPTY QUEUE \*\*\*

Resource Database

-----

```
RSB:          FFFFFFFF.7FA66A50  GGMODE:    NL  Status: VALID
Parent RSB:   FFFFFFFF.7FD88350  CGMODE:    NL
Sub-RSB count: 0                FGMODE:    NL
Lock Count:   2                RQSEQNM:   004D
BLKAST count: 0                CSID: 00000000 (SWORKS)
```

## SDA Commands SHOW RESOURCES

```
Resource:          001E7324 42313146 F11B$$. Valblk: 00000001 0000033A
Length 10         00000000 00000000 .....          00000000 00000000
Kernel mode      00000000 00000000 .....
System           00000000 00000000 ..... Seqnum: 00000672
```

```
Granted queue (Lock ID / Gr mode / Range):
69000F80 NL 00000000-FFFFFFFF          01001810 NL 00000000-FFFFFFFF
```

```
Conversion queue (Lock ID / Gr mode / Range -> Rq mode / Range):
*** EMPTY QUEUE ***
```

```
Waiting queue (Lock ID / Rq mode / Range):
*** EMPTY QUEUE ***
```

```
.
.
.
```

**The SHOW RESOURCES command displays information taken from the RSBs of all resources in the system. For instance, the RSB at FFFFFFFF.7FA66A50<sub>16</sub> is a parent block with no sub-RSBs.**

2.SDA> SHOW RESOURCE/CONTENTION

Resource Contention Information:

| RSB Address       | Parent RSB Addr   | Resource Name      | LKB Address       | PID      | Node   | Lockid   | GR | RQ | Queue   |
|-------------------|-------------------|--------------------|-------------------|----------|--------|----------|----|----|---------|
| FFFFFFFF.7FAAC550 | FFFFFFFF.7FB47A50 | P.....             |                   |          |        |          |    |    |         |
|                   |                   |                    | FFFFFFFF.7FAEC350 | 00010027 | SWORKS | 04001158 | PW |    | Granted |
|                   |                   |                    | FFFFFFFF.7FB34550 | 00000000 | CMOS   | 08000E46 | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FA93250 | 00000000 | CMOS   | 030015A3 | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FB3EA50 | 00000000 | CMOS   | 09000DC0 | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FAE7B50 | 00000000 | CMOS   | 080011C6 | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FA36050 | 00010023 | SWORKS | 060019F3 | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FA7BE50 | 00000000 | CMOS   | 020016A1 | NL |    | Granted |
|                   |                   |                    | FFFFFFFF.7FAAC650 | 00000000 | SWORKS | 010014AC | NL |    | Granted |
|                   |                   |                    | FFFFFFFF.7FA62C50 | 00010028 | SWORKS | 020017C1 | CR | PW | Convert |
|                   |                   |                    | FFFFFFFF.7FAF9950 | 00010024 | SWORKS | 040010E5 | CR | PW | Convert |
|                   |                   |                    | FFFFFFFF.7FA33C50 | 00000000 | CMOS   | 02001A36 |    | PW | Waiting |
|                   |                   |                    | FFFFFFFF.7FB14550 | 00000000 | CMOS   | 0F00010E |    | PW | Waiting |
| FFFFFFFF.7FB39050 | FFFFFFFF.7FB47A50 | P...ö...           |                   |          |        |          |    |    |         |
|                   |                   |                    | FFFFFFFF.7FB3CC50 | 00010024 | SWORKS | 0B000DDC | PW |    | Granted |
|                   |                   |                    | FFFFFFFF.7FAC0E50 | 00010023 | SWORKS | 03001400 | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FA74950 | 00000000 | CMOS   | 030016DE | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FA4C050 | 00010026 | SWORKS | 020018CE | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FAC5050 | 00010022 | SWORKS | 070013C3 | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FB38450 | 00010025 | SWORKS | 09000E0E | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FACD450 | 00010028 | SWORKS | 0700134E | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FAD2250 | 00000000 | CMOS   | 080012DF | CR |    | Granted |
|                   |                   |                    | FFFFFFFF.7FAE0750 | 00000000 | CMOS   | 0100120F | NL |    | Granted |
|                   |                   |                    | FFFFFFFF.7FB37B50 | 00000000 | SWORKS | 01000E3D | NL |    | Granted |
|                   |                   |                    | FFFFFFFF.7FB14A50 | 00010027 | SWORKS | 2500011C | CR | PR | Convert |
|                   |                   |                    | FFFFFFFF.7FAD4950 | 00000000 | CMOS   | 070012CA | CR | PR | Convert |
|                   |                   |                    | FFFFFFFF.7FAC9550 | 00000000 | CMOS   | 0900138D | CR | PR | Convert |
|                   |                   |                    | FFFFFFFF.7FB03250 | 00000000 | CMOS   | 0C001069 | CR | PR | Convert |
|                   |                   |                    | FFFFFFFF.7FD70C50 | 00000000 | CMOS   | 080005AF | CR | PR | Convert |
| FFFFFFFF.7FD7A250 | 00000000.00000000 | †...T...&.â!....   |                   |          |        |          |    |    |         |
|                   |                   |                    | FFFFFFFF.7FDC5650 | 00010026 | SWORKS | 1A00084C | PW |    | Granted |
|                   |                   |                    | FFFFFFFF.7FDF4950 | 00010020 | SWORKS | 010009A1 |    | PW | Waiting |
| FFFFFFFF.7FD9A250 | 00000000.00000000 | †...T...\$.â!....  |                   |          |        |          |    |    |         |
|                   |                   |                    | FFFFFFFF.7FD07550 | 00010024 | SWORKS | 2E0004EB | PW |    | Granted |
|                   |                   |                    | FFFFFFFF.7FDF4A50 | 00010020 | SWORKS | 010009A2 |    | PW | Waiting |
| FFFFFFFF.7FD36450 | FFFFFFFF.7FD0EC50 | QMAN\$JBC_ALIVE_01 |                   |          |        |          |    |    |         |
|                   |                   |                    | FFFFFFFF.7FD27050 | 00000000 | CMOS   | 1A0002CA | EX |    | Granted |
|                   |                   |                    | FFFFFFFF.7FD7B450 | 00000000 | CMOS   | 050007D4 |    | CR | Waiting |

ZK-9159A-AI

**This example of the SHOW RESOURCES/CONTENTION commands shows all the resources for which there is contention, and which are not to be included in dead lock searches.**

---

## SHOW RMD

Displays information contained in the reserved memory descriptors. Reserved memory is used within the system by memory-resident global sections.

### Format

SHOW RMD [/QUALIFIERS]

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*n***

Displays a specific reserved memory descriptor entry, given its address.

#### **/ALL**

Displays information in all the reserved memory descriptors. This qualifier is the default.

### Description

The SHOW RMD displays information that resides in the reserved memory descriptors. Table 4–23 shows the fields and their meaning.

**Table 4–23 RMD Fields**

| Field            | Meaning                                                                                                                                                                                                                                 |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ADDRESS          | Gives the address of the reserved memory descriptor.                                                                                                                                                                                    |
| NAME             | Gives the name of the reserved memory descriptor.                                                                                                                                                                                       |
| GROUP            | Gives the UIC group that owns the reserved memory. This is given as -S- for system global reserved memory.                                                                                                                              |
| RAD              | Gives the required RAD for the reserved memory. Displays "Any" if no RAD specified.                                                                                                                                                     |
| PFN              | Gives starting page number of the reserved memory.                                                                                                                                                                                      |
| COUNT            | Gives the number of pages reserved.                                                                                                                                                                                                     |
| IN_USE<br>/ERROR | Gives the number of pages in use. If an error occurred when the reserved memory was being allocated, the error condition code is displayed in parentheses. A second line, giving the text of the error, is also displayed in this case. |
| ZERO_PFN         | Gives the next page number to be zeroed.                                                                                                                                                                                                |
| FLAGS            | Gives the settings of flags for specified reserved memory descriptor, as a hexadecimal number, then key flag bits are also displayed by name. The names may use multiple lines in the display.                                          |

**Example**

SDA> SHOW RMD

Reserved Memory Descriptor List

```
-----
```

| Address                                                        | Name  | Group | RAD  | PFN      | Count    | In_Use<br>(Error) | Zero_PFN | Flags                                      |
|----------------------------------------------------------------|-------|-------|------|----------|----------|-------------------|----------|--------------------------------------------|
| 814199C0                                                       | LARGE | 00022 | Any  | 00000000 | 000004E2 | 00000000          | 00000000 | 000000E0 Group Page_Tables<br>GBLSec       |
| 81419940                                                       | LARGE | 00022 | Any  | 00000000 | 00138800 | (0000244C)        | 00000000 | 000001A0 Error Group GBLSec                |
| Error = %SYSTEM-F-INSFLPGS, insufficient Fluid Pages available |       |       |      |          |          |                   |          |                                            |
| 81419AC0                                                       | SMALL | 00011 | 0001 | 00000180 | 00000001 | 00000000          | 00000180 | 000000E1 Alloc Group<br>Page_Tables GBLSec |
| 81419A40                                                       | SMALL | 00011 | 0001 | 00000E00 | 00000080 | 00000000          | 00000E00 | 000000A1 Alloc Group GBLSec                |

```
-----
```

## **SHOW RMS**

Displays the RMS data structures selected by the SET RMS command to be included in the default display of the SHOW PROCESS/RMS command.

### **Format**

SHOW RMS

### **Parameters**

None.

### **Qualifiers**

None.

### **Description**

The SHOW RMS command lists the names of the data structures selected for the default display of the SHOW PROCESS/RMS command.

For a description of the significance of the options listed in the SHOW RMS display, see the description of the SET RMS command and Table 4–2.

For an illustration of the information displayed by the SHOW PROCESS/RMS command, see the examples included in the description of the SHOW PROCESS command.

### **Examples**

1. SDA> SHOW RMS

```
RMS Display Options:  IFB,IRB,IDX,BDB,BDBSUM,ASB,CCB,WCB,FCB,FAB,RAB,NAM,  
XAB,RLB,BLB,BLBSUM,GBD,GBH,FWA,GBDSUM,JFB,NWA,RU,DRC,SFSB,GBSB
```

Display RMS structures for all IFI values.

The SHOW RMS command displays the full set of options available for display by the SHOW PROCESS/RMS command. SDA, by default, selects the full set of RMS options at the beginning of an analysis.

2. SDA> SET RMS=(IFAB=1,CCB,WCB)  
SDA> SHOW RMS

```
RMS Display Options:  IFB,CCB,WCB
```

Display RMS structures only for IFI =0001

The SET RMS command establishes the IFB, CCB, and WCB as the structures to be displayed, and only for the file whose internal File Identifier has the value 1, when the SHOW PROCESS/RMS command is issued. The SHOW RMS command verifies this selection of RMS options.

---

## SHOW RSPID

Displays information about response IDs (RSPIDs) of all System Communications Services (SCS) connections or, optionally, a specific SCS connection.

### Format

```
SHOW RSPID [/CONNECTION=cdt-address]
```

### Parameters

None.

### Qualifier

#### ***/CONNECTION=cdt-address***

Displays RSPID information for the specific SCS connection whose connection descriptor table (CDT) address is provided in **cdt-address**. You can find the **cdt-address** for any active connection on the system in the **CDT summary page** display of the SHOW CONNECTIONS command. CDT addresses are also stored in many individual data structures related to SCS connections. These data structures include class driver request packets (CDRPs) and unit control blocks (UCBs) for class drivers that use SCS and cluster system blocks (CSBs) for the connection manager.

### Description

Whenever a local system application (SYSAP) requires a response from a remote SYSAP, a unique number, called an RSPID, is assigned to the response by the local system. The RSPID is transmitted in the original request (as a means of identification), and the remote SYSAP returns the same RSPID in its response to the original request.

The SHOW RSPID command displays information taken from the response descriptor table (RDT), which lists the currently open local requests that require responses from SYSAPs at a remote node. For each RSPID, SDA displays the following information:

- RSPID value
- Address of the class driver request packet (CDRP), which generally represents the original request
- Address of the CDT that is using the RSPID
- Name of the local process using the RSPID
- Remote node from which a response is required (and has not yet been received)

## SDA Commands

### SHOW RSPID

#### Examples

1. SDA> SHOW RSPID

```
--- Summary of Response Descriptor Table (RDT) 805E6F18 ---
RSPID      CDRP Address      CDT Address      Local Process Name      Remote Node
-----
39D00000   8062CC80          805E8710         VMS$VMScLuster         VANDQ1
EE210001   80637260          805E8C90         VMS$DISK_CL_DRVR       ROMRDR
EE240002   806382E0          805E8DF0         VMS$DISK_CL_DRVR       VANDQ1
EE440003   806393E0          805E8F50         VMS$TAPE_CL_DRVR       VANDQ1
5DB90004   80636BC0          805E8870         VMS$VMScLuster         ROMRDR
5C260005   80664040          805E8870         VMS$VMScLuster         ROMRDR
38F80006   80664A80          805E8710         VMS$VMScLuster         VANDQ1
```

This example shows the default output for the SHOW RSPID command.

2. SDA> SHOW RSPID/CONNECTION=805E8F50

```
--- Summary of Response Descriptor Table (RDT) 805E6F18 ---
RSPID      CDRP Address      CDT Address      Local Process Name      Remote Node
-----
EE440003   806393E0          805E8F50         VMS$TAPE_CL_DRVR       VANDQ1
```

This example shows the output for a SHOW RSPID/CONNECTION command.



---

## SHOW SHM\_CPP

Displays information about the shared memory common property partitions (CPPs). The default display shows a single page summary which includes a single line for each CPP.

### Format

```
SHOW SHM_CPP [/QUALIFIERS]
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*n***

Displays a detailed page of information about an individual shared memory CPP given the address of the SHM\_CPP structure.

#### **/ALL**

Displays a detailed page of information about each shared memory CPP.

#### **/IDENT=*n***

Displays a detailed page of information about an individual shared memory CPP.

#### **/PFN [=option]**

Displays PFN data in addition to the basic SHM\_CPP. The default is all lists (free, bad, untested), plus the PFN database pages and the complete range of PFNs in the CPP.

To display only the complete range of PFNs in the CPP, use the keyword *ALL\_FRAGMENTS* with the /PFN qualifier:

```
/PFN = ALL_FRAGMENTS
```

To display only the bad page list, use the keyword *BAD* with the /PFN qualifier:

```
/PFN = BAD
```

To display only the free page list, use the keyword *FREE* with the /PFN qualifier:

```
/PFN = FREE
```

To display the PFNs containing the PFN database, use the keyword *PFNDB* with the /PFN qualifier:

```
/PFN = PFNDB
```

To display only the untested page list, use the keyword *UNTESTED* with the /PFN qualifier:

```
/PFN = UNTESTED
```

To display multiple lists, you can combine keywords with the /PFN qualifier:

```
/PFN = (x,y)
```

Note that if /PFN is given without /ALL, /IDENT, or /ADDRESS, then the system displays the PFN list(s) from the last shared memory CPP accessed.

# SDA Commands

## SHOW SHM\_CPP

### Examples

```
1. SDA> SHOW SHM_CPP
Summary of Shared Memory Common Property Partitions
-----
Base address of SHM_CPP array:          FFFFFFFF.7F2BA140
Maximum number of SHM_CPP entries:      00000007
Size of each SHM_CPP:                   00000240
Maximum fragment count per SHM_CPP:     00000010
Valid CPP count:                         00000001

  ID  SHM_CPP address      MinPFN  MaxPFN  Page count  Free pages  Flags
-----
  -- SHM_CPP IDs 0000 to 0002: VALID flag clear --
0003 FFFFFFFF.7F2BA800    00060000 0007FFFF  00020000  0001FCF7  00000001  VALID
  -- SHM_CPP IDs 0004 to 0006: VALID flag clear --
```

**This example shows the default output for the SHOW SHM\_CPP command.**

```
2. SDA> SHOW SHM_CPP/IDENT=3
Shared Memory CPP 0003
-----
SHM_CPP address:          FFFFFFFF.7F2BA800

Version:                  00000001  Flags:                    00000001  VALID
Size:                    00000000.000000C0  Page count:              00020000
Actual fragment count:   00000001  Minimum PFN:             00060000
Maximum fragment count:  00000010  Maximum PFN:             0007FFFF

Length of free page list: 0001FCF7
Length of bad page list:  00000000
Length of untested page list: 00000000

PMAP array for PFN database pages

  PMAP  Start PFN  PFN count
-----
    0.  00060053  00000280

PMAP array for all fragments

  PMAP  Start PFN  PFN count
-----
    0.  00060000  00020000

GLock address:          FFFFFFFF.7F2BA8C0  Handle:          80000000.00010D19
GLock name:            SHM_CPP000000003  Flags:          00
Owner count:           00  Owner node:     00
Node sequence:        0000  Owner:         000000
IPL:                  08  Previous IPL:  00
Wait bitmask:         00000000.00000000  Timeout:       00249F00
Thread ID:            00000000.00000000

Connected GNode bitmask: FFFFFFFF.7F2BA900

Valid bits:            00000004  State:          00000000.00000000
Unit count:            0001  Unit size:     QUADWORD

Unit bitmask:
..... 7 00000000

Ranges of free pages
```

## SDA Commands SHOW SHM\_CPP

| Range | Start PFN | PFN count |
|-------|-----------|-----------|
| ----- | -----     | -----     |
| 1.    | 000602F6  | 00000002  |
| 2.    | 0006030B  | 0001FCF5  |

This example shows the details for a single SHM\_CPP.

# SDA Commands

## SHOW SHM\_REG

---

### SHOW SHM\_REG

Displays information about shared memory regions. The default display shows a single page summary which includes a single line for each region.

#### Format

```
SHOW SHM_REG [/ QUALIFIERS] [name]
```

#### Parameter

##### name

Displays a detailed page of information about the named region.

#### Qualifiers

##### /ADDRESS=*n*

Displays a detailed page of information about an individual region given the address of the SHM\_REG structure.

##### /ALL

Displays a detailed page of information about each region.

##### /IDENT=*n*

Displays a detailed page of information about the specified region.

#### Examples

```
1. SDA>SHOW SHM_REG
   Summary of Shared Memory Regions
   -----
Base address of SHM_REG array:      FFFFFFFF.7F2BB140
Maximum number of SHM_REG entries:  00000040
Size of each SHM_REG:               00000208
Base address of SHM_DESC array:     FFFFFFFF.7F2DC000
Valid region count:                 00000009

  ID  SHM_REG address          Region Tag                SysVA / GSTX      Flags
  ----  -----
0000 FFFFFFFF.7F2BB140  SYS$GALAXY_MANAGEMENT_DATABASE  FFFFFFFF.7F234000 00000001  VALID
0001 FFFFFFFF.7F2BB348  SYS$SHARED_MEMORY_PFN_DATABASE  FFFFFFFE.00000000 00000001  VALID
0002 FFFFFFFF.7F2BB550  SMCI$SECTION_PBA_04001          -<None>-          00000001  VALID
0003 FFFFFFFF.7F2BB758  GLX$CPU$BALANCER$SYSGBL        0000013F 00000005  VALID  SHARED_CONTEXT_VALID
0004 FFFFFFFF.7F2BB960  SMCI$CHANNEL_PBA_0_1           FFFFFFFF.8F3AE000 00000001  VALID
0005 FFFFFFFF.7F2BBB68  SMCI$CHANNEL_PBA_0_2           FFFFFFFF.8FAEE000 00000001  VALID
0006 FFFFFFFF.7F2BBD70  SMCI$CHANNEL_PBA_1_2           -<Not Attached>-  00000001  VALID
0007 FFFFFFFF.7F2BBF78  LAN$SHM_REG                     FFFFFFFF.7F20C000 00000009  VALID  ATTACH_DETACH
0008 FFFFFFFF.7F2BC180  GLX$CPU_BAL_GLOCK $000006             00000140 00000005  VALID  SHARED_CONTEXT_VALID

-- SHM_REG IDs 0009 to 003F: never used --
```

This example shows the summary of all shared memory regions in the system.

```
2. SDA> SHOW SHM_REG SMCI$CHANNEL_PBA_0_1
   -----
SHM_REG address:      FFFFFFFF.7F2BB960
Version:              00000001  Flags:                00000001  VALID
Index/Sequence:      0004/00000003  Size:                00000000.00000120

Region tag:          SMCI$CHANNEL_PBA_0_1
Creation time:       31-MAR-1999 14:11:11.37
SHM_DESC address:    FFFFFFFF.7F2DC200
```

## SDA Commands SHOW SHM\_REG

```

Version:                00000001  Flags:                00000005  ATTACHED SYS_VA_VALID
System VA:              FFFFFFFF.8F3AE000  Virtual size:       00000000.00274000
I/O ref count:         00000000.00000000
Index/Sequence:        0004/00000003  Context:            FFFFFFFF.80F42480
Callback:              FFFFFFFF.8F38E5C0  SYS$PBDRIVER+185C0

MMAP address:          FFFFFFFF.7F2BB9E0

Level count:           0001  Flags:                0001  VALID
Top page count:        00000001  Virtual size:       00000000.00274000
PFN list page count:   00000001  First PFN:          000602D4
Data page count:       00000009

GLock address:         FFFFFFFF.7F2BBA80  Handle:              80000000.00010F51

GLock name:            SHM_REG00000004  Flags:                00
Owner count:           00  Owner node:           00
Node sequence:         0000  Owner:                 000000
IPL:                   08  Previous IPL:          00
Wait bitmask:          00000000.00000000  Timeout:              002DC6C0
Thread ID:             00000000.00000000

Attached GNode bitmask: FFFFFFFF.7F2BBAC0

Valid bits:            00000004  State:                00000000.00000012  AUTO_LOCK SET_COUNT
Unit count:            0001  Unit size:             QUADWORD
Lock IPL:              08  Saved IPL:             00000008
Count of bits set:     00000002

Unit bitmask:
..... 3 00000000

I/O in progress bitmask: FFFFFFFF.7F2BBAF8

Valid bits:            00000004  State:                00000000.00000012  AUTO_LOCK SET_COUNT
Unit count:            0001  Unit size:             QUADWORD
Lock IPL:              08  Saved IPL:             00000000
Count of bits set:     00000000

Unit bitmask:
..... 0 00000000

SHM_CPP bitmask:      FFFFFFFF.7F2BBB30

Valid bits:            00000007  State:                00000000.00000000
Unit count:            0001  Unit size:             QUADWORD

Unit bitmask:
..... 08 00000000)

```

**This example shows the details for a single shared memory region.**

---

## SHOW SPINLOCKS

Displays the multiprocessing synchronization data structures.

### Format

```
SHOW SPINLOCKS {[name] | /ADDRESS=expression | /INDEX=expression}  
                [/COUNTS | /OWNED | /DYNAMIC | /STATIC] [{/BRIEF | /FULL}]
```

### Parameter

#### **name**

Name of the spinlock, fork lock, or device lock structure to be displayed. Device lock names are of the form [node\$]lock, where node optionally indicates the OpenVMS Cluster node name (allocation class) and lock indicates the device and controller identification (for example, HAETAR\$DUA).

### Qualifiers

#### **/ADDRESS=*expression***

Displays the lock at the address specified in **expression**. You can use the /ADDRESS qualifier to display a specific device lock; however, the name of the device lock is listed as "Unknown" in the display.

#### **/BRIEF**

Produces a condensed display of the lock information displayed by default by the SHOW SPINLOCKS command, including the following: address, spinlock name or device name, IPL or device IPL, rank, ownership depth, and CPU ID of the owner CPU. If the system under analysis was executing with full-checking multiprocessing enabled (according to the setting of the MULTIPROCESSING or SYSTEM\_CHECK system parameter), then the number of waiting CPUs and interlock status are also displayed.

#### **/COUNTS**

Produces a display of Spin, Wait, and Acquire counts for each spinlock (only if full-checking multiprocessing enabled).

#### **/DYNAMIC**

Displays information for all device locks in the system.

#### **/FULL**

Displays full descriptive and diagnostic information for each displayed spinlock, fork lock, or device lock.

#### **/INDEX=*expression***

Displays the system spinlock whose index is specified in *expression*. You cannot use the /INDEX qualifier to display a device lock.

#### **/OWNED**

Displays information for all spinlocks, fork locks, and device locks owned by the SDA current CPU. If a processor does not own any spinlocks, SDA displays the following message:

```
No spinlocks currently owned by CPU xx
```

The *xx* represents the CPU ID of the processor.

**/STATIC**

Displays information for all system spinlocks and fork locks.

**Description**

The SHOW SPINLOCKS command displays status and diagnostic information about the multiprocessing synchronization structures known as **spinlocks**.

A **static spinlock** is a spinlock whose data structure is permanently assembled into the system. Static spinlocks are accessed as indexes into a vector of longword addresses called the **spinlock vector**, the address of which is contained in SMP\$AR\_SPNLKVEC. System spinlocks and fork locks are static spinlocks. Table 4-24 lists the static spinlocks.

A **dynamic spinlock** is a spinlock that is created based on the configuration of a particular system. One such dynamic spinlock is the device lock SYSMAN creates when configuring a particular device. This device lock synchronizes access to the device's registers and certain UCB fields. The system creates a dynamic spinlock by allocating space from nonpaged pool, rather than assembling the lock into the system as it does in creating a static spinlock.

See the *Writing OpenVMS Alpha Device Drivers in C* for a full discussion of the role of spinlocks in maintaining synchronization of kernel mode activities in a multiprocessing environment.

**Table 4-24 Static Spinlocks**

| Name        | Description                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------|
| QUEUEAST    | Fork lock for queuing ASTs at IPL 6                                                                                 |
| FILSYS      | Lock on file system structures                                                                                      |
| LCKMGR      | Lock on all lock manager structures                                                                                 |
| IOLOCK8/SCS | Fork lock for executing a driver fork process at IPL 8                                                              |
| TX_SYNCH    | Transaction processing lock                                                                                         |
| TIMER       | Lock for adding and deleting timer queue entries and searching the timer queue                                      |
| PORT        | Template structure for dynamic spinlocks for ports with multiple devices                                            |
| IO_MISC     | Miscellaneous short term I/O locks                                                                                  |
| MMG         | Lock on memory management, PFN database, swapper, modified page writer, and creation of per-CPU database structures |
| SCHED       | Lock on process control blocks (PCBs), scheduler database, and mutex acquisition and release structures             |
| IOLOCK9     | Fork lock for executing a driver fork process at IPL 9                                                              |
| IOLOCK10    | Fork lock for executing a driver fork process at IPL 10                                                             |
| IOLOCK11    | Fork lock for executing a driver fork process at IPL 11                                                             |
| MAILBOX     | Lock for sending messages to mailboxes                                                                              |
| POOL        | Lock on nonpaged pool database                                                                                      |
| PERFMON     | Lock for I/O performance monitoring                                                                                 |

(continued on next page)

## SDA Commands

### SHOW SPINLOCKS

Table 4–24 (Cont.) Static Spinlocks

| Name       | Description                                                                                                                                                                                   |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INVALIDATE | Lock for system space translation buffer (TB) invalidation                                                                                                                                    |
| HWCLK      | Lock on hardware clock database, including the quadword containing the due time of the first timer queue entry (EXESGQ_1ST_TIME) and the quadword containing the system time (EXESGQ_SYSTIME) |
| MEGA       | Lock for serializing access to fork-wait queue                                                                                                                                                |
| EMB/MCHECK | Lock for allocating and releasing error-logging buffers and synchronizing certain machine error handling                                                                                      |

For each spinlock, fork lock, or device lock in the system, SHOW SPINLOCKS provides the following information:

- Name of the spinlock (or device name for the device lock)
- Address of the spinlock data structure (SPL)
- The owning CPU's CPU ID
- IPL at which allocation of the lock is synchronized on a local processor
- Number of nested acquisitions of the spinlock by the processor owning the spinlock ("Ownership Depth")
- Rank of the spinlock
- Timeout interval for spinlock acquisition (in terms of 10 milliseconds)
- Shared array (shared spinlock context block pointer)
- Number of processors waiting to obtain the spinlock
- Interlock (synchronization mutex used when full-checking multiprocessing is enabled)

The last two items (CPUs waiting and Interlock) are only displayed if full-checking multiprocessing is enabled.

SHOW SPINLOCKS/BRIEF produces a condensed display of this same information, excluding the share array and timeout interval.

SHOW SPINLOCKS/COUNTS displays only the Spin, Wait, and Acquire counts for each spinlock.

If the system under analysis was executing with full-checking multiprocessing enabled, SHOW SPINLOCKS/FULL adds to the spinlock display the Spin, Wait, and Acquire counts and the last sixteen PCs at which the lock was acquired or released. If applicable, SDA also displays the PC of the last release of multiple, nested acquisitions of the lock.

If no spinlock name, address, or index is given, then information is displayed for all applicable spinlocks.



**Examples**

1. SDA> SHOW SPINLOCKS

```

System static spinlock structures
-----
EMB                                Address      810AE300
Owner CPU ID                       None         IPL          0000001F
Ownership Depth                     FFFFFFFF    Rank        00000000
Timeout Interval                    000186A0    Share Array  00000000
CPUs Waiting                        00000000    Interlock   Free

MCHECK                             Address      810AE300
Owner CPU ID                       None         IPL          0000001F
Ownership Depth                     FFFFFFFF    Rank        00000000
Timeout Interval                    000186A0    Share Array  00000000
CPUs Waiting                        00000000    Interlock   Free

MEGA                                Address      810AE400
Owner CPU ID                       None         IPL          0000001F
Ownership Depth                     FFFFFFFF    Rank        00000002
Timeout Interval                    000186A0    Share Array  00000000
CPUs Waiting                        00000000    Interlock   Free

HWCLK                              Address      810AE500
Owner CPU ID                       None         IPL          00000016
Ownership Depth                     FFFFFFFF    Rank        00000004
Timeout Interval                    000186A0    Share Array  00000000
CPUs Waiting                        00000000    Interlock   Free

.
.
.

System dynamic spinlock structures
-----
QTV14$OPA                          Address      8103FB00
Owner CPU ID                       None         DIPL        00000015
Ownership Depth                     FFFFFFFF    Rank        FFFFFFFF
Timeout Interval                    000186A0    Share Array  00000000
CPUs Waiting                        00000000    Interlock   Free

QTV14$MBA                          Address      810AE900
Owner CPU ID                       None         IPL          0000000B
Ownership Depth                     FFFFFFFF    Rank        0000000C
Timeout Interval                    000186A0    Share Array  00000000
CPUs Waiting                        00000000    Interlock   Free

QTV14$NLA                          Address      810AE900
Owner CPU ID                       None         IPL          0000000B
Ownership Depth                     FFFFFFFF    Rank        0000000C
Timeout Interval                    000186A0    Share Array  00000000
CPUs Waiting                        00000000    Interlock   Free

QTV14$PKA                          Address      814AA100
Owner CPU ID                       None         DIPL        00000015
Ownership Depth                     FFFFFFFF    Rank        FFFFFFFF
Timeout Interval                    000186A0    Share Array  00000000
CPUs Waiting                        00000000    Interlock   Free

.
.
.

```

This excerpt illustrates the default output of the SHOW SPINLOCKS command.

## SDA Commands

### SHOW SPINLOCKS

#### 2. SDA> SHOW SPINLOCKS/BRIEF

System static spinlock structures

```
-----
```

| Address  | Spinlock Name | IPL  | Rank     | Depth    | Owner CPU | CPUs Waiting | Interlock |
|----------|---------------|------|----------|----------|-----------|--------------|-----------|
| 810AE300 | EMB           | 001F | 00000000 | FFFFFFFF | None      | 00000000     | Free      |
| 810AE300 | MCHECK        | 001F | 00000000 | FFFFFFFF | None      | 00000000     | Free      |
| 810AE400 | MEGA          | 001F | 00000002 | FFFFFFFF | None      | 00000000     | Free      |
| 810AE500 | HWCLK         | 0016 | 00000004 | FFFFFFFF | None      | 00000000     | Free      |
| 810AE600 | INVALIDATE    | 0015 | 00000006 | FFFFFFFF | None      | 00000000     | Free      |
| 810AE700 | PERFMON       | 000F | 00000008 | FFFFFFFF | None      | 00000000     | Free      |
| 810AE800 | POOL          | 000B | 0000000A | FFFFFFFF | None      | 00000000     | Free      |
| 810AE900 | MAILBOX       | 000B | 0000000C | FFFFFFFF | None      | 00000000     | Free      |
| 810AEA00 | IOLOCK11      | 000B | 0000000E | FFFFFFFF | None      | 00000000     | Free      |
| 810AEB00 | IOLOCK10      | 000A | 0000000F | FFFFFFFF | None      | 00000000     | Free      |
| 810AEC00 | IOLOCK9       | 0009 | 00000010 | FFFFFFFF | None      | 00000000     | Free      |
| 810AED00 | SCHED         | 0008 | 00000012 | 00000000 | 00000000  | 00000001     | Free      |
| 810AEE00 | MMG           | 0008 | 00000014 | FFFFFFFF | None      | 00000000     | Free      |
| 810AEF00 | IO_MISC       | 0008 | 00000016 | FFFFFFFF | None      | 00000000     | Free      |
| 810AF000 | PORT          | 0008 | 00000017 | FFFFFFFF | None      | 00000000     | Free      |
| 810AF100 | TIMER         | 0008 | 00000018 | 00000000 | 00000000  | 00000000     | Free      |
| 810AF200 | TX_SYNCH      | 0008 | 00000019 | FFFFFFFF | None      | 00000000     | Free      |
| 810AF300 | SCS           | 0008 | 0000001A | FFFFFFFF | None      | 00000000     | Free      |
| 810AF400 | LCKMGR        | 0008 | 0000001B | FFFFFFFF | None      | 00000000     | Free      |
| 810AF500 | FILSYS        | 0008 | 0000001C | FFFFFFFF | None      | 00000000     | Free      |
| 810AF600 | QUEUEAST      | 0006 | 0000001E | FFFFFFFF | None      | 00000000     | Free      |

System dynamic spinlock structures

```
-----
```

| Address  | Device Name | DIPL | Rank     | Depth    | Owner CPU | CPUs Waiting | Interlock |
|----------|-------------|------|----------|----------|-----------|--------------|-----------|
| 8103FB00 | QTV14\$OPA  | 0015 | FFFFFFFF | FFFFFFFF | None      | 00000000     | Free      |
| 810AE900 | QTV14\$MBA  | 000B | 0000000C | FFFFFFFF | None      | 00000000     | Free      |
| 810AE900 | QTV14\$NLA  | 000B | 0000000C | FFFFFFFF | None      | 00000000     | Free      |
| 814AA100 | QTV14\$PKA  | 0015 | FFFFFFFF | FFFFFFFF | None      | 00000000     | Free      |
| .        | .           | .    | .        | .        | .         | .            | .         |

This excerpt illustrates the condensed form of the display produced in the first example.

#### 3. SDA> SHOW SPINLOCKS/FULL SCHED

System static spinlock structures

```
-----
```

|                  |                   |             |          |
|------------------|-------------------|-------------|----------|
| SPL\$C_SCHED     |                   | Address     | 810AED00 |
| Owner CPU ID     | 00000000          | IPL         | 00000008 |
| Ownership Depth  | 00000000          | Rank        | 00000012 |
| Timeout Interval | 002DC6C0          | Share Array | 00000000 |
| CPUs Waiting     | 00000001          | Interlock   | Free     |
| Spins            | 00000000.0458E8DC | Busy waits  | 00252E8D |
| Acquires         | 00000000.01279BE0 |             |          |

## SDA Commands SHOW SPINLOCKS

Spinlock SPL\$C\_SCHED was last acquired or released from:

```
(Most recently)      8004AD00 EXE$SWTIMER_FORK_C+00170
.                   8004B1D4 EXE$SWTIMER_FORK_C+00644
.                   8004AD00 EXE$SWTIMER_FORK_C+00170
.                   8004B1D4 EXE$SWTIMER_FORK_C+00644
.                   8004AD00 EXE$SWTIMER_FORK_C+00170
.                   8004B1D4 EXE$SWTIMER_FORK_C+00644
.                   8004AD00 EXE$SWTIMER_FORK_C+00170
.                   8004B1D4 EXE$SWTIMER_FORK_C+00644
.                   8004AD00 EXE$SWTIMER_FORK_C+00170
.                   8004B1D4 EXE$SWTIMER_FORK_C+00644
.                   8004AD00 EXE$SWTIMER_FORK_C+00170
.                   80136A2C SCH$INTERRUPT+0070C
.                   80117580 SCH$IDLE_C+002A0
.                   8004B230 EXE$SWTIMER_FORK_C+006A0
.                   8004AFC4 EXE$SWTIMER_FORK_C+00434
.                   80117360 SCH$IDLE_C+00080
.                   8012E5F4 EXE$HIBER_INT_C+00074
(Least recently)    80132150 EXE$SCHDWK_C+00110
```

Last release of multiple acquisitions occurred at:

```
80262A54 EXE$CHECK_VERSION_C+009F4
```

**This display shows the detailed information on the SCHED spinlock, including the PC history.**

---

## SHOW STACK

Displays the location and contents of the process stacks (of the SDA current process) and the system stack.

### Format

```
SHOW STACK {range|/ALL|[/EXECUTIVE|/INTERRUPT|/KERNEL  
|/PHYSICAL|/SUPERVISOR|/SYSTEM|/USER]} {/LONG|/QUAD  
(d)}
```

### Parameter

#### **range**

Range of memory locations you want to display in stack format. You can express a **range** using the following syntax:

*m:n* Range of addresses from *m* to *n*

*m;n* Range of addresses starting at *m* and continuing for *n* bytes

### Qualifiers

#### **/ALL**

Displays the locations and contents of the four process stacks for the current SDA process and the system stack.

#### **/EXECUTIVE**

Shows the executive stack for the SDA current process.

#### **/INTERRUPT**

Shows the system stack and is retained for compatibility with OpenVMS VAX. The interrupt stack does not exist in OpenVMS Alpha.

#### **/KERNEL**

Shows the kernel stack for the SDA current process.

#### **/LONG**

Displays longword width stacks. If this qualifier is not specified, SDA by default displays quadword width stacks.

#### **/PHYSICAL**

Treats the start and/or end addresses in the given range as physical addresses. This qualifier is only relevant when a range is specified. By default, SDA treats range addresses as virtual addresses.

#### **/QUAD**

Displays quadword width stacks. This is the default.

#### **/SUPERVISOR**

Shows the supervisor stack for the SDA current process.

#### **/SYSTEM**

Shows the system stack.

#### **/USER**

Shows the user stack for the SDA current process.

## Description

The SHOW STACK command, by default, displays the stack that was in use when the system failed, or, in the analysis of a running system, the current operating stack. For a process that became the SDA current process as the result of a SET PROCESS command, the SHOW STACK command by default shows its current operating stack.

The various qualifiers to the command allow display of any of the four per-process stacks for the SDA current process, as well as the system stack for the SDA current CPU. In addition, any given range can be displayed in stack format.

You can define SDA process and CPU context by using the SET CPU, SHOW CPU, SHOW CRASH, SET PROCESS, and SHOW PROCESS commands as indicated in their command descriptions. A complete discussion of SDA context control appears in Chapter 2, Section 2.5.

SDA provides the following information in each stack display:

| Section                                            | Contents                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Identity of stack                                  | SDA indicates whether the stack is a process stack (user, supervisor, executive, or kernel) or the system stack.                                                                                                                                                                                                                                                              |
| Stack pointer                                      | The stack pointer identifies the top of the stack. The display indicates the stack pointer by the symbol <b>SP =&gt;</b> .                                                                                                                                                                                                                                                    |
| Stack address                                      | SDA lists all the addresses that the operating system has allocated to the stack. The stack addresses are listed in a column that increases in increments of 8 bytes (one quadword), unless you specify the /LONG qualifier in which case addresses are listed in increments of 4 (one longword).                                                                             |
| Stack contents                                     | SDA lists the contents of the stack in a column to the right of the stack addresses.                                                                                                                                                                                                                                                                                          |
| Symbols                                            | SDA attempts to display the contents of a location symbolically, using a symbol and an offset.<br>If the stack is being displayed in quadword width and the location cannot be symbolized as a quadword, SDA will attempt to symbolize the least significant longword and then the most significant longword. If the address cannot be symbolized, this column is left blank. |
| Canonical stack                                    | When displaying the kernel stack of a noncurrent process in a crash dump, SDA identifies the stack locations used by the scheduler to store the register contents of the process.                                                                                                                                                                                             |
| Mechanism array<br>Signal array<br>Exception frame | When displaying the current stack in a FATALEXCPT, INVEXCEPTN, SSRVEXCEPT, or UNXSIGNAL bugcheck, SDA identifies the stack locations used to store registers and other key data for these structures.                                                                                                                                                                         |

If a stack is empty, the display shows the following:

```
SP => (STACK IS EMPTY)
```

# SDA Commands

## SHOW STACK

### Example

SDA> SHOW STACK

Current Operating Stack (SYSTEM):

```

          FFFFFFFF.8244BD08  FFFFFFFF.800600FC  SCH$REPORT_EVENT_C+000FC
          FFFFFFFF.8244BD10  00000000.00000002
          FFFFFFFF.8244BD18  00000000.00000005
          FFFFFFFF.8244BD20  FFFFFFFF.8060C7C0
SP =>    FFFFFFFF.8244BD28  FFFFFFFF.8244BEE8
          FFFFFFFF.8244BD30  FFFFFFFF.80018960  EXE$HWCLKINT_C+00260
          FFFFFFFF.8244BD38  00000000.000001B8
          FFFFFFFF.8244BD40  00000000.00000050
          FFFFFFFF.8244BD48  00000000.00000210  UCB$N_RSID+00002
          FFFFFFFF.8244BD50  00000000.00000000
          FFFFFFFF.8244BD58  00000000.00000000
          FFFFFFFF.8244BD60  FFFFFFFF.804045D0  SCH$GQ_IDLE_CPUS
          FFFFFFFF.8244BD68  FFFFFFFF.8041A340  EXE$GL_FKWAITFL+00020
          FFFFFFFF.8244BD70  00000000.00000250  UCB$T_MSGDATA+00034
          FFFFFFFF.8244BD78  00000000.00000001
          FFFFFFFF.8244BD80  00000000.0000002B
          FFFFFFFF.8244BD88  FFFFFFFF.8244BF80
          FFFFFFFF.8244BD90  80000000.FFFFFFFD  G
          FFFFFFFF.8244BD98  00000000.00001600  CTL$C_CLIDATASZ+00060
          FFFFFFFF.8244BDA0  FFFFFFFF.8244BF40
          FFFFFFFF.8244BDA8  FFFFFFFF.8244BEE8
          FFFFFFFF.8244BDB0  FFFFFFFF.8041FB00  SMP$RELEASEL+00640
          FFFFFFFF.8244BDB8  00000000.00000000
          FFFFFFFF.8244BDC0  00000000.0000000D
          FFFFFFFF.8244BDC8  0000FFF0.00007E04
          FFFFFFFF.8244BDD0  00000000.00000000
          FFFFFFFF.8244BDD8  00000000.00000001
          FFFFFFFF.8244BDE0  00000000.00000000
          FFFFFFFF.8244BDE8  FFFFFFFF.805AE4B6  SISR+0006E
          FFFFFFFF.8244BDF0  00000000.00000001
          FFFFFFFF.8244BDF8  00000000.00000010
          FFFFFFFF.8244BE00  00000000.00000008
          FFFFFFFF.8244BE08  00000000.00000010
          FFFFFFFF.8244BE10  00000000.00000001
          FFFFFFFF.8244BE18  00000000.00000000
          FFFFFFFF.8244BE20  FFFFFFFF.804045D0  SCH$GQ_IDLE_CPUS
          FFFFFFFF.8244BE28  30000000.00000300  UCB$L_PI_SVA
          FFFFFFFF.8244BE30  FFFFFFFF.80040F6C  EXE$REFLECT_C+00950
          FFFFFFFF.8244BE38  18000000.00000300  UCB$L_PI_SVA
          FFFFFFFF.8244BE40  FFFFFFFF.804267A0  EXE$CONTSIGNAL+00228
          FFFFFFFF.8244BE48  00000000.7FFD00A8  PIO$GW_IIOIMPA
          FFFFFFFF.8244BE50  00000003.00000000
          FFFFFFFF.8244BE58  FFFFFFFF.8003FC20  EXE$CONNECT_SERVICES_C+00920
          FFFFFFFF.8244BE60  FFFFFFFF.8041FB00  SMP$RELEASEL+00640
          FFFFFFFF.8244BE68  00000000.00000000
          FFFFFFFF.8244BE70  FFFFFFFF.8042CD50  SCH$WAIT_PROC+00060
          FFFFFFFF.8244BE78  00000000.0000000D
          FFFFFFFF.8244BE80  0000FFF0.00007E04
          FFFFFFFF.8244BE88  00000000.00000000
          FFFFFFFF.8244BE90  00000000.00000001
          FFFFFFFF.8244BE98  00000000.00000000
          FFFFFFFF.8244BEA0  FFFFFFFF.805AE4B6  SISR+0006E
          FFFFFFFF.8244BEA8  00000000.00000001
          FFFFFFFF.8244BEB0  00000000.00000010
          FFFFFFFF.8244BEB8  00000000.00000008
          FFFFFFFF.8244BEC0  00000000.00000010
          FFFFFFFF.8244BEC8  00000000.00000001
          FFFFFFFF.8244BED0  00000000.00000000
          FFFFFFFF.8244BED8  FFFFFFFF.804045D0  SCH$GQ_IDLE_CPUS
          FFFFFFFF.8244BEE0  00000000.00000001

```

## SDA Commands SHOW STACK

```

CHF$L_SIG_ARGS      FFFFFFFF.8244BEE8  0000000C.00000005
CHF$L_SIG_ARG1     FFFFFFFF.8244BEF0  FFFFFFFF.C.00010000  SYS$K_VERSION_08
                   FFFFFFFF.8244BEF8  00000300.FFFFFFFC  UCB$L_PI_SVA
                   FFFFFFFF.8244BF00  00000002.00000001
                   FFFFFFFF.8244BF08  00000000.0000000C
                   FFFFFFFF.8244BF10  00000000.00000000
                   FFFFFFFF.8244BF18  00000000.FFFFFFFC
                   FFFFFFFF.8244BF20  00000008.00000000
                   FFFFFFFF.8244BF28  00000000.00000001
                   FFFFFFFF.8244BF30  00000008.00000000
                   FFFFFFFF.8244BF38  00000000.FFFFFFFC
INTSTK$Q_R2        FFFFFFFF.8244BF40  FFFFFFFF.80404668  SCH$GL_ACTIVE_PRIORITY
INTSTK$Q_R3        FFFFFFFF.8244BF48  FFFFFFFF.8042F280  SCH$WAIT_KERNEL_MODE
INTSTK$Q_R4        FFFFFFFF.8244BF50  FFFFFFFF.80615F00
INTSTK$Q_R5        FFFFFFFF.8244BF58  00000000.00000000
INTSTK$Q_R6        FFFFFFFF.8244BF60  FFFFFFFF.805AE000
INTSTK$Q_R7        FFFFFFFF.8244BF68  00000000.00000000
INTSTK$Q_PC        FFFFFFFF.8244BF70  00000000.FFFFFFFC
INTSTK$Q_PS        FFFFFFFF.8244BF78  30000000.00000300  UCB$L_PI_SVA
                   FFFFFFFF.8244BF80  FFFFFFFF.80404668  SCH$GL_ACTIVE_PRIORITY
                   FFFFFFFF.8244BF88  00000000.7FFD00A8  PIO$GW_IIOIMPA
                   FFFFFFFF.8244BF90  00000000.00000000
                   FFFFFFFF.8244BF98  FFFFFFFF.8042CD50  SCH$WAIT_PROC+00060
                   FFFFFFFF.8244BFA0  00000000.00000044
                   FFFFFFFF.8244BFA8  FFFFFFFF.80403C30  SMP$GL_FLAGS
Prev SP (8244BFB0) => FFFFFFFF.8244BFB0  FFFFFFFF.8042CD50  SCH$WAIT_PROC+00060
                   FFFFFFFF.8244BFB8  00000000.00000000
                   FFFFFFFF.8244BFC0  FFFFFFFF.805EE040
                   FFFFFFFF.8244BFC8  FFFFFFFF.8006DB54  PROCESS_MANAGEMENT_NPRO+0DB54
                   FFFFFFFF.8244BFD0  FFFFFFFF.80404668  SCH$GL_ACTIVE_PRIORITY
                   FFFFFFFF.8244BFD8  FFFFFFFF.80615F00
                   FFFFFFFF.8244BFE0  FFFFFFFF.8041B220  SCH$RESOURCE_WAIT
                   FFFFFFFF.8244BFE8  00000000.00000044
                   FFFFFFFF.8244BFF0  FFFFFFFF.80403C30  SMP$GL_FLAGS
                   FFFFFFFF.8244BFF8  00000000.7FF95E00

```

The SHOW STACK command displays a system stack. The data shown above the stack pointer may not be valid. Note that the mechanism array, signal array, and exception frame symbols displayed on the left will appear only for INVEXCEPTN, FATALEXCPT, UNXSIGNAL, and SSRVEXCEPT bugchecks.

---

## SHOW SUMMARY

Displays a list of all active processes and the values of the parameters used in swapping and scheduling these processes.

### Format

```
SHOW SUMMARY [/IMAGE | /PROCESS_NAME=process_name  
| /THREAD | /USER=username]
```

### Parameters

None.

### Qualifiers

#### **/IMAGE**

Causes SDA to display, if possible, the name of the image being executed within each process.

#### **/PROCESS\_NAME=*process\_name***

Displays only processes with the specified process name. You can use wildcards in *process\_name*, in which case SDA displays all matching processes. The default action is for SDA to display data for all processes, regardless of process name.

#### **/THREAD**

Displays information on all the current threads associated with the current process.

#### **/USER=*username***

Displays only the processes of the specified user. You can use wildcards in *username*, in which case SDA displays processes of all matching users. The default action is for SDA to display data for all processes, regardless of username.

### Description

The SHOW SUMMARY command displays the information in Table 4–25 for each active process in the system.

**Table 4–25 Process Information in the SHOW SUMMARY Display**

| Column       | Contents                                                                         |
|--------------|----------------------------------------------------------------------------------|
| Extended PID | The 32-bit number that uniquely identifies the process.                          |
| Indx         | Index of this process into the PCB array.                                        |
| Process name | Name assigned to the process.                                                    |
| Username     | Name of the user who created the process.                                        |
| State        | Current state of the process. Table 4–26 shows the 14 states and their meanings. |

(continued on next page)



**Table 4–25 (Cont.) Process Information in the SHOW SUMMARY Display**

| Column   | Contents                                                                                           |
|----------|----------------------------------------------------------------------------------------------------|
| Pri      | Current scheduling priority of the process.                                                        |
| PCB/KTB  | Address of the process control block or address of the kernel thread block.                        |
| PHD/FRED | Address of the process header or address of the floating-point registers and execution data block. |
| Wkset    | Number (in decimal) of pages currently in the process working set.                                 |

**Table 4–26 Current State Information**

| State         | Meaning                                                                                                                                                |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| COM           | Computable and resident in memory                                                                                                                      |
| COMO          | Computable, but outswapped                                                                                                                             |
| CUR <i>nn</i> | Currently executing on CPU ID <i>nn</i>                                                                                                                |
| CEF           | Waiting for a common event flag                                                                                                                        |
| LEF           | Waiting for a local event flag                                                                                                                         |
| LEFO          | Outswapped and waiting for a local event flag                                                                                                          |
| HIB           | Hibernating                                                                                                                                            |
| HIBO          | Hibernating and outswapped                                                                                                                             |
| SUSP          | Suspended                                                                                                                                              |
| SUSPO         | Suspended and outswapped                                                                                                                               |
| PFW           | Waiting for a page that is not in memory (page-fault wait)                                                                                             |
| FPG           | Waiting to add a page to its working set (free-page wait)                                                                                              |
| COLPG         | Waiting for a page collision to be resolved (collided-page wait); this usually occurs when several processes cause page faults on the same shared page |
| MWAIT         | Miscellaneous wait                                                                                                                                     |
| RWxxx         | Waiting for system resource xxx                                                                                                                        |

## SDA Commands

### SHOW SUMMARY

#### Example

```
SDA> SHOW SUMMARY
```

```
Current process summary
```

```
-----  
Extended Indx Process name   Username   State   Pri PCB/KTB  PHD/FRED  Wkset  
-- PID --  
00000041 0001 SWAPPER                HIB      16 80C641D0 80C63E00   0  
00000045 0005 IPCACP                SYSTEM   HIB      10 80DC0780 81266000  39  
00000046 0006 ERRFMT                SYSTEM   HIB       8 80DC2240 8126C000  57  
00000047 0007 OPCOM                SYSTEM   HIB       8 80DC3340 81272000  31  
00000048 0008 AUDIT_SERVER        AUDIT$SERVER HIB      10 80D61280 81278000 152  
00000049 0009 JOB_CONTROL         SYSTEM   HIB      10 80D620C0 8127E000  50  
0000004A 000A SECURITY_SERVER     SYSTEM   HIB      10 80DC58C0 81284000 253  
0000004B 000B TP_SERVER           SYSTEM   HIB      10 80DC8900 8128A000  75  
0000004C 000C NETACP              DECNET   HIB      10 80DBFE00 8125A000  78  
0000004D 000D EVL                 DECNET   HIB       6 80DCA080 81290000  76  
0000004E 000E REMACP              SYSTEM   HIB       8 80DE4E00 81296000  14  
00000050 0010 DECW$SERVER_0          SYSTEM   HIB       8 80DEF940 812A2000 739  
00000051 0011 DECW$LOGINOUT        <login>   LEF       4 80DF0F00 812A8000 273  
00000052 0012 SYSTEM                SYSTEM   LEF       9 80D772C0 81260000  75
```

The SHOW SUMMARY command describes all active processes in the system at the time of the system failure. Note that there was no process in the CUR state at the time of the failure.

---

## SHOW SYMBOL

Displays the hexadecimal value of a symbol and, if the value is equal to an address location, the contents of that location.

### Format

```
SHOW SYMBOL [/ALL [/ALPHA |/VALUE]] symbol-name
```

### Parameter

#### **symbol-name**

Name of the symbol to be displayed. You must provide a **symbol-name**, unless the /ALL qualifier is specified.

### Qualifiers

#### **/ALL**

Displays information on all symbols whose names begin with the characters specified in **symbol-name**. If no symbol name is given, all symbols are displayed.

#### **/ALPHA**

When used with the /ALL qualifier, displays the symbols sorted only in alphabetical order. The default is to display the symbols twice, sorted alphabetically and then by value.

When used with a wildcard symbol name, displays the symbols in alphabetical order. This is the default action.

#### **/VALUE**

When used with the /ALL qualifier, displays the symbols sorted only in value order. The default is to display the symbols twice, sorted alphabetically and then by value.

When used with a wildcard symbol name, displays the symbols in value order.

### Description

The SHOW SYMBOL command with the /ALL qualifier outputs all symbols whose names begin with the characters specified in **symbol-name** in both alphabetical order and in value order. If no **symbol-name** is given, all symbols are output.

The SHOW SYMBOL/ALL command is useful for determining the values of symbols that belong to a symbol set, as illustrated in the second example below.

The SHOW SYMBOL command without the /ALL qualifier allows for standard wildcards in the **symbol-name** parameter. By default, matching symbols are displayed only in alphabetical order. If you specify SHOW SYMBOL/VALUE, then matching symbols are output sorted by value. If you specify SHOW SYMBOL/ALPHA/VALUE, then matching symbols are displayed twice, sorted alphabetically and then by value.

The SHOW SYMBOL command without the /ALL qualifier and no wildcards in the **symbol-name** parameter outputs the value associated with the given symbol.

## SDA Commands

### SHOW SYMBOL

When displaying any symbol value, SDA also treats the value as an address and attempts to obtain the contents of the location. If successful, the contents are also displayed.

### Examples

1. SDA> SHOW SYMBOL G  
G = FFFFFFFF.80000000 : 6BFA8001.201F0104

The SHOW SYMBOL command evaluates the symbol G as FFFFFFFF.80000000<sub>16</sub> and displays the contents of address FFFFFFFF.80000000<sub>16</sub> as 6BFA8001.201F0104<sub>16</sub>.

2. SDA> SHOW SYMBOL/ALL BUG  
Symbols sorted by name  
-----  
BUG\$L\_BUGCHK\_FLAGS = FFFFFFFF.804031E8 : 00000000.00000001  
BUG\$L\_FATAL\_SPSAV = FFFFFFFF.804031F0 : 00000000.00000001  
BUG\$REBOOT = FFFFFFFF.8042E320 : 00000000.00001808  
BUG\$REBOOT\_C = FFFFFFFF.8004F4D0 : 47FB041D.47FD0600  
.  
.  
.  
Symbols sorted by value  
-----  
BUG\$REBOOT\_C = FFFFFFFF.8004F4D0 :47FB041D.47FD0600  
BUG\$L\_BUGCHK\_FLAGS = FFFFFFFF.804031E8 :00000000.00000001  
BUG\$L\_FATAL\_SPSAV = FFFFFFFF.804031F0 :00000000.00000001  
BUG\$REBOOT = FFFFFFFF.8042E320 :00000000.00001808  
.  
.  
.

This example shows the display produced by the SHOW SYMBOL/ALL command. SDA searches its symbol table for all symbols that begin with the string “BUG” and displays the symbols and their values. Although certain values equate to memory addresses, it is doubtful that the contents of those addresses are actually relevant to the symbol definitions in this instance.

---

## SHOW TQE

Displays the entries in the timer queue. The default output is a summary display of all timer queue entries (TQEs) in chronological order.

### Format

```
SHOW TQE  [/ADDRESS=n][/ALL][/BACKLINK][/PID=n]  
          [/ROUTINE=n]
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*n***

Outputs a detailed display of the TQE at the specified address.

#### **/ALL**

Outputs a detailed display of all TQEs.

#### **/BACKLINK**

Outputs the display of TQEs, either detailed (/ALL) or brief (default), in reverse order, starting at the entry furthest into the future.

#### **/PID=*n***

Limits the display to the TQEs that affect the process with the specified *internal* PID. Note that the PID format required is the entire internal PID, including both the process index and the sequence number, and not the extended PID, or process index alone, as used elsewhere in SDA.

#### **/ROUTINE=*n***

Limits the display to the TQEs for which the specified address is the fork PC.

### Description

The SHOW TQE command allows the timer queue to be displayed. By default a summary display of all TQEs is output in chronological order, beginning with the next entry to become current.

The /ADDRESS, /PID, and /ROUTINE qualifiers are mutually exclusive. The /ADDRESS and /BACKLINK qualifiers are mutually exclusive.

## SDA Commands

### SHOW TQE

In the summary display, the TQE type is given as a five-character code, as in the following:

| Column | Symbol | Meaning                           |
|--------|--------|-----------------------------------|
| 1      | T      | Timer (\$SETIMR) entry            |
|        | S      | System subroutine entry           |
|        | W      | Scheduled wakeup (\$SCHDWK) entry |
| 2      | S      | Single-shot entry                 |
|        | R      | Repeated entry                    |
| 3      | D      | Delta time                        |
|        | A      | Absolute time                     |
| 4      | C      | CPU time                          |
|        | -      | Elapsed time                      |
| 5      | E      | Extended format (64-bit TQE)      |
|        | -      | 32-bit TQE                        |

### Examples

1. SDA> SHOW TQE

Timer queue entries

-----

System time: 30-MAY-2000 14:49:46.17  
 First TQE time: 30-MAY-2000 14:49:46.19

| TQE<br>address | Expiration Time                           | Type  | PID/<br>routine |
|----------------|-------------------------------------------|-------|-----------------|
| 81214D40       | 009EADCE.C2B6EAB2 30-MAY-2000 14:49:46.19 | TSD-- | 0001000E        |
| 81352780       | 009EADCE.C2BD790E 30-MAY-2000 14:49:46.23 | SRD-- | 83955BA0        |
| 8126CB58       | 009EADCE.C2C4E946 30-MAY-2000 14:49:46.28 | SRD-- | 81184230        |
| 81210F00       | 009EADCE.C2CDEC76 30-MAY-2000 14:49:46.34 | SRD-- | 8252EAF8        |
| 8103FB28       | 009EADCE.C2E8C81B 30-MAY-2000 14:49:46.51 | SRD-- | 81041930        |
| 81210BC0       | 009EADCE.C2F0603A 30-MAY-2000 14:49:46.56 | TSD-- | 0001000E        |
| 83975948       | 009EADCE.C313B1BB 30-MAY-2000 14:49:46.79 | SRD-- | 83974B10        |
| 8131F5C0       | 009EADCE.C332AFCB 30-MAY-2000 14:49:47.00 | SRD-- | 811FDCD0        |

...

8103FB00 FFFFFFFF.FFFFFFFF --<end>- TSD-- 00000000

This example shows the summary display of all TQEs.

2. SDA> SHOW TQE/ADDRESS=8131F5C0

Timer queue entry 8131F5C0

-----

|                       |                   |                         |          |                          |
|-----------------------|-------------------|-------------------------|----------|--------------------------|
| TQE Address:          | 8131F5C0          | Type:                   | 00000005 | SYSTEM_SUBROUTINE REPEAT |
| FLink:                | 8129C6D8          | BLink:                  | 83975948 |                          |
| Requestor process ID: | 00000000          | Access Mode:            | 00000000 |                          |
| Expiration time:      | 009EADD2.417463F4 | 30-MAY-2000 15:14:47.31 | +67860   |                          |
| Delta repeat time:    | 00000000.00989680 | 0 00:00:01.00           |          |                          |
| Fork PC:              | 811FDCD0          | NETDRIVER+190D0         |          |                          |
| Fork R3:              | 00000000.00000000 |                         |          |                          |
| Fork R4:              | FFFFFFF.8131DB00  |                         |          |                          |

This example shows the detailed display for a single TQE.

---

## SHOW WORKING\_SET\_LIST, SHOW WSL

Displays the system working set list and retains the current process context.

### Format

SHOW WORKING\_SET\_LIST or SHOW WSL [= {GPT | SYSTEM | LOCKED | *n*}]

### Parameters

None.

### Qualifiers

None.

### Description

The SHOW WORKING\_SET\_LIST command displays the contents of requested entries in the system working set list. If you do not specify an option, all working set list entries are displayed. Table 4-27 shows the options available with SHOW WORKING\_SET\_LIST. The SHOW WORKING\_SET\_LIST command is equivalent to the SHOW PROCESS/SYSTEM/WORKING\_SET\_LIST command. See the SHOW PROCESS command and Table 4-17 for more information.

**Table 4-27 Options for the SHOW WORKING\_SET\_LIST Command**

| Options  | Results                                                                                                             |
|----------|---------------------------------------------------------------------------------------------------------------------|
| GPT      | Displays only working set list entries that are for global page table pages                                         |
| SYSTEM   | Displays only working set list entries for pageable system pages                                                    |
| LOCKED   | Displays only working set list entries for pageable system pages that are locked in the system working set          |
| <i>n</i> | Displays a specific working set entry, where <i>n</i> is the working set list index (WSLX) of the entry of interest |

## SPAWN

Creates a subprocess of the process currently running SDA, copying the context of the current process to the subprocess and, optionally, executing a specified command within the subprocess.

### Format

```
SPAWN [/qualifier[,...]] [command]
```

### Parameter

**command**

Name of the command that you want the subprocess to execute.

### Qualifiers

**/INPUT=filespec**

Specifies an input file containing one or more command strings to be executed by the spawned subprocess. If you specify a command string with an input file, the command string is processed before the commands in the input file. Once processing is complete, the subprocess is terminated.

**/NOLOGICAL\_NAMES**

Specifies that the logical names of the parent process are not to be copied to the subprocess. The default behavior is that the logical names of the parent process are copied to the subprocess.

**/NOSYMBOLS**

Specifies that the DCL global and local symbols of the parent process are not to be passed to the subprocess. The default behavior is that these symbols are passed to the subprocess.

**/NOTIFY**

Specifies that a message is to be broadcast to SYSS\$OUTPUT when the subprocess either completes processing or aborts. The default behavior is that such a message is not sent to SYSS\$OUTPUT.

**/NOWAIT**

Specifies that the system is not to wait until the subprocess is completed before allowing more commands to be specified. This qualifier allows you to specify new commands while the spawned subprocess is running. If you specify /NOWAIT, use /OUTPUT to direct the output of the subprocess to a file to prevent more than one process from simultaneously using your terminal.

The default behavior is that the system waits until the subprocess is completed before allowing more commands to be specified.

**/OUTPUT=filespec**

Specifies an output file to which the results of the SPAWN operation are written. To prevent output from the spawned subprocess from being displayed while you are specifying new commands, specify an output other than SYSS\$OUTPUT whenever you specify /NOWAIT. If you omit the /OUTPUT qualifier, output is written to the current SYSS\$OUTPUT device.



**/PROCESS=*process-name***

Specifies the name of the subprocess to be created. The default name of the subprocess is *USERNAME\_n*, where *USERNAME* is the user name of the parent process. The variable *n* represents the subprocess number.

**Example**

```
SDA> SPAWN
$ MAIL
.
.
.
$ DIR
.
.
.
$ LO
Process SYSTEM_1 logged out at 5-JAN-1993 15:42:23.59
SDA>
```

This example uses the SPAWN command to create a subprocess that issues DCL commands to invoke the Mail utility. The subprocess then lists the contents of a directory before logging out to return to the parent process executing SDA.

## **UNDEFINE**

The UNDEFINE command causes SDA to remove the specified symbol from its symbol table.

### **Format**

UNDEFINE symbol

### **Parameter**

**symbol**

The name of the symbol to be deleted from SDA's symbol table. A symbol name is required.

### **Qualifiers**

None.

---

## VALIDATE PFN\_LIST

Validates that the page counts on lists are correct.

### Format

```
VALIDATE PFN_LIST {/ALL (d)|/BAD|/FREE|/MODIFIED|/PRIVATE|  
/UNTESTED|/ZERO}}
```

### Parameters

None.

### Qualifiers

#### **/ALL**

Validates all the PFN lists: bad, free, modified, zeroed free pages and private pages.

#### **/BAD**

Validates the bad page list.

#### **/FREE**

Validates the free page list.

#### **/MODIFIED**

Validates the modified page list.

#### **/PRIVATE**

Validates all private page lists.

#### **/UNTESTED**

Validates the untested page list that was set up for deferred memory testing.

#### **/ZERO**

Validates the zeroed free page list.

### Description

The VALIDATE PFN\_LIST command validates the specified PFN list(s) by counting the number of entries in the list and comparing that to the running count of entries for each list maintained by the system.

### Examples

1. SDA> VALIDATE PFN\_LIST  
Free page list validated: 1433 pages  
(excluding zeroed free page list with expected size 103 pages)  
Zeroed free page list validated: 103 pages  
Modified page list validated: 55 pages  
Bad page list validated: 0 pages  
Untested page list validated: 0 pages  
Private page list at 81486340 validated: 2 pages

## SDA Commands

### VALIDATE PFN\_LIST

2. SDA> VALIDATE PFN\_LIST/FREE  
Free page list validated: 1433 pages  
(excluding zeroed free page list with expected size 103 pages)

---

## VALIDATE QUEUE

Validates the integrity of the specified queue by checking the pointers in the queue.

### Format

```
VALIDATE QUEUE [address]
                [/BACKLINK|/LIST|/PHYSICAL|
                /QUADWORD|/SELF_RELATIVE|/SINGLY_LINKED]
```

### Parameter

#### **address**

Address of an element in a queue.

If you specify the period (.) as the **address**, SDA uses the last evaluated expression as the queue element's address.

If you do not specify an **address**, the VALIDATE QUEUE command determines the address from the last issued VALIDATE QUEUE command in the current SDA session.

If you do not specify an **address**, and no queue has previously been specified, SDA displays the following error message:

```
%SDA-E-NOQUEUE, no queue has been specified for validation
```

### Qualifiers

#### **/BACKLINK**

Allows doubly linked lists to be validated from the tail of the queue. If the queue is found to be broken when validated from the head of the queue, you can use /BACKLINK to narrow the list of corrupted entries.

#### **/LIST**

Displays the address of each element in the queue.

#### **/PHYSICAL**

Allows validation of queues whose header and links are physical addresses.

#### **/QUADWORD**

Allows the validate operation to occur on queues with linked lists of quadword addresses.

#### **/SELF\_RELATIVE**

Specifies that the selected queue is a self-relative queue.

#### **/SINGLY\_LINKED**

Allows validation of queues that have no backward pointers.

## SDA Commands

### VALIDATE QUEUE

#### Description

The VALIDATE QUEUE command uses the forward, and optionally, backward pointers in each element of the queue to make sure that all such pointers are valid and that the integrity of the queue is intact. If the queue is intact, SDA displays the following message:

```
Queue is complete, total of n elements in the queue
```

In these messages, *n* represents the number of entries the VALIDATE QUEUE command has found in the queue.

If SDA discovers an error in the queue, it displays one of the following error messages:

```
Error in forward queue linkage at address nnnnnnnn after tracing x elements  
Error comparing backward link to previous structure address (nnnnnnnn)  
Error occurred in queue element at address oooooooo after tracing pppp elements
```

These messages can appear frequently when you use the VALIDATE QUEUE command within an SDA session that is analyzing a running system. In a running system, the composition of a queue can change while the command is tracing its links, thus producing an error message.

If there are no entries in the queue, SDA displays this message:

```
The queue is empty
```

#### Examples

1. SDA> VALIDATE QUEUE/SELF\_RELATIVE IOC\$GQ\_POSTIQ  
Queue is complete, total of 159 elements in the queue

This example validates the self-relative queue IOC\$GQ\_POSTIQ. The validation is successful and the system determines that there are 159 IRPs in the list.

2. SDA> VALIDATE QUEUE/QUADWORD FFFFFFFF80D0E6C0/LIST  
Entry           Address                   Flink                   Blink  
-----        -----  
Header        FFFFFFFF80D0E6C0        FFFFFFFF80D03780        FFFFFFFF80D0E800  
    1.        FFFFFFFF80D0E790        FFFFFFFF80D0E7C0        FFFFFFFF80D0E6C0  
    2.        FFFFFFFF80D0E800        FFFFFFFF80D0E6C0        FFFFFFFF80D0E7C0  
Queue is complete, total of 3 elements in the queue

This example shows the validation of quadword elements in a list.

3. SDA> VALIDATE QUEUE/SINGLY\_LINKED EXE\$GL\_NONPAGED+4  
Queue is zero-terminated, total of 95 elements in the queue

This example shows the validation of singly linked elements in the queue. The forward link of the final element is zero instead of being a pointer back to the queue header.

---

## VALIDATE SHM\_CPP

Validates all the shared memory common property partitions (CPPs) and the counts and ranges of attached PFNs; optionally, it can validate the contents of the database for each PFN.

### Format

```
VALIDATE SHM_CPP [/QUALIFIERS]
```

### Parameters

None.

### Qualifiers

#### **/ADDRESS=*n***

Validates the counts and ranges for a single shared memory CPP given the address of the SHM\_CPP structure.

#### **/ALL**

Validates all the shared memory CPPs. This is the default.

#### **/IDENT=*n***

Validates the counts and ranges for a single shared memory CPP.

#### **/PFN**

Validates the PFN database contents for each attached PFN. The default is all lists (free, bad, untested) plus the PFN database pages and the complete range of PFNs in the CPP.

To validate only the complete range of PFNs in the CPP, use the keyword *ALL\_FRAGMENTS* with the /PFN qualifier:

```
/PFN = ALL_FRAGMENTS
```

To validate only the bad page list, use the keyword *BAD* with the /PFN qualifier:

```
/PFN = BAD
```

To validate only the free page list, use the keyword *FREE* with the /PFN qualifier:

```
/PFN = FREE
```

To validate the PFNs containing the PFN database, use the keyword *PFNDB* with the /PFN qualifier:

```
/PFN = PFNDB
```

To validate only the untested page list, use the keyword *UNTESTED* with the /PFN qualifier:

```
/PFN = UNTESTED
```

To validate multiple lists, you can combine keywords for use with the /PFN qualifier:

```
/PFN = (x,y)
```

Note that if the /PFN is given without /ALL, /IDENT, or /ADDRESS, then the system validates the PFN lists from the last shared memory CPP.

## SDA Commands

### VALIDATE SHM\_CPP

#### Example

```
SDA> SHOW SHM_CPP
Not validating SHM_CPP 0000 at FFFFFFFF.7F2BA140, VALID flag clear
Not validating SHM_CPP 0001 at FFFFFFFF.7F2BA380, VALID flag clear
Not validating SHM_CPP 0002 at FFFFFFFF.7F2BA5C0, VALID flag clear
Validating SHM_CPP 0003 at FFFFFFFF.7F2BA800 ...
    Validating counts and ranges in the free page list ...
    ... o.k.
    Not validating the bad page list, list is empty
    Not validating the untested page list, list is empty
Not validating SHM_CPP 0004 at FFFFFFFF.7F2BAA40, VALID flag clear
Not validating SHM_CPP 0005 at FFFFFFFF.7F2BAC80, VALID flag clear
Not validating SHM_CPP 0006 at FFFFFFFF.7F2BAEC0, VALID flag clear
```

**This example shows the default output for the VALIDATE SHM\_CPP command.**



---

## SDA CLUE Extension Commands

This chapter presents an overview of the SDA CLUE (Crash Log Utility Extractor) extension commands, how to display information using these commands, and how to use SDA CLUE with DOSD. This chapter also describes the SDA CLUE commands.

### 5.1 Overview of SDA CLUE Extensions

SDA CLUE (Crash Log Utility Extractor) commands automate the analysis of crash dumps and maintain a history of all fatal bugchecks on either a standalone or cluster system. You can use SDA CLUE commands in conjunction with SDA to collect and decode additional dump file information not readily accessible through standard SDA commands. SDA CLUE extension commands can summarize information provided by certain standard SDA commands and provide additional detail for some SDA commands. For example, SDA CLUE extension commands can quickly provide detailed extended QIO processor (XQP) summaries. You can also use SDA CLUE commands interactively on a running system to help identify performance problems.

You can use all CLUE commands when analyzing crash dumps; the only CLUE commands that are not allowed when analyzing a running system are CLUE CRASH, CLUE ERRLOG, CLUE HISTORY, and CLUE STACK.

When you reboot the system after a system failure, you automatically invoke SDA by default. To facilitate better crash dump analysis, SDA CLUE commands automatically capture and archive summary dump file information in a CLUE listing file.

A startup command procedure initiates commands that do the following:

- Invoke SDA
- Issue an SDA CLUE HISTORY command
- Create a listing file called `CLUE$nodename_ddmmyy_hhmm.LIS`

The CLUE HISTORY command adds a one-line summary entry to a history file and saves the following output from SDA CLUE commands in the listing file:

- Crash dump summary information
- System configuration
- Stack decoder
- Page and swap files

## SDA CLUE Extension Commands

### 5.1 Overview of SDA CLUE Extensions

- Memory management statistics
- Process DCL recall buffer
- Active XQP processes
- XQP cache header

The contents of this CLUE list file can help you analyze a system failure. If these files accumulate more space than the threshold allows (default is 5000 blocks), the oldest files are deleted until the threshold limit is reached. You can also customize this list file using the CLUE\$MAX\_BLOCK logical name.

For additional information on the contents of the CLUE listing file, see the reference section on CLUE HISTORY.

It is important to remember that CLUE\$nodename\_ddmmyy\_hhmm.LIS contains only an overview of the crash dump and does not always contain enough information to determine the cause of the crash. The dump itself should always be saved using the procedures described in Section 2.2.2 and Section 2.2.3.

To inhibit the running of CLUE at system startup, define the logical CLUE\$INHIBIT in the SYLOGICALS.COM file as /SYS TRUE.

### 5.2 Displaying Data Using SDA CLUE Commands

To invoke a CLUE command, enter the command at the SDA prompt. For example:

```
SDA> CLUE CONFIG
```

### 5.3 Using SDA CLUE with DOSD

DOSD (Dump Off System Disk) allows you to write the system dump file to a device other than the system disk. For SDA CLUE to be able to correctly find the dump file to be analyzed after a system crash, you need to perform the following steps:

1. Modify the command procedure SYSSMANAGER:SYCONFIG.COM to add the system logical name CLUE\$DOSD\_DEVICE to point to the device where the dump file resides. You need to supply only the physical or logical device name without a file specification.
2. Modify the command procedure SYSSMANAGER:SYCONFIG.COM to mount systemwide the device where the dump file resides. Otherwise, SDA CLUE cannot access and analyze the dump file.

In the following example, the dump file has been placed on device \$3\$DUA25, which has the label DMP\$DEV. You need to add the following commands to SYSSMANAGER:SYCONFIG.COM:

```
$mount/system/noassist $3$dua25: dmp$dev dmp$dev  
$define/system clue$dosd_device dmp$dev
```

## **5.4 Listing of SDA CLUE Extension Commands**

This section describes the following SDA CLUE extension commands:

- CLUE CALL\_FRAME
- CLUE CLEANUP
- CLUE CONFIG
- CLUE CRASH
- CLUE ERRLOG
- CLUE FRU
- CLUE HISTORY
- CLUE MCHK
- CLUE MEMORY
- CLUE PROCESS
- CLUE REGISTER
- CLUE SG
- CLUE STACK
- CLUE SYSTEM
- CLUE VCC
- CLUE XQP

## SDA CLUE Extension Commands

### CLUE CALL\_FRAME

---

## CLUE CALL\_FRAME

Displays key information, such as the PC of the caller, from the active call frames at time of the crash.

### Format

```
CLUE CALL_FRAME [/CPU [cpu-id | ALL]
                 | /PROCESS [/ADDRESS=n | INDEX=n
                 | /IDENTIFICATION=n | process-name | ALL]]
```

### Parameters

#### ALL

When used with /CPU, it requests information about all CPUs in the system. When used with /PROCESS, it requests information about all processes that exist in the system.

#### cpu-id

When used with /CPU, it gives the number of the CPU for which information is to be displayed. Use of the **cpu-id** parameter causes the CLUE CALL\_FRAME command to perform an implicit SET CPU command, making the indicated CPU the current CPU for subsequent SDA commands.

#### process-name

When used with /PROCESS, it gives the name of the process for which information is to be displayed. Use of the **process-name** parameter, the /ADDRESS qualifier, the /INDEX qualifier, or the /IDENTIFICATION qualifier causes the CLUE CALL\_FRAME command to perform an implicit SET PROCESS command, making the indicated process the current process for subsequent SDA commands. You can determine the names of the processes in the system by issuing a SHOW SUMMARY command.

The **process-name** can contain up to 15 letters and numerals, including the underscore (\_) and dollar sign (\$). If it contains any other characters, you must enclose the **process-name** in quotation marks (" ").

### Qualifiers

#### /ADDRESS=*n*

Specifies the PCB address of the desired process when used with CLUE CALL\_FRAME/PROCESS.

#### /CPU [cpu-id | ALL]

Indicates that the call frame for a CPU is required. Specify the CPU by its number or use ALL to indicate all CPUs.

#### /IDENTIFICATION=*n*

Specifies the identification of the desired process when used with CLUE CALL\_FRAME/PROCESS.

#### /INDEX=*n*

Specifies the index of the desired process when used with CLUE CALL\_FRAME/PROCESS.

## SDA CLUE Extension Commands CLUE CALL\_FRAME

### **/PROCESS [process-name | ALL]**

Indicates that the call frame for a process is required. The process should be specified with either one of the qualifiers /ADDRESS, /IDENTIFICATION, or /INDEX, or by its name, or by using ALL to indicate all processes.

### Description

The CLUE CALL\_FRAME command displays call chain information for a process or a CPU. The process context calls work on both the running system and dump file; the CPU context calls only on dump files.

If neither /CPU nor /PROCESS is specified, the parameter (CPU-id or process-name) is ignored and the call frame for the SDA current process is displayed.

### Examples

1. SDA>CLUE CALL/PROCESS IPCACP

Call Chain: Process index: 000B Process name: IPCACP PCB: 8136EF00

```
-----
Procedure Frame  Procedure Entry  Return Address
-----
7FFA1CA0 Null 800C8C90 SCH$WAIT_PROC_C
7FFA1D00 Stack 800D9250 SYS$HIBER_C 0003045C IPCACP+0003045C
7FFA1D50 Stack 00030050 IPCACP+00030050 800D11C8 EXE$CMKRNL_C+000D8
7FFA1E60 Null 800B6120 EXE$BLDPKTSWPR_C
7FFA1E78 Null 800B6120 EXE$BLDPKTSWPR_C
7FFA1EC0 Null 80248120 NSA$CHECK_PRIVILEGE_C
7FFA1F00 Null 80084640 EXE$CMODEXECX_C
7FFA1F70 Stack 800D10F0 EXE$CMKRNL_C 80084CC8 EXE$CMODKRNL_C+00198
7B01FAB0 Stack 00030010 IPCACP+00030010 83EA3454 SYS$IMGSTA_C+00154
7B01FB10 Stack 83EA3300 SYS$IMGSTA_C 83D99CC4 EXE$PROC_IMGACT_C+00384
7B01FBA0 Stack 83D99BA0 EXE$PROC_IMGACT_C+00260 83D99B9C EXE$PROC_IMGACT_C+0025C
-----
```

In this example, the CLUE CALL\_FRAME command displays the call frame from the process IPCACP.

2. SDA>CLUE CALL/CPU ALL

Call Chain: Process index: 0000 Process name: NULL PCB: 827377C0 (CPU 0)

```
-----
Procedure Frame  Procedure Entry  Return Address
-----
8F629D28 Null 80205E00 SYS$SCS+05E00
8F629D68 Null 8020A850 SCS$REC_MSGREC_C
8F629D98 Null 914A5340 SYS$PBDRIVER+07340
8F629DB8 Null 914A4FD0 SYS$PBDRIVER+06FD0
8F629DE0 Stack 914AACF0 SYS$PBDRIVER+0CCF0 914AE5CC SYS$PBDRIVER+105CC
8F629E50 Stack 914AE418 SYS$PBDRIVER+10418 800503B0 EXE_STD$QUEUE_FORK_C+00350
8F629F88 Null 800E95F4 SCH$WAIT_ANY_MODE_C
8F629FD0 Stack 800D0F80 SCH$IDLE_C 800E92D0 SCH$INTERRUPT+00BB0
-----
```

Call Chain: Process index: 0000 Process name: NULL PCB: 827377C0 (CPU 2)

```
-----
Procedure Frame  Procedure Entry  Return Address
-----
90FCBF88 Null 800E95F4 SCH$WAIT_ANY_MODE_C
90FCBFC8 Null 800E95F4 SCH$WAIT_ANY_MODE_C
90FCBFD0 Stack 800D0F80 SCH$IDLE_C 800E92D0 SCH$INTERRUPT+00BB0
-----
```

## SDA CLUE Extension Commands

### CLUE CALL\_FRAME

```
Call Chain:  Process index: 0000  Process name: NULL  PCB: 827377C0  (CPU 6)
-----
Procedure Frame  Procedure Entry  Return Address
-----
90FCBF88  Null  800E95FA  SCH$WAIT_ANY_MORE_c
90FD9F88  Null  800E95F4  SCH$WAIT_ANY_MODE_C
90FD9FD0  Stack 800D0F80  SCH$IDLE_C  800E92D0  SCH$INTERRUPT+00BB0
```

In this example, CLUE/CPU ALL shows the call frame for all CPUs.

## CLUE CLEANUP

Performs housekeeping operations to conserve disk space.

### Format

CLUE CLEANUP

### Parameters

None.

### Qualifiers

None.

### Description

CLUE CLEANUP performs housekeeping operations to conserve disk space. To avoid filling up the system disk with listing files generated by CLUE, CLUE CLEANUP is run during system startup to check the overall disk space used by all CLUE\$.LIS files.

If the CLUE\$COLLECT:CLUE\$.LIS files occupy more space than the logical CLUE\$MAX\_BLOCKS allows, then the oldest files are deleted until the threshold is reached. If this logical name is not defined, a default value of 5,000 disk blocks is assumed. A value of zero disables housekeeping and no check on the disk space is performed.

### Example

```
SDA> CLUE CLEANUP
%CLUE-I-CLEANUP, housekeeping started...
%CLUE-I-MAXBLOCK, maximum blocks allowed 5000 blocks
%CLUE-I-STAT, total of 4 CLUE files, 192 blocks.
```

In this example, the CLUE CLEANUP command displays that the total number of blocks of disk space used by CLUE files does not exceed the maximum number of blocks allowed. No files are deleted.

# SDA CLUE Extension Commands

## CLUE CONFIG

---

## CLUE CONFIG

Displays the system, memory, and device configurations.

### Format

CLUE CONFIG

### Parameters

None.

### Qualifiers

None.

### Description

CLUE CONFIG displays the system, memory, and device configurations.

### Example

```
SDA> CLUE CONFIG
System Configuration:
-----
System Information:
System Type      AlphaServer 4100 5/400 4MB          Primary CPU ID 00
Cycle Time       2.5 nsec (400 MHz)                       Pagesize       8192 Byte

Memory Configuration:
Cluster  PPN Start    PFN Count      Range (MByte)      Usage
#00      0              256            0.0 MB - 2.0 MB    Console
#01      256           32510          2.0 MB - 255.9 MB System
#02      32766         2              255.9 MB - 256.0 MB Console

Per-CPU Slot Processor Information:
CPU ID      00              CPU State      rc,pa,pp,cv,pv,pmv,pl
CPU Type    EV56 Pass 2 (21164A) Halt Request    "Default, No Action"
PAL Code    1.19-12         Halt PC        00000000.20000000
CPU Revision ....         Halt PS        00000000.00001F00
Serial Number .....         Halt Code      "Bootstrap or Powerfail"
Console Vers V5.0-47

CPU ID      02              CPU State      pa,pp,cv,pv,pmv,pl
CPU Type    EV56 Pass 2 (21164A) Halt Request    "Default, No Action"
PAL Code    1.19-12         Halt PC        00000000.00000000
CPU Revision ....         Halt PS        00000000.00000000
Serial Number .....         Halt Code      "Bootstrap or Powerfail"
Console Vers V5.0-47

Adapter Configuration:
-----
TR Adapter  ADP              Hose Bus      BusArrayEntry      Node CSR          Vec/IRQ Port Slot Device Name / HW-Id
-----
1 KA1605    FFFFFFFF.8120FB40 0 GLOBAL_BUS
2 MC_BUS    FFFFFFFF.8120FF00 7 MC_BUS
          FFFFFFFF.81210150 4 FFFFFFFF.85BB8000 4 KA1605_PCI
          FFFFFFFF.81210268 1 00000000.00000000 1 KA1605_MEMORY
3 PCI       FFFFFFFF.81210300 60 PCI
          FFFFFFFF.81210550 8 FFFFFFFF.85BC2000 900 1 MERCURY
          FFFFFFFF.81210588 10 FFFFFFFF.85DEA000 980 GQA: 2 S3 Trio32/64
          FFFFFFFF.812105C0 18 FFFFFFFF.85DEC000 9C0 EWA: 3 DC21140 - 100 mbit NI (Tulip)
          FFFFFFFF.812105F8 20 FFFFFFFF.85DEE000 A00 PKA: 4 Qlogic ISP1020 SCSI-2
          FFFFFFFF.81210630 28 FFFFFFFF.85DF0000 A40 PKB: 5 FWD SCSI (KZPSA)
4 EISA      FFFFFFFF.81210800 60 EISA
          FFFFFFFF.81210A18 0 FFFFFFFF.85BC4000 0 0 System Board
5 XBUS      FFFFFFFF.81210DC0 60 XBUS
          FFFFFFFF.81210F98 0 FFFFFFFF.85BC4000 0 0 EISA_SYSTEM_BOARD
          FFFFFFFF.81210FD0 1 FFFFFFFF.85BC4000 6 DVA: 1 Floppy
          FFFFFFFF.81211008 2 FFFFFFFF.85BC4000 7 LRA: 2 Line Printer (parallel port)
          FFFFFFFF.812110B0 5 FFFFFFFF.85BC4000 11 IIA: 5 I2C bus driver
```

VM-0011A-AI



---

## CLUE CRASH

Displays a crash dump summary.

### Format

CLUE CRASH

### Parameters

None.

### Qualifiers

None.

### Description

CLUE CRASH displays a crash dump summary, which includes the following items:

- Bugcheck type
- Current process and image
- Failing PC and PS
- Executive image section name and offset
- General registers
- Failing instructions
- Exception frame, signal and mechanism arrays (if available)
- CPU state information (spinlock related bugchecks only)

### Example

```
SDA> CLUE CRASH
Crash Time:      30-AUG-1996 13:13:46.83
Bugcheck Type:  SSRVEXCEPT, Unexpected system service exception
Node:           SWPCTX (Standalone)
CPU Type:       DEC 3000 Model 400
VMS Version:    X6AF-FT2
Current Process: SYSTEM
Current Image:  $31$DKB0:[SYS0.][SYSMGR]X.EXE;1
Failing PC:     00000000.00030078   SYS$K_VERSION_01+00078
Failing PS:     00000000.00000003
Module:         X
Offset:        00030078
```

# SDA CLUE Extension Commands

## CLUE CRASH

```

Boot Time:          30-AUG-1996 09:06:22.00
System Uptime:      0 04:07:24.83
Crash/Primary CPU: 00/00
System/CPU Type:    0402
Saved Processes:    18
Pagesize:          8 KByte (8192 bytes)
Physical Memory:    64 MByte (8192 PFNs, contiguous memory)
Dumpfile Pagelets: 98861 blocks
Dump Flags:         olddump,writecomp,errlogcomp,dump_style
Dump Type:          raw,selective
EXE$GL_FLAGS:       poolpging,init,bugdump
Paging Files:       1 Pagefile and 1 Swapfile installed

Stack Pointers:
KSP = 00000000.7FFA1C98   ESP = 00000000.7FFA6000   SSP = 00000000.7FFAC100
USP = 00000000.7AFFBADO

General Registers:
R0 = 00000000.00000000   R1 = 00000000.7FFA1EB8   R2 = FFFFFFFF.80D0E6C0
R3 = FFFFFFFF.80C63460   R4 = FFFFFFFF.80D12740   R5 = 00000000.000000C8
R6 = 00000000.00030038   R7 = 00000000.7FFA1FC0   R8 = 00000000.7FFAC208
R9 = 00000000.7FFAC410   R10 = 00000000.7FFAD238  R11 = 00000000.7FFCE3E0
R12 = 00000000.00000000  R13 = FFFFFFFF.80C6EB60  R14 = 00000000.00000000
R15 = 00000000.009A79FD  R16 = 00000000.000003C4  R17 = 00000000.7FFA1D40
R18 = FFFFFFFF.80C05C38  R19 = 00000000.00000000  R20 = 00000000.7FFA1F50
R21 = 00000000.00000000  R22 = 00000000.00000001  R23 = 00000000.7FFF03C8
R24 = 00000000.7FFF0040  AI = 00000000.00000003  RA = FFFFFFFF.82A21080
PV = FFFFFFFF.829CF010  R28 = FFFFFFFF.8004B6DC  FP = 00000000.7FFA1CA0
PC = FFFFFFFF.82A210B4  PS = 18000000.00000000

Exception Frame:
R2 = 00000000.00000003   R3 = FFFFFFFF.80C63460   R4 = FFFFFFFF.80D12740
R5 = 00000000.000000C8   R6 = 00000000.00030038   R7 = 00000000.7FFA1FC0
PC = 00000000.00030078   PS = 00000000.00000003

Signal Array:
Arg Count = 00000005
Condition = 0000000C
Argument #2 = 00010000
Argument #3 = 00000000
Argument #4 = 00030078
Argument #5 = 00000003

64-bit Signal Array:
Arg Count = 00000005
Condition = 00000000.0000000C
Argument #2 = 00000000.00010000
Argument #3 = 00000000.00000000
Argument #4 = 00000000.00030078
Argument #5 = 00000000.00000003

Mechanism Array:
Arguments = 0000002C
Flags = 00000000
Depth = FFFFFFFD
Handler Data = 00000000.00000000
R0 = 00000000.00020000   R1 = 00000000.00000000   R16 = 00000000.00020004
R17 = 00000000.00010050  R18 = FFFFFFFF.FFFFFFFF  R19 = 00000000.00000000
R20 = 00000000.7FFA1F50  R21 = 00000000.00000000  R22 = 00000000.00010050
R23 = 00000000.00000000  R24 = 00000000.00010051  R25 = 00000000.00000000
R26 = FFFFFFFF.8010ACA4  R27 = 00000000.00010050  R28 = 00000000.00000000

Establisher FP = 00000000.7AFFBADO
Exception FP = 00000000.7FFA1F00
Signal Array = 00000000.7FFA1EB8
Signal64 Array = 00000000.7FFA1ED0

System Registers:
Page Table Base Register (PTBR) 00000000.00001136
Processor Base Register (PRBR)  FFFFFFFF.80D0E000
Privileged Context Block Base (PCBB) 00000000.003FE080
System Control Block Base (SCBB) 00000000.000001DC
Software Interrupt Summary Register (SISR) 00000000.00000000
Address Space Number (ASN) 00000000.0000002F
AST Summary / AST Enable (ASTSR_ASTEN) 00000000.0000000F
Floating-Point Enable (FEN) 00000000.00000000
Interrupt Priority Level (IPL) 00000000.00000000
Machine Check Error Summary (MCES) 00000000.00000000
Virtual Page Table Base Register (VPTB) FFFFFFFC.00000000

```

## SDA CLUE Extension Commands CLUE CRASH

```
Failing Instruction:
SYS$K_VERSION_01+00078:      LDL          R28,(R28)

Instruction Stream (last 20 instructions):
SYS$K_VERSION_01+00028:      LDQ          R16,#X0030(R13)
SYS$K_VERSION_01+0002C:      LDQ          R27,#X0048(R13)
SYS$K_VERSION_01+00030:      LDA          R17,(R28)
SYS$K_VERSION_01+00034:      JSR          R26,(R26)
SYS$K_VERSION_01+00038:      LDQ          R26,#X0038(R13)
SYS$K_VERSION_01+0003C:      BIS          R31,SP,SP
SYS$K_VERSION_01+00040:      BIS          R31,R26,R0
SYS$K_VERSION_01+00044:      BIS          R31,FP,SP
SYS$K_VERSION_01+00048:      LDQ          R28,#X0008(SP)
SYS$K_VERSION_01+0004C:      LDQ          R13,#X0010(SP)
SYS$K_VERSION_01+00050:      LDQ          FP,#X0018(SP)
SYS$K_VERSION_01+00054:      LDA          SP,#X0020(SP)
SYS$K_VERSION_01+00058:      RET          R31,(R28)
SYS$K_VERSION_01+0005C:      BIS          R31,R31,R31
SYS$K_VERSION_01+00060:      LDA          SP,#XFFE0(SP)
SYS$K_VERSION_01+00064:      STQ          FP,#X0018(SP)
SYS$K_VERSION_01+00068:      STQ          R27,(SP)
SYS$K_VERSION_01+0006C:      BIS          R31,SP,FP
SYS$K_VERSION_01+00070:      STQ          R26,#X0010(SP)
SYS$K_VERSION_01+00074:      LDA          R28,(R31)
SYS$K_VERSION_01+00078:      LDL          R28,(R28)
SYS$K_VERSION_01+0007C:      BEQ          R28,#X000007
SYS$K_VERSION_01+00080:      LDQ          R26,#XFFE8(R27)
SYS$K_VERSION_01+00084:      BIS          R31,R26,R0
SYS$K_VERSION_01+00088:      BIS          R31,FP,SP
```

## SDA CLUE Extension Commands

### CLUE ERRLOG

---

## CLUE ERRLOG

Extracts the error log buffers from the dump file and places them into the binary file called CLUE\$ERRLOG.SYS.

### Format

CLUE ERRLOG [/OLD]

### Parameters

None.

### Qualifier

**/OLD**

Dumps the errorlog buffers into a file using the old errorlog format. The default action, if /OLD is not specified, is to dump the errorlog buffers in the common event header format.

### Description

CLUE ERRLOG extracts the error log buffers from the dump file and places them into the binary file called CLUE\$ERRLOG.SYS.

These buffers contain messages not yet written to the error log file at the time of the failure. When you analyze a failure on the same system on which it occurred, you can run the Error Log utility on the actual error log file to see these error log messages. When analyzing a failure from another system, use the CLUE ERRLOG command to create a file containing the failing system's error log messages just prior to the failure. System failures are often triggered by hardware problems, so determining what, if any, hardware errors occurred prior to the failure can help you troubleshoot a failure.

You can define the logical CLUE\$ERRLOG to any file specification if you want error log information written to a file other than CLUE\$ERRLOG.SYS.

---

#### Note

---

You need at least DECEvent V2.9 to analyze the new common event header (CEH) format file. The old format file can be analyzed by ANALYZE/ERROR or any version of DECEvent.

---

### Example

```
SDA> CLUE ERRLOG
Sequence  Date          Time
-----
128  11-MAY-1994  00:39:31.30
129  11-MAY-1994  00:39:32.12
130  11-MAY-1994  00:39:44.83
131  11-MAY-1994  00:44:38.97 * Crash Entry
```

In addition to writing the error log buffers into CLUE\$ERRLOG.SYS, the CLUE ERRLOG command displays the sequence, date, and time of each error log buffer extracted from the dump file.

## CLUE FRU

Outputs the Field Replacement Unit (FRU) table to a file for display by DECEvent.

### Format

CLUE FRU

### Parameters

None.

### Qualifiers

None.

### Description

The FRU command extracts the FRU table into an output file (CLUESFRU.SYS), which can then be displayed by DECEvent. This command works on the running system, as well as on dump files.

## CLUE HISTORY

Updates history file and generates crash dump summary output.

### Format

CLUE HISTORY [/qualifier]

### Parameters

None.

### Qualifier

#### **/OVERRIDE**

Allows execution of this command even if the dump file has already been analyzed (DMP\$V\_OLDDUMP bit set).

### Description

This command updates the history file pointed to by the logical name CLUE\$HISTORY with a one-line entry and the major crash dump summary information. If CLUE\$HISTORY is not defined, a file CLUE\$HISTORY.DAT in your default directory will be created.

In addition, a listing file with summary information about the system failure is created in the directory pointed to by CLUE\$COLLECT. The file name is of the form CLUE\$node\_ddmmyy\_hhmm.LIS where the timestamp (*hhmm*) corresponds to the system failure time and not the time when the file was created.

The listing file contains summary information collected from the following SDA commands:

- CLUE CRASH
- CLUE CONFIG
- CLUE MEMORY/FILES
- CLUE MEMORY/STATISTIC
- CLUE PROCESS/RECALL
- CLUE XQP/ACTIVE

Refer to the reference section for each of these commands to see examples of the displayed information.

The logical name CLUE\$FLAG controls how much information is written to the listing file.

- Bit 0—Include crash dump summary
- Bit 1—Include system configuration
- Bit 2—Include stack decoding information
- Bit 3—Include page and swap file usage
- Bit 4—Include memory management statistics
- Bit 5—Include process DCL recall buffer

## SDA CLUE Extension Commands CLUE HISTORY

- Bit 6—Include active XQP process information
- Bit 7—Include XQP cache header

If this logical name is undefined, all bits are set by default internally and all information is written to the listing file. If the value is zero, no listing file is generated. The value has to be supplied in hexadecimal form (for example, `DEFINE CLUE$FLAG 81` will include the crash dump summary and the XQP cache header information).

If the logical name `CLUE$SITE_PROC` points to a valid and existing file, it will be executed as the final step of the `CLUE HISTORY` command (for example, automatic saving of the dump file during system startup). If used, this file should contain only valid SDA commands.

Refer to Chapter 2, Section 2.2.3 for more information on site-specific command files.

## SDA CLUE Extension Commands

### CLUE MCHK

---

## CLUE MCHK

This command is obsolete.

### Format

CLUE MCHK

### Parameters

None.

### Qualifiers

None.

### Description

**The CLUE MCHK command has been withdrawn. Issuing the command produces the following output, explaining the correct way to obtain MACHINECHECK information from a crash dump.**

Please use the following commands in order to extract the errorlog buffers from the dumpfile header and analyze the machine check entry:

```
$ analyze/crash sys$system:sysdump.dmp
SDA> clue errlog
SDA> exit
$ diagnose clue$errlog
```



## CLUE MEMORY

Displays memory- and pool-related information.

### Format

CLUE MEMORY [/qualifier[,...]]

### Parameters

None.

### Qualifiers

#### **/FILES**

Displays information about page and swap file usage.

#### **/FREE [/FULL]**

Validates and displays dynamic nonpaged free packet list queue.

#### **/GH [/FULL]**

Displays information about the granularity hint regions.

#### **/LAYOUT**

Decodes and displays much of the system virtual address space layout.

#### **/LOOKASIDE**

Validates the lookaside list queue heads and counts the elements for each list.

#### **/STATISTIC**

Displays systemwide performance data such as page fault, I/O, pool, lock manager, MSCP, and file system cache.

### Description

The CLUE MEMORY command displays memory- and pool-related information.

### Examples

- SDA> CLUE MEMORY/FILES  
Paging File Usage (blocks):  
-----

|                               |                       |                   |
|-------------------------------|-----------------------|-------------------|
| Swapfile (Index 1)            | Device                | DKA0:             |
| PFL Address FFFFFFFF.81531340 | UCB Address           | FFFFFFFF.814AAF00 |
| Free Blocks 44288             | Bitmap                | FFFFFFFF.815313E0 |
| Total Size (blocks) 44288     | Flags                 | inited,swap_file  |
| Total Write Count 0           | Total Read Count      | 0                 |
| Smallest Chunk (pages) 2768   | Largest Chunk (pages) | 2768              |
| Chunks GEQ 64 Pages 1         | Chunks LT 64 Pages    | 0                 |
| Pagefile (Index 254)          | Device                | DKA0:             |
| PFL Address FFFFFFFF.8152E440 | UCB Address           | FFFFFFFF.814AAF00 |
| Free Blocks 1056768           | Bitmap                | FFFFFFFF.6FB16008 |
| Total Size (blocks) 1056768   | Flags                 | inited            |
| Total Write Count 0           | Total Read Count      | 0                 |
| Smallest Chunk (pages) 66048  | Largest Chunk (pages) | 66048             |
| Chunks GEQ 64 Pages 1         | Chunks LT 64 Pages    | 0                 |

Summary: 1 Pagefile and 1 Swapfile installed

## SDA CLUE Extension Commands

### CLUE MEMORY

```
Total Size of all Swap Files:      44288 blocks
Total Size of all Paging Files:    1056768 blocks
Total Committed Paging File Usage: 344576 blocks
```

This example shows the display produced by the CLUE MEMORY/FILES command.

```
2. SDA> CLUE MEMORY/FREE/FULL
Non-Paged Dynamic Storage Pool - Variable Free Packet Queue:
-----
CLASSDR FFFFFFFF.80D157C0 : 64646464 64646464 00000040 80D164C0 ÀdÑ.@...dddddddd
CLASSDR FFFFFFFF.80D164C0 : 64646464 64646464 00000080 80D17200 .rÑ....dddddddd
CLASSDR FFFFFFFF.80D17200 : 64646464 64646464 00000080 80D21AC0 À.Ò....dddddddd
CLASSDR FFFFFFFF.80D21AC0 : 64646464 64646464 00000080 80D228C0 À(Ò....dddddddd
VCC FFFFFFFF.80D228C0 : 801CA5E8 026F0040 00000040 80D23E40 @>Ò.@...@.o.è¥..
CLASSDR FFFFFFFF.80D23E40 : 64646464 64646464 00000040 80D24040 @@Ò.@...dddddddd
CLASSDR FFFFFFFF.80D24040 : 64646464 64646464 00000040 80D26FC0 ÀoÒ.@...dddddddd
CLASSDR FFFFFFFF.80D26FC0 : 64646464 64646464 00000080 80D274C0 ÀtÒ....dddddddd
CLASSDR FFFFFFFF.80D274C0 : 64646464 64646464 00000040 80D2E200 .âÒ.@...dddddddd
CLASSDR FFFFFFFF.80D2E200 : 64646464 64646464 00000080 80D2E440 @âÒ....dddddddd
CLASSDR FFFFFFFF.80D2E440 : 64646464 64646464 00000040 80D2F000 .ò.@...dddddddd
CLASSDR FFFFFFFF.80D2F000 : 64646464 64646464 00000080 80D2F400 .òÒ....dddddddd
.
.
.
CLASSDR FFFFFFFF.80E91D40 : 64646464 64646464 00000500 80E983C0 À.é....dddddddd
CLASSDR FFFFFFFF.80E983C0 : 64646464 64646464 00031C40 00000000 ....@...dddddddd

Free Packet Queue, Status: Valid, 174 elements

Largest free chunk: 00031C40 (hex) 203840 (dec) bytes
Total free dynamic space: 0003D740 (hex) 251712 (dec) bytes
```

The CLUE MEMORY/FREE/FULL command validates and displays dynamic nonpaged free packet list queue.

```
3. SDA> CLUE MEMORY/GH/FULL
Granularity Hint Regions - Huge Pages:
-----
Execlet Code Region
Base/End VA FFFFFFFF.80000000 FFFFFFFF.80356000 Current Size 427/ 427
Base/End PA 00000000.00400000 00000000.00756000 Free / 0
Total Size 00000000.00356000 3.3 MB In Use / 427
Bitmap VA/Size FFFFFFFF.80D17CC0 00000000.00000040 Initial Size 512/ 512
Slice Size 00000000.00002000 Released 85/ 85
Next free Slice 00000000.000001AB
```

## SDA CLUE Extension Commands CLUE MEMORY

| Image                      | Base              | End               | Length   |
|----------------------------|-------------------|-------------------|----------|
| SYSS\$PUBLIC_VECTORS       | FFFFFFFF.80000000 | FFFFFFFF.80001A00 | 00001A00 |
| SYSS\$BASE_IMAGE           | FFFFFFFF.80002000 | FFFFFFFF.8000D400 | 0000B400 |
| SYSS\$CNBTDRIVER           | FFFFFFFF.8000E000 | FFFFFFFF.8000F000 | 00001000 |
| SYSS\$NISCA_BTDRIVER       | FFFFFFFF.80010000 | FFFFFFFF.8001FA00 | 0000FA00 |
| SYSS\$SBTDRIVER            | FFFFFFFF.80020000 | FFFFFFFF.80022400 | 00002400 |
| SYSS\$OPDRIVER             | FFFFFFFF.80024000 | FFFFFFFF.80027C00 | 00003C00 |
| SYSTEM_DEBUG               | FFFFFFFF.80028000 | FFFFFFFF.80050200 | 00028200 |
| SYSTEM_PRIMITIVES          | FFFFFFFF.80052000 | FFFFFFFF.80089000 | 00037000 |
| SYSTEM_SYNCHRONIZATION     | FFFFFFFF.8008A000 | FFFFFFFF.80095400 | 0000B400 |
| ERRORLOG                   | FFFFFFFF.80096000 | FFFFFFFF.80099200 | 00003200 |
| SYSS\$CPU_ROUTINES_0402    | FFFFFFFF.8009A000 | FFFFFFFF.800A3A00 | 00009A00 |
| EXCEPTION_MON              | FFFFFFFF.800A4000 | FFFFFFFF.800BC800 | 00018800 |
| IO_ROUTINES_MON            | FFFFFFFF.800BE000 | FFFFFFFF.800E2000 | 00024000 |
| SYSDEVICE                  | FFFFFFFF.800E2000 | FFFFFFFF.800E5C00 | 00003C00 |
| PROCESS_MANAGEMENT_MON     | FFFFFFFF.800E6000 | FFFFFFFF.8010B000 | 00025000 |
| SYSS\$VM                   | FFFFFFFF.8010C000 | FFFFFFFF.80167200 | 0005B200 |
| SHELL&K                    | FFFFFFFF.80168000 | FFFFFFFF.80169200 | 00001200 |
| LOCKING                    | FFFFFFFF.8016A000 | FFFFFFFF.8017BE00 | 00011E00 |
| MESSAGE_ROUTINES           | FFFFFFFF.8017C000 | FFFFFFFF.80182A00 | 00006A00 |
| LOGICAL_NAMES              | FFFFFFFF.80184000 | FFFFFFFF.80186C00 | 00002C00 |
| F11BXQP                    | FFFFFFFF.80188000 | FFFFFFFF.80190400 | 00008400 |
| SYSLICENSE                 | FFFFFFFF.80192000 | FFFFFFFF.80192400 | 00000400 |
| IMAGE_MANAGEMENT           | FFFFFFFF.80194000 | FFFFFFFF.80197A00 | 00003A00 |
| SECURITY                   | FFFFFFFF.80198000 | FFFFFFFF.801A0E00 | 00008E00 |
| SYSGETSYSI                 | FFFFFFFF.801A2000 | FFFFFFFF.801A3A00 | 00001A00 |
| SYSS\$TRANSACTION_SERVICES | FFFFFFFF.801A4000 | FFFFFFFF.801C5000 | 00021000 |
| SYSS\$UTC_SERVICES         | FFFFFFFF.801C6000 | FFFFFFFF.801C7000 | 00001000 |
| SYSS\$VCC_MON              | FFFFFFFF.801C8000 | FFFFFFFF.801D4E00 | 0000CE00 |
| SYSS\$IPC_SERVICES         | FFFFFFFF.801D6000 | FFFFFFFF.80214A00 | 0003EA00 |
| SYSLDR_DYN                 | FFFFFFFF.80216000 | FFFFFFFF.80219200 | 00003200 |
| SYSS\$MME_SERVICES         | FFFFFFFF.8021A000 | FFFFFFFF.8021B000 | 00001000 |
| SYSS\$TTDRIVER             | FFFFFFFF.8021C000 | FFFFFFFF.8022FE00 | 00013E00 |
| SYSS\$PKCDRIVER            | FFFFFFFF.80230000 | FFFFFFFF.80240400 | 00010400 |
| SYSS\$DKDRIVER             | FFFFFFFF.80242000 | FFFFFFFF.80251600 | 0000F600 |
| RMS                        | FFFFFFFF.80252000 | FFFFFFFF.802C5E00 | 00073E00 |
| SYSS\$GXADRIVER            | FFFFFFFF.802C6000 | FFFFFFFF.802CE000 | 00008000 |
| SYSS\$ECDRIVER             | FFFFFFFF.802CE000 | FFFFFFFF.802D1000 | 00003000 |
| SYSS\$LAN                  | FFFFFFFF.802D2000 | FFFFFFFF.802D8E00 | 00006E00 |
| SYSS\$LAN_CSMACD           | FFFFFFFF.802DA000 | FFFFFFFF.802E6600 | 0000C600 |
| SYSS\$MKDRIVER             | FFFFFFFF.802E8000 | FFFFFFFF.802F1C00 | 00009C00 |
| SYSS\$YRDRIVER             | FFFFFFFF.802F2000 | FFFFFFFF.802F9600 | 00007600 |
| SYSS\$SODRIVER             | FFFFFFFF.802FA000 | FFFFFFFF.802FF000 | 00005000 |
| SYSS\$INDRIVER             | FFFFFFFF.80300000 | FFFFFFFF.8030EA00 | 0000EA00 |
| NETDRIVER                  | FFFFFFFF.80310000 | FFFFFFFF.80310200 | 00000200 |
| NETDRIVER                  | FFFFFFFF.80312000 | FFFFFFFF.80329E00 | 00017E00 |
| SYSS\$IMDRIVER             | FFFFFFFF.8032A000 | FFFFFFFF.8032EA00 | 00004A00 |
| SYSS\$IKDRIVER             | FFFFFFFF.80330000 | FFFFFFFF.8033AC00 | 0000AC00 |
| NDDRIVER                   | FFFFFFFF.8033C000 | FFFFFFFF.8033F800 | 00003800 |
| SYSS\$WSDRIVER             | FFFFFFFF.80340000 | FFFFFFFF.80341600 | 00001600 |
| SYSS\$CTDRIVER             | FFFFFFFF.80342000 | FFFFFFFF.8034D200 | 0000B200 |
| SYSS\$RTTDRIVER            | FFFFFFFF.8034E000 | FFFFFFFF.80351800 | 00003800 |
| SYSS\$FTDRIVER             | FFFFFFFF.80352000 | FFFFFFFF.80354200 | 00002200 |

| Execlret Data Region |                   |                   | Pages/Slices |           |
|----------------------|-------------------|-------------------|--------------|-----------|
| Base/End VA          | FFFFFFFF.80C00000 | FFFFFFFF.80CC0000 | Current Size | 96/ 1536  |
| Base/End PA          | 00000000.00800000 | 00000000.008C0000 | Free         | / 11      |
| Total Size           | 00000000.000C0000 | 0.7 MB            | In Use       | / 1525    |
| Bitmap VA/Size       | FFFFFFFF.80D17D00 | 00000000.00000100 | Initial Size | 128/ 2048 |
| Slice Size           | 00000000.00000200 |                   | Released     | 32/ 512   |
| Next free Slice      | 00000000.000005F5 |                   |              |           |

# SDA CLUE Extension Commands

## CLUE MEMORY

| Image                      | Base              | End               | Length   |
|----------------------------|-------------------|-------------------|----------|
| SYSS\$PUBLIC_VECTORS       | FFFFFFFF.80C00000 | FFFFFFFF.80C05000 | 00005000 |
| SYSS\$BASE_IMAGE           | FFFFFFFF.80C05000 | FFFFFFFF.80C25E00 | 00020E00 |
| SYSS\$CNBTDRIVER           | FFFFFFFF.80C25E00 | FFFFFFFF.80C26200 | 00000400 |
| SYSS\$NISCA_BTDRIVER       | FFFFFFFF.80C26200 | FFFFFFFF.80C29400 | 00003200 |
| SYSS\$SBTDRIVER            | FFFFFFFF.80C29400 | FFFFFFFF.80C29800 | 00000400 |
| SYSS\$OPDRIVER             | FFFFFFFF.80C29800 | FFFFFFFF.80C2A200 | 00000A00 |
| SYSTEM_DEBUG               | FFFFFFFF.80C2A200 | FFFFFFFF.80C4E400 | 00024200 |
| SYSTEM_PRIMITIVES          | FFFFFFFF.80C4E400 | FFFFFFFF.80C58200 | 00009E00 |
| SYSTEM_SYNCHRONIZATION     | FFFFFFFF.80C58200 | FFFFFFFF.80C5A000 | 00001E00 |
| ERRORLOG                   | FFFFFFFF.80C5A000 | FFFFFFFF.80C5A600 | 00000600 |
| SYSS\$CPU_ROUTINES_0402    | FFFFFFFF.80C5A600 | FFFFFFFF.80C5CA00 | 00002400 |
| EXCEPTION_MON              | FFFFFFFF.80C5CA00 | FFFFFFFF.80C64C00 | 00008200 |
| IO_ROUTINES_MON            | FFFFFFFF.80C64C00 | FFFFFFFF.80C6AA00 | 00005E00 |
| SYSDEVIC                   | FFFFFFFF.80C6AA00 | FFFFFFFF.80C6B600 | 00000C00 |
| PROCESS_MANAGEMENT_MON     | FFFFFFFF.80C6B600 | FFFFFFFF.80C72600 | 00007000 |
| SYSS\$VM                   | FFFFFFFF.80C72600 | FFFFFFFF.80C79000 | 00006A00 |
| SHELL&K                    | FFFFFFFF.80C79000 | FFFFFFFF.80C7A000 | 00001000 |
| LOCKING                    | FFFFFFFF.80C7A000 | FFFFFFFF.80C7BA00 | 00001A00 |
| MESSAGE_ROUTINES           | FFFFFFFF.80C7BA00 | FFFFFFFF.80C7D000 | 00001600 |
| LOGICAL_NAMES              | FFFFFFFF.80C7D000 | FFFFFFFF.80C7E200 | 00001200 |
| F11BXQP                    | FFFFFFFF.80C7E200 | FFFFFFFF.80C7FA00 | 00001800 |
| SYSLICENSE                 | FFFFFFFF.80C7FA00 | FFFFFFFF.80C7FE00 | 00000400 |
| IMAGE_MANAGEMENT           | FFFFFFFF.80C7FE00 | FFFFFFFF.80C80600 | 00000800 |
| SECURITY                   | FFFFFFFF.80C80600 | FFFFFFFF.80C83000 | 00002A00 |
| SYSGETSYI                  | FFFFFFFF.80C83000 | FFFFFFFF.80C83200 | 00000200 |
| SYSS\$TRANSACTION_SERVICES | FFFFFFFF.80C83200 | FFFFFFFF.80C89E00 | 00006C00 |
| SYSS\$UTC_SERVICES         | FFFFFFFF.80C89E00 | FFFFFFFF.80C8A200 | 00000400 |
| SYSS\$VCC_MON              | FFFFFFFF.80C8A200 | FFFFFFFF.80C8BC00 | 00001A00 |
| SYSS\$IPC_SERVICES         | FFFFFFFF.80C8BC00 | FFFFFFFF.80C91000 | 00005400 |
| SYSLDR_DYN                 | FFFFFFFF.80C91000 | FFFFFFFF.80C92200 | 00001200 |
| SYSS\$MME_SERVICES         | FFFFFFFF.80C92200 | FFFFFFFF.80C92600 | 00000400 |
| SYSS\$TDRIVER              | FFFFFFFF.80C92600 | FFFFFFFF.80C94C00 | 00002600 |
| SYSS\$PKCDRIVER            | FFFFFFFF.80C94C00 | FFFFFFFF.80C96A00 | 00001E00 |
| SYSS\$DKDRIVER             | FFFFFFFF.80C96A00 | FFFFFFFF.80C99800 | 00002E00 |
| RMS                        | FFFFFFFF.80C99800 | FFFFFFFF.80CAAC00 | 00011400 |
| RECOVERY_UNIT_SERVICES     | FFFFFFFF.80CAAC00 | FFFFFFFF.80CAB000 | 00000400 |
| SYSS\$GXADDRIVER           | FFFFFFFF.80CAB000 | FFFFFFFF.80CAF000 | 00004000 |
| SYSS\$ECDRIVER             | FFFFFFFF.80CAF000 | FFFFFFFF.80CAF000 | 00000C00 |
| SYSS\$LAN                  | FFFFFFFF.80CAF000 | FFFFFFFF.80CB0800 | 00000C00 |
| SYSS\$LAN_CSMACD           | FFFFFFFF.80CB0800 | FFFFFFFF.80CB1800 | 00001000 |
| SYSS\$MKDRIVER             | FFFFFFFF.80CB1800 | FFFFFFFF.80CB3000 | 00001800 |
| SYSS\$YRDRIVER             | FFFFFFFF.80CB3000 | FFFFFFFF.80CB3C00 | 00000C00 |
| SYSS\$SODRIVER             | FFFFFFFF.80CB3C00 | FFFFFFFF.80CB4E00 | 00001200 |
| SYSS\$INDRIVER             | FFFFFFFF.80CB4E00 | FFFFFFFF.80CB5E00 | 00001000 |
| NETDRIVER                  | FFFFFFFF.80CB5E00 | FFFFFFFF.80CB8800 | 00002A00 |
| SYSS\$IMDRIVER             | FFFFFFFF.80CB8800 | FFFFFFFF.80CB9400 | 00000C00 |
| SYSS\$IKDRIVER             | FFFFFFFF.80CB9400 | FFFFFFFF.80CBAA00 | 00001600 |
| NDDRIVER                   | FFFFFFFF.80CBAA00 | FFFFFFFF.80CBB400 | 00000A00 |
| SYSS\$WSDRIVER             | FFFFFFFF.80CBB400 | FFFFFFFF.80CBBC00 | 00000800 |
| SYSS\$CTDRIVER             | FFFFFFFF.80CBBC00 | FFFFFFFF.80CBD800 | 00001C00 |
| SYSS\$RTTDRIVER            | FFFFFFFF.80CBD800 | FFFFFFFF.80CBE200 | 00000A00 |
| SYSS\$FTDRIVER             | FFFFFFFF.80CBE200 | FFFFFFFF.80CBEA00 | 00000800 |
| 11 free Slices             | FFFFFFFF.80CBEA00 | FFFFFFFF.80CC0000 | 00001600 |

| S0/S1 Executive Data Region |                   |                   | Pages/Slices |          |
|-----------------------------|-------------------|-------------------|--------------|----------|
| Base/End VA                 | FFFFFFFF.80D00000 | FFFFFFFF.80ECA000 | Current Size | 229/ 229 |
| Base/End PA                 | 00000000.00900000 | 00000000.00ACA000 | Free         | / 0      |
| Total Size                  | 00000000.001CA000 | 1.7 MB            | In Use       | / 229    |
| Bitmap VA/Size              | FFFFFFFF.80D17E00 | 00000000.00000020 | Initial Size | 229/ 229 |
| Slice Size                  | 00000000.00002000 |                   | Released     | 0/ 0     |
| Next free Slice             | 00000000.00000007 |                   |              |          |

## SDA CLUE Extension Commands CLUE MEMORY

| Item                         | Base              | End               | Length   |
|------------------------------|-------------------|-------------------|----------|
| System Header                | FFFFFFFF.80D00000 | FFFFFFFF.80D0A000 | 0000A000 |
| Error Log Allocation Buffers | FFFFFFFF.80D0A000 | FFFFFFFF.80D0C000 | 00002000 |
| Nonpaged Pool (initial size) | FFFFFFFF.80D0E000 | FFFFFFFF.80ECA000 | 001BC000 |

| Resident Image Code Region |                   |                   | Pages/Slices |            |
|----------------------------|-------------------|-------------------|--------------|------------|
| Base/End VA                | FFFFFFFF.80400000 | FFFFFFFF.80C00000 | Current Size | 1024/ 1024 |
| Base/End PA                | 00000000.00C00000 | 00000000.01400000 | Free         | / 223      |
| Total Size                 | 00000000.00800000 | 8.0 MB            | In Use       | / 801      |
| Bitmap VA/Size             | FFFFFFFF.80D17E20 | 00000000.00000080 | Initial Size | 1024/ 1024 |
| Slice Size                 | 00000000.00002000 |                   | Released     | 0/ 0       |
| Next free Slice            | 00000000.00000321 |                   |              |            |

| Image                  | Base              | End               | Length   |
|------------------------|-------------------|-------------------|----------|
| LIBRTL                 | FFFFFFFF.80400000 | FFFFFFFF.8049EA00 | 0009EA00 |
| LIBOTS                 | FFFFFFFF.804A0000 | FFFFFFFF.804AEC00 | 0000EC00 |
| CMA\$TIS_SHR           | FFFFFFFF.804B0000 | FFFFFFFF.804B2600 | 00002600 |
| DPML\$SHR              | FFFFFFFF.804B4000 | FFFFFFFF.8050B600 | 00057600 |
| DECC\$SHR              | FFFFFFFF.8050C000 | FFFFFFFF.80657000 | 0014B000 |
| SECURESHRP             | FFFFFFFF.80658000 | FFFFFFFF.80676000 | 0001E000 |
| SECURESHR              | FFFFFFFF.80676000 | FFFFFFFF.8068C000 | 00016000 |
| SECURESHR              | FFFFFFFF.8068C000 | FFFFFFFF.8068C200 | 00000200 |
| LBRSHR                 | FFFFFFFF.8068E000 | FFFFFFFF.806A3E00 | 00015E00 |
| DECW\$TRANSPORT_COMMON | FFFFFFFF.806A4000 | FFFFFFFF.806B0C00 | 0000CC00 |
| CDE\$UNIX_ROUTINES     | FFFFFFFF.806B2000 | FFFFFFFF.806C1E00 | 0000FE00 |
| DECW\$XLIBSHR          | FFFFFFFF.806C2000 | FFFFFFFF.80781C00 | 000BFC00 |
| DECW\$XTLIBSHRR5       | FFFFFFFF.80782000 | FFFFFFFF.807C7600 | 00045600 |
| DECW\$XMLIBSHR12       | FFFFFFFF.807C8000 | FFFFFFFF.8096AE00 | 001A2E00 |
| DECW\$MRMLIBSHR12      | FFFFFFFF.8096C000 | FFFFFFFF.80994200 | 00028200 |
| DECW\$DXMLIBSHR12      | FFFFFFFF.80996000 | FFFFFFFF.80A40400 | 000AA400 |
| 223 free Slices        | FFFFFFFF.80A42000 | FFFFFFFF.80C00000 | 001BE000 |

| S2 Executive Data Region |                   |                   | Pages/Slices |       |
|--------------------------|-------------------|-------------------|--------------|-------|
| Base/End VA              | FFFFFFFE.00000000 | FFFFFFFE.00050000 | Current Size | 40/ 8 |
| Base/End PA              | 00000000.00350000 | 00000000.003A0000 | Free         | / 0   |
| Total Size               | 00000000.00050000 | 0.3 MB            | In Use       | / 8   |
| Bitmap VA/Size           | FFFFFFFF.80D17EA0 | 00000000.00000008 | Initial Size | 40/ 8 |
| Slice Size               | 00000000.0000A000 |                   | Released     | 0/ 0  |
| Next free Slice          | 00000000.00000008 |                   |              |       |

| Item         | Base              | End               | Length   |
|--------------|-------------------|-------------------|----------|
| PFN Database | FFFFFFFE.00000000 | FFFFFFFE.00050000 | 00050000 |

**The CLUE MEMORY/GH/FULL command displays data structures that describe granularity hint regions and huge pages.**

## SDA CLUE Extension Commands

### CLUE MEMORY

4. SDA> CLUE MEMORY/LAYOUT  
System Virtual Address Space Layout:

```
-----
```

| Item                              | Base               | End                | Length   |
|-----------------------------------|--------------------|--------------------|----------|
| System Virtual Base Address       | FFFFFFFFE.00000000 |                    |          |
| PFN Database                      | FFFFFFFFE.00000000 | FFFFFFFFE.00280000 | 00280000 |
| Permanent Mapping of System LlPT  | FFFFFFFFE.00280000 | FFFFFFFFE.00282000 | 00002000 |
| Global Page Table (GPT)           | FFFFFFFFE.00282000 | FFFFFFFFE.0089CD38 | 0061AD38 |
| Resource Hash Table               | FFFFFFFF.6FC1A000  | FFFFFFFF.6FC22000  | 00008000 |
| Lock ID Table                     | FFFFFFFF.6FC22000  | FFFFFFFF.70000000  | 003DE000 |
| Execlet Code Region               | FFFFFFFF.80000000  | FFFFFFFF.80800000  | 00800000 |
| Resident Image Code Region        | FFFFFFFF.80800000  | FFFFFFFF.81000000  | 00800000 |
| System Header                     | FFFFFFFF.81400000  | FFFFFFFF.8140E000  | 0000E000 |
| Error Log Allocation Buffers      | FFFFFFFF.8140E000  | FFFFFFFF.81414000  | 00006000 |
| Nonpaged Pool (initial size)      | FFFFFFFF.81414000  | FFFFFFFF.817C8000  | 003B4000 |
| Nonpaged Pool Expansion Area      | FFFFFFFF.817C8000  | FFFFFFFF.82664000  | 00E9C000 |
| Execlet Data Region               | FFFFFFFF.81000000  | FFFFFFFF.81400000  | 00400000 |
| Fork Buffers Secondary to Primary | FFFFFFFF.8268C000  | FFFFFFFF.8268E000  | 00002000 |
| Erase Pattern Buffer Page         | FFFFFFFF.8268E000  | FFFFFFFF.82690000  | 00002000 |
| 363 Balance Slots, 33 pages each  | FFFFFFFF.826A0000  | FFFFFFFF.88436000  | 05D96000 |
| Paged Pool                        | FFFFFFFF.88436000  | FFFFFFFF.887E4000  | 003AE000 |
| System Control Block (SCB)        | FFFFFFFF.887E4000  | FFFFFFFF.887EC000  | 00008000 |
| Restart Parameter Block (HWRPB)   | FFFFFFFF.88832000  | FFFFFFFF.88832B48  | 00000B48 |
| Erase Pattern Page Table Page     | FFFFFFFF.82690000  | FFFFFFFF.82692000  | 00002000 |
| Posix Cloning Parent Page Mapping | FFFFFFFF.88B1E000  | FFFFFFFF.88B20000  | 00002000 |
| Posix Cloning Child Page Mapping  | FFFFFFFF.88B20000  | FFFFFFFF.88B22000  | 00002000 |
| Swapper Process Kernel Stack      | FFFFFFFF.88B56000  | FFFFFFFF.88B5A000  | 00004000 |
| Swapper Map                       | FFFFFFFF.88B60000  | FFFFFFFF.88B82000  | 00022000 |
| Idle Loop's Mapping of Zero Pages | FFFFFFFF.88C5E000  | FFFFFFFF.88C60000  | 00002000 |
| PrimCPU Machine Check Logout Area | FFFFFFFF.88C60400  | FFFFFFFF.88C60800  | 00000400 |
| PrimCPU Sys Context Kernel Stack  | FFFFFFFF.88C58000  | FFFFFFFF.88C5C000  | 00004000 |
| Tape Mount Verification Buffer    | FFFFFFFF.88C62000  | FFFFFFFF.88C66000  | 00004000 |
| Mount Verification Buffer         | FFFFFFFF.88C66000  | FFFFFFFF.88C68000  | 00002000 |
| Demand Zero Optimization Page     | FFFFFFFF.88E68000  | FFFFFFFF.88E6A000  | 00002000 |
| Executive Mode Data Page          | FFFFFFFF.88E6A000  | FFFFFFFF.88E6C000  | 00002000 |
| System Space Expansion Region     | FFFFFFFF.8C000000  | FFFFFFFF.FFDF0000  | 73DF0000 |
| System Page Table Window          | FFFFFFFF.FFDF0000  | FFFFFFFF.FFFF0000  | 00200000 |
| N/A Space                         | FFFFFFFF.FFFF0000  | FFFFFFFF.FFFFFFFF  | 00010000 |

The CLUE MEMORY/LAYOUT command decodes and displays the sytem virtual address space layout.

## SDA CLUE Extension Commands CLUE MEMORY

### 5. SDA> CLUE MEMORY/LOOKASIDE

Non-Paged Dynamic Storage Pool - Lookaside List Queue Information:

```
-----  
Listhead Addr: FFFFFFFF.80C50400   Size:   64   Status: Valid, 11 elements  
Listhead Addr: FFFFFFFF.80C50408   Size:  128   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50410   Size:  192   Status: Valid, 29 elements  
Listhead Addr: FFFFFFFF.80C50418   Size:  256   Status: Valid, 3 elements  
Listhead Addr: FFFFFFFF.80C50420   Size:  320   Status: Valid, 7 elements  
Listhead Addr: FFFFFFFF.80C50428   Size:  384   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50430   Size:  448   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50438   Size:  512   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50440   Size:  576   Status: Valid, 6 elements  
Listhead Addr: FFFFFFFF.80C50448   Size:  640   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50450   Size:  704   Status: Valid, 5 elements  
Listhead Addr: FFFFFFFF.80C50458   Size:  768   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50460   Size:  832   Status: Valid, empty  
Listhead Addr: FFFFFFFF.80C50468   Size:  896   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50470   Size:  960   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50478   Size: 1024   Status: Valid, 6 elements  
Listhead Addr: FFFFFFFF.80C50480   Size: 1088   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50488   Size: 1152   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50490   Size: 1216   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50498   Size: 1280   Status: Valid, 2 elements  
Listhead Addr: FFFFFFFF.80C504A0   Size: 1344   Status: Valid, 2 elements  
Listhead Addr: FFFFFFFF.80C504A8   Size: 1408   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C504B0   Size: 1472   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C504B8   Size: 1536   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C504C0   Size: 1600   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C504C8   Size: 1664   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C504D0   Size: 1728   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C504D8   Size: 1792   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C504E0   Size: 1856   Status: Valid, empty  
Listhead Addr: FFFFFFFF.80C504E8   Size: 1920   Status: Valid, empty  
Listhead Addr: FFFFFFFF.80C504F0   Size: 1984   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C504F8   Size: 2048   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50500   Size: 2112   Status: Valid, 1 element  
Listhead Addr: FFFFFFFF.80C50508   Size: 2176   Status: Valid, 15 elements  
Listhead Addr: FFFFFFFF.80C50510   Size: 2240   Status: Valid, empty  
Listhead Addr: FFFFFFFF.80C50518   Size: 2304   Status: Valid, 1 element  
.  
.  
.  
Total free space: 00016440 (hex) 91200 (dec) bytes
```

The CLUE MEMORY/LOOKASIDE command summarizes the state of nonpageable lookaside lists. For each list, an indication of whether the queue is well formed is given. If a queue is not well formed or is invalid, messages indicating what is wrong with the queue are displayed. This command is analogous to the SDA command VALIDATE QUEUE.

These messages can also appear frequently when you use the VALIDATE QUEUE command within an SDA session that is analyzing a running system. In a running system, the composition of a queue can change while the command is tracing its links, thus producing an error message.

## SDA CLUE Extension Commands

### CLUE MEMORY

6. SDA> CLUE MEMORY/STATISTIC  
Memory Management Statistics:

```

-----
Pagefaults:
Total Page Faults          1060897
Total Page Reads           393414
I/O's to read Pages       163341
Modified Pages Written     121
I/O's to write Mod Pages  19
Demand Zero Faults        281519
Global Valid Faults       378701
Modified Faults           236189
Read Faults                0
Execute Faults            28647

Non-Paged Pool:
Successful Expansions     32
Unsuccessful Expansions   0
Failed Pages Accumulator  0
Total Alloc Requests      55596
Failed Alloc Requests     0

Paged Pool:
Total Failures            0
Failed Pages Accumulator  0
Total Alloc Requests      10229
Failed Alloc Requests     0

Direct I/O                591365
Buffered I/O              589652
Split I/O                  213
Hits                       83523
Logical Name Transl       1805476
Dead Page Table Scans     0

Cur Mapped Gbl Sections  653
Max Mapped Gbl Sections  654
Cur Mapped Gbl Pages     12193
Max Mapped Gbl Pages     12196
Maximum Processes        46
Sched Zero Pages Created  0

Distributed Lock Manager:
Local      Incoming      Outgoing
$ENQ New Lock Requests  674059      0      0
$ENQ Conversion Requests 497982      0      0
$DEQ Dequeue Requests  671626      0      0
Blocking ASTs           26          0      0
Directory Functions     0           0      0
Deadlock Messages      0           0      0

$ENQ Requests that Wait  822
$ENQ Requests not Queued 3
Deadlock Searches Performed 0
Deadlocks Found          0

MSCP Statistics:
Total IOs                0
Split IOs                0
IOs that had to Wait (Buf) 0
Requests in MemWait Queue 0
Max Req ever in MemWait   0

File System Cache:
Current SYSGEN Param    Hits    Misses Hitrate
File Header Cache (ACP_HDRCACHE = 726) 196207 1214 99.3%
Storage Bitmap Cache (ACP_MAPCACHE = 181) 38 9 80.8%
Directory Data Cache (ACP_DIRCACHE = 726) 153415 199 99.8%
Directory LRU (ACP_DINDXCACHE= 181) 138543 106 99.9%
FID Cache (ACP_FIDCACHE = 64) 119 6 95.2%
Extent Cache (ACP_EXTCACHE = 64) 229 9 96.2%
Quota Cache (ACP_QUOCACHE = 365) 0 0 0.0%

Volume Synch Locks      958
Volume Synch Locks Wait 0
Dir/File Synch Locks   432071
Dir/file Synch Locks Wait 746
Access Locks           151648
Free Space Cache Wait  12608

Window Turns            1464
Currently Open Files    630
Total Count of OPENs    52903
Total Count of ERASE QIOs 186

Global Pagefile Quota  785957
GBLPAGFIL (SYSGEN) Limit 786688

```

The CLUE MEMORY/STATISTIC command displays systemwide performance data such as page fault, I/O, pool, lock manager, MSCP, and file system cache statistics.



---

## CLUE PROCESS

Displays process-related information from the current process context.

### Format

CLUE PROCESS [/qualifier[,...]]

### Parameters

None.

### Qualifiers

#### **/BUFFER [ALL]**

Displays the buffer objects for the current process. If the /ALL qualifier is specified, then the buffer objects for all processes (that is, all existing buffer objects) are displayed.

#### **/LAYOUT**

Displays the process P1 virtual address space layout.

#### **/LOGICAL**

Displays the process logical names and equivalence names, if they can be accessed.

#### **/RECALL**

Displays the DCL recall buffer, if it can be accessed.

### Description

The CLUE PROCESS command displays process-related information from the current process context. Much of this information is in pageable address space and thus may not be present in a dump file.

### Examples

```
1. SDA> CLUE PROCESS/LOGICAL
Process Logical Names:
-----
"SYS$OUTPUT" = "_CLAWS$LTA5004:"
"SYS$OUTPUT" = "_CLAWS$LTA5004:"
"SYS$DISK" = "WORK1:"
"BACKUP_FILE" = "_$65$DUA6"
"SYS$PUTMSG" = "...Ä...Ä.."
"SYS$COMMAND" = "_CLAWS$LTA5004:"
"TAPE_LOGICAL_NAME" = "_$1$MUA3:"
"TT" = "LTA5004:"
"SYS$INPUT" = "_$65$DUA6:"
"SYS$INPUT" = "_CLAWS$LTA5004:"
"SYS$ERROR" = "21C00303.LOG"
"SYS$ERROR" = "_CLAWS$LTA5004:"
"ERROR_FILE" = "_$65$DUA6"
```

The CLUE PROCESS/LOGICAL command displays logical names for each running process.

## SDA CLUE Extension Commands

### CLUE PROCESS

```
2. SDA> CLUE PROCESS/RECALL
Process DCL Recall Buffer:
-----
Index  Command
  1    ana/sys
  2    @login
  3    mc sysman io auto /log
  4    show device d
  5    sea <.x>*.lis clue$
  6    tpu <.x>*0914.lis
  7    sh log *hsj*
  8    xd <.x>.lis
  9    mc ess$ladcp show serv
 10    tpu clue_cmd.cld
 11    ana/sys
```

The CLUE PROCESS/RECALL command displays a listing of the DCL commands that have been executed most recently.

## CLUE REGISTER

Displays the active register set for the crash CPU. The CLUE REGISTER command is valid only when analyzing crash dumps.

### Format

CLUE REGISTER

### Parameters

None.

### Qualifiers

None.

### Description

The CLUE REGISTER command displays the active register set of the crash CPU. It also identifies any known data structures, symbolizes any system virtual addresses, interprets the processor status (PS), and attempts to interpret R0 as a condition code.

### Example

SDA> CLUE REGISTER

Current Registers: Process index: 0042 Process name: BATCH\_3 PCB: 817660C0 (CPU 1)

```
-----
R0 = 00000000.00000000
R1 = FFFFFFFF.814A2C80 MP_CPU (CPU Id 1)
R2 = 00000000.00000000
R3 = 00000000.23D6BBEE
R4 = 00000000.00000064
R5 = FFFFFFFF.831F8000 PHD
R6 = 00000000.12F75475
R7 = 00000000.010C7A70
R8 = 00000000.00000001
R9 = 00000000.00000000
R10 = 00000000.00000000
R11 = FFFFFFFF.814A2C80 MP_CPU (CPU Id 1)
R12 = FFFFFFFF.810AA5E0 SYSTEM_SYNCHRONIZATION+293E0
R13 = FFFFFFFF.810AC408 SMP$TIMEOUT
R14 = FFFFFFFF.810AED00 SMP$GL_SCHED
R15 = 00000000.7FFA1DD8
R16 = 00000000.0000078C
R17 = 00000000.00000000
R18 = FFFFFFFF.810356C0 SYS$CPU_ROUTINES_2208+1D6C0
R19 = FFFFFFFF.81006000 EXE$GR_SYSTEM_DATA_CELLS
R20 = FFFFFFFF.80120F00 SCH$QEND_C+00080
R21 = 00000000.00000000
R22 = FFFFFFFF.00000000
R23 = 00000000.00000000
R24 = 00000000.00000000
AI = FFFFFFFF.81006000 EXE$GR_SYSTEM_DATA_CELLS
RA = 00000000.00000000
PV = 00000000.00000000
R28 = FFFFFFFF.810194A0 EXE$GL_TIME_CONTROL
```

## SDA CLUE Extension Commands

### CLUE REGISTER

FP = 00000000.7FFA1F90  
PC = FFFFFFFF.800863A8 SMP\$TIMEOUT\_C+00068  
PS = 18000000.00000804 Kernel Mode, IPL 8, Interrupt

## CLUE SG

Displays the scatter-gather map.

### Format

CLUE SG [/CRAB=address]

### Parameters

None.

### Qualifier

**/CRAB=address**

Displays the ringbuffer for the specified Counted Resource Allocation Block (CRAB). The default action is to display the ringbuffer for all CRABs.

### Description

CLUE SG decodes and displays the scatter/gather ringbuffer entries.

### Examples

1. SDA> CLUE SG/CRAB=81224740  
Scatter/Gather Ringbuffer for CRAB 81224740:

| XAct | CRCTX    | Item_Num | Item_Cnt | DMA_Addr | Status   | Callers_PC                    | Count    | Buf_Addr |
|------|----------|----------|----------|----------|----------|-------------------------------|----------|----------|
| ALLO | 81272780 | 00000020 | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000018 | 81240AE0 |
| ALLO | 81272700 | 0000001C | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000017 | 81240AC0 |
| ALLO | 81272680 | 00000018 | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000016 | 81240AA0 |
| ALLO | 81272600 | 00000014 | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000015 | 81240A80 |
| ALLO | 81272580 | 00000010 | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000014 | 81240A60 |
| ALLO | 81272500 | 0000000C | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000013 | 81240A40 |
| ALLO | 81272480 | 00000008 | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000012 | 81240A20 |
| ALLO | 81272400 | 00000004 | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000011 | 81240A00 |
| ALLO | 81272380 | 00000000 | 00000004 | 00000000 | 00000001 | 847DDA94 SYS\$EWDRIIVER+01A94 | 00000010 | 812409E0 |
| DEAL | 841DBEA0 | 00000000 | 0000000C | C0000000 | 00000001 | 803B5124 SYS\$PKQDRIVER+0B124 | 0000000F | 812409C0 |
| ALLO | 841DBEA0 | 00000000 | 0000000C | 00000000 | 00000001 | 803B4FB8 SYS\$PKQDRIVER+0AFB8 | 0000000E | 812409A0 |
| DEAL | 841DBEA0 | 00000000 | 00000012 | C0000000 | 00000001 | 803B5124 SYS\$PKQDRIVER+0B124 | 0000000D | 81240980 |
| ALLO | 841DBEA0 | 00000000 | 00000012 | 00000000 | 00000001 | 803B4FB8 SYS\$PKQDRIVER+0AFB8 | 0000000C | 81240960 |
| DEAL | 841DBEA0 | 00000000 | 0000000C | C0000000 | 00000001 | 803B5124 SYS\$PKQDRIVER+0B124 | 0000000B | 81240940 |
| ALLO | 841DBEA0 | 00000000 | 0000000C | 00000000 | 00000001 | 803B4FB8 SYS\$PKQDRIVER+0AFB8 | 0000000A | 81240920 |
| DEAL | 841DBEA0 | 00000000 | 00000012 | C0000000 | 00000001 | 803B5124 SYS\$PKQDRIVER+0B124 | 00000009 | 81240900 |
| ALLO | 841DBEA0 | 00000000 | 00000012 | 00000000 | 00000001 | 803B4FB8 SYS\$PKQDRIVER+0AFB8 | 00000008 | 812408E0 |
| DEAL | 841DBEA0 | 00000000 | 00000012 | C0000000 | 00000001 | 803B5124 SYS\$PKQDRIVER+0B124 | 00000007 | 812408C0 |
| ALLO | 841DBEA0 | 00000000 | 00000012 | 00000000 | 00000001 | 803B4FB8 SYS\$PKQDRIVER+0AFB8 | 00000006 | 812408A0 |
| DEAL | 841DBEA0 | 00000000 | 00000012 | C0000000 | 00000001 | 803B5124 SYS\$PKQDRIVER+0B124 | 00000005 | 81240880 |
| ALLO | 841DBEA0 | 00000000 | 00000012 | 00000000 | 00000001 | 803B4FB8 SYS\$PKQDRIVER+0AFB8 | 00000004 | 81240860 |
| DEAL | 841DBEA0 | 00000000 | 00000012 | C0000000 | 00000001 | 803B5124 SYS\$PKQDRIVER+0B124 | 00000003 | 81240840 |
| ALLO | 841DBEA0 | 00000000 | 00000012 | 00000000 | 00000001 | 803B4FB8 SYS\$PKQDRIVER+0AFB8 | 00000002 | 81240820 |
| DEAL | 841DBEA0 | 00000000 | 0000000C | C0001E00 | 00000001 | 803B5124 SYS\$PKQDRIVER+0B124 | 00000001 | 81240800 |
| ALLO | 841DBEA0 | 00000000 | 0000000C | 00000000 | 00000001 | 803B4FB8 SYS\$PKQDRIVER+0AFB8 | 00000000 | 812407E0 |

VM-0769A-AI

In this example, the scatter-gather ringbuffer for the CRAB at address 81224740 is displayed.

2. SDA> CLUE SG/CRAB=8120D600  
Scatter/Gather Ringbuffer for CRAB 8120D600:

| XAct | CRCTX    | Item_Num | Item_Cnt | DMA_Addr | Status   | Callers_PC                    | Count    | Buf_Addr |
|------|----------|----------|----------|----------|----------|-------------------------------|----------|----------|
| ALLO | 8128A380 | 0001C000 | 00004000 | 00000000 | 00000001 | 8480E990 SYS\$MCDRIIVER+02990 | 00000000 | 8121C760 |

VM-0194A-AI

In this example, the scatter-gather ringbuffer for the CRAB address 8120D600 is displayed.

# SDA CLUE Extension Commands

## CLUE STACK

---

### CLUE STACK

Identifies and displays the current stack. Use the SDA command `SHOW STACK` to display and decode the whole stack for the more common bugcheck types.

#### Format

CLUE STACK

#### Parameters

None.

#### Qualifiers

None.

#### Description

The `CLUE STACK` command identifies and displays the current stack together with the upper and lower stack limits. In case of a `FATALEXCPT`, `INVEXCEPTN`, `SSRVEXCEPT`, `UNXSIGNAL`, or `PGFIPLHI` bugcheck, `CLUE STACK` tries to decode the whole stack.

#### Example

```
SDA> CLUE STACK
Stack Decoder:
-----
Normal Process Kernel Stack:
Stack Pointer      00000000.7FFA1C98
Stack Limits (low) 00000000.7FFA0000
                  (high) 00000000.7FFA2000

SSRVEXCEPT Stack:
-----
Stack Pointer SP => 00000000.7FFA1C98

Information saved by Bugcheck:
a(Signal Array)   00000000.7FFA1C98  00000000.00000000

EXE$EXCPTN[E] Temporary Storage:
EXE$EXCPTN[E] Stack Frame:
PV                00000000.7FFA1CA0  FFFFFFFF.829CF010  EXE$EXCPTN
    Entry Point   FFFFFFFF.82A21000  EXE$EXCPTN_C
return PC        00000000.7FFA1CA8  FFFFFFFF.82A2059C  SYS$CALL_HANDL_C+0002C
saved R2         00000000.7FFA1CB0  00000000.00000000
saved FP         00000000.7FFA1CB8  00000000.7FFA1CD0

SYS$CALL_HANDL Temporary Storage:
                  00000000.7FFA1CC0  FFFFFFFF.829CEDA8  SYS$CALL_HANDL
                  00000000.7FFA1CC8  00000000.00000000

SYS$CALL_HANDL Stack Frame:
PV                00000000.7FFA1CD0  FFFFFFFF.829CEDA8  SYS$CALL_HANDL
    Entry Point   FFFFFFFF.82A20570  SYS$CALL_HANDL_C
return PC        00000000.7FFA1CD8  00000000.00000000
saved R2         00000000.7FFA1CE0  FFFFFFFF.82A1E930  CHF_REI+000DC
saved FP         00000000.7FFA1CE8  00000000.7FFA1F40
```

## SDA CLUE Extension Commands CLUE STACK

### Fixed Exception Context Area:

|                     |                   |                   |                          |
|---------------------|-------------------|-------------------|--------------------------|
| Linkage Pointer     | 00000000.7FFA1CF0 | FFFFFFFF.80C63780 | EXCEPTION_MON_NPRW+06D80 |
| a(Signal Array)     | 00000000.7FFA1CF8 | 00000000.7FFA1EB8 |                          |
| a(Mechanism Array)  | 00000000.7FFA1D00 | 00000000.7FFA1D40 |                          |
| a(Exception Frame)  | 00000000.7FFA1D08 | 00000000.7FFA1F00 |                          |
| Exception FP        | 00000000.7FFA1D10 | 00000000.7FFA1F40 |                          |
| Unwind SP           | 00000000.7FFA1D18 | 00000000.00000000 |                          |
| Reinvokable FP      | 00000000.7FFA1D20 | 00000000.00000000 |                          |
| Unwind Target       | 00000000.7FFA1D28 | 00000000.00020000 | SYS\$K_VERSION_04        |
| #Sig Args/Byte Cnt  | 00000000.7FFA1D30 | 00000005.00000250 | BUG\$_NETRCVPKT          |
| a(Msg)/Final Status | 00000000.7FFA1D38 | 829CE050.000008F8 | BUG\$_SEQ_NUM_OVF        |

### Mechanism Array:

|                    |                   |                   |                                 |
|--------------------|-------------------|-------------------|---------------------------------|
| Flags/Arguments    | 00000000.7FFA1D40 | 00000000.0000002C |                                 |
| a(Establisher FP)  | 00000000.7FFA1D48 | 00000000.7AFFBAD0 |                                 |
| reserved/Depth     | 00000000.7FFA1D50 | FFFFFFFF.FFFFFFFD |                                 |
| a(Handler Data)    | 00000000.7FFA1D58 | 00000000.00000000 |                                 |
| a(Exception Frame) | 00000000.7FFA1D60 | 00000000.7FFA1F00 |                                 |
| a(Signal Array)    | 00000000.7FFA1D68 | 00000000.7FFA1EB8 |                                 |
| saved R0           | 00000000.7FFA1D70 | 00000000.00020000 | SYS\$K_VERSION_04               |
| saved R1           | 00000000.7FFA1D78 | 00000000.00000000 |                                 |
| saved R16          | 00000000.7FFA1D80 | 00000000.00020004 | UCB\$_NI_PRM_MLT+00004          |
| saved R17          | 00000000.7FFA1D88 | 00000000.00010050 | SYS\$K_VERSION_16+00010         |
| saved R18          | 00000000.7FFA1D90 | FFFFFFFF.FFFFFFFF |                                 |
| saved R19          | 00000000.7FFA1D98 | 00000000.00000000 |                                 |
| saved R20          | 00000000.7FFA1DA0 | 00000000.7FFA1F50 |                                 |
| saved R21          | 00000000.7FFA1DA8 | 00000000.00000000 |                                 |
| saved R22          | 00000000.7FFA1DB0 | 00000000.00010050 | SYS\$K_VERSION_16+00010         |
| saved R23          | 00000000.7FFA1DB8 | 00000000.00000000 |                                 |
| saved R24          | 00000000.7FFA1DC0 | 00000000.00010051 | SYS\$K_VERSION_16+00011         |
| saved R25          | 00000000.7FFA1DC8 | 00000000.00000000 |                                 |
| saved R26          | 00000000.7FFA1DD0 | FFFFFFFF.8010ACA4 | AMAC\$_EMUL_CALL_NATIVE_C+000A4 |
| saved R27          | 00000000.7FFA1DD8 | 00000000.00010050 | SYS\$K_VERSION_16+00010         |
| saved R28          | 00000000.7FFA1DE0 | 00000000.00000000 |                                 |
| FP Regs not valid  | [.....]           |                   |                                 |
| a(Signal64 Array)  | 00000000.7FFA1EA0 | 00000000.7FFA1ED0 |                                 |
| SP Align = 10(hex) | [.....]           |                   |                                 |

### Signal Array:

|             |                   |          |                         |
|-------------|-------------------|----------|-------------------------|
| Arguments   | 00000000.7FFA1EB8 | 00000005 |                         |
| Condition   | 00000000.7FFA1EBC | 0000000C |                         |
| Argument #2 | 00000000.7FFA1EC0 | 00010000 | LDRIMG\$_NPAGED_LOAD    |
| Argument #3 | 00000000.7FFA1EC4 | 00000000 |                         |
| Argument #4 | 00000000.7FFA1EC8 | 00030078 | SYS\$K_VERSION_01+00078 |
| Argument #5 | 00000000.7FFA1ECC | 00000003 |                         |

### 64-bit Signal Array:

|             |                   |                   |                         |
|-------------|-------------------|-------------------|-------------------------|
| Arguments   | 00000000.7FFA1ED0 | 00002604.00000005 |                         |
| Condition   | 00000000.7FFA1ED8 | 00000000.0000000C |                         |
| Argument #2 | 00000000.7FFA1EE0 | 00000000.00010000 | LDRIMG\$_NPAGED_LOAD    |
| Argument #3 | 00000000.7FFA1EE8 | 00000000.00000000 |                         |
| Argument #4 | 00000000.7FFA1EF0 | 00000000.00030078 | SYS\$K_VERSION_01+00078 |
| Argument #5 | 00000000.7FFA1EF8 | 00000000.00000003 |                         |

### Interrupt/Exception Frame:

|                    |                   |                   |                          |
|--------------------|-------------------|-------------------|--------------------------|
| saved R2           | 00000000.7FFA1F00 | 00000000.00000003 |                          |
| saved R3           | 00000000.7FFA1F08 | FFFFFFFF.80C63460 | EXCEPTION_MON_NPRW+06A60 |
| saved R4           | 00000000.7FFA1F10 | FFFFFFFF.80D12740 | PCB                      |
| saved R5           | 00000000.7FFA1F18 | 00000000.000000C8 |                          |
| saved R6           | 00000000.7FFA1F20 | 00000000.00030038 | SYS\$K_VERSION_01+00038  |
| saved R7           | 00000000.7FFA1F28 | 00000000.7FFA1FC0 |                          |
| saved PC           | 00000000.7FFA1F30 | 00000000.00030078 | SYS\$K_VERSION_01+00078  |
| saved PS           | 00000000.7FFA1F38 | 00000000.00000003 | IPL INT CURR PREV        |
| SP Align = 00(hex) | [.....]           |                   | 00 0 Kern User           |

## SDA CLUE Extension Commands

### CLUE STACK

```

Stack Frame:
PV          00000000.7FFA1F40 00000000.00010050 SYS$K_VERSION_16+00010
  Entry Point      00000000.7FFA1F48 00000000.00030060 SYS$K_VERSION_01+00060
                    00000000.7FFA1F50 00000000.00010000 LDRIMG$M_NPAGED_LOAD
return PC      00000000.7FFA1F50 FFFFFFFF.8010ACA4 AMAC$EMUL_CALL_NATIVE_C+000A4
saved FP       00000000.7FFA1F58 00000000.7FFA1F70

Stack (not decoded):
                    00000000.7FFA1F60 00000000.00000001
                    00000000.7FFA1F68 FFFFFFFF.800EE81C RM_STD$DIRCACHE_BLKAST_C+005AC

Stack Frame:
PV          00000000.7FFA1F70 FFFFFFFF.80C6EBA0 EXE$CMKRNL
  Entry Point      FFFFFFFF.800EE6C0 EXE$CMKRNL_C
                    00000000.7FFA1F78 00000000.829CEDE8 EXE$SIGTORET
                    00000000.7FFA1F80 00010050.00000002
                    00000000.7FFA1F88 00000000.00020000 SYS$K_VERSION_04
                    00000000.7FFA1F90 00000000.00030000 SYS$K_VERSION_01
return PC      00000000.7FFA1F98 FFFFFFFF.800A4D64 __RELEASE_LDBL_EXEC_SERVICE+00284
saved R2       00000000.7FFA1FA0 00000000.00000003
saved R4       00000000.7FFA1FA8 FFFFFFFF.80D12740 PCB
saved R13      00000000.7FFA1FB0 00000000.00010000 LDRIMG$M_NPAGED_LOAD
saved FP       00000000.7FFA1FB8 00000000.7AFFBAD0

Interrupt/Exception Frame:
saved R2       00000000.7FFA1FC0 00000000.7FFCF880 MMG$IMGHDRBUF+00080
saved R3       00000000.7FFA1FC8 00000000.7B0E9851
saved R4       00000000.7FFA1FD0 00000000.7FFCF818 MMG$IMGHDRBUF+00018
saved R5       00000000.7FFA1FD8 00000000.7FFCF938 MMG$IMGHDRBUF+00138
saved R6       00000000.7FFA1FE0 00000000.7FFAC9F0
saved R7       00000000.7FFA1FE8 00000000.7FFAC9F0
saved PC       00000000.7FFA1FF0 FFFFFFFF.80000140 SYS$CLREF_C
saved PS       00000000.7FFA1FF8 00000000.0000001B IPL INT CURR PREV
SP Align = 00(hex) [.....]          00 0 User User

```

**CLUE STACK identifies and displays the current stack and its upper and lower limit. It then decodes the current stack if it is one of the more common bugcheck types. In this case, CLUE STACK tries to decode the entire INVEXCEPTN stack.**



---

## CLUE SYSTEM

Displays the contents of the shared logical name tables in the system.

### Format

```
CLUE SYSTEM /LOGICAL
```

### Parameters

None.

### Qualifier

**/LOGICAL**

Displays all the shared logical names.

### Description

The CLUE SYSTEM/LOGICAL command displays the contents of the shared logical name tables in the system.

### Example

```
SDA> CLUE SYSTEM/LOGICAL
Shareable Logical Names:
-----
"XMICONBMSEARCHPATH" = "CDE$HOME_DEFAULTS:[ICONS]%B%M.BM"
"MTHRTL_TV" = "MTHRTL_D53_TV"
"SMGSHR_TV" = "SMGSHR"
"DECW$DEFAULT_KEYBOARD_MAP" = "NORTH_AMERICAN_LK401AA"
"CONVSHR_TV" = "CONVSHR"
"XDPS$INCLUDE" = "SYS$SYSROOT:[XDPS$INCLUDE]"
"DECW$SYSTEM_DEFAULTS" = "SYS$SYSROOT:[DECW$DEFAULTS.USER]"
"SYS$PS_FONT_METRICS" = "SYS$SYSROOT:[SYSFONT.PS_FONT_METRICS.USER]"
"SYS$TIMEZONE_NAME" = "???"
"STARTUP$STARTUP_VMS" = "SYS$STARTUP:VMS$VMS.DAT"
"PASMSG" = "PAS$MSG"
"UCX$HOST" = "SYS$COMMON:[SYSEXE]UCX$HOST.DAT;1"
"SYS$SYLOGIN" = "SYS$MANAGER:SYLOGIN"
"DNS$SYSTEM" = "DNS$SYSTEM_TABLE"
"IPC$ACP_ERRMBX" = "d.Ú."
"CDE$DETACHED_LOGICALS" = "DECW$DISPLAY,LANG"
"DECW$SERVER_SCREEN" = "GXA0"
"DNS$_COTOAD_MBX" = "ä&â."
"DNS$LOGICAL" = "DNS$SYSTEM"
"OSIT$MAILBOX" = "â&â."
"XNL$SHR_TV" = "XNL$SHR_TV_SUPPORT.EXE"
"MOM$SYSTEM" = "SYS$SYSROOT:[MOM$SYSTEM]"
"MOP$LOAD" = "SYS$SYSROOT:<MOM$SYSTEM>"
.
.
.
```

## CLUE VCC

Displays virtual I/O cache-related information.

---

**Note**

---

If extended file cache (XFC) is enabled, the CLUE VCC command is disabled.

---

### Format

CLUE VCC [/qualifier[,...]]

### Parameters

None.

### Qualifiers

#### **/CACHE**

Decodes and displays the cache lines that are used to correlate the file virtual block numbers (VBNs) with the memory used for caching. Note that the cache itself is not dumped in a selective dump. Use of this qualifier with a selective dump produces the following message:

```
%CLUE-I-VCCNOCAC, Cache space not dumped because DUMPSTYLE is selective
```

#### **/LIMBO**

Walks through the limbo queue (LRU order) and displays information for the cached file header control blocks (FCBs).

#### **/STATISTIC**

Displays statistical and performance information related to the virtual I/O cache.

#### **/VOLUME**

Decodes and displays the cache volume control blocks (CVCB).

**Examples**

```
1. SDA> CLUE VCC/STATISTIC
Virtual I/O Cache Statistics:
-----
Cache State      pak,on,img,data,enabled
Cache Flags      on,protocol_only
Cache Data Area  80855200

Total Size (pages)      400      Total Size (MBytes)      3.1 MB
Free Size (pages)      0        Free Size (MBytes)      0.0 MB
Read I/O Count         34243     Read I/O Bypassing Cache  3149
Read Hit Count         15910     Read Hit Rate           46.4%
Write I/O Count        4040     Write I/O Bypassing Cache  856
IOpost PID Action Rtns 40829     IOpost Physical I/O Count  28
IOpost Virtual I/O Count 0        IOpost Logical I/O Count  7
Read I/O past File HWM  124      Cache Id Mismatches     44
Count of Cache Block Hits 170      Files Retained           100

Cache Line LRU      82B11220 82B11620   Oldest Cache Line Time  00001B6E
Limbo LRU Queue    80A97E3C 80A98B3C   Oldest Limbo Queue Time 00001B6F
Cache VCB Queue    8094DE80 809AA000   System Uptime (seconds) 00001BB0
```

```
2. SDA> CLUE VCC/VOLUME
Virtual I/O Cache - Cache VCB Queue:
-----
CacheVCB RealVCB  LockID      IRP Queue  CID  LKSB Ocnt State
-----
8094DE80 80A7E440 020007B2 8094DEBC 8094DEBC 0000 0001 0002 on
809F3FC0 809F97C0 0100022D 809F3FFC 809F3FFC 0000 0001 0002 on
809D0240 809F7A40 01000227 809D027C 809D027C 0000 0001 0002 on
80978B80 809F6C00 01000221 80978BBC 80978BBC 0000 0001 0002 on
809AA000 809A9780 01000005 809AA83C 809AA03C 0007 0001 0002 on
```

```
3. SDA> CLUE VCC/LIMBO
Virtual I/O Cache - Limbo Queue:
-----
      CFCB      CVCB      FCB      CFCB      IOerrors      FID (hex)
-----
      -Status-
80A97DC0 809AA000 80A45100 00000200 00000000 (076B,0001,00)
80A4E440 809AA000 809CD040 00000200 00000000 (0767,0001,00)
80A63640 809AA000 809FAE80 00000200 00000000 (0138,0001,00)
80AA2540 80978B80 80A48140 00000200 00000000 (0AA5,0014,00)
80A45600 809AA000 80A3AC00 00000200 00000000 (0C50,0001,00)
80A085C0 809AA000 809FA140 00000200 00000000 (0C51,0001,00)
80A69800 809AA000 809FBA00 00000200 00000000 (0C52,0001,00)
80951000 809AA000 80A3F140 00000200 00000000 (0C53,0001,00)
80A3E580 809AA000 80A11A40 00000200 00000000 (0C54,0001,00)
80A67F80 809AA000 80978F00 00000200 00000000 (0C55,0001,00)
809D30C0 809AA000 809F4CC0 00000200 00000000 (0C56,0001,00)
809D4B80 809AA000 8093E540 00000200 00000000 (0C57,0001,00)
[.....]
80A81600 809AA000 8094B2C0 00000200 00000000 (0C5D,0001,00)
80AA3FC0 809AA000 80A2DEC0 00000200 00000000 (07EA,000A,00)
80A98AC0 809AA000 8093C640 00000200 00000000 (0C63,0001,00)
```

## SDA CLUE Extension Commands

### CLUE VCC

#### 4. SDA> CLUE VCC/CACHE

Virtual I/O Cache - Cache Lines:

```
-----
```

| CL       | VA       | CVCB     | CFCB     | FCB      | CFCB     | IOerrors | FID (hex)      |
|----------|----------|----------|----------|----------|----------|----------|----------------|
| -----    |          |          |          |          |          |          |                |
|          |          |          |          |          | -Status- |          |                |
| 82B11200 | 82880000 | 809D0240 | 809D7000 | 80A01100 | 00000200 | 00000000 | (006E,0003,00) |
| 82B15740 | 82AAA000 | 809AA000 | 80A07A00 | 80A24240 | 00000000 | 00000000 | (0765,0001,00) |
| 82B14EC0 | 82A66000 | 809AA000 | 80A45600 | 80A3AC00 | 00000200 | 00000000 | (0C50,0001,00) |
| 82B12640 | 82922000 | 809D0240 | 809D7000 | 80A01100 | 00000200 | 00000000 | (006E,0003,00) |
| 82B123C0 | 8290E000 | 809AA000 | 80A45600 | 80A3AC00 | 00000200 | 00000000 | (0C50,0001,00) |
| 82B13380 | 8298C000 | 809D0240 | 809D7000 | 80A01100 | 00000200 | 00000000 | (006E,0003,00) |
| 82B15A40 | 82AC2000 | 809AA000 | 80A45600 | 80A3AC00 | 00000200 | 00000000 | (0C50,0001,00) |
| 82B15F40 | 82AEA000 | 809D0240 | 809D7000 | 80A01100 | 00000200 | 00000000 | (006E,0003,00) |
| 82B12AC0 | 82946000 | 809D0240 | 809D7000 | 80A01100 | 00000200 | 00000000 | (006E,0003,00) |
| 82B12900 | 82938000 | 809D0240 | 809D7000 | 80A01100 | 00000200 | 00000000 | (006E,0003,00) |
| 82B10280 | 82804000 | 809AA000 | 80A45600 | 80A3AC00 | 00000200 | 00000000 | (0C50,0001,00) |
| 82B122C0 | 82906000 | 809AA000 | 80A1AC00 | 80A48000 | 00000000 | 00000000 | (0164,0001,00) |
| 82B14700 | 82A28000 | 809AA000 | 809FFEC0 | 809F8DC0 | 00000004 | 00000000 | (07B8,0001,00) |
| 82B11400 | 82890000 | 809AA000 | 80A113C0 | 80A11840 | 00000000 | 00000000 | (00AF,0001,00) |
| [.....]  |          |          |          |          |          |          |                |
| 82B11380 | 8288C000 | 809AA000 | 809DA0C0 | 809C99C0 | 00002000 | 00000000 | (00AB,0001,00) |
| 82B130C0 | 82976000 | 809AA000 | 809DA0C0 | 809C99C0 | 00002000 | 00000000 | (00AB,0001,00) |
| 82B11600 | 828A0000 | 809AA000 | 809DA0C0 | 809C99C0 | 00002000 | 00000000 | (00AB,0001,00) |

---

## CLUE XQP

Displays XQP-related information.

### Format

CLUE XQP [/qualifier[,...]]

### Parameters

None.

### Qualifiers

#### **/ACTIVE [/FULL]**

Displays all active XQP processes.

#### **/AQB**

Displays any current I/O request packets (IRPs) waiting at the interlocked queue.

#### **/BFRD=index**

Displays the buffer descriptor (BFRD) referenced by the index specified. The index is identical to the hash value.

#### **/BFRL=index**

Displays the buffer lock block descriptor (BFRL) referenced by the index specified. The index is identical to the hash value.

#### **/BUFFER=(n,m) [/FULL]**

Displays the BFRDs for a given pool. Specify either 0, 1, 2 or 3, or a combination of these in the parameter list.

#### **/CACHE\_HEADER**

Displays the block buffer cache header.

#### **/FCB=address [/FULL]**

Displays all file header control blocks (FCBs) with a nonzero DIRINDX for a given volume. If no address is specified, the current volume of the current process is used.

The address specified can also be either a valid volume control block (VCB), unit control block (UCB), or window control block (WCB) address.

#### **/FILE=address**

Decodes and displays file header (FCB), window (WCB), and cache information for a given file. The file can be identified by either its FCB or WCB address.

#### **/GLOBAL**

Displays the global XQP area for a given process.

#### **/LBN\_HASH=lbn**

Calculates and displays the hash value for a given logical block number (LBN).

## SDA CLUE Extension Commands

### CLUE XQP

#### **/LIMBO**

Searches through the limbo queue and displays FCB information from available, but unused file headers.

#### **/LOCK=lockbasis**

Displays all file system serialization, arbitration, and cache locks found for the specified lockbasis.

#### **/THREAD=n**

Displays the XQP thread area for a given process. The specified thread number is checked for validity. If no thread number is specified, the current thread is displayed. If no current thread, but only one single thread is in use, then that thread is displayed. If more than one thread exists or an invalid thread number is specified, then a list of currently used threads is displayed.

#### **/VALIDATE=(n,m)**

Performs certain validation checks on the block buffer cache to detect corruption. Specify 1, 2, 3, 4, or a combination of these in the parameter list. If an inconsistency is found, a minimal error message is displayed. If you add the /FULL qualifier, additional information is displayed.

## Description

The CLUE XQP command displays XQP information. XQP is part of the I/O subsystem.

## Examples

1. SDA> CLUE XQP/CACHE\_HEADER  
Block Buffer Cache Header:

```
-----  
Cache_Header  8437DF90  BFRcnt      000005D2   FreeBFRL    843916A0  
Bufbase       8439B400  BFRDbase    8437E080   BFRlbase    8438F7E0  
Bufsize       000BA400  LBNhashtbl  84398390   BFRlhashtbl 84399BC8  
Realsize      000D78A0  LBNhashcnt  0000060E   BFRlhashcnt 0000060E  
  
Pool          #0          #1          #2          #3  
Pool_LRU      8437E5C0   84385F40   84387E90   8438EEB0  
              8437F400   84385D60   8438AC80   8438EE20  
Pool_WAITQ    8437DFE0   8437DFE8   8437DFF0   8437DFF8  
              8437DFE0   8437DFE8   8437DFF0   8437DFF8  
Waitcnt       00000000   00000000   00000000   00000000  
Poolavail     00000094   00000252   00000251   00000094  
Poolcnt       00000095   00000254   00000254   00000095  
  
AmbigQFL      00000000   Process_Hits 00000000   Cache_Serial 00000000  
AmbigQBL      00000000   Valid_Hits   00000000   Cache_Stalls  00000000  
Disk_Reads    00000000   Invalid_Hits 00000000   Buffer_Stalls  00000000  
Disk_Writes   00000000   Misses       00000000
```

The SDA command CLUE XQP/CACHE\_HEADER displays the block buffer cache header.

2. SDA> CLUE XQP/VALIDATE=(1,4)  
Searching BFRD Array for possible Corruption...  
Searching Lock Basis Hashtable for possible Corruption...

In this example, executing the CLUE XQP/VALIDATE=1,4 command indicated that no corruption was detected in either the BFRD Array or the Lock Basis Hashtable.

---

## SDA Spinlock Tracing Utility

This chapter presents an overview of the SDA Spinlock Tracing Utility commands, and describes the SDA Spinlock Tracing commands.

### 6.1 Overview of the SDA Spinlock Tracing Utility

To synchronize access to data structures, the OpenVMS operating system uses a set of static spinlocks, such as IOLOCK8 and SCHED. The operating system acquires a spinlock to synchronize data, and at the end of the critical code path the spinlock is then released. If a CPU attempts to acquire a spinlock while another CPU is holding it, the CPU attempting to acquire the spinlock has to spin, waiting until the spinlock is released. Any lost CPU cycles within such a spinwait loop are charged as MPsynch time.

By using the MONITOR utility, you can monitor the time in process modes, for example, with the command `$ MONITOR MODES`. A high rate of MP synchronization indicates contention for spinlocks. However, until the implementation of the Spinlock Tracing utility, there was no way to tell which spinlock was heavily used, and who was acquiring and releasing the contended spinlocks. The Spinlock Tracing utility allows a characterization of spinlock usage. It can also collect performance data for a given spinlock on a per-CPU basis.

This tracing ability is built into the system synchronization execlet, which contains the spinlock code, and can be enabled or disabled while the system is running. There is no need to reboot the system to load a separate debug image. The images that provide spinlock tracing functionality are as follows:

```
SY$LOADABLE_IMAGES:SPL$DEBUG.EXE
SY$SHARE:SPL$SDA.EXE
```

The SDA> prompt provides the command interface. From this command interface, you can load and unload the spinlock debug execlet using `SPL LOAD` and `SPL UNLOAD`, and start, stop and display spinlock trace data. This allows you to collect spinlock data for a given period of time without system interruption. Once information is collected, the trace buffer can be deallocated and the execlet can be unloaded to free up system resources. The spinlock trace buffer is allocated from S2 space and pages are taken from the freelist.

Should the system crash while spinlock tracing is enabled, the trace buffer is dumped into the system dump file, and it can later be analyzed using the spinlock trace utility. This is very useful in tracking down CPUSPINWAIT bugcheck problems.

Note that by enabling spinlock tracing, there is a performance impact. The amount of the impact depends on the amount of spinlock usage.

## SDA Spinlock Tracing Utility

### 6.1 Overview of the SDA Spinlock Tracing Utility

---

#### Note

---

The Spinlock Tracing utility is still under development. The command format, displays, and suggested approach to spinlock analysis are all subject to change.

---

### 6.2 How to Use the SDA Spinlock Tracing Utility

The following steps will enable you to collect spinlock statistics using the Spinlock Tracing Utility.

1. Load the Spinlock Tracing Utility execllet.

```
SDA> SPL LOAD
```

2. Allocate a trace buffer and start tracing.

```
SDA> START TRACE
```

3. Wait a few seconds to allow some tracing to be done, then find out which spinlocks are incurring the most acquisitions and the most spinwaits.

```
SDA> SHOW TRACE/SUMMARY
```

For example, you might see contention for the SCHED and IOLOCK8 spinlocks (a high acquisition count, with a significant proportion of the acquisitions being forced to wait).

4. Look to see if the spinlocks with a high proportion of spinwaits caused a significant delay in the acquisition of the spinlock. You must now collect more detailed statistics on a specific spinlock.

```
SDA> SPL START COLLECT/SPINLOCK=SCHED
```

This command accumulates additional data for the specified spinlock. As long as tracing is not stopped, collection will continue to accumulate spinlock-specific data from the trace buffer.

5. Display the additional data collected for the specified spinlock.

```
SDA> SHOW COLLECT
```

This display includes the average hold time of the spinlock and the average spinwait time while acquiring the spinlock.

6. Repeat steps 4 and 5 for each spinlock that has contention. A START COLLECT cancels the previous collection.
7. Disable spinlock tracing when you have collected all the needed spinlock statistics and release all the memory used by the Spinlock Tracing utility with the following commands.

```
SDA> SPL STOP COLLECT
```

```
SDA> SPL STOP TRACE
```

```
SDA> SPL UNLOAD
```



## 6.3 Example Command Procedure for Collection of Spinlock Statistics

### 6.3 Example Command Procedure for Collection of Spinlock Statistics

The following example shows a command procedure that can be used for gathering spinlock statistics:

```
$ analyze/system
spl load
spl start trace/buffer=1000
spawn wait 00:00:15
spl stop trace
read/executive/nolog
set output spl_trace.lis
spl show trace/summary
spl start collect/spin=sched
spawn wait 00:00:05
spl show collect
spl start collect/spin=iolock8
spawn wait 00:00:05
spl show collect
spl start collect/spin=lckmgr
spawn wait 00:00:05
spl show collect
spl start collect/spin=mmg
spawn wait 00:00:05
spl show collect
spl start collect/spin=timer
spawn wait 00:00:05
spl show collect
spl start collect/spin=mailbox
spawn wait 00:00:05
spl show collect
spl start collect/spin=perfmon
spawn wait 00:00:05
spl show collect
spl stop collect
spl unload
exit
$ exit
```

A more comprehensive procedure is provided as `SYS$EXAMPLES:SPL.COM`.

### 6.4 Listing of SDA Spinlock Tracing Commands

The following is a list of the spinlock tracing commands:

```
SPL LOAD
SPL SHOW COLLECT
SPL SHOW TRACE
SPL START COLLECT
SPL START TRACE
SPL STOP COLLECT
SPL STOP TRACE
SPL UNLOAD
```

## **SPL LOAD**

Loads the SPL\$DEBUG execlet. This must be done prior to starting spinlock tracing.

### **Format**

SPL LOAD

### **Parameters**

None.

### **Qualifiers**

None.

### **Description**

The SPL LOAD command loads the SPL\$DEBUG execlet, which contains the tracing routines.

### **Example**

```
SDA> SPL LOAD  
SPL$DEBUG load status = 00000001
```

# SPL SHOW COLLECT

Displays the collected spinlock data.

## Format

SPL SHOW COLLECT

## Parameters

None.

## Qualifiers

None.

## Description

The SPL SHOW COLLECT command displays the collected spinlock data. It displays first a summary on a per-CPU basis, followed by the callers of the specific spinlock. This second list is sorted by the top consumers of the spinlock (in system cycles). These displays show average spinlock hold and spinlock wait time in system cycles.

## Example

SDA> SPL SHOW COLLECT

Spinlock Trace Information for SCHED:

```
-----
```

| CPU Id | Spinhold Time | Total Count | Average Hold | Spinwait Time | Total Count | Average Spin |
|--------|---------------|-------------|--------------|---------------|-------------|--------------|
| 02     | 250691522     | 120295      | 2083         | 115690429     | 18903       | 6120         |
| 03     | 252806297     | 143816      | 1757         | 110733404     | 18638       | 5941         |
| 04     | 101489145     | 47524       | 2135         | 222554324     | 13663       | 16288        |
| 05     | 91030899      | 41179       | 2210         | 222879724     | 13498       | 16512        |
| 06     | 84989539      | 40070       | 2121         | 217136237     | 12774       | 16998        |
| 07     | 81678817      | 36754       | 2222         | 219025091     | 12855       | 17038        |
| 08     | 160358528     | 67101       | 2389         | 220799983     | 14681       | 15039        |
| 09     | 93886644      | 43778       | 2144         | 223951595     | 13476       | 16618        |
|        | 1116931391    | 540517      |              | 1552770787    | 118488      |              |

Spinlock Trace Information for SCHED: ( 8-SEP-2000 07:55:15.44, 1.9 nsec, 523 MHz)

```
-----
```

| Callers PC                          | Total Cycles | Tot Count | Maximum | Minimum | Average | Spinwaits | Ave Wait |
|-------------------------------------|--------------|-----------|---------|---------|---------|-----------|----------|
| 80111650 SCH\$CALC_CPU_LOAD_C+00580 | 338642820    | 106300    | 53627   | 687     | 3185    | 78681     | 15742    |
| 8004B18C SCH\$UNLOCK_QUAD_C+0005C   | 102106193    | 88114     | 61818   | 217     | 1158    | 6661      | 7643     |
| 8004AA24 SCH\$LOCKR_QUAD_C+00034    | 78434764     | 61253     | 56934   | 221     | 1280    | 4620      | 10878    |
| 80132754 SCH\$QAST_C+00054          | 75029658     | 25968     | 54509   | 292     | 2889    | 2117      | 6108     |
| 80134B70 SCH\$POSTEF_C+00050        | 60940932     | 30384     | 56064   | 317     | 2005    | 3194      | 6950     |
| 80136DA8 EXE\$SYNCH_LOOP_C+00458    | 50977238     | 9427      | 71237   | 1602    | 5407    | 720       | 8041     |
| 8004A6A4 SCH\$LOCKW_QUAD_C+00034    | 47657970     | 28281     | 59602   | 298     | 1685    | 3196      | 9704     |
| 8004AE7C SCH\$UNLOCK_C+0005C        | 29567505     | 19905     | 19917   | 235     | 1485    | 1430      | 5671     |
| 8012F4E4 PROCESS_MANAGEMENT+1F4E4   | 29513273     | 4767      | 47172   | 388     | 6191    | 1721      | 14329    |
| 8011AD80 SCH\$QEND_C+00080          | 26705966     | 4258      | 52945   | 274     | 6271    | 166       | 7411     |

VM-0674A-AI

## SPL SHOW TRACE

Displays spinlock tracing information.

### Format

```
SPL SHOW TRACE  [/[NO]SPINLOCK=spinlock | /[/NO]FORKLOCK=forklock  
                | /[/NO]ACQUIRE | /[/NO]RELEASE | /[/NO]WAIT  
                | /[/NO]FRKDSPTH | /[/NO]FRKEND  
                | /SUMMARY | /CPU=n | /TOP=n]
```

### Parameters

None.

### Qualifiers

**/SPINLOCK=*spinlock***

**/NOSPINLOCK**

The **/SPINLOCK=*n*** qualifier specifies the display of a specific spinlock, for example, **/SPINLOCK=LCKMGR** or **/SPINLOCK=SCHED**.

The **/NOSPINLOCK** qualifier specifies that no spinlock trace information be displayed. If omitted, all spinlock trace entries are decoded and displayed.

**/FORKLOCK=*forklock***

**/NOFORKLOCK**

The **/FORKLOCK=*forklock*** qualifier specifies the display of a specific forklock, for example, **/FORKLOCK=IOLOCK8** or **/FORKLOCK=IPL8**.

The **/NOFORKLOCK** qualifier specifies that no forklock trace information be displayed. If omitted, all fork trace entries are decoded and displayed.

**/ACQUIRE**

**/NOACQUIRE**

The **/ACQUIRE** qualifier displays any spinlock acquisitions.

The **/NOACQUIRE** qualifier ignores any spinlock acquisitions.

**/RELEASE**

**/NORELEASE**

The **/RELEASE** qualifier displays any spinlock releases.

The **/NORELEASE** qualifier ignores any spinlock releases.

**/WAIT**

**/NOWAIT**

The **/WAIT** qualifier displays any spinwait operations.

The **/NOWAIT** qualifier ignores any spinwait operations.

**/FRKDSPTH**

**/NOFRKDSPTH**

The **/FRKDSPTH** qualifier displays all invocations of fork routines within the fork dispatcher. This is the default.

The **/NOFRKDSPTH** qualifier ignores all of the operations of the **/FRKDSPTH** qualifier.

**/FRKEND**

**/NOFRKEND**

The /FRKEND qualifier displays all returns from fork routines within the fork dispatcher. This is the default.

The /NOFRKEND qualifier ignores all operations of the /FRKEND qualifier.

**/CPU=*n***

Specifies the display of information for a specific CPU only, for example, /CPU=5 or /CPU=PRIMARY. By default, all trace entries for all CPUs are displayed.

**/SUMMARY**

Steps through the entire trace buffer and displays a summary of all spinlock and forklock activity. It also displays the top ten callers.

**/TOP=*n***

Displays a different number other than the top ten callers or fork PCs. By default, the top ten are displayed. This qualifier is only useful when you also specify the /SUMMARY qualifier.

## **Description**

The SPL SHOW TRACE command displays spinlock tracing information. The latest acquired or released spinlock is displayed first, and then the trace buffer is stepped backwards in time.

By default, all trace entries will be displayed, but you can use qualifiers to select only certain entries.

Since this is not a time critical activity and a table lookup has to be done anyway to translate the SPL address to a spinlock name, commands like /SPINLOCK=(SCHED,IOLCK8) do work. /SUMMARY will step the entire trace buffer and display a summary of all spinlock activity, along with the top-ten callers' PCs. You can use /TOP=*n* to display a different number of the top ranked callers.

# SDA Spinlock Tracing Utility

## SPL SHOW TRACE

1. SDA> SPL SHOW TRACE

Spinlock Trace Information:

| Timestamp             | CPU | Spin/Forklock/IPL | Callers/Fork PC  | EPID                      | Operation          | Trace Buffer                      |                            |
|-----------------------|-----|-------------------|------------------|---------------------------|--------------------|-----------------------------------|----------------------------|
| ①                     | ②   | ③                 | ④                | ⑤                         | ⑥                  | ⑦                                 |                            |
| 8-SEP 07:54:53.854632 | 03  | 810AE700          | SCHED 801113A0   | SCH\$CALC_CPU_LOAD_C+2D0  | 810C91C0           | Release FFFFFFFF.FDD61D20         |                            |
| 8-SEP 07:54:53.854628 | 03  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire FFFFFFFF.FDD61D00         |                            |
| 8-SEP 07:54:53.854562 | 04  | 810AE700          | SCHED 8012FBF4   | PROCESS_MANAGEMENT+1FBF4  | 8181BE80           | Release FFFFFFFF.FDD61CE0         |                            |
| 8-SEP 07:54:53.854661 | 02  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire (spin) FFFFFFFF.FDD61CC0  |                            |
| 8-SEP 07:54:53.854411 | 06  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire (spin) FFFFFFFF.FDD61CA0  |                            |
| 8-SEP 07:54:53.854491 | 05  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire (spin) FFFFFFFF.FDD61C80  |                            |
| 8-SEP 07:54:53.855260 | 08  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire (spin) FFFFFFFF.FDD61C60  |                            |
| 8-SEP 07:54:53.854360 | 07  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire (spin) FFFFFFFF.FDD61C40  |                            |
| 8-SEP 07:54:53.855204 | 09  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire (spin) FFFFFFFF.FDD61C20  |                            |
| 8-SEP 07:54:53.854612 | 03  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire (spin) FFFFFFFF.FDD61C00  |                            |
| 8-SEP 07:54:53.854546 | 04  | 810AE700          | SCHED 80111650   | SCH\$CALC_CPU_LOAD_C+580  | 810C91C0           | Acquire FFFFFFFF.FDD61BE0         |                            |
| 8-SEP 07:54:54.336859 | 02  | 810AEB00          | TIMER 8004D3D0   | EXE\$STD\$IOFORK_CPU_C+3A | 810C91C0           | Release FFFFFFFF.FDD6CF00         |                            |
| 8-SEP 07:54:54.336858 | 02  |                   | TIMER            |                           |                    | Fork Dispat End FFFFFFFF.FDD6CEB0 |                            |
| 8-SEP 07:54:54.336858 | 02  | 810AEB00          | TIMER 8004DE10   | EXE\$SWTIMINT_C+003A0     | 810C91C0           | Acquire FFFFFFFF.FDD6CEC0         |                            |
| 8-SEP 07:54:54.336857 | 02  | 810AED00          | IOLOCK8 803D2CB0 | SYSPCADRIVER+0ECB0        | 810C91C0           | Release FFFFFFFF.FDD6CEA0         |                            |
| 8-SEP 07:54:54.336856 | 02  | 810AEB00          | TIMER 8004FE90   | EXE\$INSTIMQ_C+00100      | 810C91C0           | Restore FFFFFFFF.FDD6CE80         |                            |
| 8-SEP 07:54:54.336855 | 02  | 810AEB00          | TIMER 8004FDF4   | EXE\$INSTIMQ_C+00064      | 810C91C0           | Acquire FFFFFFFF.FDD6CE60         |                            |
| 8-SEP 07:54:54.336849 | 02  | 81716E00          | ???              | 803DE854                  | SYSPCADRIVER+1A854 | 810C91C0                          | Release1 FFFFFFFF.FDD6CE40 |
| 8-SEP 07:54:54.336846 | 02  | 81716E00          | ???              | 803DE7C8                  | SYSPCADRIVER+1A7C8 | 810C91C0                          | Acquire1 FFFFFFFF.FDD6CE20 |
| 8-SEP 07:54:54.336844 | 02  | 810AED00          | IOLOCK8 803D2B5C | SYSPCADRIVER+0EB5C        | 810C91C0           | Acquire FFFFFFFF.FDD6CE00         |                            |
| 8-SEP 07:54:54.336841 | 02  | 810AEB00          | TIMER 8004DE48   | EXE\$SWTIMINT_C+003D8     | 810C91C0           | Release FFFFFFFF.FDD6CDE0         |                            |
| 8-SEP 07:54:54.336840 | 02  |                   | TIMER 8004DBF0   | EXE\$SWTIMINT_C+00180     |                    | Fork Dispat Sta FFFFFFFF.FDD6CDC0 |                            |

VM-0675A-AI

---

### Callout Meaning

---

- 1 Shows timestamps that are collected as system cycle counters (SCC) and then displayed with an accuracy down to microseconds. Each CPU is incrementing its own SCC as soon as it is started, so there is some difference between different CPUs' system cycle counters. The standard system time is incremented only every 10 Msec and as such is not exact enough. Adjusting the SCC to the specific CPU's system time and translating it into an accurate timestamp will thus sometimes display times out of order for different CPUs. However, for the same CPU ID, the timestamps are accurate.
  - 2 Shows the physical CPU ID of the CPU logging the trace entry.
  - 3 Shows the address of the spinlock fork. If it is a static one, its name is displayed; otherwise, it is marked as ??????.
  - 4 Shows the caller's PC address that acquired or released the spinlock, or the fork PC if the trace entry is a forklock. Symbolization is attempted, so a READ/EXECUTIVE might help to display a routine name, instead of simply a module and offset.
  - 5 Shows the EPID, which is the external PID of the process generating the trace entry. If an interrupt or fork was responsible for the entry, then a zero EPID is displayed.
  - 6 Shows the trace operation. For a spinlock, which was acquired without going through a spinwait, there is a matching acquire/release pair of trace entries for the same CPU ID for a given spinlock. If a spinlock is held, it cannot be acquired immediately, so there is also a spinwait trace entry for this pair. The different variations of the acquire and release operations are distinguished, as are the same spinlocks if they are acquired recursively multiple times.
  - 7 Shows the address of the trace buffer entry, in case there is a need to access the raw and undecoded trace data.
-

# SDA Spinlock Tracing Utility SPL SHOW TRACE

2. SDA> SPL SHOW TRACE /SUMMARY **8**

Spinlock Trace Information: (at 8-SEP-2000 07:55:02.66, trace time 00:02:04.873664)

| Spinlock   | Total Events | Total Acquire | Total Release | Acquire Own | Acquire Nospin | Acquire Inuse | Spinwaits |
|------------|--------------|---------------|---------------|-------------|----------------|---------------|-----------|
| MEGA       | 248          | 124           | 124           | 0           | 0              | 0             | 0         |
| HWCLK      | 255316       | 127658        | 127658        | 0           | 0              | 0             | 0         |
| INVALIDATE | 1588         | 794           | 794           | 0           | 0              | 0             | 0         |
| POOL       | 16           | 8             | 8             | 0           | 0              | 0             | 0         |
| MAILBOX    | 660          | 162           | 327           | 165         | 0              | 0             | 6         |
| SCHED      | 213283       | 90652         | 90690         | 85          | 0              | 0             | 31856     |
| MMG        | 282723       | 104646        | 104647        | 0           | 0              | 0             | 73430     |
| TIMER      | 45138        | 22567         | 22567         | 0           | 0              | 0             | 4         |
| TX_SYNC    | 4119         | 2059          | 2059          | 0           | 0              | 0             | 1         |
| IOLOCK8    | 72138        | 35696         | 35914         | 218         | 0              | 0             | 310       |
| LCKMGR     | 27064        | 12020         | 13454         | 0           | 1434           | 5             | 151       |
| FILSYS     | 30374        | 15140         | 15140         | 0           | 0              | 0             | 94        |
| QUEUEAST   | 652          | 326           | 326           | 0           | 0              | 0             | 0         |
| ???        | 42567        | 21107         | 21269         | 162         | 0              | 0             | 29        |
|            | 975886       | 432959        | 434977        | 630         | 1434           | 5             | 105881    |

Spinlock Trace Information: **9**

| Spinlock | Tot Count | Acq   | Rel   | Wait  | Own | Callers PC                           | Module                | Offset   |
|----------|-----------|-------|-------|-------|-----|--------------------------------------|-----------------------|----------|
| .        |           |       |       |       |     |                                      |                       |          |
| .        |           |       |       |       |     |                                      |                       |          |
| .        |           |       |       |       |     |                                      |                       |          |
| SCHED    | 56404     | 30142 | 0     | 26262 | 0   | 80111650 SCH\$CALC_CPU_LOAD_C+00580  | PROCESS_MANAGEMENT    | 00001650 |
| SCHED    | 30146     | 0     | 30146 | 0     | 0   | 801113A0 SCH\$CALC_CPU_LOAD_C+002D0  | PROCESS_MANAGEMENT    | 000013A0 |
| SCHED    | 11452     | 10988 | 0     | 464   | 0   | 8004B18C SCH\$UNLOCK_QUAD_C+0005C    | SYSTEM_PRIMITIVES_MIN | 0001918C |
| SCHED    | 10988     | 0     | 10988 | 0     | 0   | 8004B254 SCH\$UNLOCK_QUAD_C+00124    | SYSTEM_PRIMITIVES_MIN | 00019254 |
| SCHED    | 6364      | 6225  | 0     | 139   | 0   | 8004AA24 SCH\$LOCKR_QUAD_C+00034     | SYSTEM_PRIMITIVES_MIN | 00018A24 |
| SCHED    | 6220      | 0     | 6220  | 0     | 0   | 8004AA6C SCH\$LOCKR_QUAD_C+0007C     | SYSTEM_PRIMITIVES_MIN | 00018A6C |
| SCHED    | 6159      | 4527  | 0     | 1632  | 0   | 80131A20 PROCESS_MANAGEMENT+21A20    | PROCESS_MANAGEMENT    | 00021A20 |
| SCHED    | 5814      | 0     | 5814  | 0     | 0   | 80130F80 SCH\$INIT_C+0071C           | PROCESS_MANAGEMENT    | 00020F80 |
| SCHED    | 5301      | 4794  | 0     | 507   | 0   | 8004A6A4 SCH\$LOCKW_QUAD_C+00034     | SYSTEM_PRIMITIVES_MIN | 000186A4 |
| SCHED    | 5112      | 4706  | 0     | 383   | 23  | 80132754 SCH\$QAST_C+00054           | PROCESS_MANAGEMENT    | 00022754 |
| MMG      | 43675     | 28296 | 0     | 15379 | 0   | 80074B34 MMG\$PTEREF_64_C+00114      | SYSTEM_PRIMITIVES_MIN | 00042B34 |
| MMG      | 42554     | 21603 | 0     | 20951 | 0   | 801117B0 SCH\$CALC_CPU_LOAD_C+006E0  | PROCESS_MANAGEMENT    | 000017B0 |
| MMG      | 41666     | 21600 | 0     | 20066 | 0   | 80111570 SCH\$CALC_CPU_LOAD_C+004A0  | PROCESS_MANAGEMENT    | 00001570 |
| MMG      | 35460     | 19148 | 0     | 16312 | 0   | 80165D84 MMG\$PAGEFAULT_C+000A4      | SYSSVM                | 00013D84 |
| MMG      | 26731     | 0     | 26731 | 0     | 0   | 80179018 MMG_\$TD\$DELPAG_64_C+005A8 | SYSSVM                | 00027018 |
| MMG      | 21604     | 0     | 21604 | 0     | 0   | 801117F0 SCH\$CALC_CPU_LOAD_C+00720  | PROCESS_MANAGEMENT    | 000017F0 |
| MMG      | 21600     | 0     | 21600 | 0     | 0   | 80111AA0 SCH\$CALC_CPU_LOAD_C+009D0  | PROCESS_MANAGEMENT    | 00001AA0 |
| MMG      | 16559     | 0     | 16559 | 0     | 0   | 801662F0 MMG\$PAGEFAULT_C+00610      | SYSSVM                | 000142F0 |
| MMG      | 3443      | 3432  | 0     | 11    | 0   | 8015D938 SYSSVM+0B938                | SYSSVM                | 0000B938 |
| MMG      | 3432      | 0     | 3432  | 0     | 0   | 8015D96C SYSSVM+0B96C                | SYSSVM                | 0000B96C |
| .        |           |       |       |       |     |                                      |                       |          |
| .        |           |       |       |       |     |                                      |                       |          |
| .        |           |       |       |       |     |                                      |                       |          |

continued  
VM-0676A-AI

- 
- |          |                |                                                                                                                                                                                                                                                                              |
|----------|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>8</b> | <b>Callout</b> | <b>Meaning</b>                                                                                                                                                                                                                                                               |
| <b>8</b> |                | Shows the summary information by stepping through the whole trace buffer, and displaying a single line of information for each spinlock. If the number of spinwaits compared to the number of acquisitions is very high, then a spinlock is a candidate for high contention. |
| <b>9</b> |                | For each spinlock in the summary display, the top ten callers' PCs are displayed along with the number of spinlock acquisitions and releases, as well as spinwait counts and the number of multiple acquisitions of the same spinlock.                                       |
-

# SDA Spinlock Tracing Utility

## SPL SHOW TRACE

Forklock Trace Information: (at 8-SEP-2000 07:55:02.66, trace time 00:02:04.873664) **10**

| Forklock | Total Events | CPU IDs |     |    |    |    |    |      |    |
|----------|--------------|---------|-----|----|----|----|----|------|----|
|          |              | 2       | 3   | 4  | 5  | 6  | 7  | 8    | 9  |
| IPL 08   | 3757         | 0       | 0   | 0  | 0  | 0  | 0  | 3757 | 0  |
| TIMER    | 7047         | 7047    | 0   | 0  | 0  | 0  | 0  | 0    | 0  |
| IOLOCK8  | 12747        | 12180   | 357 | 58 | 27 | 35 | 16 | 35   | 39 |
| LCKMGR   | 179          | 20      | 97  | 10 | 7  | 9  | 9  | 21   | 6  |
| QUEUEAST | 326          | 33      | 188 | 22 | 14 | 15 | 13 | 35   | 6  |
|          | 24057        |         |     |    |    |    |    |      |    |

Forklock Trace Information:

| Forklock | Tot Count | Tot Cycles      | Average | Minimum | Maximum | Fork PC                                   |
|----------|-----------|-----------------|---------|---------|---------|-------------------------------------------|
| IPL 08   | 2913      | 00:00:00.049783 | 8947    | 1161    | 231717  | 803C5890 SYSSPCADriver+01890              |
| IPL 08   | 844       | 00:00:00.017516 | 10865   | 6053    | 100257  | 80002030 LAN\$FORE_SD_RELEASESDU_C        |
| TIMER    | 7047      | 00:00:00.109392 | 8127    | 1760    | 648521  | 8004DBF0 EXE\$SWTIMIT_C+00180             |
| IOLOCK8  | 8130      | 00:00:00.071646 | 4613    | 1947    | 71974   | 80590200 SYSS\$EWDriver+04200             |
| IOLOCK8  | 3783      | 00:00:00.034208 | 4734    | 1583    | 91160   | 805B9B98 SYSS\$PEDriver+11B98             |
| IOLOCK8  | 531       | 00:00:00.007955 | 7843    | 3163    | 24701   | 8E975B60 TCP\$IP\$INTERNET_SERVICES+1FB60 |
| IOLOCK8  | 255       | 00:00:00.003208 | 6588    | 2619    | 36851   | 8E975DB0 TCP\$IP\$INTERNET_SERVICES+1FDB0 |
| IOLOCK8  | 27        | 00:00:00.000091 | 1769    | 1284    | 2697    | 803B6F30 SYSS\$TTDriver+06F30             |
| IOLOCK8  | 16        | 00:00:00.001365 | 44697   | 33192   | 65360   | 80088300 SMP\$CPU_SWITCH_C+00300          |
| IOLOCK8  | 5         | 00:00:00.000092 | 9730    | 973     | 19658   | 80613DC0 NETDriver+0BDC0                  |
| LCKMGR   | 87        | 00:00:00.001728 | 10404   | 4000    | 107434  | 801D2210 LOCKING+04210                    |
| LCKMGR   | 87        | 00:00:00.000913 | 5494    | 2433    | 25553   | 801D6490 LOCKING+08490                    |
| LCKMGR   | 5         | 00:00:00.000105 | 11027   | 7041    | 19129   | 80300AE0 CNX_\$TD\$SEND_MSG_V2_C+00890    |
| QUEUEAST | 71        | 00:00:00.007147 | 52705   | 17451   | 169920  | 802CA190 SYSS\$XFCACHE+0A190              |
| QUEUEAST | 71        | 00:00:00.000394 | 2906    | 2047    | 10700   | 802CA310 SYSS\$XFCACHE+0A310              |
| QUEUEAST | 71        | 00:00:00.000272 | 2009    | 1425    | 4146    | 802DB1A0 CACHE\$GET_STATFILE_C+004B0      |
| QUEUEAST | 20        | 00:00:00.000642 | 16816   | 13851   | 25464   | 802D1F80 SYSS\$XFCACHE+11F80              |
| QUEUEAST | 16        | 00:00:00.001951 | 63850   | 21244   | 183880  | 802DE030 SYSS\$XFCACHE+1E030              |
| QUEUEAST | 1         | 00:00:00.000009 | 5184    | 5184    | 5184    | 800E7EE0 IOC_\$TD\$FREE_UCB_C+00050       |

VM-0775A-AI

### Callout Meaning

- 10** The forklock summary displays the number of fork operations on a specific CPU for each forklock. For each forklock, the top ten fork PC addresses are displayed, along with the minimum, maximum and average duration of the fork operation in system cycles. The total amount of time spent in a given fork routine is displayed in a time format accurate to microseconds.



---

## SPL START COLLECT

Starts to collect spinlock information a longer period of time than will fit into the trace buffer.

### Format

```
SPL START COLLECT [/SPINLOCK=spinlock]/ADDRESS=n]
```

### Parameters

None.

### Qualifiers

**/SPINLOCK=*spinlock***

Specifies the tracing of a specific spinlock, for example, /SPINLOCK=LCKMGR or /SPINLOCK=SCHEM.

**/ADDRESS=*n***

Specifies the tracing of a specific spinlock by address.

### Description

The SPL START COLLECT command starts a collection of spinlock information for a longer period of time than will fit into the trace buffer. You need to enable spinlock tracing before a spinlock collection can be started. On a system with heavy activity, the trace buffer typically can only hold a relatively small time window of spinlock information. In order to collect spinlock information over a longer time period, a collection can be started. The collection tries to catch up with the running trace index and save the spinlock information into a balanced tree within the virtual address space of the process performing the spinlock collection. Either use the name of a static spinlock, or supply the address of a dynamic spinlock, for which information should be gathered.

The trace entries are kept in the trace buffer, which is allocated from S2 space, hence there is no disruption, if tracing is started from within SDA and then the user exits from SDA. However, for the longer period data collection, the information is kept in process-specific memory, thus a user needs to stay within SDA; otherwise the data collection is automatically terminated by SDA's image rundown. You can collect data for two or more spinlocks simultaneously, by using a separate process for each collection.

### Examples

```
SDA> SPL START COLLECT
```

Use /SPINLOCK=name or /ADDRESS=n to specify which spinlock info needs to be collected...

This example shows that you need to supply either a spinlock name of a static spinlock, or the address of a dynamic spinlock, if you want to collect information over a long period of time.

```
SDA> SPL START COLLECT/SPINLOCK=LCKMGR
```

This example shows the command line to start to collect information on the usage of the LCKMGR spinlock.

## SPL START TRACE

Enables spinlock tracing.

### Format

```
SPL START TRACE  [/[NO]SPINLOCK=spinlock | /[/NO]FORKLOCK=forklock
                  | /BUFFER=pages | /[/NO]ACQUIRE |
                  | /[/NO]RELEASE | /[/NO]WAIT | /[/NO]FRKDSPTH
                  | /[/NO]FRKEND | /CPU=n]
```

### Parameters

None.

### Qualifiers

**/SPINLOCK=*spinlock***

**/NOSPINLOCK**

The **/SPINLOCK=*spinlock*** qualifier specifies the tracing of a specific spinlock, for example, **/SPINLOCK=LCKMGR** or **/SPINLOCK=SCHED**.

The **/NOSPINLOCK** qualifier disables spinlock tracing and does not collect any spinlock data. If omitted, all spinlocks are traced.

**/FORKLOCK=*forklock***

**/NOFORKLOCK**

The **/FORKLOCK=*forklock*** qualifier specifies the tracing of a specific forklock, for example, **/FORKLOCK=IOLOCK8** or **/FORKLOCK=IPL8**.

The **/NOFORKLOCK** qualifier disables forklock tracing and does not collect any forklock data. If omitted, all forks are traced.

**/BUFFER=*pages***

Specifies the size of the trace buffer (in Alpha page units). It defaults to 128 pages, which is equivalent to 1MB, if omitted.

**/ACQUIRE**

**/NOACQUIRE**

The **/ACQUIRE** qualifier traces any spinlock acquisitions. This is the default.

The **/NOACQUIRE** qualifier ignores any spinlock acquisitions.

**/RELEASE**

**/NORELEASE**

The **/RELEASE** qualifier traces any spinlock releases. This is the default.

The **/NORELEASE** qualifier ignores any spinlock releases.

**/WAIT**

**/NOWAIT**

The **/WAIT** qualifier traces any spinwait operations. This is the default.

The **/NOWAIT** qualifier ignores any spinwait operations.

**/FRKDSPTH**

**/NOFRKDSPTH**

The **/FRKDSPTH** qualifier traces all invocations of fork routines within the fork dispatcher. This is the default.

The **/NOFRKDSPTH** qualifier ignores all of the **/FRKDSPTH** operations.

**/FRKEND**

**/NOFRKEND**

The **/FRKEND** qualifier traces all returns from fork routines within the fork dispatcher. This is the default.

The **/NOFRKEND** qualifier ignores all of the operations of the **/FRKEND** qualifier.

**/CPU=*n***

Specifies the tracing of a specific CPU only, for example, **/CPU=5** or **/CPU=PRIMARY**. By default, all CPUs are traced.

## Description

The **SPL START TRACE** command enables spinlock and fork tracing. By default all spinlocks and forks are traced and a 128 page (1MByte) trace buffer is allocated and used as a ring buffer.

## Examples

1. SDA> SPL START TRACE/BUFFER=1000  
Tracing started... (Spinlock = 00000000, Forklock = 00000000)

This example shows how to enable a tracing for all spinlock and forklock operations into a 8 MByte trace buffer.

2. SDA> SPL START TRACE/CPU=PRIMARY/SPINLOCK=SCHED /NOFORKLOCK  
Tracing started... (Spinlock = 810AF600, Forklock = 00000000)

This example shows how to trace only SCHED spinlock operations on the primary CPU.

3. SDA> SPL START TRACE /NOSPINLOCK /FORKLOCK=IPL8  
Tracing started... (Spinlock = 00000000, Forklock = 863A4C00)

This example shows how to trace only fork operations to IPL8.

## **SPL STOP COLLECT**

Stops the spinlock collection, but does not stop spinlock tracing.

### **Format**

SPL STOP COLLECT

### **Parameters**

None.

### **Qualifiers**

None.

### **Description**

The SPL STOP COLLECT command stops the data collection, but does not affect tracing. This allows the user to start another collection for a different spinlock during the same trace run.

### **Example**

```
SDA> SPL STOP COLLECT
```

## SPL STOP TRACE

Disables spinlock tracing, but it does not deallocate the trace buffer.

### Format

SPL STOP TRACE

### Parameters

None.

### Qualifiers

None.

### Description

The SPL STOP TRACE command stops tracing, but leaves the trace buffer allocated for further analysis.

### Example

```
SDA> SPL STOP TRACE  
Tracing stopped...
```

## **SPL UNLOAD**

Unloads the SPL\$DEBUG execlt and performs cleanup. Tracing is automatically disabled and the trace buffer deallocated.

### **Format**

SPL UNLOAD

### **Parameters**

None.

### **Qualifiers**

None.

### **Description**

The SPL UNLOAD command disables the tracing or collection functionality with a delay to a state of quiescence. This ensures that all pending trace operations in progress have finished before the trace buffer is deallocated. Finally the SPL UNLOAD command unloads the SPL\$DEBUG execlt.

### **Example**

```
SDA> SPL UNLOAD  
SPL$DEBUG unload status = 00000001
```

---

## SDA Extension Routines

This chapter describes how to write, debug, and invoke an SDA Extension. This chapter also describes the routines available to an SDA Extension.

### 7.1 Introduction

When analysis of a dump file or a running system requires intimate knowledge of data structures that are not known to the System Dump Analyzer, the functionality of SDA can be extended by the addition of new commands into which the necessary knowledge has been built. Note that in this description, whenever a reference is made to accessing a dump file (ANALYZE/CRASH\_DUMP), this also includes accessing memory in the running system (ANALYZE/SYSTEM).

For example, a user-written device driver allocates nonpaged pool and records additional data about the device there (logging different types of I/O, perhaps), and a pointer to the new structure is saved in the device-specific extension of the UCB. After a system crash, the only way to look at the data from SDA is to do the following:

- Invoke the SDA command DEFINE to define a new symbol (for example, UCBSL\_FOOBAR) whose value is the offset in the UCB of the pointer to the new structure.
- Invoke the SDA commands "SHOW DEVICE <device>" and "FORMAT UCB" to obtain the address of the nonpaged pool structure.
- Invoke the SDA command "EXAMINE <address>;<length>" to display the contents of the data in the new nonpaged pool structure as a series of hexadecimal longwords.
- Decode manually the contents of the data structure from this hexadecimal dump.

An SDA extension that knows the layout of the nonpaged pool structure, and where to find the pointer to it in the UCB, could output the data in a formatted display that alerts the user to unexpected data patterns.

### 7.2 General Description

The following discussion uses an example of an SDA extension that invokes the MBX command to output a formatted display of the status of the mailbox devices in the system. The source file, MBXSSDA.C, is provided in SYS\$EXAMPLES.

An SDA extension consists of a shareable image, in this case MBXSSDA.EXE, either located in the directory SYSSLIBRARY or found by translating the logical name MBXSSDA. It contains two universal symbols: SDA\$EXTEND, the entry point; and SDA\$EXTEND\_VERSION, the address of a longword that contains the version of the interface used (in the format of major/minor ident), which allows SDA to confirm it has activated a compatible extension. The image contains at least two modules: MBXSSDA, the user-written module that defines the

## SDA Extension Routines

### 7.2 General Description

two symbols and provides the code and data necessary to produce the desired formatted output; and SDA\_EXTEND\_VECTOR, which provides jackets for all of the callable SDA routines, and is found in SYS\$LIBRARY:VMS\$VOLATILE\_PRIVATE\_INTERFACES.OLB. The user-written portion can be split into multiple modules.

Whenever SDA receives an unrecognized command, like "SDA> MBX", it attempts to activate the shareable image MBX\$SDA at the SDA\$EXTEND entry point. If you choose a command name that matches the abbreviation of an existing command, SDA can be forced to activate the extension using the "DO" command. For example, if you had an SDA extension called VAL\$SDA, you could not activate it with a command like "SDA> VAL" as SDA would interpret that as an abbreviation of its VALIDATE command. But VAL\$SDA can be activated by issuing "SDA> DO VAL".

With or without the "DO" prefix, the rest of the command line is passed to the extension; it is up to the extension to parse it. The example extension MBX\$SDA includes support for commands of the form "SDA> MBX SUMMARY" and "SDA> MBX <address>" to demonstrate this. If the extension is invoked with no arguments, it should do no more than display a simple announcement message, or prompt for input. This assists in the debugging of the extension, as described in Section 7.4.

### 7.3 Detailed Description

This section describes how to compile, link, and invoke an SDA extension. It also describes the contents of an SDA extension.

#### 7.3.1 Compiling and Linking an SDA Extension

The user-written module is only supported when written in Compaq C (minimum Version 5.2), following the pattern of the example extension, MBX\$SDA.C. It should be compiled and linked using commands of the following form:

```
$cc mbx$sda + alpha$library:sys$lib_c /library
$link /share -
    mbx$sda.obj, -
    alpha$library:vms$volatile_private_interfaces /library, -
    sys$input /option
symbol_vector = (sda$extend=procedure)
symbol_vector = (sda$extend_version=data)
```

---

#### Note

---

1. You can include the qualifier /INSTRUCTION=NOFLOAT on the compile command line if floating-point instructions are not needed.
  2. The + ALPHA\$LIBRARY:SYS\$LIB\_C /LIBRARY is not needed on the compile command line if the logical name DECC\$TEXT\_LIBRARY is defined and translates to ALPHA\$LIBRARY:SYS\$LIB\_C.TLB.
  3. If the user-written extension needs to signal SDA condition codes, or output their text with \$PUTMSG, you should add the qualifier /INCLUDE=SDAMSG to the parameter ALPHA\$LIBRARY:VMS\$VOLATILE\_PRIVATE\_INTERFACES /LIBRARY.
-



### 7.3.2 Invoking an SDA Extension

You can invoke the SDA extension as follows:

```
$define mbx$sda sys$disk:[ ]mbx$sda
$analyze /system
SDA>mbx summary
SDA>mbx <address>
```

### 7.3.3 Contents of an SDA Extension

At a minimum, the user-written module must contain:

- #include statements for DESCRIP.H and SDA\_ROUTINES.H
- The global variable SDA\$EXTEND\_VERSION, initialized as follows:

```
int sda$extend_version = SDA_FLAGS$K_VERSION;
```

- The routine SDA\$EXTEND (prototype follows)

Optionally, the user-written module may also contain the statement:

```
#define __NEW_STARLET
```

You should use this option because it provides type checking of function arguments and gives consistency in casing and naming conventions.

The entry point in the user-written module, SDA\$EXTEND, is called as a routine with three arguments and no return value. The declaration is as follows:

```
void sda$extend (
    int *transfer_table,
    struct dsc$descriptor_s *cmd_line,
    SDA_FLAGS sda_flags)
```

The arguments in this code example have the following meanings:

## SDA Extension Routines

### 7.3 Detailed Description

| Line of Code                     | Meaning                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|---------|----------------------------------|-------------------------------------------------------------------------------|---------------------------------|------------------------------------------------------------------|--------------------------------|---------------------------------------------------------------------------------------------------------------------|---------------------------------|-------------------------------------------------------------------------------------------|-------------|------------------------------------------------------------------------------------------|
| transfer_table                   | Address of the vector table in the base image. The user-written routine SDA\$EXTEND must copy this to SDA\$EXTEND_VECTOR_TABLE_ADDR before any SDA routines can be called.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |
| cmd_line                         | Address of the descriptor of the command line as entered by the user, less the name of the extension. So, if you enter "SDA> MBX" or "SDA> DO MBX", the command line is a zero length string. If you enter the command "SDA> MBX 80102030", the command line is " 80102030" (the separating space is not stripped).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |
| sda_flags                        | Definition for the following four bits in this structure: <table border="1"> <thead> <tr> <th>Bit</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td>sda_flags.sda_flags\$sv_override</td> <td>Indicates SDA has been activated with the ANALYZE/CRASH_DUMP/OVERRIDE command</td> </tr> <tr> <td>sda_flags.sda_flags\$sv_current</td> <td>Indicates SDA has been activated with the ANALYZE/SYSTEM command</td> </tr> <tr> <td>sda_flags.sda_flags\$sv_target</td> <td>Indicates that SDA was invoked from the kept debugger during an SCD or SDD session or when analyzing a process dump</td> </tr> <tr> <td>sda_flags.sda_flags\$sv_process</td> <td>Indicates SDA was activated with the ANALYZE/CRASH_DUMP command to analyze a process dump</td> </tr> <tr> <td>No bits set</td> <td>Indicates SDA was activated with the ANALYZE/CRASH_DUMP command to analyze a system dump</td> </tr> </tbody> </table> | Bit | Meaning | sda_flags.sda_flags\$sv_override | Indicates SDA has been activated with the ANALYZE/CRASH_DUMP/OVERRIDE command | sda_flags.sda_flags\$sv_current | Indicates SDA has been activated with the ANALYZE/SYSTEM command | sda_flags.sda_flags\$sv_target | Indicates that SDA was invoked from the kept debugger during an SCD or SDD session or when analyzing a process dump | sda_flags.sda_flags\$sv_process | Indicates SDA was activated with the ANALYZE/CRASH_DUMP command to analyze a process dump | No bits set | Indicates SDA was activated with the ANALYZE/CRASH_DUMP command to analyze a system dump |
| Bit                              | Meaning                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |
| sda_flags.sda_flags\$sv_override | Indicates SDA has been activated with the ANALYZE/CRASH_DUMP/OVERRIDE command                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |
| sda_flags.sda_flags\$sv_current  | Indicates SDA has been activated with the ANALYZE/SYSTEM command                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |
| sda_flags.sda_flags\$sv_target   | Indicates that SDA was invoked from the kept debugger during an SCD or SDD session or when analyzing a process dump                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |
| sda_flags.sda_flags\$sv_process  | Indicates SDA was activated with the ANALYZE/CRASH_DUMP command to analyze a process dump                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |
| No bits set                      | Indicates SDA was activated with the ANALYZE/CRASH_DUMP command to analyze a system dump                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |     |         |                                  |                                                                               |                                 |                                                                  |                                |                                                                                                                     |                                 |                                                                                           |             |                                                                                          |

The first executable statement of the routine must be to copy TRANSFER\_TABLE to SDA\$VECTOR\_TABLE (which is declared in SDA\_ROUTINES.H):

```
sda$vector_table = transfer_table;
```

If this is not done, you cannot call any of the routines described below. Any attempts to call the routines receive a status return of SDA\$\_VECNOTINIT. (For routines defined not to return a status, this value can be found only by examining R0.)

The next statement should be one to establish a condition handler, as it is often difficult to track down errors in extensions such as access violations because the extension is activated dynamically with LIB\$FIND\_IMAGE\_SYMBOL. A default condition handler, SDA\$COND\_HANDLER, is provided that outputs the following information in the event of an error:

- The error condition
- The VMS version
- A list of activated images, with start and end virtual addresses

- The signal array and register dump
- The current call frame chain

You can establish this condition handler as follows:

```
lib$establish (sda$cond_handler);
```

---

**Note**

---

The error condition, signal array, and register dump are output directly to SYSS\$OUTPUT and/or SYSS\$ERROR, and are not affected by the use of the SDA commands SET OUTPUT and SET LOG.

---

Thus, a minimal extension would be:

```
#define __NEW_STARLET 1
#include <descrip.h>
#include <sda_routines.h>

int sda$extend_version = SDA_FLAGS$K_VERSION;

void sda$extend (int *transfer_table,
                struct dsc$descriptor_s *cmd_line,
                SDA_FLAGS sda_flags)
{
    sda$vector_table = transfer_table;
    lib$establish (sda$cond_handler);

    sda$print ("hello, world");
    return;
}
```

## 7.4 Debugging an Extension

In addition to the "after-the-fact" information provided by the condition handler, you can debug SDA extensions using the OpenVMS Debugger. A second copy of the SDA image, SDA\_DEBUG.EXE, is provided in SYSS\$SYSTEM. By defining the logical name SDA to reference this image, you can debug SDA extensions as follows:

- Compile your extension /DEBUG/NOOPT and link it /DEBUG.
- Define logical names for SDA and the extension, and invoke SDA.
- Type GO at the initial DBG> prompt.
- Invoke the extension with no argument at the initial SDA> prompt.
- Return control to Debug at the next prompt (either from SDA or the extension).
- Use Debug commands to set breakpoints, and so on, in the extension and then type GO.
- Invoke the extension, providing the necessary arguments.

## SDA Extension Routines

### 7.4 Debugging an Extension

An example of the previous procedures is as follows:

```
$ cc /debug /noopt mbx$sda + alpha$library:sys$lib_c /library
$ link /debug /share -
    mbx$sda.obj, -
    alpha$library:vms$volatile_private_interfaces /library, -
    sys$input /option
symbol_vector = (sda$extend=procedure)
symbol_vector = (sda$extend_version=data)
$ !
$ define mbx$sda sys$disk:[]mbx$sda
$ define sda sda_debug
$ analyze /system

...
DBG> go

...
SDA> mbx
MBX commands: 'MBX SUMMARY' and 'MBX <address>'
SDA>
^C <CR>
DBG> set image mbx$sda
DBG> set language c
DBG> set break /exception
DBG> go
SDA> mbx summary

...
SDA> mbx <address>

...
%DEBUG-I-DYNMODSET, setting module MBX$SDA
%SYSTEM-E-INVARG, invalid argument

...
DBG>
```

## 7.5 Callable Routines Overview

The user-written routine may call SDA routines to accomplish any of the following tasks:

- Read the contents of memory locations in the dump.
- Translate symbol names to values and vice-versa, define new symbols, and read symbol table files.
- Map an address to the activated image or executive image that contains that address.
- Output text to the terminal, with page breaks, page headings, and so on (and which is output to a file if the SDA commands SET OUTPUT or SET LOG have been used).
- Allocate and deallocate dynamic memory.
- Validate queues/lists.
- Format data structures.
- Issue any SDA command.

## SDA Extension Routines 7.5 Callable Routines Overview

The full list of available routines is as follows:

|                       |                          |
|-----------------------|--------------------------|
| SDA\$ADD_SYMBOL       | SDA\$GETMEM              |
| SDA\$ALLOCATE         | SDA\$INSTRUCTION_DECODE  |
| SDA\$DBG_IMAGE_INFO   | SDA\$NEW_PAGE            |
| SDA\$DEALLOCATE       | SDA\$PARSE_COMMAND       |
| SDA\$DISPLAY_HELP     | SDA\$PRINT               |
| SDA\$ENSURE           | SDA\$READ_SYMFILE        |
| SDA\$FORMAT           | SDA\$REQMEM              |
| SDA\$FORMAT_HEADING   | SDA\$SET_ADDRESS         |
| SDA\$GET_ADDRESS      | SDA\$SET_CPU             |
| SDA\$GET_BLOCK_NAME   | SDA\$SET_HEADING_ROUTINE |
| SDA\$GET_BUGCHECK_MSG | SDA\$SET_LINE_COUNT      |
| SDA\$GET_CURRENT_CPU  | SDA\$SET_PROCESS         |
| SDA\$GET_CURRENT_PCB  | SDA\$SKIP_LINES          |
| SDA\$GET_HEADER       | SDA\$SYMBOL_VALUE        |
| SDA\$GET_HW_NAME      | SDA\$SYMBOLIZE           |
| SDA\$GET_IMAGE_OFFSET | SDA\$TRYMEM              |
| SDA\$GET_INPUT        | SDA\$TYPE                |
| SDA\$GET_LINE_COUNT   | SDA\$VALIDATE_QUEUE      |

The details of all these routines follow. But there are some points to be aware of in using them:

- There are three different routines available to read the contents of memory locations in the dump: SDA\$TRYMEM, SDA\$GETMEM, and SDA\$REQMEM. They are used as follows:

SDA\$TRYMEM is called from both SDA\$GETMEM and SDA\$REQMEM as the lower-level routine that actually does the work. SDA\$TRYMEM returns success/failure status in R0, but does not signal any errors. Use it directly when you expect that the location being read is inaccessible. The caller of SDA\$TRYMEM will handle this situation by checking the status returned by SDA\$TRYMEM.

SDA\$GETMEM signals a warning when any error status is returned from SDA\$TRYMEM. Signaling a warning will print out a warning message, but does not abort the SDA command in progress. You should use this routine when you expect the location to be read to be accessible. This routine does not prevent the command currently being executed from continuing. The caller of SDA\$GETMEM must allow for this by checking the status returned by SDA\$GETMEM.

SDA\$REQMEM signals an error when any error status is returned from SDA\$TRYMEM. Signaling an error will print out an error message, abort the SDA command in progress and return to the "SDA>" prompt. You should use this routine when you expect the location to be read to be accessible. This routine will prevent the command currently being executed from continuing. The caller of SDA\$REQMEM will not resume if an error occurs.

- You should use only the routines provided to output text. Do not use printf() or any other standard routine. If you do, the SDA commands SET OUTPUT and SET LOG will not produce the expected results. Do not include control characters in output (except tab); in particular, avoid <CR>.

## SDA Extension Routines

### 7.5 Callable Routines Overview

<LF>,<FF>, and the FAO directives that create them. Use the FAO directive !AF when contents of memory returned by SDA\$TRYMEM, and so on, are being displayed directly, because embedded control characters will cause undesirable results. For example, displaying process names or resource names that contain particular control characters or escape sequences can lock up the terminal.

- You should use only the routines provided to allocate and deallocate dynamic memory. Do not use malloc() and free(). Where possible, allocate dynamic memory once, the first time the extension is activated, and deallocate it only if it needs to be replaced by a larger allocation. Because SDA commands can be interrupted by invoking another command at the "Press return for more" prompt, it is very easy to cause memory leaks.
- Some routines expect 32-bit pointers, and others expect 64-bit pointers. At first this may not appear to be logical, but in fact it is. All code and data used by SDA and any extensions must be in P0 or P1 space, as SDA does not need to (and does not) use P2 space for local data storage. However, addresses in the system dump (or running system, in the case of ANALYZE/SYSTEM) are 64-bit addresses, and SDA must provide access to all locations in the dump.

So, for example, the first two arguments to the routine SDA\$TRYMEM are:

```
VOID_PQ start /* 64-bit pointer */  
void *dest /* 32-bit pointer */
```

They specify the address of interest in the dump and the address in local storage to which the dump contents are to be copied.

### 7.6 Callable Routines Specifics

The following section describes the SDA extension callable routines.

---

## SDA\$ADD\_SYMBOL

Adds a symbol to SDA's local symbol table.

### Format

```
void sda$add_symbol (char *symbol_name, uint64 symbol_value);
```

### Arguments

#### **symbol\_name**

|               |                  |
|---------------|------------------|
| OpenVMS usage | char_string      |
| type          | character string |
| access        | read only        |
| mechanism     | by reference     |

Address of symbol name string (zero-terminated).

#### **symbol\_value**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | quadword_unsigned   |
| type          | quadword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

The symbol value.

### Description

SDA maintains a list of symbols and the corresponding values. SDA\$ADD\_SYMBOL is used to insert additional symbols into this list, so that they can be used in expressions and during symbolization.

### Condition Values Returned

None

### Example

```
sda$add_symbol ("MBX", 0xFFFFFFFF80102030);
```

This call defines the symbol MBX to the hexadecimal value FFFFFFFF80102030.

## **SDA\$ALLOCATE**

Allocates dynamic memory.

### **Format**

```
void sda$allocate (uint32 size, void **ptr_block);
```

### **Arguments**

#### **size**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Size of block to allocate (in bytes).

#### **ptr\_block**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | address             |
| type          | longword (unsigned) |
| access        | write only          |
| mechanism     | by reference        |

Address of longword to receive address of block.

### **Description**

The requested memory is allocated and the address returned. Note that this is the only supported mechanism for allocation of dynamic memory.

#### **Related Routine**

SDA\$DEALLOCATE

### **Condition Values Returned**

None

If no memory is available, the error is signaled and the SDA session aborted.

### **Example**

```
PCB *local_pcb;  
...  
sda$allocate (PCB$C_LENGTH, (void *)&local_pcb);
```

This call allocates a block of heap storage for a copy of a PCB, and stores its address in the pointer LOCAL\_PCB.



---

## SDA\$DBG\_IMAGE\_INFO

Displays a list of activated images together with their virtual address ranges for debugging purposes.

### Format

```
void sda$dbg_image_info ();
```

### Arguments

None.

### Description

A list of the images currently activated, with their start and end addresses, is displayed. This is provided as a debugging aid for SDA extensions.

### Condition Values Returned

None

### Example

```
sda$dbg_image_info ();
```

SDA outputs the list of images in the following format:

```
Current VMS Version:  "X6DX-FT1"
```

```
Process Activated Images:
```

| Start VA | End VA   | Image Name         |
|----------|----------|--------------------|
| 00010000 | 000301FF | SDA                |
| 00032000 | 00177FFF | SDA\$SHARE         |
| 7B508000 | 7B58BFFF | DECC\$SHR          |
| 7B2D8000 | 7B399FFF | DPML\$SHR          |
| 7B288000 | 7B2C9FFF | CMA\$TIS_SHR       |
| 7B698000 | 7B6D9FFF | LBRSHR             |
| 0021A000 | 0025A3FF | SCRSHR             |
| 00178000 | 002187FF | SMGSHR             |
| 7B1E8000 | 7B239FFF | LIBRTL             |
| 7B248000 | 7B279FFF | LIBOTS             |
| 80C140D0 | 80C23120 | SY\$BASE_IMAGE     |
| 80C036B8 | 80C05288 | SY\$PUBLIC_VECTORS |
| 002C6000 | 002D31FF | PRGDEVMSG          |
| 002D4000 | 002DA9FF | SHRIMGMSG          |
| 002DC000 | 002DFFFF | DECC\$MSG          |
| 00380000 | 003E03FF | MBX\$SDA           |

## SDA Extension Routines

### SDA\$DEALLOCATE

---

## SDA\$DEALLOCATE

Deallocates and frees dynamic memory.

### Format

```
void sda$deallocate (void *ptr_block, uint32 size);
```

### Arguments

**ptr\_block**  
OpenVMS usage address  
type longword (unsigned)  
access read only  
mechanism by value

Starting address of block to be freed.

**size**  
OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

Size of block to deallocate (in bytes).

### Description

The specified memory is deallocated. Note that this is the only supported mechanism for deallocation of dynamic memory.

**Related Routine**  
SDA\$ALLOCATE

### Condition Values Returned

None

If an error occurs, it is signaled and the SDA session aborted.

### Example

```
PCB *local_pcb;  
...  
sda$deallocate ((void *)local_pcb, PCB$C_LENGTH;
```

This call deallocates the block of length PCB\$C\_LENGTH whose address is stored in the pointer LOCAL\_PCB.

---

## SDA\$DISPLAY\_HELP

Displays online help.

### Format

```
void sda$display_help (char *library_desc, char *topic_desc);
```

### Arguments

#### library

OpenVMS usage char\_string  
type character string  
access read only  
mechanism by reference

Address of library filespec. Specify as zero-terminated ASCII string.

#### topic

OpenVMS usage char\_string  
type character string  
access read only  
mechanism by reference

Address of topic name. Specify as zero-terminated ASCII string.

### Description

Help from the specified library is displayed on the given topic.

### Condition Values Returned

None

### Example

```
sda$display_help ("SYS$HELP:SDA", "HELP");
```

This call produces the following output at the terminal:

```
HELP
```

```
The System Dump Analyzer (SDA) allows you to inspect the contents  
of memory as saved in the dump taken at crash time or as exists  
in a running system. You can use SDA interactively or in batch  
mode. You can send the output from SDA to a listing file. You can  
use SDA to perform the following operations:
```

## SDA Extension Routines

### SDA\$DISPLAY\_HELP

Assign a value to a symbol  
Examine memory of any process  
Format instructions and blocks of data  
Display device data structures  
Display memory management data structures  
Display a summary of all processes on the system  
Display the SDA symbol table  
Copy the system dump file  
Send output to a file or device  
Read global symbols from any object module  
Send output to a file or device  
Read global symbols from any object module  
Search memory for a given value

For help on performing these functions, use the HELP command and specify a topic.

Format

```
HELP [topic-name]
```

Additional information available:

Parameter

HELP Subtopic?

---

## SDA\$ENSURE

Ensures sufficient space on the current output page.

### Format

```
void sda$ensure (uint32 lines);
```

### Argument

**lines**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Number of lines to fit on a page.

### Description

This routine checks and makes sure that the number of lines specified fit on the current page; otherwise, it issues a page break.

### Condition Values Returned

None

### Example

```
sda$ensure (5);
```

This call ensures that there are five lines left on the current page, and it outputs a page break if there are not.

## SDA Extension Routines

### SDA\$FORMAT

---

## SDA\$FORMAT

Displays the formatted contents of a data structure.

### Format

```
void sda$format (VOID_PQ struct_addr, __optional_params);
```

### Arguments

#### **struct\_addr**

OpenVMS usage address  
type quadword (unsigned)  
access read only  
mechanism by value

The address in the system dump of the data structure to be formatted.

#### **options**

OpenVMS usage mask\_longword  
type longword (unsigned)  
access read only  
mechanism by value

The following provides more information on options:

| Option                     | Meaning                                                                               |
|----------------------------|---------------------------------------------------------------------------------------|
| None                       | Uses structure type from the xxx\$B_TYPE field of the structure. This is the default. |
| SDA_OPT\$M_FORMAT_TYPE     | Uses the structure type given in struct_prefix.                                       |
| SDA_OPT\$M_FORMAT_PHYSICAL | Indicates that struct_addr is a physical address instead of a virtual address.        |

#### **struct\_prefix**

OpenVMS usage char\_string  
type character string  
access read only  
mechanism by reference

Address of structure name string (zero-terminated).

### Description

This routine displays the formatted content of a data structure that begins at the address specified. If no symbol prefix is passed, then SDA tries to find the symbols associated with the block type specified in the block-type byte of the data structure.

## Condition Values Returned

None

## Example

```
PCB *local_pcb;  
PHD *local_phd;  
...  
sda$format (local_pcb);  
sda$format (local_phd, SDA_OPT$M_FORMAT_TYPE, "PHD");
```

The first call formats the structure whose system address is held in the variable LOCAL\_PCB, determining the type from the type byte of the structure. The second call formats the structure whose system address is held in the variable LOCAL\_PHD, using PHD symbols.

## SDA Extension Routines

### SDA\$FORMAT\_HEADING

---

## SDA\$FORMAT\_HEADING

Formats a new page heading.

### Format

```
void sda$format_heading (char *ctrstr, __optional_params);
```

### Arguments

#### **ctrstr**

|               |                             |
|---------------|-----------------------------|
| OpenVMS usage | char_string                 |
| type          | character-coded text string |
| access        | read only                   |
| mechanism     | by reference                |

Address of control string (zero-terminated ASCII string).

#### **prmlst**

|               |                               |
|---------------|-------------------------------|
| OpenVMS usage | varying_arg                   |
| type          | quadword (signed or unsigned) |
| access        | read only                     |
| mechanism     | by value                      |

FAO parameters that are optional. All arguments after the control string are copied into a quadword parameter list as used by SFAOL\_64.

### Description

This routine prepares and saves the page heading to be used whenever SDA\$NEW\_PAGE is called. Nothing is output either until SDA\$NEW\_PAGE is next called, or a page break is necessary because the current page is full.

### Condition Values Returned

None

If the SFAOL\_64 call issued by SDA\$FORMAT\_HEADING fails, an empty string is used as the page heading.

### Example

```
char hw_name[64];  
...  
sda$get_hw_name (hw_name, sizeof(hw_name));  
sda$format_heading (  
    "SDA Extension Commands, system type !AZ",  
    &hw_name);  
sda$new_page ();
```

This example produces the following heading:

```
SDA Extension Commands, system type DEC 3000 Model 400  
-----
```



---

## SDA\$GET\_ADDRESS

Gets the address value of the current memory location.

### Format

```
void sda$get_address (VOID_PQ *address);
```

### Argument

|                |                     |
|----------------|---------------------|
| <b>address</b> |                     |
| OpenVMS usage  | quadword_unsigned   |
| type           | quadword (unsigned) |
| access         | write only          |
| mechanism      | by reference        |

Location to store the current 64-bit memory address.

### Description

Returns the current address being referenced by SDA (location ".").

### Condition Values Returned

None

### Example

```
VOID_PQ current_address;  
...  
sda$get_address (&current_address);
```

This call stores SDA's current memory location in the long pointer CURRENT\_ADDRESS.

## SDA\$GET\_BLOCK\_NAME

Returns the name of a structure, given its type and/or subtype.

### Format

```
void sda$extend_get_block_name (uint32 block_type, uint32 block_subtype,  
char *buffer_ptr, uint32 buffer_len);
```

### Arguments

#### **block\_type**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Block type in range 0 - 255 (usually extracted from xxx\$b\_type field).

#### **block\_subtype**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Block subtype in range 0 - 255 (ignored if the given block type has no subtypes).

#### **buffer\_ptr**

|               |                  |
|---------------|------------------|
| OpenVMS usage | char_string      |
| type          | character string |
| access        | write only       |
| mechanism     | by reference     |

Address of buffer to save block name, which is returned as a zero-terminated string.

#### **buffer\_len**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Length of buffer to receive block name.

### Description

Given the block type and/or subtype of a structure, this routine returns the name of the structure. If the structure type is one that has no subtypes, the given subtype is ignored. If the structure type is one that has subtypes, and the subtype is given as zero, the name of the block type itself is returned. If an invalid type or subtype (out of range) is given, an empty string is returned.

---

**Note**

---

The buffer should be large enough to accommodate the largest possible block name (25 bytes plus the termination byte). The block name is truncated if it is too long for the supplied buffer.

---

## Condition Values Returned

None

## Example

```
char buffer[32];
...
sda$get_block_name (0x6F, 0x20,
    buffer,
    sizeof (buffer));
if (strlen (buffer) == 0)
    sda$print ("Block type: no named type/subtype");
else
    sda$print ("Block type: !AZ", buffer);
```

**This example produces the following output:**

```
Block type: VCC_CFCB
```

---

## SDA\$GET\_BUGCHECK\_MSG

Gets the text associated with a bugcheck code.

### Format

```
void sda$get_bugcheck_msg (uint32 bugcheck_code, char *buffer_ptr, uint32  
buffer_size);
```

### Arguments

#### **bugcheck\_code**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

The bugcheck code to look up.

#### **buffer\_ptr**

|               |                  |
|---------------|------------------|
| OpenVMS usage | char_string      |
| type          | character string |
| access        | write only       |
| mechanism     | by reference     |

Address of buffer to save bugcheck message.

#### **buffer\_len**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Length of buffer to receive message.

### Description

Gets the string representing the bugcheck code passed as the argument. The bugcheck message string is passed in the buffer (represented as a pointer and length) as a zero-terminated ASCII string.

---

#### **Note**

---

The buffer should be large enough to accomodate the largest possible bugcheck message (128 bytes including the termination byte). The text is terminated if it is too long for the supplied buffer.

---

### Condition Values Returned

None

## **Example**

```
char buffer[128];  
...  
sda$get_bugcheck_msg (0x108, buffer, sizeof(buffer));  
sda$print ("Bugcheck code 108 (hex) =");  
sda$print ("!_\"!AZ\"", buffer);
```

**This example produces the following output:**

```
Bugcheck code 108 (hex) =  
"DOUBLDALOC, Double deallocation of swap file space"
```

## SDA\$GET\_CURRENT\_CPU

Gets the CPU database address of the currently selected CPU.

### Format

```
void sda$get_current_cpu (cpu **cpudb);
```

### Arguments

|               |                     |
|---------------|---------------------|
| <b>cpudb</b>  |                     |
| OpenVMS usage | address             |
| type          | longword (unsigned) |
| access        | write only          |
| mechanism     | by reference        |

Location to which the address of the CPU database is to be returned.

### Description

This routine causes SDA to return the address of the database for the currently selected CPU.

### Condition Values Returned

None

### Example

```
#include <cpudb>  
CPU *current_cpu;  
sda$get_current_cpu ( &current_cpu );
```

In this example, the system address of the database for the current CPU is returned in variable *current\_cpu*.

---

## SDA\$GET\_CURRENT\_PCB

Gets the PCB address of the "SDA current process" currently selected.

### Format

```
void sda$get_current_pcb (PCB **pcbaddr);
```

### Argument

|                |                     |
|----------------|---------------------|
| <b>pcbaddr</b> |                     |
| OpenVMS usage  | quadword_unsigned   |
| type           | quadword (unsigned) |
| access         | write only          |
| mechanism      | by reference        |

Location in which to store the current PCB address.

### Description

The PCB address of the process currently selected by SDA is returned in the specified location.

### Condition Values Returned

None

### Example

```
PCB *current_pcb;  
...  
sda$get_current_pcb ( &current_pcb );
```

This call stores the system address of the PCB of the process currently being referenced by SDA in the pointer CURRENT\_PCB.

---

## SDA\$GET\_HEADER

Returns pointers to local copies of the dump file header and the error log buffer together with the sizes of those data structures.

### Format

```
void sda$get_header (DMP **dmp_header, uint32 *dmp_header_size, void  
**errlog_buf, uint32 *errlog_buf_size);
```

### Arguments

#### **dmp\_header**

OpenVMS usage address  
type longword (unsigned)  
access write only  
mechanism by reference

Location in which to store the address of the copy of the dump file header held by SDA.

#### **dmp\_header\_size**

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access write only  
mechanism by reference

Location in which to store the size of the dump file header.

#### **errlog\_buf**

OpenVMS usage address  
type longword (unsigned)  
access write only  
mechanism by reference

Location in which to store the address of the copy of the error log buffer held by SDA.

#### **errlog\_buf\_size**

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access write only  
mechanism by reference

Location in which to store the size of the error log buffer.

### Description

This routine returns the addresses and sizes of the dump header and error logs read by SDA when the dump file is opened. If this routine is called when the running system is being analyzed with ANALYZE/SYSTEM, then the following occurs:

- Returns the address and size of SDA's dump header buffer, but the header contains zeroes
- Returns zeroes for the address and size of SDA's error log buffer



## Condition Values Returned

None

## Example

```
DMP *dmp_header;  
uint32 dmp_header_size;  
char *errlog_buffer;  
uint32 errlog_buffer_size;  
...  
sda$get_header (&dmp_header,  
               &dmp_header_size,  
               (void **)&errlog_buffer,  
               &errlog_buffer_size);
```

This call stores the address and size of SDA's copy of the dump file header in DMP\_HEADER and DMP\_HEADER\_SIZE, and stores the address and size of SDA's copy of the error log buffers in ERRLOG\_BUFFER and ERRLOG\_BUFFER\_SIZE, respectively.

## SDA\$GET\_HW\_NAME

Returns the full name of the hardware platform where the dump was written.

### Format

```
void sda$get_hw_name (char *buffer_ptr, uint32 buffer_len);
```

### Arguments

**buffer\_ptr**

|               |                  |
|---------------|------------------|
| OpenVMS usage | char_string      |
| type          | character string |
| access        | write only       |
| mechanism     | by reference     |

Address of buffer to save HW name.

**buffer\_len**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Length of buffer to receive HW name.

### Description

Returns a zero-terminated ASCII string representing the platform hardware name and puts it in the buffer passed as the argument.

---

**Note**

---

The buffer should be large enough to accommodate the largest possible hardware platform name (120 bytes including the termination byte). The name is truncated if it is too long for the supplied buffer.

---

### Condition Values Returned

None

### Example

```
char hw_name[64];  
...  
sda$get_hw_name (hw_name, sizeof(hw_name));  
sda$print ("Platform name: \"!AZ\"", hw_name);
```

This example produces output of the form:

```
Platform name: "DEC 3000 Model 400"
```

---

## SDA\$GET\_IMAGE\_OFFSET

Maps a given virtual address onto an image or execlct.

### Format

```
COMP_IMG_OFF sda$get_image_offset (VOID_PQ va, VOID_PQ img_info,  
VOID_PQ subimg_info, VOID_PQ offset);
```

### Arguments

#### **va**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | address             |
| type          | quadword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Virtual address of interest.

#### **img\_info**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | address             |
| type          | quadword (unsigned) |
| access        | write only          |
| mechanism     | by reference        |

Pointer to return addr of LDRIMG or IMCB block.

#### **subimg\_info**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | address             |
| type          | quadword (unsigned) |
| access        | write only          |
| mechanism     | by reference        |

Pointer to return addr of ISD\_OVERLAY or KFERES.

#### **offset**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | quadword_unsigned   |
| type          | quadword (unsigned) |
| access        | write only          |
| mechanism     | by reference        |

Pointer to address to return offset from image.

### Description

Given a virtual address, this routine finds in which image it falls and returns the image information and offset. The loaded image list is traversed first to find this information. If it is not found, then the activated image list of the currently selected process is traversed. If still unsuccessful, then the resident installed images are checked.

## SDA Extension Routines

### SDA\$GET\_IMAGE\_OFFSET

#### Condition Values Returned

|                       |                                                          |
|-----------------------|----------------------------------------------------------|
| SDA_CIO\$V_VALID      | Set if image offset is found                             |
| SDA_CIO\$V_PROCESS    | Set if image is an activated image                       |
| SDA_CIO\$V_SLICED     | Set if the image is sliced                               |
| SDA_CIO\$V_COMPRESSED | Set if activated image contains compressed data sections |
| SDA_CIO\$V_ISD_INDEX  | Index into ISD_LABELS table (only for LDRIMG execlts)    |

The status returned indicates the type of image if a match was found.

| SDA_CIO\$V_xxx flags set:  | img_info type: | subimg_info type: |
|----------------------------|----------------|-------------------|
| valid                      | LDRIMG         | n/a               |
| valid && sliced            | LDRIMG         | ISD_OVERLAY       |
| valid && process           | IMCB           | n/a               |
| valid && process && sliced | IMCB           | KFERES_SECTION    |

#### Example

```
VOID_PQ va = (VOID_PQ)0xFFFFFFFF80102030;
COMP_IMG_OFF sda_cio;
int64 img_info;
int64 subimg_info;
int64 offset;
...
sda_cio = sda$get_image_offset (va,
    &img_info,
    &subimg_info,
    &offset);
```

For an example of code that interprets the returned COMP\_IMG\_OFF structure, see the supplied example program, SYS\$EXAMPLES:MBX\$SDA.C.

---

## SDA\$GET\_INPUT

Reads input commands.

### Format

```
int sda$get_input (char *prompt, char *buffer, uint32 buflen);
```

### Arguments

#### prompt

OpenVMS usage char\_string  
type character string  
access read only  
mechanism by reference

Address of prompt string (zero-terminated ASCII string).

#### buffer

OpenVMS usage char\_string  
type character string  
access write only  
mechanism by reference

Address of buffer to store command.

#### buflen

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

Maximum length of buffer.

### Description

The command entered is returned as a zero-terminated string. The string is not uppercased. If you do not enter input but simply press <return> or <ctrl/Z>, the routine returns a null string.

### Condition Values Returned

|            |                        |
|------------|------------------------|
| SS\$NORMAL | Successful completion. |
| RMS\$EOF   | User pressed <ctrl/Z>  |

### Example

```
int status;
char buffer[128];
...
status = sda$get_input ( "MBX> ", buffer, sizeof (buffer) );
```

This call prompts you for input with "MBX> " and stores the response in the buffer.

## SDA\$GET\_LINE\_COUNT

Obtains the number of lines currently printed on the current page.

### Format

```
void sda$get_line_count (uint32 *line_count);
```

### Argument

|                   |                     |
|-------------------|---------------------|
| <b>line_count</b> |                     |
| OpenVMS usage     | longword_unsigned   |
| type              | longword (unsigned) |
| access            | write only          |
| mechanism         | by reference        |

The number of lines printed on current page.

### Description

Returns the number of lines that have been printed so far on the current page.

### Condition Values Returned

None

### Example

```
uint32 line_count;  
...  
sda$get_line_count (&line_count);
```

This call copies the current line count on the current page of output to the location `LINE_COUNT`.

---

## SDA\$GETMEM

Reads dump or system memory and signals a warning if inaccessible.

### Format

```
int sda$getmem (VOID_PQ start, void *dest, int length, __optional_params);
```

### Arguments

#### start

OpenVMS usage address  
type quadword (unsigned)  
access read only  
mechanism by value

Starting virtual address in dump or system.

#### dest

OpenVMS usage address  
type varies  
access write only  
mechanism by reference

Return buffer address.

#### length

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

Length of transfer.

#### physical

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

0: <start> is a virtual address. This is the default.

1: <start> is a physical address.

### Description

This routine transfers an area from the memory in the dump file or the running system to the caller's return buffer. It performs the necessary address translation to locate the data in the dump file. SDA\$GETMEM signals a warning and returns an error status if the data is inaccessible.

#### Related Routines

SDA\$REQMEM and SDA\$TRYMEM

## SDA Extension Routines

### SDA\$GETMEM

#### Condition Values Returned

|                 |                                           |
|-----------------|-------------------------------------------|
| SDA\$_SUCCESS   | Successful completion                     |
| SDA\$_NOREAD    | The data is inaccessible for some reason. |
| SDA\$_NOTINPHYS | The data is inaccessible for some reason. |
| Others          | The data is inaccessible for some reason. |

If a failure status code is returned, it has already been signaled as a warning.

#### Example

```
int status;
PCB *current_pcb;
PHD *current_phd;
...
status = sda$getmem ((VOID_PQ)&current_pcb->pcb$l_phd, &current_phd, 4);
```

This call returns the contents of the PCB\$L\_PHD field of the PCB, whose system address is in the pointer CURRENT\_PCB, to the pointer CURRENT\_PHD.



## SDA\$INSTRUCTION\_DECODE

Translates one Alpha machine instruction into the assembler string equivalent.

### Format

```
int sda$instruction_decode (void *istream_ptr, char *buffer, uint32 buflen);
```

### Arguments

#### **istream\_ptr**

OpenVMS usage address  
 type longword (unsigned)  
 access read/write  
 mechanism by reference

Address of the pointer that points to a copy of the i-stream in a local buffer.

#### **buffer**

OpenVMS usage char\_string  
 type character string  
 access write only  
 mechanism by reference

Address of a string buffer into which to store the output assembler string.

#### **buflen**

OpenVMS usage longword\_unsigned  
 type longword (unsigned)  
 access read only  
 mechanism by value

Maximum size of the string buffer.

### Description

Translates an Alpha machine instruction into the assembler string equivalent. Alpha instructions are always 4 bytes long. The instruction stream must first be read into local memory and then the address of a pointer to the local copy of the instruction stream is passed to the routine. For every successful translated instruction, the pointer is automatically updated to point to the next instruction.

The output assembler string is zero-terminated and in case of a failure a null string is returned.

### Condition Values Returned

|               |                                                                                                                                                 |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| SS\$_NORMAL   | Successful completion.                                                                                                                          |
| SS\$_BADPARAM | Any of the following failures:<br>Output buffer too small<br>Invalid register<br>Invalid opcode class/format<br>Could not translate instruction |

Status returns one of the above.

## SDA Extension Routines

### SDA\$INSTRUCTION\_DECODE

#### Example

```
int status;
VOID_PQ va = (VOID_PQ)0xFFFFFFFF80102030;
uint32 instruction;
uint32 *istream = &instruction;
char buffer[64];
...
sda$reqmem (va, &instruction, 4);
status = sda$instruction_decode (&istream, buffer, sizeof (buffer));
```

**This example reads the instruction at dump location VA and decodes it, putting the result into BUFFER. Pointer ISTREAM is incremented (to the next longword).**

## SDA\$NEW\_PAGE

Begins a new page of output.

### Format

```
void sda$new_page ();
```

### Arguments

None.

### Description

This routine causes a new page to be written and outputs the page heading (established with SDA\$FORMAT\_HEADING) and the current subheading (established with SDA\$SET\_HEADING\_ROUTINE).

### Condition Values Returned

None

### Example

```
sda$new_page ();
```

This call outputs a page break and displays the current page heading and subheading (if any).

## SDA Extension Routines

### SDA\$PARSE\_COMMAND

---

## SDA\$PARSE\_COMMAND

Parses and executes an SDA command line.

### Format

```
void sda$parse_command (char *cmd_line, __optional_params);
```

### Arguments

#### **cmd\_line**

OpenVMS usage char\_string  
type character string  
access read only  
mechanism by reference

Address of a valid SDA command line (zero-terminated).

#### **options**

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

The **options** argument has the following values:

| Value                      | Meaning                                                                        |
|----------------------------|--------------------------------------------------------------------------------|
| SDA_OPT\$K_PARSE_DONT_SAVE | Indicates "do not save this command." This is the default.                     |
| SDA_OPT\$K_PARSE_SAVE      | Indicates "save this command." That is, it can be recalled with KP0 or REPEAT. |

### Description

Not every SDA command has a callable extension interface. For example, to redirect SDA's output, you would pass the command string "SET OUTPUT MBX.LIS" to this parse command routine. Abbreviations are allowed.

### Condition Values Returned

None

### Example

```
sda$parse_command ("SHOW ADDRESS 80102030");
```

This call produces the following output:

## SDA Extension Routines SDA\$PARSE\_COMMAND

FFFFFFFF.80102030 is an S0/S1 address

Mapped by Level-3 PTE at: FFFFFFFD.FFE00408

Mapped by Level-2 PTE at: FFFFFFFD.FF7FF800

Mapped by Level-1 PTE at: FFFFFFFD.FF7FDF8

Mapped by Selfmap PTE at: FFFFFFFD.FF7FDF0

Also mapped in SPT window at: FFFFFFFF.FFDF0408

**The "SHOW ADDRESS" command is not recorded as the most recent command for use with the KP0 key or the REPEAT command.**

## SDA\$PRINT

Formats and prints a single line.

### Format

```
int sda$print (char *ctrstr, __optional_params);
```

### Arguments

#### **ctrstr**

|               |                             |
|---------------|-----------------------------|
| OpenVMS usage | char_string                 |
| type          | character-coded text string |
| access        | read only                   |
| mechanism     | by reference                |

Address of a zero-terminated control string.

#### **prmlst**

|               |                               |
|---------------|-------------------------------|
| OpenVMS usage | varying_arg                   |
| type          | quadword (signed or unsigned) |
| access        | read only                     |
| mechanism     | by value                      |

Optional FAO parameters. All arguments after the control string are copied into a quadword parameter list, as used by \$FAOL\_64.

### Description

Formats and prints a single line. This is normally output to the terminal, unless you used the SDA commands SET OUTPUT or SET LOG to redirect or copy the output to a file.

### Condition Values Returned

|                 |                                                                                                                                                     |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| SDA\$_SUCCESS   | Indicates a successful completion.                                                                                                                  |
| SDA\$_CNFLTARGS | Indicates more than twenty FAO parameters given.                                                                                                    |
| Other           | Returns from the \$PUT issued by SDA\$PRINT (the error is also signaled). If the \$FAOL_64 call issued by SDA\$PRINT fails, a blank line is output. |

## Example

```
char buffer[32];  
...  
sda$get_block_name (0x6F, 0x20,  
    buffer,  
    sizeof (buffer));  
sda$print ("Block type: !AZ", buffer);
```

**This example outputs the following line:**

```
Block type: VCC_CFCB
```

## SDA Extension Routines

### SDA\$READ\_SYMFILE

---

## SDA\$READ\_SYMFILE

Reads symbols from a given file.

### Format

```
int sda$read_symfile (char *filespec, uint32 options, __optional_params);
```

### Arguments

#### filespec

OpenVMS usage char\_string  
type character string  
access read only  
mechanism by reference

Address of file or directory specification from which to read the symbols (zero-terminated ASCII string).

#### options

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

Indicates type of symbol file and flags, as shown in the following:

| Flags                    | Effect                                  |
|--------------------------|-----------------------------------------|
| SDA_OPT\$M_READ_FORCE    | read/force <file>                       |
| SDA_OPT\$M_READ_IMAGE    | read/image <file>                       |
| SDA_OPT\$M_READ_SYMVA    | read/symva <file>                       |
| SDA_OPT\$M_READ_RELO     | read/relo <file>                        |
| SDA_OPT\$M_READ_EXEC     | read/exec [<dir>]                       |
| SDA_OPT\$M_READ_NOLOG    | /nolog, suppress count of symbols read  |
| SDA_OPT\$M_READ_FILESPEC | <file> or <dir> given                   |
| SDA_OPT\$M_READ_NOSIGNAL | return status, without signaling errors |

#### relocate\_base

OpenVMS usage address  
type longword (unsigned)  
access read only  
mechanism by value

Base address for symbols (nonsliced symbols).

#### symvect\_va

OpenVMS usage address  
type longword (unsigned)  
access read only  
mechanism by value

The symbol vector address (symbols are offsets into the symbol vector).



**symvect\_size**

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

Size of symbol vector.

**loaded\_img\_info**

OpenVMS usage address  
type longword (unsigned)  
access read only  
mechanism by reference

The address of \$LDRIMG data structure with execlet information.

**Description**

This command reads symbols from a given file to add symbol definitions to the working symbol table by reading GST entries. The file is usually a symbol file (.STB) or an image (.EXE). If SDA\_OPT\$M\_READ\_EXEC is specified in the options, then the filespec is treated as a directory specification, where symbol files and/or image files for all execlets may be found (à la READ/EXECUTIVE). If no directory specification is given, the logical name SDA\$READ\_DIR is used.

Note that when SDA reads symbol files and finds routine names, the symbol name that matches the routine name is set to the address of the procedure descriptor. A second symbol name, the routine name with "\_C" appended, is set to the start of the routine's prologue.

**Condition Values Returned**

|                 |                                                     |
|-----------------|-----------------------------------------------------|
| SDA\$_SUCCESS   | Successful completion.                              |
| SDA\$_CNFLTARGS | No filename given and SDA_OPT\$M_READ_EXEC not set. |

Others errors are signaled and/or returned, exactly as though the equivalent SDA READ command had been used. Use HELP/MESSAGE for explanations.

**Example**

```
sda$read_symfile ("SDA$READ_DIR:SYSDEF", SDA_OPT$M_READ_NOLOG);
```

The symbols in SYSDEF.STB are added to SDA's internal symbol table, and the number of symbols found is not output to the terminal.

## SDA Extension Routines

### SDA\$REQMEM

---

## SDA\$REQMEM

Reads dump or system memory and signals an error if inaccessible.

### Format

```
int sda$reqmem (VOID_PQ start, void *dest, int length, __optional_params);
```

### Arguments

#### start

OpenVMS usage address  
type quadword (unsigned)  
access read only  
mechanism by value

Starting virtual address in dump or system.

#### dest

OpenVMS usage address  
type varies  
access write only  
mechanism by reference

Return buffer address.

#### length

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

Length of transfer.

#### physical

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

0: <start> is a virtual address. This is the default.

1: <start> is a physical address.

### Description

This routine transfers an area from the memory in the dump file or the running system to the caller's return buffer. It performs the necessary address translation to locate the data in the dump file. SDA\$REQMEM signals an error and aborts the current command if the data is inaccessible.

#### Related Routines

SDA\$GETMEM and SDA\$TRYMEM

## Condition Values Returned

SDA\$\_SUCCESS                      Successful completion.  
Any failure is signaled as an error and the current command aborts.

## Example

```
VOID_PQ address;  
uint32 instruction;  
...  
sda$symbol_value ("EXE_STD$ALLOCATE_C", (uint64 *)&address);  
sda$reqmem (address, &instruction, 4);
```

**This example reads the first instruction of the routine EXE\_STD\$ALLOCATE into the location INSTRUCTION.**

## SDA\$SET\_ADDRESS

Stores a new address value as the current memory address (".").

### Format

```
void sda$set_address (VOID_PQ address);
```

### Argument

|                |                     |
|----------------|---------------------|
| <b>address</b> |                     |
| OpenVMS usage  | quadword_unsigned   |
| type           | quadword (unsigned) |
| access         | read only           |
| mechanism      | by value            |

Address value to store in current memory location.

### Description

The specified address becomes SDA's current memory address (the predefined SDA symbol ".").

### Condition Values Returned

None

### Example

```
sda$set_address ((VOID_PQ)0xFFFFFFFF80102030);
```

This call sets SDA's current address to FFFFFFFF.80102030.

---

## SDA\$SET\_CPU

Sets a new SDA CPU context.

### Format

```
int sda$set_cpu (int cpu_id);
```

### Arguments

|               |                     |
|---------------|---------------------|
| <b>cpu_id</b> |                     |
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

The desired CPU ID.

### Description

This routine causes SDA to set the specified CPU as the currently selected CPU.

### Condition Values Returned

|               |                        |
|---------------|------------------------|
| SDA\$_SUCCESS | Successful completion. |
|---------------|------------------------|

Any failure is signaled as an error and the current command aborts.

### Example

```
int cpu_id = 2;  
status = sda$set_cpu ( cpu_id );
```

In this example, SDA's current CPU context is set to the CPU whose number is held in the variable CPU\_ID.

## SDA Extension Routines

### SDA\$SET\_HEADING\_ROUTINE

---

## SDA\$SET\_HEADING\_ROUTINE

Sets the current heading routine to be called after each page break.

### Format

```
void sda$set_heading_routine (void (*heading_rtn) ());
```

### Argument

**heading\_rtn**

|               |                 |
|---------------|-----------------|
| OpenVMS usage | procedure       |
| type          | procedure value |
| access        | read only       |
| mechanism     | by value        |

Address of routine to be called after each new page.

### Description

When SDA begins a new page of output (either because SDA\$NEW\_PAGE was called, or because the current page is full), it outputs two types of headings. The first is the page title, and is set by calling the routine SDA\$FORMAT\_HEADING. This is the title that is included in the index page of a listing file when you issue a SET OUTPUT command. The second heading is typically for column headings, and as this can vary from display to display, you must write a routine for each separate heading. When you call SDA\$SET\_HEADING\_ROUTINE to specify a user-written routine, the routine is called each time SDA begins a new page.

To stop the routine from being invoked each time SDA begins a new page, call either SDA\$FORMAT\_HEADING to set a new page title, or SDA\$SET\_HEADING\_ROUTINE and specify the routine address as NULL.

If the column headings need to be output during a display (that is, in the middle of a page), and then be re-output each time SDA begins a new page, call the user-written routine directly the first time, then call SDA\$SET\_HEADING\_ROUTINE to have it be called automatically thereafter.

### Condition Values Returned

None

## Example

```
void mbx$title (void)
{
  sda$print ("Mailbox      UCB      ...");
  sda$print ("  Unit      Address  ...");
  sda$print ("-----");
  return;
}
...
sda$set_heading_routine (mbx$title);
...
sda$set_heading_routine (NULL);
```

**This example sets the heading routine to the routine MBX\$TITLE, and later clears it. The routine is called if any page breaks are generated by the intervening code.**

## SDA\$SET\_LINE\_COUNT

Sets the number of lines printed so far on the current page.

### Format

```
void sda$set_line_count (uint32 line_count);
```

### Argument

|                   |                     |
|-------------------|---------------------|
| <b>line_count</b> |                     |
| OpenVMS usage     | longword_unsigned   |
| type              | longword (unsigned) |
| access            | read only           |
| mechanism         | by value            |

The number of lines printed on current page.

### Description

The number of lines that have been printed so far on the current page is set to the given value.

### Condition Values Returned

None

### Example

```
sda$set_line_count (5);
```

This call sets SDA's current line count on the current page of output to 5.



---

## SDA\$SET\_PROCESS

Sets a new SDA process context.

### Format

```
int sda$set_process (const char *proc_name, int proc_index, int proc_addr);
```

### Arguments

#### **proc\_name**

|               |                  |
|---------------|------------------|
| OpenVMS usage | character_string |
| type          | character string |
| access        | read only        |
| mechanism     | by reference     |

Address of the process name string (zero-terminated).

#### **proc\_index**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

The index of the desired process.

#### **proc\_addr**

|               |                     |
|---------------|---------------------|
| OpenVMS usage | address             |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

The address of the PCB for the desired process.

### Description

This routine causes SDA to set the specified process as the currently selected process.

---

**Note**

---

The `proc_name`, `proc_index`, and `proc_addr` are mutually exclusive.

---

### Condition Values Returned

|               |                        |
|---------------|------------------------|
| SDA\$_SUCCESS | Successful completion. |
|---------------|------------------------|

Any failure is signaled as an error and the current command aborts.

### Example

```
status = sda$set_process ( "JOB_CONTROL", 0, 0);
```

In this example, SDA's current process context is set to the `JOB_CONTROL` process.

## **SDA\$SKIP\_LINES**

This routine outputs a specified number of blank lines.

### **Format**

```
void sda$skip_lines (uint32 lines);
```

### **Argument**

|               |                     |
|---------------|---------------------|
| <b>lines</b>  |                     |
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Number of lines to skip.

### **Description**

The specified number of blank lines are output.

### **Condition Values Returned**

None

### **Example**

```
sda$skip_lines (2);
```

This call causes two blank lines to be output.

---

## SDA\$SYMBOL\_VALUE

Obtains the 64-bit value of a specified symbol.

### Format

```
int sda$symbol_value (char *symb_name, uint64 *symb_value);
```

### Arguments

#### **symb\_name**

OpenVMS usage char\_string  
type character string  
access read only  
mechanism by reference

Zero-terminated string containing symbol name.

#### **symb\_value**

OpenVMS usage quadword\_unsigned  
type quadword (unsigned)  
access write only  
mechanism by reference

Address to receive symbol value.

### Description

A search through SDA's symbol table is made for the specified symbol. If found, its 64-bit value is returned.

### Condition Values Returned

|               |                   |
|---------------|-------------------|
| SDA\$_SUCCESS | Symbol found.     |
| SDA\$_BADSYM  | Symbol not found. |

### Example

```
int status;
VOID_PQ address;
...
status = sda$symbol_value ("EXE_STD$ALLOCATE_C", (uint64 *)&address);
```

This call returns the start address of the prologue of routine EXE\_STD\$ALLOCATE to location ADDRESS.

## SDA\$SYMBOLIZE

Converts a value to a symbol name and offset.

### Format

```
int sda$symbolize (uint64 value, char *symbol_buf, uint32 symbol_len);
```

### Arguments

#### value

OpenVMS usage quadword\_unsigned  
type quadword (unsigned)  
access read only  
mechanism by value

Value to be translated.

#### symbol\_buf

OpenVMS usage char\_string  
type character string  
access write only  
mechanism by reference

Address of buffer to which to return string.

#### symbol\_len

OpenVMS usage longword\_unsigned  
type longword (unsigned)  
access read only  
mechanism by value

Maximum length of string buffer.

### Description

This routine accepts a value and returns a string that contains a symbol and offset corresponding to that value. First the value is checked in the symbol table. If no symbol can be found (either exact match or up to 0XFFF less than the specified value), the value is then checked to see if it falls within one of the loaded or activated images.

### Condition Values Returned

|                |                                                         |
|----------------|---------------------------------------------------------|
| SS\$_NORMAL    | Successful completion.                                  |
| SS\$_BUFFEROVF | Buffer too small, string truncated.                     |
| SS\$_NOTRAN    | No symbolization for this value (null string returned). |

**Example**

```
VOID_PQ va = VOID_PQ(0xFFFFFFFF80102030);  
char buffer [64]  
status = sda$symbolize (va, buffer, sizeof(buffer));  
sda$print ("FFFFFFFF.80102030 = \"!AZ\"", buffer);
```

**This example outputs the following:**

```
FFFFFFFF.80102030 = "EXE$WRITE_PROCESS_C+00CD0"
```

## SDA\$TRYMEM

Reads dump or system memory and returns the error status (without signaling) if inaccessible.

### Format

```
int sda$trymem (VOID_PQ start, void *dest, int length, __optional_params);
```

### Arguments

#### start

|               |                     |
|---------------|---------------------|
| OpenVMS usage | address             |
| type          | quadword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Starting virtual address in dump or system.

#### dest

|               |              |
|---------------|--------------|
| OpenVMS usage | address      |
| type          | varies       |
| access        | write only   |
| mechanism     | by reference |

Return buffer address.

#### length

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

Length of transfer.

#### physical

|               |                     |
|---------------|---------------------|
| OpenVMS usage | longword_unsigned   |
| type          | longword (unsigned) |
| access        | read only           |
| mechanism     | by value            |

0: <start> is a virtual address. This is the default.

1: <start> is a physical address.

### Description

This routine transfers an area from the memory in the dump file or the running system to the caller's return buffer. It performs the necessary address translation to locate the data in the dump file. SDA\$TRYMEM does not signal any warning or errors. It returns the error status if the data is inaccessible.

#### Related Routines

SDA\$GETMEM and SDA\$REQMEM

## Condition Values Returned

|                 |                                           |
|-----------------|-------------------------------------------|
| SDA\$_SUCCESS   | Successful completion.                    |
| SDA\$_NOREAD    | The data is inaccessible for some reason. |
| SDA\$_NOTINPHYS | The data is inaccessible for some reason. |
| Others          | The data is inaccessible for some reason. |

## Example

```
int status;
DDB *ddb;
...
status = sda$trymem (ddb->ddb$ps_link, ddb, DDB$K_LENGTH);
if ($VMS_STATUS_SUCCESS (status))
    sda$print ("Next DDB is successfully read from dump");
else
    sda$print ("Next DDB is inaccessible");
```

This example attempts to read the next DDB in the DDB list from the dump.

## SDA\$TYPE

Formats and types a single line to SYSSOUTPUT.

### Format

```
int sda$type (char *ctrstr, __optional_params);
```

### Arguments

#### **ctrstr**

|               |                             |
|---------------|-----------------------------|
| OpenVMS usage | char_string                 |
| type          | character-coded text string |
| access        | read only                   |
| mechanism     | by reference                |

Address of a zero-terminated control string.

#### **prmlst**

|               |                               |
|---------------|-------------------------------|
| OpenVMS usage | varying_arg                   |
| type          | quadword (signed or unsigned) |
| access        | read only                     |
| mechanism     | by value                      |

Optional FAO parameters. All arguments after the control string are copied into a quadword parameter list, as used by \$FAOL\_64.

### Description

Formats and prints a single line to the terminal. This is unaffected by the use of the SDA commands SET OUTPUT or SET LOG.

### Condition Values Returned

|                 |                                                                                                                                                   |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| SDA\$_SUCCESS   | Indicates a successful completion.                                                                                                                |
| SDA\$_CNFLTARGS | Indicates more than twenty FAO parameters given.                                                                                                  |
| Other           | Returns from the \$PUT issued by SDA\$TYPE (the error is also signaled). If the \$FAOL_64 call issued by SDA\$TYPE fails, a blank line is output. |

### Example

```
int status;  
...  
status = sda$type ("Invoking SHOW SUMMARY to output file...");
```

This example displays the message "Invoking SHOW SUMMARY to output file..." to the terminal.



---

## SDA\$VALIDATE\_QUEUE

Validates queue structures.

### Format

```
void sda$validate_queue (VOID_PQ queue_header, __optional_params);
```

### Arguments

#### queue\_header

OpenVMS usage address  
type quadword (unsigned)  
access read only  
mechanism by value

Address from which to start search.

#### options

OpenVMS usage mask\_longword  
type longword (unsigned)  
access read only  
mechanism by value

The following table shows the flags that indicate the type of queue:

| Flag                       | Meaning                                                                                            |
|----------------------------|----------------------------------------------------------------------------------------------------|
| None                       | Defaults to doubly-linked longword queue                                                           |
| SDA_OPT\$M_QUEUE_BACKLINK  | Validates the integrity of a doubly-linked queue using the back links instead of the forward links |
| SDA_OPT\$M_QUEUE_LISTQUEUE | Displays queue elements for debugging                                                              |
| SDA_OPT\$M_QUEUE_QUADLINK  | Indicates a quadword queue                                                                         |
| SDA_OPT\$M_QUEUE_SELF      | Indicates a self-relative queue                                                                    |
| SDA_OPT\$M_QUEUE_SINGLINK  | Indicates a singly-linked queue                                                                    |

### Description

You can use this routine to validate the integrity of double-linked, single-linked or self-relative queues either with longword or quadword links. If you specify the option SDA\_OPT\$M\_QUEUE\_LISTQUEUE, the queue elements are displayed for debugging. Otherwise a one-line summary indicates how many elements were found and whether the queue is intact.

### Condition Values Returned

None

If an error occurs, it is signaled by SDA\$VALIDATE\_QUEUE.

## SDA Extension Routines

### SDA\$VALIDATE\_QUEUE

#### Example

```
int64 temp;
int64 *queue;
...
sda$symbol_value ("EXE$GL_NONPAGED", &temp);
temp += 4;
sda$reqmem ((VOID_PQ)temp, &queue, 4);
sda$validate_queue (queue, SDA_OPT$M_QUEUE_SINGLINK);
```

**This sequence validates the nonpaged pool free list, and outputs a message of the form:**

```
Queue is zero-terminated, total of 204 elements in the queue
```

# Part II

---

## OpenVMS Alpha System Code Debugger & System Dump Debugger

Part II describes the System Code Debugger (SCD) and the System Dump Debugger (SDD). It presents how to use SCD and SDD by doing the following:

- Building a system image to be debugged
- Setting up the target system for connections
- Setting up the host system
- Starting SCD
- Troubleshooting connections and network failures
- Looking at a sample SCD session
- Analyzing memory as recorded in a system dump
- Looking at a sample SDD session



---

## The OpenVMS Alpha System Code Debugger

This chapter describes the OpenVMS Alpha System Code Debugger (SCD) and how it can be used to debug nonpageable system code and device drivers running at any interrupt priority level (IPL).

You can use SCD to perform the following tasks:

- Control the system software's execution—stop at points of interest, resume execution, intercept fatal exceptions, and so on
- Trace the execution path of the system software
- Monitor exception conditions
- Examine and modify the values of variables
- Test the effect of modifications, in some cases, without having to edit the source code, recompile, and relink

The use of SCD requires two systems:

- The host system, probably also the system where the image to be debugged has been built
- The target system, usually a standalone test system, where the image being debugged is executed

SCD is a symbolic debugger. You can specify variable names, routine names, and so on, precisely as they appear in your source code. SCD can also display the source code where the software is executing, and allow you to step by source line.

SCD recognizes the syntax, data typing, operators, expressions, scoping rules, and other constructs of a given language. If your code or driver is written in more than one language, you can change the debugging context from one language to another during a debugging session.

To use SCD, you must do the following:

- Build a system image or device driver to be debugged.
- Set up the target kernel on a standalone system.

The **target kernel** is the part of SCD that resides on the system that is being debugged. It is integrated with XDELTA and is part of the SYSTEM\_DEBUG execlset.

- Set up the host system environment, which is integrated with the OpenVMS Debugger.

The following sections cover these tasks in more detail, describe the available user-interface options, summarize applicable OpenVMS Debugger commands, and provide a sample SCD session.

# The OpenVMS Alpha System Code Debugger

## 8.1 User-Interface Options

### 8.1 User-Interface Options

SCD has the following user-interface options:

- A DECwindows Motif interface for workstations  
When using this interface, you interact with SCD by using a mouse and pointer to choose items from menus, click on buttons, select names in windows, and so on.  
Note that you can also use OpenVMS Debugger commands with the DECwindows Motif interface.
- A character cell interface for terminals and workstations  
When using this interface, you interact with SCD by entering commands at a prompt. The sections in this chapter describe how to use the system code debugger with the character cell interface.

For more information about using the OpenVMS DECwindows Motif interface and OpenVMS Debugger commands with SCD, see the *OpenVMS Debugger Manual*.

### 8.2 Building a System Image to Be Debugged

1. Compile the sources you want to debug, and be sure to use the `/DEBUG` and `/NOOPT` qualifiers.

---

**Note**

---

Debugging optimized code is much more difficult and is not recommended unless you know the Alpha architecture well. The instructions are reordered so much that single-stepping by source line will look like you are randomly jumping all over the code. Also note that you cannot access all variables. SCD reports that they are optimized away.

---

2. Link your image using the `/DSF` (debug symbol file) qualifier. Do not use the `/DEBUG` qualifier, which is for debugging user programs. The `/DSF` qualifier takes an optional filename argument similar to the `/EXE` qualifier. For more information, see the *OpenVMS Linker Utility Manual*. If you specify a name in the `/EXE` qualifier, you will need to specify the same name for the `/DSF` qualifier. For example, you would use the following command:

```
$ LINK/EXE=EXE$:MY_EXECLLET/DSF=EXE$:MY_EXECLLET OPTIONS_FILE/OPT
```

The `.DSF` and `.EXE` file names must be the same. Only the extensions will be different, that is `.DSF` and `.EXE`.

The contents of the `.EXE` file should be exactly the same as if you had linked without the `/DSF` qualifier. The `.DSF` file will contain the image header and all the debug symbol tables for `.EXE` file. It is not an executable file, and cannot be run or loaded.

3. Put the `.EXE` file on your target system.
4. Put the `.DSF` file on your host system, because when you use SCD to debug code in your image, it will try to look for a `.DSF` file first and then look for an `.EXE` file. The `.DSF` file is better because it has symbols in it. Section 8.4 describes how to tell SCD where to find your `.DSF` and `.EXE` files.

## 8.3 Setting Up the Target System for Connections

The target kernel is controlled by flags and devices specified when the system is booted, by XDELTA commands, by a configuration file, and by several system parameters. The following sections contain more information about these items.

### Boot Command

The form of the boot command varies depending on the type of OpenVMS Alpha system you are using. However, all boot commands have the concept of boot flags and boot devices as well as a way to save the default boot flags and devices. This section uses syntax from a DEC 3000 Model 400 Alpha Workstation in examples.

To use SCD, you must specify an Ethernet device with the boot command on the target system. The target system uses this device to communicate with the host debugger. It is currently a restriction that this device must not be used for anything else (either for booting or network software such as DECnet, TCP/IP products, and LAT products). Thus, you must also specify a different device from which to boot. For example, the following command will boot a DEC 3000 Model 400 from the DKB100 disk, and SCD will use the ESA0 Ethernet device.

```
>>> boot dkb100,esa0
```

To find out the Ethernet devices available on your system, enter the following command:

```
>>> show device
```

In addition to devices, you can also specify flags on the boot command line. Boot flags are specified as a hex number; each bit of the number represents a true or false value for a flag. The following flag values are relevant to the system code debugger.

- **8000**

This is the SCD boot flag. It enables operation of the target kernel. If this SCD boot flag is not set, not only will it be impossible to use SCD to debug the system, but the additional XDELTA commands related to the target kernel will generate an XDELTA error message. If this boot flag is set, SYSTEM\_DEBUG is loaded, and SCD is enabled.

- **0004**

This is the initial breakpoint boot flag. It controls whether the system calls INISBRK at the beginning and end of EXEC\_INIT. Notice that if SCD is the default debugger, the first breakpoint is not as early as it is for XDELTA. It is delayed until immediately after the PFN database is set up.

- **0002**

This is the XDELTA boot flag, which controls whether XDELTA is loaded. It behaves slightly differently when the SCD boot flag is also set.

If the SCD boot flag is clear, this flag simply determines if XDELTA is loaded. If the SCD boot flag is set, this flag determines whether XDELTA or the system code debugger is the default debugger. If the XDELTA flag is set, XDELTA will be the default debugger. In this state, the initial system breakpoints and any calls to INISBRK trigger XDELTA, and you must enter an XDELTA command to start using SCD. If the XDELTA boot flag is clear, the initial breakpoints and calls to INISBRK go to SCD. You cannot use XDELTA if the XDELTA boot flag is clear.

# The OpenVMS Alpha System Code Debugger

## 8.3 Setting Up the Target System for Connections

**Boot Command Example** The following command boots a DEC 3000 Model 400 from disk DKA0, enables SCD, defaults to using XDELTA, and takes the initial system boot breakpoints.

```
>>> boot dka0,esa0 -fl 0,8006
```

You can set these devices and flags to be the default values so that you will not have to specify them each time you boot the system. On a DEC 3000 Model 400, use the following commands:

```
>>> set bootdef_dev dka0,esa0
>>> set boot_osflags 0,8006
```

### SCD Configuration File

The SCD target system reads a configuration file in SYSSYSTEM named DBGTK\$CONFIG.SYS. The first line of this file contains a default password, which must be specified by the host debug system to connect to the target. The default password may be the null string; in this case the host must supply the null string as the password (/PASSWORD="") on the connect command as described in Section 8.5, or no password at all. Other lines in this file are reserved by Compaq. Note that you must create this file because Compaq does not supply it. If this file does not exist, you can only run SCD by specifying a default password with the XDELTA ;R command described in the following section.

### XDELTA Commands

When the system is booted with both the XDELTA boot flag and the SCD boot flag, the following two additional XDELTA commands are enabled:

- n,\xxxx;R ContRol SCD connection

You can use this command to do the following:

- Change the password which the SCD host must present
- Disconnect the current session from SCD
- Give control to SCD by simulating a call to INISBRK
- Any combination of these

Optional string argument xxxx specifies the password that the system code debugger must present for its connection to be accepted. If this argument is left out, the required password is unchanged. The initial password is taken from the first line of the SYSSYSTEM:DBGTK\$CONFIG.SYS file. The new password does not remain in effect across a boot of the target system.



## The OpenVMS Alpha System Code Debugger

### 8.3 Setting Up the Target System for Connections

The optional integer argument *n* controls the behavior of the ;R command as follows:

| Value of N | Action                                                                                                                                                                                  |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| +1         | Gives control to SCD by simulating a call to INISBRK                                                                                                                                    |
| +2         | Returns to XDELTA after changing the password. 2;R without a password is a no-op                                                                                                        |
| 0          | Performs the default action                                                                                                                                                             |
| -1         | Changes the password, breaks any existing connection to SCD, and then simulates a call to INISBRK (which will wait for a new connection to be established and then give control to SCD) |
| -2         | Returns to XDELTA after changing the password and breaking an existing connection                                                                                                       |

Currently, the default action is the same action as +1.

If SCD is already connected, the ;R command transfers control to SCD, and optionally changes the password that must be presented the next time a system code debugger tries to make a connection. This new password does not last across a boot of the target system.

- n;K Change inibrK behavior

If optional argument *n* is 1, future calls to INISBRK will result in a breakpoint being taken by SCD. If the argument is 0, or no argument is specified, future calls to INISBRK will result in a breakpoint being taken by XDELTA.

#### SYSTEM Parameters

- **DBGTK\_SCRATCH**

Bits 0 through 7 specify how many pages of memory are allocated for SCD. This memory is allocated only if system code debugging is enabled with the SCD boot flag (described earlier in this section). Usually, the default value of 1 is adequate; however, if SCD displays an error message, increase this value. Bits 8 through 31 are reserved by Compaq.

- **SCSNODE**

Identifies the target kernel node name for SCD. See Section 8.3.1 for more information.

#### 8.3.1 Making Connections Between the Target Kernel and the System Code Debugger

It is always SCD on the host system that initiates a connection to the target kernel. When SCD initiates this connection, the target kernel accepts or rejects the connection based on whether the remote debugger presents it with a node name and password that matches the password in the target system (either the default password from the SYS\$SYSTEM:DBGTK\$CONFIG.SYS file, or a different password specified via XDELTA). SCD obtains the node name from the SCSNODE system parameter.

The target kernel can accept a connection from SCD any time the system is running below IPL 22, or if XDELTA is in control (at IPL 31). However, the target kernel actually waits at IPL 31 for a connection from the SCD host in two cases: when it has no existing connection to an SCD host and (1) it

## The OpenVMS Alpha System Code Debugger

### 8.3 Setting Up the Target System for Connections

receives a breakpoint caused by a call to INISBRK (including either of the initial breakpoints), or (2) when you enter a 1;R or -1;R command to XDELTA.

#### 8.3.2 Interactions Between XDELTA and the Target Kernel/System Code Debugger

XDELTA and the target kernel are integrated into the same system. Normally, you choose to use one or the other. However, XDELTA and the target kernel can be used together. This section explains how they interoperate.

The XDELTA boot flag controls which debugger (XDELTA or the SCD target kernel) gets control first. If it is not set, the target kernel gets control first, and it is not possible to use XDELTA without rebooting. If it is set, XDELTA gets control first, but you can use XDELTA commands to switch to the target kernel and to switch INISBRK behavior such that the target kernel gets control when INISBRK is called.

Breakpoints always *stick* to the debugger that set them; for example, if you set a breakpoint at location “A” with XDELTA, and then you enter the commands 1;K (switch INISBRK to the system code debugger) and ;R (start using the system code debugger) then, from SCD, you can set a breakpoint at location “B”. If the system executes the breakpoint at A, XDELTA reports a breakpoint, and SCD will see nothing (though you could switch to SCD by issuing the XDELTA ;R command). If the system executes the breakpoint at B, SCD will get control and report a breakpoint (you cannot switch to XDELTA from SCD).

Notice that if you examine location A with SCD, or location B with XDELTA, you will see a BPT instruction, not the instruction that was originally there. This is because neither debugger has any information about the breakpoints set by the other debugger.

One useful way to use both debuggers together is when you have a system that exhibits a failure only after hours or days of heavy use. In this case, you can boot the system with SCD enabled (8000), but with XDELTA the default (0002) and with initial breakpoints enabled (0004). When you reach the initial breakpoint, set an XDELTA breakpoint at a location that will only be reached when the error occurs. Then proceed. When the error breakpoint is reached, possibly days later, then you can set up a remote system to debug it and enter the ;R command to XDELTA to switch control to SCD.

Here is another technique to use when you do not know where to put an error breakpoint as previously mentioned. Boot the system with only the SCD boot flag set. When you see that the error has occurred, halt the system and initiate an IPL 14 interrupt, as you would to start XDELTA. The target kernel will get control and wait for a connection for SCD.

## 8.4 Setting Up the Host System

To set up the host system, you need access to all system images and drivers that are loaded (or can be loaded) on the target system. You should have access to a source listings kit or a copy of the following directories:

```
SYSS$LOADABLE_IMAGES:  
SYSS$LIBRARY:  
SYSS$MESSAGE:
```

You need all the .EXE files in those directories. The .DSF files are available with the OpenVMS Alpha source listings kit.

## The OpenVMS Alpha System Code Debugger

### 8.4 Setting Up the Host System

Optionally, you need access to the source files for the images to be debugged. SCD will look for the source files in the directory where they were compiled. If your build system and host system are different, you must use the SET SOURCE command to point SCD to the location of the source code files. For an example of the SET SOURCE command, see Section 8.12.

Before making a connection to the target system, you must set up the logical name DBGHK\$IMAGE\_PATH, which must be set up as a search list to the area where the system images or .DSF files are kept. For example, if the copies are in the following directories:

```
DEVICE:[SYSSLDR]
DEVICE:[SYSLIB]
DEVICE:[SYSMSG]
```

you would define DBGHK\$IMAGE\_PATH as follows:

```
$ define dbghk$image_path DEVICE:[SYSSLDR],DEVICE:[SYSLIB],DEVICE:[SYSMSG]
```

This works well for debugging using all the images normally loaded on a given system. However, you might be using the debugger to test new code in an EXECLET or a new driver. Because that image is most likely in your default directory, you must define the logical name as follows:

```
$ define dbghk$image_path [],DEVICE:[SYSSLDR],DEVICE:[SYSLIB],DEVICE:[SYSMSG]
```

If SCD cannot find one of the images through this search path, a warning message is displayed. SCD will continue initialization as long as it finds at least one image. If SCD cannot find the SYSS\$BASE\_IMAGE file, which is the OpenVMS Alpha operating system's main image file, an error message is displayed and the debugger exits.

If and when this happens, check the directory for the image files and compare it to what is loaded on the target system.

## 8.5 Starting the System Code Debugger

To start SCD on the host side, enter the following command:

```
$ DEBUG/KEEP
```

SCD displays the DBG> prompt. With the DBGHK\$IMAGE\_PATH logical name defined, you can invoke the CONNECT command and the optional qualifiers /PASSWORD and /IMAGE\_PATH.

To use the CONNECT command and the optional qualifiers (/PASSWORD and /IMAGE\_PATH) to connect to the node with name <node-name>, enter the following command:

```
DBG> CONNECT %NODE_NAME node-name /PASSWORD="password"
```

If a password has been set up on the target system, you must use the /PASSWORD qualifier. If a password is not specified, a zero length string is passed to the target system as the password.

The /IMAGE\_PATH qualifier is also optional. If you do not use this qualifier, SCD uses the DBGHK\$IMAGE\_PATH logical name as the default. The /IMAGE\_PATH qualifier is a quick way to change the logical name. However, when you use it, you cannot specify a search list. You can use only a logical name or a device and directory, although the logical name can be a search list.

## The OpenVMS Alpha System Code Debugger

### 8.5 Starting the System Code Debugger

Usually, SCD obtains the source file name from the object file. This is put there by the compiler when the source is compiled with the /DEBUG qualifier. The SET SOURCE command can take a list of paths as a parameter. It treats them as a search list.

### 8.6 Summary of System Code Debugger Commands

In general, any OpenVMS debugger command can be used in SCD. For a complete list, refer to the *OpenVMS Debugger Manual*. The following are a few examples:

- Commands to manipulate the source display, such as TYPE and SCROLL.
- Commands used in OpenVMS debugger command programs, such as DO and IF.
- Commands that affect output formats, such as SET RADIX.
- Commands that manipulate symbols and scope, such as EVALUATE, SET LANGUAGE, and CANCEL SCOPE. Note that the debugger SHOW IMAGE command is equivalent to the XDELTA ;L command, and the debugger DEFINE command is equivalent to the XDELTA ;X command.
- Commands that cause code to be executed, such as STEP and GO. Note that the debugger STEP command is equivalent to the XDELTA S and O commands, and the debugger GO command is equivalent to the XDELTA ;P and ;G commands.
- Commands that manipulate breakpoints, such as SET BREAK and CANCEL BREAK. These commands are equivalent to the XDELTA ;B command. However, unlike XDELTA, there is no limit on the number of breakpoints in SCD.
- Commands that affect memory, such as DEPOSIT and EXAMINE. These commands are equivalent to the XDELTA /!,[,",,' commands.

You can also use the OpenVMS debugger command SDA to examine the target system with System Dump Analyzer semantics. This command, which is not available when debugging user programs, is described in the next section.

### 8.7 Using System Dump Analyzer Commands

Once a connection has been established to the target system, you can use the commands listed in the previous section to examine the target system. You can also use some System Dump Analyzer (SDA) commands, such as SHOW SUMMARY and SHOW DEVICE. This feature allows the system programmer to take advantage of the strengths of both the OpenVMS Debugger and SDA to examine the state of the target system and to debug system programs such as device drivers.

To obtain access to SDA commands, you simply type "SDA" at the OpenVMS Debugger prompt ("DBG>") at any time after a connection has been established to the target system. SDA initializes itself and then outputs the "SDA>" prompt. Enter SDA commands as required. (See Chapter 4 for more information.) To return to the OpenVMS Debugger, you enter "EXIT" at the "SDA>" prompt. Optionally, you may invoke SDA to perform a single command and then return immediately to the OpenVMS Debugger, as in the following example:

```
DBG>SDA SHOW SUMMARY
```

## The OpenVMS Alpha System Code Debugger

### 8.7 Using System Dump Analyzer Commands

You may reenter SDA at any time, with or without the optional SDA command. Once SDA has been initialized, the SDA> prompt is output more quickly on subsequent occasions.

Note that there are some limitations on the use of SDA from within SCD.

- You cannot switch between processes, whether requested explicitly (SET PROCESS <name>) or implicitly (SHOW PROCESS <name>). The exception to this is that access to the system process is possible.
- You cannot switch between CPUs.
- SDA has no knowledge of the OpenVMS debugger's Motif or Windows interfaces. Therefore, all SDA input and output occurs at the terminal or window where the OpenVMS debugger was originally invoked. Also, while using SDA, the OpenVMS debugger window is not refreshed; you must exit SDA to allow the OpenVMS debugger window to be refreshed.
- When you invoke SDA from SCD with an immediate command, and that command produces a full screen of output, SDA displays the message "Press RETURN for more." followed by the "SDA>" prompt before continuing. If you enter another SDA command at this prompt, SDA does not automatically return to SCD upon completion. To do this, you must enter an EXIT command.

## 8.8 System Code Debugger Network Information

The SCD host and the target kernel use a private Ethernet protocol to communicate. For the two systems to see each other, they have to be on the same Ethernet segment.

The network portion of the target system finds the first Ethernet device and communicates through it. The network portion of the host system also finds the first Ethernet device and communicates through it. However, if for some reason, SCD picks the wrong device, you can override this by defining the logical DBGHK\$ADAPTOR to the template device name for the appropriate adaptor.

## 8.9 Troubleshooting Checklist

If you have trouble starting a connection, perform the following tasks to correct the problem:

- Check SCSNODE on the target system.  
It must match the name you are using in the host CONNECT command.
- Make sure that both the Ethernet and boot device are on the boot command.
- Make sure that the host system is using the correct Ethernet device, and that the host and target systems are connected to the same Ethernet segment.
- Check the version of the operating system and make sure that both the host and target systems are running the same version of the OpenVMS Alpha operating system.

## 8.10 Troubleshooting Network Failures

There are three possible network errors:

- NETRETRY  
Indicates the system code debugger connection is lost
- SENDRETRY  
Indicates a message send failure
- NETFAIL  
Results from the two previous errors

The netfail error message has a status code that can be one of the following values:

| Value                        | Status                                                                                                                                             |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| 2, 4, 6                      | Internal network error, submit a problem report to Compaq.                                                                                         |
| 8,10,14,16,18,20,26,28,34,38 | Network protocol error, submit a problem report to Compaq.                                                                                         |
| 22,24                        | Too many errors on the network device most likely due to congestion. Reduce the network traffic or switch to another network backbone.             |
| 30                           | Target system scratch memory not available. Check DBGTK_SCRATCH. If increasing this value does not help, submit a problem report to Compaq.        |
| 32                           | Ran out of target system scratch memory. Increase value of DBGTK_SCRATCH.                                                                          |
| All others                   | There should not be any other network error codes printed. If one occurs that does not match the previous ones, submit a problem report to Compaq. |

## 8.11 Access to Symbols in OpenVMS Executive Images

Accessing OpenVMS executive images' symbols is not always straightforward with SCD. Only a subset of the symbols may be accessible at one time and in some cases, the symbol value the debugger currently has may be stale. To understand these problems and their solutions, you must understand how the debugger maintains its symbol tables and what symbols exist in the OpenVMS executive images. The following sections briefly summarize these topics.

### 8.11.1 Overview of How the OpenVMS Debugger Maintains Symbols

The debugger can access symbols from any image in the OpenVMS loaded system image list by reading in either the .DSF or .EXE file for that particular image. The .EXE file contains information only about symbols that are part of the symbol vector for that image. The current image symbols for any set module are defined. (You can tell if you have the .DSF or .EXE file by doing a SHOW MODULE. If there are no modules, you have the .EXE file.) This includes any symbols in the SYSSBASE\_IMAGE.EXE symbol vector for which the code or data resides in the current image. However, you cannot access a symbol that is part of the SYSSBASE\_IMAGE.EXE symbol vector that resides in another image.

In general, at any one point in time, the debugger can access only the symbols from one image. It does this to reduce the time it takes to search for a symbol in a table. To load the symbols for a particular image, use the SET IMAGE command. When you set an image, the debugger loads all the symbols from the new image and makes that image the current image. The symbols from the previous image are in memory, but the debugger will not look through


## The OpenVMS Alpha System Code Debugger

### 8.11 Access to Symbols in OpenVMS Executive Images

them to translate symbols. To remove symbols from memory for an image, use the CANCEL IMAGE command (which does not work on the main image, SYSS\$BASE\_IMAGE).

There is a set of modules for each image the debugger accesses. The symbol tables in the image that are part of these modules are not loaded with the SET IMAGE command. Instead they can be loaded with the SET MODULE <module-name> or SET MODULE/ALL commands. As they are loaded, a new symbol table is created in memory under the symbol table for the image. Figure 8-1 shows what this looks like.

Figure 8-1 Maintaining Symbols

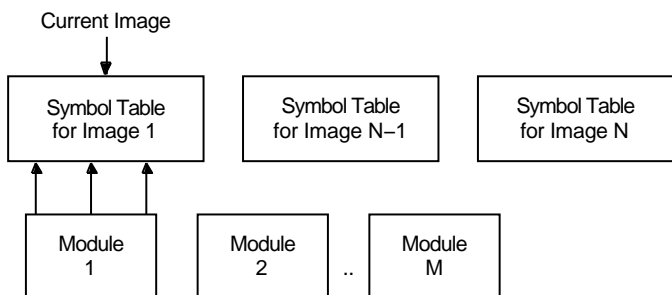

ZK-7460A-GE

When the debugger needs to look up a symbol name, it first looks at the current image to find the information. If it does not find it there, it then looks into the appropriate module. It determines which module is appropriate by looking at the module range symbols which are part of the image symbol table.

To see the symbols that are currently loaded, use the debugger's SHOW SYMBOL command. This command has a few options to obtain more than just the symbol name and value. (See the *OpenVMS Debugger Manual* for more details.)

#### 8.11.2 Overview of OpenVMS Executive Image Symbols

Depending on whether the debugger has access to the .DSF or .EXE file, different kinds of symbols could be loaded. Most users will have the .EXE file for the OpenVMS executive images and a .DSF file for their private images—that is, the images they are debugging.

The OpenVMS executive consists of two base images, SYSS\$BASE\_IMAGE.EXE and SYSS\$PUBLIC\_VECTORS.EXE, and a number of separately loadable executive images.

The two base images contain symbol vectors. For SYSS\$BASE\_IMAGE.EXE, the symbol vector is used to define symbols accessible by all the separately loadable images. This allows these images to communicate with each other through cross-image routine calls and memory references. For SYSS\$PUBLIC\_VECTORS.EXE, the symbol vector is used to define the OpenVMS system services. Because these symbol vectors are in the .EXE and the .DSF files, the debugger can load these symbols no matter which one you have.

All images in the OpenVMS executive also contain global and local symbols. However, none of these symbols ever gets into the .EXE file for the image. These symbols are put in the specific module's section of the .DSF file if that module was compiled using /DEBUG and the image was linked using /DSF.

# The OpenVMS Alpha System Code Debugger

## 8.11 Access to Symbols in OpenVMS Executive Images

### 8.11.3 Possible Problems You May Encounter

- **Access to All Executive Image Symbols**

When the current image is not `SYSSBASE_IMAGE`, but one of the separately loaded images, the debugger does not have access to any of the symbols in the `SYSSBASE_IMAGE` symbol vector. This means you cannot access (set breakpoints, and so on) any of the cross-image routines or data cells. The only symbols you have access to are the ones defined by the current image.

If the debugger has access only to the `.EXE` file, then only symbols that have vectors in the base image are accessible. For `.DSF` files, the current image symbols for any set module are defined. (You can tell if you have the `.DSF` or `.EXE` by using the `SHOW MODULE` command—if there are no modules you have the `.EXE`). This includes any symbols in the `SYSSBASE_IMAGE.EXE` symbol vector for which the code or data resides in the current image.

However, the user cannot access a symbol that is part of the `SYSSBASE_IMAGE.EXE` symbol vector that resides in another image. For example, if you are in one image and you want to set a breakpoint in a cross-image routine from another image, you do not have access to the symbol. Of course, if you know in which image it is defined, you can do a `SET IMAGE`, `SET MODULE/ALL`, and then a `SET BREAK`.

There is a debugger workaround for this problem. The debugger and `SCD` let you use the `SET MODULE` command on an image by prefixing the image name with `SHARE$` (`SHARE$SYSSBASE_IMAGE`, for example). This treats that image as a module which is part of the current image. In the previous figure, think of it as another module in the module list for an image. Note, however, that only the symbols for the symbol vector are loaded. None of the symbols for the modules of the `SHARE$xxx` image are loaded. Therefore, this command is only useful for base images.

So, in other words, by doing `SET MODULE SHARE$SYSSBASE_IMAGE`, the debugger gives you access to all cross-image symbols for the OpenVMS executive.

- **Stale Data from the Symbol Vector**

When an OpenVMS executive based image is loaded, the values in the symbol vectors are only correct for information that resides in that based image. For all symbols that are defined in the separately loaded images, the based image contains a pointer to a placeholder location. For routine symbols this is a routine that just returns "an image not loaded" failure code. A symbol vector entry is fixed to contain the real symbol address when the image in which the data resides is loaded.

Therefore, if you do a `SET IMAGE` command to a base image before all the symbol entries are corrected, the `SET IMAGE` obtains the placeholder value for those symbols. Then, once the image containing the real data is loaded, the debugger will still have the placeholder value. This means that you are looking at stale data. One solution to this is to make sure to do a `SET IMAGE` command on the base image in order to get the most up-to-date symbol vector loaded into memory.

The `CANCEL IMAGE/SET IMAGE` combination does not currently work for `SYSSBASE_IMAGE` because it is the main image and `DEBUG` does not allow you to `CANCEL` the main image. Therefore, if you connect to the target system early in the boot process, you will have stale data as part of the `SYSSBASE_IMAGE` symbol table. However, the `SET MODULE SHARE$xxx` command always reloads the information from the symbol vector. So, to solve



## The OpenVMS Alpha System Code Debugger

### 8.11 Access to Symbols in OpenVMS Executive Images

this problem you could SET IMAGE to an image other than SYSS\$BASE\_IMAGE and then use the CANCEL MODULE SHARE\$SYSS\$BASE\_IMAGE and SET MODULE SHARE\$SYSS\$BASE\_IMAGE commands to do the same thing. The only other solution is to always connect to the target system once all images are loaded that define the real data for values in the symbol vectors. You could also enter the following commands, and you would obtain the latest values from the symbol vector:

```
SET IMAGE EXEC_INIT
SET MODULE/ALL
SET MODULE SHARE$SYSS$BASE_IMAGE
```

- **Problems with SYSS\$BASE\_IMAGE.DSF**

For those who have access to the SYSS\$BASE\_IMAGE.DSF file, there may be another complication with accessing symbols from the symbol vector. The problem is that the module SYSTEM\_ROUTINES contains the placeholder values for each symbol in the symbol vector. So, if SYSTEM\_ROUTINES is the currently set module (which is the case if you are sitting at the INISBRK breakpoint) then the debugger will have the placeholder value of the symbol as well as the value in the symbol vector. You can see what values are loaded with the SHOW SYMBOL/ADDRESS command. The symbol vector version should be marked with (global); the local one is not.

To set a breakpoint at the correct code address for a routine when in this state, use the SHOW SYMBOL/ADDRESS command on the routine symbol name. If the global and local values for the code address are the same, then the image with the routine has not yet been loaded. If not, set a breakpoint at the code address for the global symbol.

# The OpenVMS Alpha System Code Debugger

## 8.12 Sample System Code Debugging Session

### 8.12 Sample System Code Debugging Session

This section provides a sample session that shows the use of some OpenVMS debugger commands as they apply to SCD. The examples in this session show how to work with C code that has been linked into the SYSTEM\_DEBUG execl. It is called as an initialization routine for SYSTEM\_DEBUG.

To reproduce this sample session, the host system needs access to the SYSTEM\_DEBUG.DSF matching the SYSTEM\_DEBUG.EXE file on your target system, and to the source file C\_TEST\_ROUTINES.C, which is available in SYS\$EXAMPLES. The target system is booted with the boot flags 0, 8004, so it stops at an initial breakpoint, and the devices DKB200,ESA0.

#### Example 8-1 Booting the Target System

```
>>> b -f1 0,8004 dkb200,esa0
INIT-S-CPU...
INIT-S-RESET_TC...
INIT-S-ASIC...
INIT-S-MEM...
INIT-S-NVR...
INIT-S-SCC...
INIT-S-NI...
INIT-S-SCSI...
INIT-S-ISDN...
INIT-S-TC0...
AUDIT_BOOT_STARTS ...
AUDIT_CHECKSUM_GOOD
AUDIT_LOAD_BEGINS
AUDIT_LOAD_DONE

%SYSBOOT-I-GCTFIL, Using a configuration file to boot as a Galaxy instance.

      OpenVMS (TM) Alpha Operating System, Version V7.2

DBGTK: Initialization succeeded. Remote system debugging is now possible.
DBGTK: Waiting at breakpoint for connection from remote host.
```

The example continues by invoking the system code debugger's character cell interface on the host system.

#### Example 8-2 Invoking the System Code Debugger

```
$ define dbg$decw$display " "
$ debug/keep

      OpenVMS Alpha Debug64 Version V7.2-019

DBG>
```

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

Use the CONNECT command to connect to the target system. In this example, the target system's default password is the null string, and the logical name DBGHK\$IMAGE\_PATH is used for the image path; so the command qualifiers /PASSWORD and /IMAGE\_PATH are not being used. You may need to use them.

When you have connected to the target system, the DEBUG prompt is displayed. Enter the SHOW IMAGE command to see what has been loaded. Because you are reaching a breakpoint early in the boot process, there are very few images. See Example 8-3. Notice that SYS\$BASE\_IMAGE has an asterisk next to it. This is the currently set image, and all symbols currently loaded in the debugger come from that image.

#### Example 8-3 Connecting to the Target System

```

DBG> connect %node_name TSTSYS
%DEBUG-I-INIBRK, target system interrupted
%DEBUG-I-DYNMODSET, setting module SYSTEM_ROUTINES
DBG> show image
image name                set    base address                end address
ERRORLOG                   no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF80084000          FFFFFFFF80086FFF
  NPRW1                      no    FFFFFFFF80CA3600          FFFFFFFF80CA3BFF
EXEC_INIT                   no    FFFFFFFF8306E000          FFFFFFFF830A2000
*SYS$BASE_IMAGE            yes   0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF80002000          FFFFFFFF8000EDFF
  NPRW1                      no    FFFFFFFF80C05C00          FFFFFFFF80C2AFFF
SYS$CNBTDRIVER              no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF8001A000          FFFFFFFF8001AFFF
  NPRW1                      no    FFFFFFFF80C2D600          FFFFFFFF80C2D9FF
SYS$CPU_ROUTINES_0402      no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF80010000          FFFFFFFF800191FF
  NPRW1                      no    FFFFFFFF80C2B000          FFFFFFFF80C2D5FF
SYS$ESBTDRIVER              no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF8002C000          FFFFFFFF8002E1FF
  NPRW1                      no    FFFFFFFF80C30C00          FFFFFFFF80C30FFF
SYS$NISCA_BTDRIVER         no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF8001C000          FFFFFFFF8002ADFF
  NPRW1                      no    FFFFFFFF80C2DA00          FFFFFFFF80C30BFF
SYS$OPDRIVER                no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF80030000          FFFFFFFF800337FF
  NPRW1                      no    FFFFFFFF80C31000          FFFFFFFF80C319FF
SYS$PUBLIC_VECTORS         no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF80000000          FFFFFFFF80001FFF
  NPRW1                      no    FFFFFFFF80C00000          FFFFFFFF80C05BFF
SYSTEM_DEBUG                no    FFFFFFFF82FFE000          FFFFFFFF83056000
SYSTEM_PRIMITIVES_MIN      no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF80034000          FFFFFFFF800775FF
  NPRW1                      no    FFFFFFFF80C31A00          FFFFFFFF80CA11FF
SYSTEM_SYNCHRONIZATION_UNI no    0000000000000000          FFFFFFFFFFFFFFFF
  NPRO0                     no    FFFFFFFF80078000          FFFFFFFF800835FF
  NPRW1                      no    FFFFFFFF80CA1200          FFFFFFFF80CA35FF

total images: 12          bytes allocated: 1517736

```

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

Example 8–4 shows the target system's console display during the connect sequence. Note that for security reasons, the name of the host system, the user's name, and process ID are displayed.

#### Example 8–4 Target System Connection Display

```
DBGTK: Connection attempt from host HSTSYS user GUEST process 2E801C2F
DBGTK: Connection attempt succeeded
```

To set a breakpoint at the first routine in the C\_TEST\_ROUTINES module of the SYSTEM\_DEBUG.EXE execlet, do the following:

1. Load the symbols for the SYSTEM\_DEBUG image with the DEBUG SET IMAGE command.
2. Use the SET MODULE command to obtain the symbols for the module.
3. Set the language to be C and set a breakpoint at the routine test\_c\_code.

The language must be set because C is case sensitive and test\_c\_code needs to be specified in lowercase. The language is normally set to the language of the main image, in this example SYSSBASE\_IMAGE.EXE. Currently that is not C.

#### Example 8–5 Setting a Breakpoint

```
DBG> set image system_debug
DBG> show module
module name                symbols  language  size
AUX_TARGET                 no      C          15928
BUFSRV_TARGET              no      C          11288
BUGCHECK_CODES             no      BLISS     26064
CTRLPRINTF                 no      C          29920
C_TEST_ROUTINES           no      C          3808
FATAL_EXC                  no      C          1592
HIGH_ADDRESS               no      C           372
LIB$CALLING_STANDARD_AUX  no      MACRO64   1680
LINMGR_TARGET              no      C         13320
LOW_ADDRESS                no      C           368
OBJMGR                     no      C          5040
PLUMGR                     no      C         19796
POOL                       no      C           116
PROTOMGR_TARGET           no      C         17868
SOCMGR                     no      C          3324
SYS$DOINIT                 no      AMACRO    81740
TARGET_KERNEL              no      C        207244
TMRMGR_TARGET              no      C          3516
XDELTA                     no      BLISS    189940
XDELTA_ISRS                no      MACRO64   2428
total modules: 20.         bytes allocated: 1585168.
```

(continued on next page)

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

#### Example 8–5 (Cont.) Setting a Breakpoint

```
DBG> set module c_test_routines
DBG> show module c_test_routines
module name                symbols    size
C_TEST_ROUTINES           yes      3808

total C modules: 1.        bytes allocated: 1592264.
DBG> set language c
DBG> show symbol test_c_code*
routine C_TEST_ROUTINES\test_c_code5
routine C_TEST_ROUTINES\test_c_code4
routine C_TEST_ROUTINES\test_c_code3
routine C_TEST_ROUTINES\test_c_code2
routine C_TEST_ROUTINES\test_c_code
DBG> set break test_c_code
```

Now that the breakpoint is set, you can proceed and activate the breakpoint. When that occurs, the debugger tries to open the source code for that location in the same place as where the module was compiled. Because that is not the same place as on your system, you need to tell the debugger where to find the source code. This is done with the debugger's SET SOURCE command, which takes a search list as a parameter so you can make it point to many places.

#### Example 8–6 Finding the Source Code

```
DBG> set source/latest sys$examples,sys$library
DBG> go
break at routine C_TEST_ROUTINES\test_c_code
166:      x = xdt$fregsav[0];
```

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

Now that the debugger has access to the source, you can put the debugger into screen mode to see exactly where you are and the code surrounding it.

#### Example 8-7 Using the Set Mode Screen Command

```
DBG> Set Mode Screen; Set Step Nosource
- SRC: module C_TEST_ROUTINES -scroll-source-----
  151:   xdt$fregsav[5] = in64;
  152:   xdt$fregsav[6] = in32;
  153:   if (xdt$fregsav[9] > 0)
  154:       *pVar = (*pVar + xdt$fregsav[17])%xdt$fregsav[9];
  155:   else
  156:       *pVar = (*pVar + xdt$fregsav[17]);
  157:   xdt$fregsav[7] = test_c_code3(10);
  158:   xdt$fregsav[3] = test;
  159:   return xdt$fregsav[23];
  160: }
  161: void test_c_code(void)
  162: {
  163:     int x,y;
  164:     int64 x64,y64;
  165:
-> 166:     x = xdt$fregsav[0];
  167:     y = xdt$fregsav[1];
  168:     x64 = xdt$fregsav[2];
  169:     y64 = xdt$fregsav[3];
  170:     xdt$fregsav[14] = test_c_code2(x64+y64,x+y,x64+x,&y64);
  171:     test_c_code4();
  172:     return;
  173: }
- OUT -output-----

- PROMPT -error-program-prompt-----

DBG>
```

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

Now, you want to set another breakpoint inside the test\_c\_code3 routine. You use the debugger's SCROLL/UP command (8 on the keypad) to move to that routine and see that line 146 would be a good place to set the breakpoint. It is at a recursive call. Then you proceed to that breakpoint with the GO command.

#### Example 8-8 Using the SCROLL/UP DEBUG Command

```
- SRC: module C_TEST_ROUTINES -scroll-source-----
133: void test_c_code4(void)
134: {
135:     int i,k;
136:     for(k=0;k<1000;k++)
137:     {
138:         test_c_code5(&i);
139:     }
140:     return;
141: }
142: int test_c_code3(int subrtnCount)
143: {
144:     subrtnCount = subrtnCount - 1;
145:     if (subrtnCount != 0)
146:         subrtnCount = test_c_code3(subrtnCount);
147:     return subrtnCount;
148: }
149: int test_c_code2(int64 in64,int in32, int64 test, int64* pVar)
150: {
151:     xdt$fregsav[5] = in64;
152:     xdt$fregsav[6] = in32;
153:     if (xdt$fregsav[9] > 0)
154:         *pVar = (*pVar + xdt$fregsav[17])%xdt$fregsav[9];
155:     else
- OUT -output-----

- PROMPT -error-program-prompt-----

DBG> Scroll/Up
DBG> set break %line 146
DBG> go
DBG>
```

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

When you reach that breakpoint, the source code display is updated to show where you currently are, which is indicated by an arrow. A message also appears in the OUT display indicating you reach the breakpoint at that line.

#### Example 8–9 Breakpoint Display

```
- SRC: module C_TEST_ROUTINES -scroll-source-----
135:     int i,k;
136:     for(k=0;k<1000;k++)
137:     {
138:         test_c_code5(&i);
139:     }
140:     return;
141: }
142: int test_c_code3(int subrtnCount)
143: {
144:     subrtnCount = subrtnCount - 1;
145:     if (subrtnCount != 0)
-> 146:         subrtnCount = test_c_code3(subrtnCount);
147:     return subrtnCount;
148: }
149: int test_c_code2(int64 in64,int in32, int64 test, int64* pVar)
150: {
151:     xdt$fregsav[5] = in64;
152:     xdt$fregsav[6] = in32;
153:     if (xdt$fregsav[9] > 0)
154:         *pVar = (*pVar + xdt$fregsav[17])%xdt$fregsav[9];
155:     else
156:         *pVar = (*pVar + xdt$fregsav[17]);
157:     xdt$fregsav[7] = test_c_code3(10);
- OUT -output-----
break at C_TEST_ROUTINES\test_c_code3\%LINE 146

- PROMPT -error-program-prompt-----

DBG> Scroll/Up
DBG> set break %line 146
DBG> go
DBG>
```



## The OpenVMS Alpha System Code Debugger 8.12 Sample System Code Debugging Session

Now you try the debugger's STEP command. The default behavior for STEP is STEP/OVER, unlike XDELTA and DELTA, which is STEP/INTO, so, normally you would expect to step to line 147 in the code. However, because you have a breakpoint inside test\_c\_code3 that is called at line 146, you will reach that event first.

### Example 8-10 Using the Debug Step Command

```
- SRC: module C_TEST_ROUTINES -scroll-source-----
135:     int i,k;
136:     for(k=0;k<1000;k++)
137:     {
138:         test_c_code5(&i);
139:     }
140:     return;
141: }
142: int test_c_code3(int subrtnCount)
143: {
144:     subrtnCount = subrtnCount - 1;
145:     if (subrtnCount != 0)
-> 146:         subrtnCount = test_c_code3(subrtnCount);
147:     return subrtnCount;
148: }
149: int test_c_code2(int64 in64,int in32, int64 test, int64* pVar)
150: {
151:     xdt$fregsav[5] = in64;
152:     xdt$fregsav[6] = in32;
153:     if (xdt$fregsav[9] > 0)
154:         *pVar = (*pVar + xdt$fregsav[17])%xdt$fregsav[9];
155:     else
156:         *pVar = (*pVar + xdt$fregsav[17]);
157:     xdt$fregsav[7] = test_c_code3(10);
- OUT -output-----
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
```

```
- PROMPT -error-program-prompt-----

DBG>
DBG> set break %line 146
DBG> go
DBG> Step
DBG>
```

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

Now, you try a couple of other commands, EXAMINE and SHOW CALLS. The EXAMINE command allows you to look at all the C variables. Note that the C\_TEST\_ROUTINES module is compiled with the /NOOPTIMIZE switch which allows access to all variables. The SHOW CALLS command shows you the call sequence from the beginning of the stack. In this case, you started out in the image EXEC\_INIT. (The debugger prefixes all images other than the main image with SHARE\$ so it shows up as SHARE\$EXEC\_INIT.)

#### Example 8-11 Using the Examine and Show Calls Commands

```
- SRC: module C_TEST_ROUTINES -scroll-source-----
135:     int i,k;
136:     for(k=0;k<1000;k++)
137:     {
138:         test_c_code5(&i);
139:     }
140:     return;
141: }
142: int test_c_code3(int subrtnCount)
143: {
144:     subrtnCount = subrtnCount - 1;
145:     if (subrtnCount != 0)
-> 146:         subrtnCount = test_c_code3(subrtnCount);
147:     return subrtnCount;
148: }
149: int test_c_code2(int64 in64,int in32, int64 test, int64* pVar)
150: {
151:     xdt$fregsav[5] = in64;
152:     xdt$fregsav[6] = in32;
153:     if (xdt$fregsav[9] > 0)
154:         *pVar = (*pVar + xdt$fregsav[17])*xdt$fregsav[9];
155:     else
156:         *pVar = (*pVar + xdt$fregsav[17]);
157:     xdt$fregsav[7] = test_c_code3(10);
- OUT -output-----
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
C_TEST_ROUTINES\test_c_code3\subrtnCount:      8
  module name      routine name      line      rel PC      abs PC
*C_TEST_ROUTINES  test_c_code3      146      00000000000000C4  FFFFFFFF83002D64
*C_TEST_ROUTINES  test_c_code3      146      00000000000000D4  FFFFFFFF83002D74
*C_TEST_ROUTINES  test_c_code2      157      00000000000001A0  FFFFFFFF83002E40
*C_TEST_ROUTINES  test_c_code       170      0000000000000260  FFFFFFFF83002F00
*XDELTA          XDT$SYSDBG_INIT   9371     0000000000000058  FFFFFFFF83052238
*SYS$DOINIT      INI$DOINIT        1488     0000000000000098  FFFFFFFF830520B8
SHARE$EXEC_INIT  0000000000018C74  FFFFFFFF83086C74
SHARE$EXEC_INIT  0000000000014BD0  FFFFFFFF83082BD0

- PROMPT -error-program-prompt-----
DBG>
DBG> set break %line 146
DBG> go
DBG> Step
DBG> examine subrtnCount
DBG> show calls
DBG>
```

## The OpenVMS Alpha System Code Debugger 8.12 Sample System Code Debugging Session

If you want to proceed because you are done debugging this code, first cancel all the breakpoints and then enter the GO command. Notice, however, that you do not keep running but receive a message that you have stepped to line 147. This happens because the STEP command used earlier never completed. It was interrupted by the breakpoint on line 146.

Note that the debugger remembers all step events and only removes them once they have completed.

### Example 8-12 Canceling the Breakpoints

```
- SRC: module C_TEST_ROUTINES -scroll-source-----
136:   for(k=0;k<1000;k++)
137:   {
138:       test_c_code5(&i);
139:   }
140:   return;
141: }
142: int test_c_code3(int subrtnCount)
143: {
144:   subrtnCount = subrtnCount - 1;
145:   if (subrtnCount != 0)
146:       subrtnCount = test_c_code3(subrtnCount);
-> 147:   return subrtnCount;
148: }
149: int test_c_code2(int64 in64,int in32, int64 test, int64* pVar)
150: {
151:   xdt$fregsav[5] = in64;
152:   xdt$fregsav[6] = in32;
153:   if (xdt$fregsav[9] > 0)
154:       *pVar = (*pVar + xdt$fregsav[17])%xdt$fregsav[9];
155:   else
156:       *pVar = (*pVar + xdt$fregsav[17]);
157:   xdt$fregsav[7] = test_c_code3(10);
158:   xdt$fregsav[3] = test;
- OUT -output-----
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
C_TEST_ROUTINES\test_c_code3\subrtnCount:      8
  module name  routine name  line  rel PC      abs PC
*C_TEST_ROUTINES test_c_code3    146  00000000000000C4 FFFFFFFF83002D64
*C_TEST_ROUTINES test_c_code3    146  00000000000000D4 FFFFFFFF83002D74
*C_TEST_ROUTINES test_c_code2    157  00000000000001A0 FFFFFFFF83002E40
*C_TEST_ROUTINES test_c_code     170  0000000000000260 FFFFFFFF83002F00
*XDELTA       XDT$SYSDBG_INIT  9371  0000000000000058 FFFFFFFF83052238
*SYS$DOINIT   INI$DOINIT      1488  0000000000000098 FFFFFFFF830520B8
SHARE$EXEC_INIT
SHARE$EXEC_INIT 00000000000018C74 FFFFFFFF83086C74
SHARE$EXEC_INIT 00000000000014BD0 FFFFFFFF83082BD0
stepped to C_TEST_ROUTINES\test_c_code3\%LINE 147

- PROMPT -error-program-prompt-----
DBG> go
DBG> Step
DBG> examine subrtnCount
DBG> show calls
DBG> cancel break/all
DBG> go
DBG>
```

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

The STEP/RETURN command, a different type of step command, single steps assembly code until it finds a return instruction. This command is useful if you want to see the return value for the routine, which is done here by examining the R0 register.

For more information about using other STEP command qualifiers, see the *OpenVMS Debugger Manual*.

#### Example 8-13 Using the Step/Return Command

```
- SRC: module C_TEST_ROUTINES -scroll-source-----
137:      {
138:          test_c_code5(&i);
139:      }
140:      return;
141: }
142: int test_c_code3(int subrtnCount)
143: {
144:     subrtnCount = subrtnCount - 1;
145:     if (subrtnCount != 0)
146:         subrtnCount = test_c_code3(subrtnCount);
147:     return subrtnCount;
-> 148: }
149: int test_c_code2(int64 in64, int in32, int64 test, int64* pVar)
150: {
151:     xdt$fregsav[5] = in64;
152:     xdt$fregsav[6] = in32;
153:     if (xdt$fregsav[9] > 0)
154:         *pVar = (*pVar + xdt$fregsav[17])%xdt$fregsav[9];
155:     else
156:         *pVar = (*pVar + xdt$fregsav[17]);
157:     xdt$fregsav[7] = test_c_code3(10);
158:     xdt$fregsav[3] = test;
159:     return xdt$fregsav[23];
- OUT -output-----
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
C_TEST_ROUTINES\test_c_code3\subrtnCount:      8
  module name      routine name      line      rel PC      abs PC
*C_TEST_ROUTINES  test_c_code3      146      00000000000000C4  FFFFFFFF83002D64
*C_TEST_ROUTINES  test_c_code3      146      00000000000000D4  FFFFFFFF83002D74
*C_TEST_ROUTINES  test_c_code2      157      00000000000001A0  FFFFFFFF83002E40
*C_TEST_ROUTINES  test_c_code       170      0000000000000260  FFFFFFFF83002F00
*XDELTA          XDT$SYSDBG_INIT   9371     0000000000000058  FFFFFFFF83052238
*SYS$DOINIT      INI$DOINIT        1488     0000000000000098  FFFFFFFF830520B8
SHARE$EXEC_INIT  00000000000018C74  FFFFFFFF83086C74
SHARE$EXEC_INIT  00000000000014BD0  FFFFFFFF83082BD0
stepped to C_TEST_ROUTINES\test_c_code3\%LINE 147
stepped on return from C_TEST_ROUTINES\test_c_code3\%LINE 147 to C_TEST_ROUTINES\test_c_code3\%LINE 148
C_TEST_ROUTINES\test_c_code3\%R0:      0
- PROMPT -error-program-prompt-----
DBG> examine subrtnCount
DBG> show calls
DBG> cancel break/all
DBG> go
DBG> step/return
DBG> examine r0
DBG>
```

## The OpenVMS Alpha System Code Debugger 8.12 Sample System Code Debugging Session

After you finish the SCD session, enter the GO command to leave this module. You will encounter another INI\$BRK breakpoint at the end of EXEC\_INIT. An error message indicating there are no source lines for address 80002010 is displayed, because debug information on this image or module is not available.

Also notice that there is no message in the OUT display for this event. That is because INI\$BRKs are special breakpoints that are handled as SSS\_DEBUG signals. They are a method for the system code to break into the debugger and there is no real breakpoint in the code.

### Example 8-14 Source Lines Error Message

```
- SRC: module SYSTEM_ROUTINES -scroll-source-----
15896: Source line not available
15897: Source line not available
.
.
.
15906: Source line not available
->5907: Source line not available
15908: Source line not available
.
.
.
15917: Source line not available
15918: Source line not available
- OUT -output-----
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
break at C_TEST_ROUTINES\test_c_code3\%LINE 146
C_TEST_ROUTINES\test_c_code3\subrtnCount:      8
  module name      routine name      line      rel PC      abs PC
*C_TEST_ROUTINES  test_c_code3      146      00000000000000C4  FFFFFFFF83002D64
*C_TEST_ROUTINES  test_c_code3      146      00000000000000D4  FFFFFFFF83002D74
*C_TEST_ROUTINES  test_c_code2      157      00000000000001A0  FFFFFFFF83002E40
*C_TEST_ROUTINES  test_c_code       170      0000000000000260  FFFFFFFF83002F00
*XDELTA          XDT$SYSDBG_INIT   9371     0000000000000058  FFFFFFFF83052238
*SYS$DOINIT      INI$DOINIT        1488     0000000000000098  FFFFFFFF830520B8
  SHARE$EXEC_INIT 00000000000018C74  FFFFFFFF83086C74
  SHARE$EXEC_INIT 00000000000014BD0  FFFFFFFF83082BD0
stepped to C_TEST_ROUTINES\test_c_code3\%LINE 147
stepped on return from C_TEST_ROUTINES\test_c_code3\%LINE 147 to C_TEST_ROUTINES\test_c_code3\%LINE 148
C_TEST_ROUTINES\test_c_code3\%R0:          0
- PROMPT -error-program-prompt-----
DBG> examine r0
DBG> go
%DEBUG-I-INIBRK, target system interrupted
%DEBUG-I-DYNIMGSET, setting image SYS$BASE_IMAGE
%DEBUG-W-SCRUNAOPLSRC, unable to open source file SYS$COMMON:[SYSLIB]SYSTEM_ROUTINES.M64;
-RMS-E-FNF, file not found
DBG>
```

## The OpenVMS Alpha System Code Debugger

### 8.12 Sample System Code Debugging Session

Enter the SHOW IMAGE command. You will see more images displayed as the boot path has progressed further.

Finally, enter GO, allowing the target system to boot completely, because there are no more breakpoints in the boot path. The debugger will wait for another event to occur.

#### Example 8-15 Using the Show Image Command

```
- SRC: module SYSTEM_ROUTINES -scroll-source-----
15896: Source line not available
15897: Source line not available
.
.
.
15906: Source line not available
->5907: Source line not available
15908: Source line not available
.
.
.
15917: Source line not available
15918: Source line not available
- OUT -output-----
PRO2                FFFFFFFF8329C000    FFFFFFFF832A2DFF
SYSLICENSE          no    0000000000000000    FFFFFFFFFFFFFFFF
NPRO0               FFFFFFFF80188000    FFFFFFFF801883FF
NPRW1               FFFFFFFF80CCC000    FFFFFFFF80CCC5FF
PRO2                FFFFFFFF8321E000    FFFFFFFF832247FF
PRW3                FFFFFFFF83226000    FFFFFFFF832265FF
SYSTEM_DEBUG        yes   FFFFFFFF82FFE000    FFFFFFFF83056000
SYSTEM_PRIMITIVES_MIN no    0000000000000000    FFFFFFFFFFFFFFFF
NPRO0               FFFFFFFF80034000    FFFFFFFF800775FF
NPRW1               FFFFFFFF80C31A00    FFFFFFFF80CA11FF
SYSTEM_SYNCHRONIZATION_UNI no    0000000000000000    FFFFFFFFFFFFFFFF
NPRO0               FFFFFFFF80078000    FFFFFFFF800835FF
NPRW1               FFFFFFFF80CA1200    FFFFFFFF80CA35FF

total images: 40                bytes allocated: 2803296
- PROMPT -error-program-prompt-----
%DEBUG-I-INIBRK, target system interrupted
%DEBUG-I-DYNIMGSET, setting image SYS$BASE_IMAGE
%DEBUG-W-SCRUNAOPNSRC, unable to open source file X6P3_RESD$:[SYSLIB]SYSTEM_ROUTINES.M64;
-RMS-E-FNF, file not found
DBG> show image
DBG> go
```

---

# The OpenVMS Alpha System Dump Debugger

This chapter describes the OpenVMS Alpha System Dump Debugger (SDD) and how you can use it to analyze system crash dumps.

SDD is similar in concept to SCD as described in Chapter 8. Where SCD allows connection to a running system with control of the system's execution and the examination and modification of variables, SDD allows analysis of memory as recorded in a system dump.

Use of the SDD usually involves two systems, although all the required environment can be set up on a single system. The description that follows assumes that two systems are being used:

- The build system, where the image that causes the system crash has been built
- The test system, where the image is executed and the system crash occurs

In common with SCD, the OpenVMS debugger's user interface allows you to specify variable names, routine names, and so on, precisely as they appear in your source code. Also, SDD can display the source code where the software was executing at the time of the system crash.

SDD recognizes the syntax, data typing, operators, expressions, scoping rules, and other constructs of a given language. If your code or driver is written in more than one language, you can change the debugging context from one language to another during a debugging session.

To use SDD, you must do the following:

- Build the system image or device driver that is causing the system crash.
- Boot a system, including the system image or device driver, and perform the necessary steps to cause the system crash.
- Reboot the system and save the dump file.
- Invoke SDD, which is integrated with the OpenVMS debugger.

The following sections cover these tasks in more detail, describe the available user-interface options, summarize applicable OpenVMS Debugger commands, and provide a sample SDD session.

## 9.1 User-Interface Options

SDD has the following user-interface options.

- A DECwindows Motif interface for workstations.

When using this interface, you interact with SDD by using a mouse and pointer to choose items from menus, click on buttons, select names in windows, and so on.

# The OpenVMS Alpha System Dump Debugger

## 9.1 User-Interface Options

Note that you can also use OpenVMS Debugger commands with the DECwindows Motif interface.

- A character cell interface for terminals and workstations.

When using this interface, you interact with SDD by entering commands at a prompt. The sections in this chapter describe how to use the system dump debugger with the character cell interface.

For more information about using the OpenVMS DECwindows Motif interface and OpenVMS Debugger commands with SDD, see the *OpenVMS Debugger Manual*.

## 9.2 Preparing a System Dump to Be Analyzed

To prepare a system dump for analysis, perform the following steps:

1. Compile the sources you will want to analyze, and use the /DEBUG (mandatory) and /NOOPT (preferred) qualifiers.

---

### Note

---

Because you are analyzing a snapshot of the system, it is not as vital to use unoptimized code as it is with the system code debugger. But note that you cannot access all variables. SDD may report that they are optimized away.

---

2. Link your image using the /DSF (debug symbol file) qualifier. Do not use the /DEBUG qualifier, which is for debugging user programs. The /DSF qualifier takes an optional filename argument similar to the /EXE qualifier. For more information, see the *OpenVMS Linker Utility Manual*. If you specify a name in the /EXE qualifier, you will need to specify the same name for the /DSF qualifier. For example, you would use the following command:

```
$ LINK/EXE=EXE$:MY_EXECLET/DSF=EXE$:MY_EXECLET OPTIONS_FILE/OPT
```

The .DSF and .EXE file names must be the same. Only the extensions will be different, that is, .DSF and .EXE.

The contents of the .EXE file should be exactly the same as if you had linked without the /DSF qualifier. The .DSF file will contain the image header and all the debug symbol tables for .EXE file. It is not an executable file, and cannot be run or loaded.

3. Put the .EXE file on your test system.
4. Boot the test system and perform the necessary steps to cause the system crash.
5. Reboot the test system and copy the dump to the build system using the System Dump Analyzer (SDA) command COPY. See Chapter 4.



## 9.3 Setting Up the Test System

The only requirement for the test system is that the .DSF file matching the .EXE file that causes the crash is available on the build system.

There are no other steps necessary in the setup of the test system. With the system image copied to the test system, it can be booted in any way necessary to produce the system crash. Since SDD can analyze most system crash dumps, any system can be used, from a standalone system to a member of a production cluster.

---

### Note

---

It is assumed that the test system has a dump file large enough for the system dump to be recorded. Any dump style may be used (full or selective, compressed or uncompressed). A properly AUTOGENed system will meet these requirements.

---

## 9.4 Setting Up the Build System

To set up the build system, you need access to all system images and drivers that were loaded on the test system. You should have access to a source listings kit or a copy of the following directories:

```
SYS$LOADABLE_IMAGES:  
SYS$LIBRARY:  
SYS$MESSAGE:
```

You need all the .EXE files in those directories. The .DSF files are available with the OpenVMS Alpha source listings kit.

Optionally, you need access to the source files for the images to be debugged. SDD will look for the source files in the directory where they were compiled. You must use the SET SOURCE command to point SDD to the location of the source code files if they are not in the directories used when the image was built. For an example of the SET SOURCE command, see Section 9.9.

Before you can analyze a system dump with SDD, you must set up the logical name DBGHK\$IMAGE\_PATH, which must be set up as a search list to the area where the system images or .DSF files are kept. For example, if the copies are in the following directories:

```
DEVICE:[SYS$LDR]  
DEVICE:[SYS$LIB]  
DEVICE:[SYS$MSG]
```

you would define DBGHK\$IMAGE\_PATH as follows:

```
$ define dbghk$image_path DEVICE:[SYS$LDR],DEVICE:[SYS$LIB],DEVICE:[SYS$MSG]
```

This works well for analyzing a system dump using all the images normally loaded on a given system. However, you might be using SDD to analyze new code either in an execler or a new driver. Because that image is most likely in your default directory, you must define the logical name as follows:

```
$ define dbghk$image_path [],DEVICE:[SYS$LDR],DEVICE:[SYS$LIB],DEVICE:[SYS$MSG]
```

## The OpenVMS Alpha System Dump Debugger

### 9.4 Setting Up the Build System

If SDD cannot find one of the images through this search path, a warning message is displayed. SDD will continue initialization as long as it finds at least one image. If SDD cannot find the SYSS\$BASE\_IMAGE file, which is the OpenVMS Alpha operating system's main image file, an error message is displayed and the debugger exits.

If and when this happens, check the directory for the image files and compare it to what was loaded on the test system.

### 9.5 Starting the System Dump Debugger

To start SDD on the build system, enter the following command.

```
$ DEBUG/KEEP
```

SDD displays the DBG> prompt. With the DBGHK\$IMAGE\_PATH logical name defined, you can invoke the ANALYZE/CRASH\_DUMP command and optional qualifier /IMAGE\_PATH.

To use the ANALYZE/CRASH\_DUMP command and optional qualifier (/IMAGE\_PATH) to analyze the dump in file <file-name> enter the following command:

```
DBG> ANALYZE/CRASH_DUMP file-name
```

The /IMAGE\_PATH qualifier is optional. If you do not use this qualifier, SDD uses the DBGHK\$IMAGE\_PATH logical name as the default. The /IMAGE\_PATH qualifier is a quick way to change the logical name. However, when you use it, you cannot specify a search list. You can use only a logical name or a device and directory, although the logical name can be a search list.

Usually, SDD obtains the source file name from the object file. This is put there by the compiler when the source is compiled with the /DEBUG qualifier. The SET SOURCE command can take a list of paths as a parameter. It treats them as a search list.

### 9.6 Summary of System Dump Debugger Commands

Only a subset of OpenVMS debugger commands can be used in SDD. The following are a few examples of commands that you can use in SDD:

- Commands to manipulate the source display, such as TYPE and SCROLL
- Commands used in OpenVMS debugger command programs, such as DO and IF
- Commands that affect output formats, such as SET RADIX
- Commands that manipulate symbols and scope, such as EVALUATE, SET LANGUAGE, and CANCEL SCOPE
- Commands that read the contents of memory and registers, such as EXAMINE

Examples of commands that **cannot** be used in SDD are as follows:

- Commands that cause code to be executed, such as STEP and GO
- Commands that manipulate breakpoints, such as SET BREAK and CANCEL BREAK
- Commands that modify memory or registers, such as DEPOSIT

## The OpenVMS Alpha System Dump Debugger

### 9.6 Summary of System Dump Debugger Commands

You can also use the OpenVMS debugger command SDA to examine the system dump with System Dump Analyzer semantics. This command, which is not available when debugging user programs, is described in the next section.

### 9.7 Using System Dump Analyzer Commands

Once a dump file has been opened, you can use the commands listed in the previous section to examine the system dump. You can also use some System Dump Analyzer (SDA) commands, such as SHOW SUMMARY and SHOW DEVICE. This feature allows the system programmer to take advantage of the strengths of both the OpenVMS Debugger and SDA to examine the system dump and to debug system programs such as device drivers, without having to invoke both the OpenVMS debugger and SDA separately.

To obtain access to SDA commands, you simply type "SDA" at the OpenVMS Debugger prompt ("DBG>") at any time after the dump file has been opened. SDA initializes itself and then outputs the "SDA>" prompt. Enter SDA commands as required. (See Chapter 4 for more information.) To return to the OpenVMS Debugger, you enter "EXIT" at the "SDA>" prompt. Optionally, you may invoke SDA to perform a single command and then return immediately to the OpenVMS Debugger, as in the following example:

```
DBG> SDA SHOW SUMMARY
```

SDA may be reentered at any time, with or without the optional SDA command. Once SDA has been initialized, the SDA> prompt is output more quickly on subsequent occasions.

Note that there are some limitations on the use of SDA from within SDD:

- You cannot switch between processes, whether requested explicitly (SET PROCESS <name>) or implicitly (SHOW PROCESS <name>). The exception to this is that access to the system process is possible.
- You cannot switch between CPUs.
- SDA has no knowledge of the OpenVMS debugger's Motif or Windows interfaces. Therefore, all SDA input and output occurs at the terminal or window where the OpenVMS debugger was originally invoked. Also, while using SDA, the OpenVMS debugger window is not refreshed; you must exit SDA to allow the OpenVMS debugger window to be refreshed.
- When you invoke SDA from SDD with an immediate command, and that command produces a full screen of output, SDA displays the message "Press RETURN for more." followed by the "SDA>" prompt before continuing. At this prompt, if you enter another SDA command, SDA does not automatically return to SDD upon completion. To do this, you must enter an EXIT command.

If the need arises to switch between processes or CPUs in the system dump, then you must invoke SDA separately using the DCL command ANALYZE/CRASH\_DUMP.

# The OpenVMS Alpha System Dump Debugger

## 9.8 Limitations of the System Dump Debugger

### 9.8 Limitations of the System Dump Debugger

SDD provides a narrow window into the context of the system that was current at the time that the system crashed (stack, process, CPU, and so on). It does not provide full access to every part of the system as is provided by SDA. However, it does provide a view of the failed system using the semantics of the OpenVMS debugger—source correlation and display, call frame traversal, examination of variables by name, language constructs, and so on.

SDD therefore provides an additional approach to analyzing system dumps that is difficult to realize with SDA, often allowing quicker resolution of system crashes than is possible with SDA alone. When SDD cannot provide the needed data from the system dump, you should use SDA instead.

### 9.9 Access to Symbols in OpenVMS Executive Images

For a discussion and explanation of how the OpenVMS debugger accesses symbols in OpenVMS executive images, see Section 8.11.

### 9.10 Sample System Dump Debugging Session

This section provides a sample session that shows the use of some OpenVMS debugger commands as they apply to the system dump debugger. The examples in this section show how to work with a dump created as follows:

1. Follow the steps in Section 8.12, up to and including Example 8-9 (Breakpoint Display).
2. When the breakpoint at line 146 is reached, enter the OpenVMS debugger command to clear R27 and then continue:

```
DBG> DEPOSIT R27=0
DBG> GO
```

3. The system then crashes and a dump is written.
4. When the system reboots, copy the contents of `SYSS$SYSTEM:SYSDUMP.DMP` to the build system with SDA:

```
$ analyze/crash sys$system:sysdump.dmp

OpenVMS (TM) Alpha system dump analyzer
...analyzing a selective memory dump...

%SDA-W-NOTSAVED, global pages not saved in the dump file
Dump taken on 1-JAN-1998 00:00:00.00
INVEXCEPTN, Exception while above ASTDEL

SDA> copy hstsys::sysdump.dmp
SDA>
```

To reproduce this sample session, you need access to the `SYSTEM_DEBUG.DSF` matching the `SYSTEM_DEBUG.EXE` file on your test system and to the source file `C_TEST_ROUTINES.C`, which is available in `SYS$EXAMPLES`.

## The OpenVMS Alpha System Dump Debugger

### 9.10 Sample System Dump Debugging Session

The example begins by invoking the system dump debugger's character cell interface on the build system.

#### Example 9–1 Invoking the System Dump Debugger

```
$ define dbg$decw$display " "  
$ debug/keep  
  
OpenVMS Alpha Debug64 Version V7.2-019  
  
DBG>
```

Use the `ANALYZE/CRASH_DUMP` command to open the system dump. In this example, the logical name `DBGHK$IMAGE_PATH` is used for the image path, so the command qualifier `/IMAGE_PATH` is not being used. You may need to use it.

When you have opened the dump file, the `DEBUG` prompt is displayed. You should now do the following:

1. Set the language to be C, the language of the module that was active at the time of the system crash.
2. Set the source directory to the location of the source of the module. Use the debugger's `SET SOURCE` command, which takes a search list as a parameter so you can make it point to many places.

#### Example 9–2 Accessing the System Dump

```
DBG> analyze/crash_dump sysdump.dmp  
%SDA-W-NOTSAVED, global pages not saved in the dump file  
%DEBUG-I-INIBRK, target system interrupted  
%DEBUG-I-DYNIMGSET, setting image SYSTEM_DEBUG  
%DEBUG-I-DYNMODSET, setting module C_TEST_ROUTINES  
DBG> set language c  
DBG> set source/latest sys$examples,sys$library  
DBG>
```

## The OpenVMS Alpha System Dump Debugger

### 9.10 Sample System Dump Debugging Session

Now that the debugger has access to the source, you can put the debugger into screen mode to see exactly where you are and the code surrounding it.

#### Example 9-3 Displaying the Source Code

```
DBG> Set Mode Screen; Set Step Nosource
- SRC: module C_TEST_ROUTINES -scroll-source-----
  135:     int i,k;
  136:     for(k=0;k<1000;k++)
  137:     {
  138:         test_c_code5(&i);
  139:     }
  140:     return;
  141: }
  142: int test_c_code3(int subrtnCount)
  143: {
  144:     subrtnCount = subrtnCount - 1;
  145:     if (subrtnCount != 0)
-> 146:         subrtnCount = test_c_code3(subrtnCount);
  147:     return subrtnCount;
  148: }
  149: int test_c_code2(int64 in64,int in32, int64 test, int64* pVar)
  150: {
  151:     xdt$fregsav[5] = in64;
  152:     xdt$fregsav[6] = in32;
  153:     if (xdt$fregsav[9] > 0)
  154:         *pVar = (*pVar + xdt$fregsav[17])%xdt$fregsav[9];
  155:     else
  156:         *pVar = (*pVar + xdt$fregsav[17]);
  157:     xdt$fregsav[7] = test_c_code3(10);
- OUT -output-----

- PROMPT -error-program-prompt-----

DBG>
```

## The OpenVMS Alpha System Dump Debugger 9.10 Sample System Dump Debugging Session

Now, you try a couple of other commands, EXAMINE and SHOW CALLS. The EXAMINE command allows you to look at all the C variables. Note that the C\_TEST\_ROUTINES module is compiled with the /NOOPTIMIZE switch which allows access to all variables. The SHOW CALLS command shows you the call sequence from the beginning of the stack. In this case, you started out in the image EXEC\_INIT. (The debugger prefixes all images other than the main image with SHARE\$ so it shows up as SHARE\$EXEC\_INIT.)

### Example 9-4 Using the Examine and Show Calls Commands

```
DBG> Set Mode Screen; Set Step Nosource
- SRC: module C_TEST_ROUTINES -scroll-source-----
  135:   int i,k;
  136:   for(k=0;k<1000;k++)
  137:   {
  138:       test_c_code5(&i);
  139:   }
  140:   return;
  141: }
  142: int test_c_code3(int subrtnCount)
  143: {
  144:     subrtnCount = subrtnCount - 1;
  145:     if (subrtnCount != 0)
-> 146:         subrtnCount = test_c_code3(subrtnCount);
  147:     return subrtnCount;
  148: }
  149: int test_c_code2(int64 in64,int in32, int64 test, int64* pVar)
  150: {
  151:     xdt$fregsav[5] = in64;
  152:     xdt$fregsav[6] = in32;
  153:     if (xdt$fregsav[9] > 0)
  154:         *pVar = (*pVar + xdt$fregsav[17])%xdt$fregsav[9];
  155:     else
  156:         *pVar = (*pVar + xdt$fregsav[17]);
  157:     xdt$fregsav[7] = test_c_code3(10);
- OUT -output-----
C_TEST_ROUTINES\test_c_code3\subrtnCount:      9
module name      routine name      line      rel PC      abs PC
*C_TEST_ROUTINES test_c_code3      146      00000000000000CC FFFFFFFF83002D6C
*C_TEST_ROUTINES test_c_code2      157      00000000000001A0 FFFFFFFF83002E40
*C_TEST_ROUTINES test_c_code      170      0000000000000260 FFFFFFFF83002F00
*XDELTA          XDT$SYSDBG_INIT  9371     0000000000000058 FFFFFFFF83052238
*SYS$DOINIT      INI$DOINIT      1488     0000000000000098 FFFFFFFF830520B8
SHARE$EXEC_INIT  0000000000018C74 FFFFFFFF83086C74
SHARE$EXEC_INIT  0000000000014BD0 FFFFFFFF83082BD0

- PROMPT -error-program-prompt-----

DBG> e subrtnCount
DBG> show calls
DBG>
```





# Part III

---

## OpenVMS Watchpoint Utility

Part 3 describes the Watchpoint utility. It presents how to use the Watchpoint utility by doing the following:

- Loading the watchpoint driver
- Creating and deleting watchpoints
- Looking at watchpoint driver data
- Acquiring collected watchpoint data
- Looking at the protection attributes and access fault mechanism
- Looking at some watchpoint restrictions



---

## The Watchpoint Utility

This chapter describes the Watchpoint utility (WP), which enables you to monitor write access to user-specified locations. The chapter contains the following sections:

Section 10.1 presents an introduction of the Watchpoint utility.

Section 10.2 describes how to load the watchpoint driver.

Section 10.3 describes the creation and deletion of watchpoints and the constraints upon watchpoint locations.

Section 10.4 contains detailed descriptions of the watchpoint driver data structures, knowledge of which may be required to analyze collected watchpoint data.

Section 10.5 discusses acquiring collected watchpoint data.

Section 10.6 describes the watchpoint protection facility.

Section 10.7 describes its restrictions.

### 10.1 Introduction

A watchpoint is a data field to which write access is monitored. The field is from 1 to 8 bytes long and must be contained within a single page. Typically, watchpoints are in nonpaged pool. However, subject to certain constraints (see Section 10.3.1), they can be defined in other areas of system space. The Watchpoint facility can simultaneously monitor a large number (50 or more) watchpoints.

The utility is implemented in the WPDRIVER device driver and the utility program WP. This document concentrates on the device driver, which can be invoked directly or through the WP utility.

For information on the WP utility, see its help files, which can be displayed with the following DCL command:

```
$ HELP/LIBRARY=SYS$HELP:WP
```

Once the driver has been loaded, a suitably privileged user can designate a watchpoint in system space. Any write to a location designated as a watchpoint is trapped. Information is recorded about the write, including its time, the register contents, and the program counter (PC) and processor status longword (PSL) of the writing instruction. Optionally, one or both of the following user-specified actions can be taken:

- An XDELTA breakpoint<sup>1</sup> or SCD breakpoint which occurs just after the write to the watchpoint

---

<sup>1</sup> For simplicity, this chapter only mentions XDELTA. Any reference to XDELTA breakpoints also implies SCD breakpoints.

## The Watchpoint Utility

### 10.1 Introduction

- A fatal watchpoint bugcheck which occurs just after the write to the watchpoint

You define a watchpoint by issuing QIO requests to the watchpoint driver; entering commands to the WP utility, which issues requests to the driver; or, from kernel mode code, invoking a routine within the watchpoint driver.

The WPDRIVER data structures store information about writes to a watchpoint. This information can be obtained either through QIO requests to the WPDRIVER, commands to the WP utility, XDELTA commands issued during a requested breakpoint, or SDA commands issued during the analysis of a requested crashdump.

### 10.2 Initializing the Watchpoint Utility

From a process with CMKRNL privilege, run the SYSMAN utility to load the watchpoint driver, SYSS\$WPDRIVER.EXE. Enter the following commands:

```
$ RUN SYSS$SYSTEM:SYSMAN
SYSMAN> IO CONNECT WPA0:/NOADAPTER/DRIVER=SYSS$WPDRIVER
SYSMAN> EXIT
```

SYSMAN creates system I/O data structures for the pseudo-device WPA0, loads WPDRIVER, and invokes its initialization routines. WPDRIVER initialization includes the following actions:

- Allocating nonpaged pool and physical memory for WPDRIVER data structures
- Appropriating the SCB vector specific to access violations
- Recording in system space the addresses of the WPDRIVER routines invoked by kernel mode code to create and delete watchpoints

Memory requirements for WPDRIVER and its data structures are:

- Device driver and UCB—approximately 3K bytes of nonpaged pool
- Trace table and a related array—36 bytes for each of system parameter WPTTE\_SIZE trace table entries
- Watchpoint restore entries—system parameter WPRE\_SIZE pages of physically contiguous memory
- Each watchpoint—176 bytes of nonpaged pool

It is advisable to load the watchpoint driver relatively soon after system initialization to ensure its allocation of physically contiguous memory. If the driver cannot allocate enough physically contiguous memory, it does not set WPA0: online. If the unit is offline, you will not be able to use the watchpoint utility.

### 10.3 Creating and Deleting Watchpoints

There are three different ways to create and delete watchpoints:

- An image can assign a channel to device WPA0: and then request the Queue I/O Request (\$QIO) system service to create or delete a watchpoint.
- Code running in kernel mode can dispatch directly to routines within the WPDRIVER to create and delete watchpoints.
- You can enter commands to the WP utility.

The first two methods are described in detail in the sections that follow.

### 10.3.1 Using the \$QIO Interface

An image first assigns a channel to the pseudo-device WPA0: and then issues a \$QIO request on that channel. The process must have the privilege PHY\_IO; otherwise, the \$QIO request is rejected with the error SSS\_NOPRIV.

Table 10–1 shows the functions that the driver supports.

**Table 10–1 Driver Supported Functions**

| Function     | Activity                                   |
|--------------|--------------------------------------------|
| IOS_ACCESS   | Creates a watchpoint                       |
| IOS_DEACCESS | Deletes a watchpoint                       |
| IOS_RDSTATS  | Receives trace information on a watchpoint |

The IOS\_ACCESS function requires the following device/function dependent arguments:

- P2—Length of the watchpoint. A number larger than 8 is reduced to 8.
- P3—Starting address of the watchpoint area.

The following are the constraints on the watchpoint area. It must be:

- Nonpageable system space.
- Write-accessible from kernel mode.
- Within one page. If it is not, the requested length is reduced to what will fit within the page containing the starting address.
- Within a page accessed only from kernel mode and by instructions that incur no pagefaults.
- Within a page whose protection is not altered while the watchpoint is in place.
- Outside of certain address ranges. These are the WPDRIVER code, its data structures, and the system page table.

Because of the current behavior of the driver, there is an additional requirement that there be no “unexpected” access violations referencing a page containing a watchpoint. See Section 10.7 for further details.

To specify that an XDELTA breakpoint or a fatal bugcheck occur if the watchpoint is written, use the following I/O function code modifiers:

- IOSM\_CTRL to request an XDELTA breakpoint
- IOSM\_ABORT to request a fatal bugcheck

For an XDELTA breakpoint to be taken, OpenVMS must have been booted specifying that XDELTA and/or the SCD be resident (bit 1 or bit 15 in the boot flags must be set). If both watchpoint options are requested, the XDELTA breakpoint is taken first. At exit from the breakpoint, the driver crashes the system.

## The Watchpoint Utility

### 10.3 Creating and Deleting Watchpoints

A request to create a watchpoint can succeed completely, succeed partially, or fail. Table 10–2 shows the status codes that can be returned in the I/O status block.

**Table 10–2 Returned Status Codes**

| Status Code   | Meaning                                                                                                                                        |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| SS\$NORMAL    | Success.                                                                                                                                       |
| SS\$BUFFEROVF | A watchpoint was established, but its length is less than was requested because the requested watchpoint would have straddled a page boundary. |
| SS\$EXQUOTA   | The watchpoint could not be created because too many watchpoints already exist.                                                                |
| SS\$INSFMEM   | The watchpoint could not be created because there was insufficient nonpaged pool to create data structures specific to this watchpoint.        |
| SS\$IVADDR    | The requested watchpoint resides in one of the areas in which the WPDRIVER is unable to create watchpoints.                                    |
| SS\$WASSET    | An existing watchpoint either coincides or overlaps with the requested watchpoint.                                                             |

The following example MACRO program assigns a channel to the WPA0 device and creates a watchpoint of 4 bytes, at starting address 80001068. The program requests neither an XDELTA breakpoint nor a system crash for that watchpoint.

```

        $IODEF
        .PSECT  RWDATA,NOEXE,RD,WRT,LONG
        ;
WP_IOSB: .BLKL  2          ; I/O status block.
WP_ADDR: .LONG  ^X80001068 ; Address of watchpoint to create.
WP_NAM:  .ASCID  /WPA0:/   ; Device to which to assign channel.
WP_CHAN: .BLKW  1          ; Channel number.
        .PSECT  PROG,EXE,NOWRT
        ;
START:  .CALL_ENTRY

        $ASSIGN_S DEVNAM=WP_NAM,CHAN=WP_CHAN
        BLBC     R0,RETURN

        $QIOW_S  CHAN=WP_CHAN,-
                 FUNC=#IO$_ACCESS,-
                 IOSB=WP_IOSB,-
                 P2=#4,-
                 P3=WP_ADDR
        BLBC     R0,RETURN
        MOVL    WP_IOSB,R0    ; Move status to R0.
RETURN:  RET      ; Return to caller.
        .END    START

```

A watchpoint remains in effect until it is explicitly deleted. (Note, however, that watchpoint definitions do not persist across system reboots.) To delete an existing watchpoint, issue an IO\$\_DEACCESS QIO request.

The IO\$\_DEACCESS function requires the following device/function dependent argument: P3 - Starting address of the watchpoint to be deleted.

Table 10–3 shows the status values that are returned in the I/O status block.

**Table 10–3 Returned Status Values**

| Status Value | Meaning                                  |
|--------------|------------------------------------------|
| SS\$NORMAL   | Success.                                 |
| SS\$IVADDR   | The specified watchpoint does not exist. |

Section 10.5 describes the use of the IO\$\_RDSTATS QIO request.

### 10.3.2 Invoking WPDRIVER Entry Points from System Routines

When the WPDRIVER is loaded, it initializes two locations in system space with the addresses of routines within the driver. These locations, WP\$CREATE\_WATCHPOINT and WP\$DELETE\_WATCHPOINT, enable dispatch to create and delete watchpoint routines within the loaded driver. Input arguments for both routines are passed in registers.

Code running in kernel mode can execute the following instructions:

```
JSB    @G^WP$CREATE_WATCHPOINT ; create a watchpoint
```

and

```
JSB    @G^WP$DELETE_WATCHPOINT ; delete a watchpoint
```

Both these routines save IPL at entry and set it to the fork IPL of the WPDRIVER, IPL 11. Thus, they should not be invoked by code threads running above IPL 11. At exit, the routines restore the entry IPL.

These two locations contain an RSB instruction prior to the loading of the driver. As a result, if a system routine tries to create or delete a watchpoint before the WPDRIVER is loaded, control immediately returns.

WP\$CREATE\_WATCHPOINT has the following register arguments:

- R0—User-specified watchpoint options
  - Bit 1 equal to 1 specifies that a fatal OPERCRASH bugcheck should occur after a write to the watchpoint area.
  - Bit 2 equal to 1 specifies that an XDELTA breakpoint should occur after a write to the watchpoint area.
- R1—Length of the watchpoint area
- R2—Starting address of the watchpoint area

Status is returned in R0. The status values and their interpretations are identical to those for the QIO interface to create a watchpoint. The only difference is that the SS\$NOPRIV status cannot be returned with this interface.

WP\$DELETE\_WATCHPOINT has the following register argument:

- R2—Starting address of the watchpoint area

Status is returned in R0. The status values and their interpretations are identical to those for the QIO interface.

## **10.4 Data Structures**

The WPDRIVER uses three different kinds of data structures:

- One watchpoint restore entry (WPRE) for each page of system space in which one or more active watchpoints are located
- One watchpoint control block (WPCB) for each active watchpoint
- Trace table entries (WPTTEs) in a circular trace buffer which maintains a history of watchpoint writes

These data structures are described in detail and illustrated in the sections that follow.

### **10.4.1 Watchpoint Restore Entry (WPRE)**

There is one WPRE for each system page that contains a watchpoint. That is, if nine watchpoints are defined which are in four different system pages, four WPREs are required to describe those pages. When WPDRIVER is loaded, its initialization routine allocates physically contiguous memory for the maximum number of WPREs. The number of pages to be allocated is specified by system parameter WPRE\_SIZE.

The WPDRIVER allocates WPREs starting at the beginning of the table and maintains a tightly packed list. That is, when a WPRE in the middle of those in use is “deallocated,” its current contents are replaced with the contents of the last WPRE in use. The number in use at any given time is in the driver variable WPSL\_WP\_COUNT. The system global EXESGA\_WP\_WPRE points to the beginning of the WPRE table.

The WPRE for a page contains information useful for:

- Determining whether a given access violation refers to an address in the page associated with this WPRE
- Restoring the original SPTE value for the associated page
- Reestablishing the modified SPTE value when watchpoints are reenabled
- Invalidating the translation buffer when the SPTE is modified
- Locating the data structures associated with individual watchpoints defined in this system page

### **10.4.2 Watchpoint Control Blocks (WPCB)**

The WPCBs associated with a given system page are singly-linked to a list header in the associated WPRE. A WPCB is allocated from a nonpaged pool when a watchpoint is created. A WPCB contains static information about the watchpoint such as the following:

- Its starting address and length
- Original contents of the watchpoint at the time it was established
- User-specified options for this watchpoint

In addition, the WPCB contains dynamic data associated with the most recent write reference to the watchpoint. This data includes the following:

- Number of times that the watchpoint has been written.
- Address of the first byte within the watchpoint that was modified at the last write reference.



- PC-PSL pair that made the last write reference.
- System time at the last write reference.
- Contents of the general registers at the time of the last write reference.
- A copy of up to 15 bytes of instruction stream data beginning at the program counter (PC) of the instruction that made the last write reference. The amount of instruction stream data that is copied here is the lesser of 15 bytes and the remaining bytes on the page containing the PC.
- Contents of the watchpoint before the last write reference.
- Contents of the watchpoint after the last write reference. This value is presumably the current contents of the watchpoint.
- A pointer to an entry in the global circular trace buffer where all recent references to watchpoints are traced.

### 10.4.3 Trace Table Entries (WPTTEs)

Whenever a watchpoint is written, all the relevant data is recorded in the WPCB associated with the watchpoint. In addition, to maintain a history, the WPDRIVER copies a subset of the data to the oldest WPTTE in the circular trace buffer. Thus, the circular trace buffer contains a history of the last N references to watchpoints. The driver allocates nonpaged pool to accommodate the number of trace table entries specified by the system parameter WPTTE\_SIZE. The WPTTEs for all watchpoints are together in the table, but the ones for a particular watchpoint are chained together.

The subset of data in a WPTTE includes the following:

- Starting address of the watchpoint
- Relative offset of the first byte modified on this reference
- Opcode of the instruction that modified the watchpoint
- A relative backpointer to the previous WPTTE of this watchpoint
- PC-PSL of the write reference
- System time of the write reference
- Contents of the watchpoint before this reference

## 10.5 Analyzing Watchpoint Results

Analyzing watchpoint results is a function of the mode in which the WPDRIVER is used. For example, if you have only one watchpoint and have specified that an XDELTA breakpoint and/or a bugcheck occur on a write to the watchpoint, then when the reference occurs, simply find the program counter (PC) that caused the reference.

This PC (actually the PC of the next instruction) and its processor status longword (PSL) are on the stack at the time of the breakpoint and/or bugcheck. The layout that follows is the stack as it appears within an XDELTA breakpoint. Examined from a crash dump, the stack is similar but does not contain the return address from the JSB to INI\$BRK.

## The Watchpoint Utility

### 10.5 Analyzing Watchpoint Results

```
+-----+
|address in WPDRIVER from JSB G^INI$BRK| :SP
|PC of next instruction
|PSL at watchpoint access
+-----+
```

Furthermore, R0 contains the address of the WPCB associated with that watchpoint. You can examine the WPCB to determine the original contents of the watchpoint area and the registers at the time of the write.

Definitions for the watchpoint data structures are in SYSS\$LIBRARY:LIB.MLB. Build an object module with its symbol definitions by entering the following DCL commands:

```
$ MACRO/OBJ=SYSS$LOGIN:WPDEFS SYSS$INPUT: + SYSS$LIBRARY:LIB/LIB
    $WPCBDEF GLOBAL !n.b. GLOBAL must be capitalized
    $WPREDEF GLOBAL
    $WPTTEDEF GLOBAL
    .END
CTRL/Z
```

Then, within SDA, you can format watchpoint data structures. For example, enter the following SDA commands:

```
SDA>READ SYSS$LOGIN:WPDEFS.OBJ
SDA>FORMAT @R0 /TYPE=WPCB !type definition is required
SDA>DEF WPTTE = @R0 + WPCB$L_TTE
SDA>FORMAT WPTTE /TYPE=WPTTE
```

An alternative to crashing the system or using XDELTA to get watchpoint information is the QIO function IOS\_RDSTAT. This function returns watchpoint control block contents and trace table entries for a particular watchpoint.

It requires the following device/function dependent arguments:

- P1—Address of buffer to receive watchpoint data.
- P2—Length of the buffer. The minimum size buffer of 188 bytes is only large enough for WPCB contents.
- P3—Watchpoint address.

The data returned in the buffer has the format shown in Figure 10-1.

Figure 10–1 Format of Data Returned in Buffer

|                                       |
|---------------------------------------|
| Number of bytes copied to buffer      |
| Total number of WPTTEs for watchpoint |
| Number of WPTTEs copied to buffer     |
| WPCB                                  |
| Most recent WPTTE                     |
| Next recent WPTTE                     |
| Next WPTTE                            |
| ~ Next WPTTE ~                        |

## 10.6 Watchpoint Protection Overview

The overall design of the watchpoint facility uses protection attributes on system pages and the access violation fault mechanism. To establish a watchpoint within a page of system space, the WPDRIVER changes the protection of the page to disallow writes. The WPDRIVER modifies the access violation vector to point to its own routine, WPSACCVIO.

Any subsequent write to this page causes an access violation and dispatch to WPSACCVIO. Thus, the WPDRIVER gains control on all write references to watchpoints and can monitor such accesses.

When WPSACCVIO is entered, it raises IPL to 31 to block all other threads of execution. It first must determine whether the faulting address (whose reference caused the access violation) is within a page containing a watchpoint. However, any major amount of CPU processing at this point might access an area in system space whose protection has been altered to establish watchpoints. As a result, such processing might cause a reentry into WPSACCVIO. To avoid recursive reentry, WPSACCVIO first restores all SPTES that it had modified to their values prior to the establishment of any watchpoints. From this point until this set of SPTES are remodified, no watchpoints are in effect. Now WPSACCVIO can determine whether the reference was to a page containing a watchpoint.

To determine whether the reference is to a watchpoint page, WPSACCVIO compares the faulting address to addresses of pages whose protection has been altered by WPDRIVER. If the faulting address is not in one of these pages, then WPSACCVIO passes the access violation to the usual OpenVMS service routine, EXESACVIOLAT. If the faulting address is within a page containing a watchpoint, more extensive processing is required.

As a temporary measure, WPSACCVIO first records all data related to the reference in its UCB. It cannot immediately associate the access violation with a particular watchpoint. This ambiguity arises from imprecision in the faulting virtual address recorded at the access violation. The CPU need merely place on the stack “some virtual address in the faulting page.”

## The Watchpoint Utility

### 10.6 Watchpoint Protection Overview

As a result, when a reference to a page with a watchpoint results in an access violation, the watchpoint driver first merely captures the data in its UCB. The data captured at this point includes the following:

- PC and PSL of the faulting instruction
- Current system time
- Values of all the general registers from R0 through SP
- A copy of up to 15 bytes of the instruction stream, beginning at the PC previously captured

If the reference later turns out not to be one to a watchpoint, the captured data is discarded. If the reference is to a watchpoint, the data is copied to the WPCB and circular trace buffer.

The watchpoint driver distinguishes between these two possibilities by reexecuting the faulting instruction under a controlled set of circumstances.

Once the instruction has reexecuted, WP\$TBIT can determine whether watchpoint data has been modified by comparing the current contents of all watchpoints within the page of interest to the contents that they had prior to this reference. Because the driver has run at IPL 31 since the write access that caused an access violation, any change in the contents is attributable to the reexecuted instruction. If the contents of a watchpoint are different, WP\$TBIT copies the data temporarily saved in its UCB to the WPCB associated with this watchpoint and records a subset of this data in a WPTTE.

The driver can cause either or both an XDELTA breakpoint or a bugcheck, depending on what action was requested with the watchpoint definition. If an XDELTA breakpoint was requested, the driver invokes XDELTA. After the user proceeds from the XDELTA breakpoint, if a bugcheck was not requested, the driver restores the SPTEs of pages containing watchpoints, the saved registers and IPL, and REIs to dismiss the exception.

### 10.7 Restrictions

The WPDRIVER can monitor only those write references to system space addresses that arise in a CPU. I/O devices can write to memory and thereby modify watchpoints without the WPDRIVER's becoming aware of the write.

Because a write access to a watchpoint is determined by comparing the contents of the watchpoint before and after the write, a write of data identical to the original contents is undetectable.

Because the WPDRIVER modifies SPTEs, a device page that directly interprets tables may experience access violations when it attempts to write into a memory page whose protection has been modified to monitor watchpoints. In other words, a page containing a watchpoint should not also contain a buffer for such a controller.

When you create a watchpoint, you should ensure that the system is quiet with respect to activity affecting the watchpoint area. Otherwise, an inconsistent copy of the original contents of the watchpoint area may be saved. WPDRIVER raises IPL to 11 to copy the watchpoint area's original contents. This means that if the area is modified from a thread of execution running as the result of an interrupt above 11, WPDRIVER can copy inconsistent contents. An inconsistent copy of the original contents may result in spuriously detected writes and missed writes.

## The Watchpoint Utility 10.7 Restrictions

If the page containing the watchpoint area is written by an instruction that incurs a page fault, the system can crash with a fatal PGFIPLHI bugcheck. As described in the previous section, after detecting an attempt to write to a page with a watchpoint, the WPDRIVER re-executes the writing instruction at IPL 31. Page faults at IPL 31 are not allowed.

If an outer access mode reference to a watchpointed page causes an access violation, the system will likely crash. When an access violation occurs on a page with a watchpoint, the current driver does not probe the intended access and faulting mode against the page's original protection code. Instead, it assumes that any access violation to that page represents a kernel mode instruction that can be reexecuted at IPL 31. The driver's subsequent attempt to REI, restoring a program status longword (PSL) with an outer mode and IPL 31, causes a reserved operand fault and, generally, a fatal INVEXCEPTN bugcheck.

You must be knowledgeable about the accesses to the page with the watchpoint and careful in using the driver. You should test the watchpoint creation on a standalone system. You should leave the watchpoint in effect long enough to have some confidence that pagefaults in instructions accessing that page are unlikely.

An attempt to CONNECT a WPA unit other than zero results in a fatal WPDRVRERR bugcheck.

The WPDRIVER is suitable for use only on a single CPU system. That is, it should not be used on a symmetric multiprocessing system. There are no plans to remove this restriction in the near future.



## A

---

Access rights block, 2–19  
Access violations, 2–25, 2–26  
ACME.EXE file, 4–35  
ACPs (ancillary control processes), 4–82  
Addition operator (+), 2–16  
Addresses, examining, 4–18  
Address operator (@), 2–15  
Address operator (^B), 2–15  
Address operator (^L), 2–15  
Address operator (^P), 2–15  
Address operator (^Q), 2–15  
Address operator (^V), 2–15  
Address operator (^W), 2–15  
Address space number (ASN), 2–18  
ANALYZE command  
    /CRASH\_DUMP qualifier, 2–10, 3–1, 3–3  
    /OVERRIDE qualifier, 3–4  
    /RELEASE qualifier, 3–5  
    /SYMBOL qualifier, 3–6  
    /SYSTEM qualifier, 2–2, 3–1, 3–7  
Analyzing watchpoint results, 10–7  
Ancillary control process  
    See ACPs  
AND operator (&), 2–16  
AQB (ACP queue blocks), 4–83  
ARB symbol, 2–19  
Arithmetic operators, 2–15  
Arithmetic shifting operator (@), 2–16  
ASBs (asynchronous save blocks), 4–56  
ASN register displaying, 4–75  
ASTEN register, displaying, 4–75  
ASTs (asynchronous system traps), 2–18  
ASTSR register, displaying, 4–75  
AST symbols, 2–18  
Asynchronous save blocks  
    See ASBs  
Asynchronous system traps  
    See ASTs  
At sign (@)  
    as execute command, 4–3  
    as shifting operator, 2–16  
ATTACH command, 4–4  
    /PARENT qualifier, 4–4

## B

---

Backup utility (BACKUP), copying system dump file, 2–8  
BDBs (buffer descriptor blocks), 4–56  
BDBSUM (BDB summary page), 4–56  
Binary operators, 2–16  
BLBs (buffer lock blocks), 4–56  
BLBSUM (BLB summary page), 4–56  
Buffer descriptor blocks  
    See BDBs  
Buffer lock blocks  
    See BLBs  
Bugcheck  
    code, 2–22  
    fatal conditions, 2–22 to 2–33  
    halt/restart, 2–10  
    handling routines  
        global symbols, 4–35  
    reasons for taking, 4–78

## C

---

Call frames  
    displaying in SDA, 4–64  
    following a chain, 4–64  
Cancel I/O routine, 4–82  
Catenate operator (.), 2–16  
CCBs (channel control blocks), displaying in SDA, 4–56  
CDDBs (class driver data blocks), 4–83  
CDRPs (class driver request packets), 4–72, 4–183  
CDTs (connection descriptor tables), 4–72, 4–183  
Channel control blocks  
    See CCBs  
/CHANNEL qualifier, 4–159  
Channel request blocks  
    See CRBs  
Class driver data blocks  
    See CDDBs  
Class driver request packets  
    See CDRPs  
CLUBs (cluster blocks), 4–67

CLUDCBs (cluster quorum disk control blocks), 4-67  
 CLUESSITE\_PROC logical name, 5-15  
 CLUE CALL\_FRAME command, 5-4  
   /ADDRESS qualifier, 5-4  
   /CPU qualifier, 5-4  
   /IDENTIFICATION qualifier, 5-4  
   /INDEX qualifier, 5-4  
   /PROCESS qualifier, 5-5  
 CLUE CLEANUP command, 5-7  
 CLUE commands, archiving information, 2-8  
 CLUE CONFIG command, 5-8  
 CLUE CRASH command, 2-22, 5-9  
 CLUE ERRLOG command, /OLD qualifier, 5-12  
 CLUE FRU command, 5-13  
 CLUE HISTORY command, /OVERRIDE qualifier, 5-14  
 CLUE MCHK command, 5-16  
 CLUE MEMORY command, 5-17  
   /FILES qualifier, 5-17  
   /FREE qualifier, 5-17  
   /FULL qualifier, 5-17  
   /LAYOUT qualifier, 5-17  
   /LOOKASIDE qualifier, 5-17  
   /STATISTIC qualifier, 5-17  
 CLUE PROCESS command, 5-25  
   /BUFFER qualifier, 5-25  
   /LAYOUT qualifier, 5-25  
   /LOGICAL qualifier, 5-25  
   /RECALL qualifier, 5-25  
 CLUE REGISTER command, 5-27  
 CLUE SG command, /CRAB qualifier, 5-29  
 CLUE STACK command, 5-30  
 CLUE SYSTEM command, /LOGICAL qualifier, 5-33  
 CLUE VCC command, 5-34  
   /CACHE qualifier, 5-34  
   /LIMBO qualifier, 5-34  
   /STATISTIC qualifier, 5-34  
   /VOLUME qualifier, 5-34  
 CLUE XOP command, /ACTIVE [/FULL] qualifier, 5-37  
 CLUE XQP command, 5-37  
   /AQB qualifier, 5-37  
   /BFRD qualifier, 5-37  
   /BFRL qualifier, 5-37  
   /BUFFER [/FULL] qualifier, 5-37  
   /CACHE\_HEADER qualifier, 5-37  
   /FCB [/FULL] qualifier, 5-37  
   /FILE qualifier, 5-37  
   /GLOBAL qualifier, 5-37  
   /LBN\_HASH qualifier, 5-37  
   /LIMBO qualifier, 5-38  
   /LOCK qualifier, 5-38  
   /THREAD qualifier, 5-38  
   /VALIDATE qualifier, 5-38  
 CLUFCBs (cluster failover control blocks), 4-67  
 Cluster blocks  
   See CLUBs  
 Cluster failover control blocks  
   See CLUFCBs  
 Cluster quorum disk control blocks  
   See CLUDCBs  
 Cluster system blocks  
   See CSBs  
 Cluster system identification numbers  
   See CSIDs  
 CNXSDEBUG.EXE file, 4-35  
 Compressed data section, 4-29  
 Condition-handling routines, global symbols, 4-35  
 Condition values, evaluating, 4-15  
 Connection descriptor tables  
   See CDTs  
 Connection manager, displaying SDA information, 4-66  
 Connections, displaying SDA information about, 4-72, 4-146, 4-183  
 Contents of stored machine check frames  
   displaying in SDA, 4-121  
 Context  
   SDA CPU, 2-13  
   SDA process, 2-12  
 Control blocks, formatting, 4-23  
 Control region, 2-18  
   examining, 4-19  
 Control region operator (H), 2-16  
 COPY command, 2-7, 2-8, 4-5  
   /COMPRESS qualifier, 4-5  
   /DECOMPRESS qualifier, 4-5  
   /CPU=*n* qualifier, 4-77  
 CPU context  
   changing, 4-54  
     using SET CPU command, 4-45  
     using SHOW CPU command, 4-74  
     using SHOW CRASH command, 4-77  
     using SHOW PROCESS command, 4-150  
   displaying, 4-74  
 CPUDB symbol, 2-19  
 CPU ID  
   See CPU identification number  
 CPU identification number, 4-74  
 Crash dumps  
   file headers, 4-105  
   headers, 4-105  
   incomplete, 2-10  
   short, 2-10  
 CRBs (channel request blocks), 4-82  
 CREATE command, 2-7  
 Creating and deleting watchpoints, 10-2  
 CSBs (cluster system blocks), 4-67, 4-72



CSIDs (cluster system identification numbers),  
4-66, 4-177  
Current stack pointer, 2-19

## D

---

Data structures  
  formatting, 4-23  
  global symbols, 2-18  
  stepping through a linked list, 4-41  
DCLDEF.STB file, 2-18  
DCL interpreter, global symbols, 2-18  
DDBs (device data blocks), 4-82  
DDIFSRMS\_EXTENSION.EXE file, 4-35  
DDTs (driver dispatch tables), 4-82  
Debugging system image, 8-2  
DECDTMDEF.STB file, 2-18  
Decimal value of an expression, 4-15  
DECnet, global symbols, 2-18  
DEFINE command, 4-7, 4-9  
  /IF\_STATE qualifier, 4-10  
  /KEY qualifier, 4-10  
  /LOCK\_STATE qualifier, 4-10  
  /PD qualifier, 4-7  
  /SET\_STATE qualifier, 4-10  
DEFINE command/TERMINATE qualifier, 4-10  
Delta/XDelta Debugger (DELTA/XDELTA), 1-2  
Device data blocks  
  See DDBs  
Device driver routines, address, 4-82  
Devices, displaying SDA information, 4-81  
Division operator (/), 2-16  
DOSD (dump off system disk), 1-3, 5-2  
DPTs (driver prologue tables), 4-82  
Driver dispatch tables  
  See DDTs  
Driver prologue tables  
  See DPTs  
DUMPBUG system parameter, 2-3, 2-34  
DUMP command, 4-12  
  /COUNT = [{ ALL | records}] qualifier, 4-12  
  /DECIMAL qualifier, 4-12  
  /FORWARD qualifier, 4-12  
  /HEXADECIMAL qualifier, 4-12  
  /INDEX\_ARRAY [= { LONGWORD |  
  QUADWORD}], 4-12  
  /INITIAL\_POSITION qualifier, 4-12  
  /LONGWORD qualifier, 4-12  
  /PHYSICAL qualifier, 4-13  
  /QUADWORD qualifier, 4-13  
  /RECORD\_SIZE=*size* qualifier, 4-13  
  /REVERSE qualifier, 4-13  
Dump file  
  analyzing, 3-1  
  copying, 4-5  
  displaying a summary of, 5-9  
  displaying machine check information, 5-16

## Dump file (cont'd)

  displaying memory with CLUE MEMORY,  
  5-17  
  displaying process information, 5-25  
  displaying the current stack, 5-30  
  displaying virtual I/O cache, 5-34  
  displaying XQP information, 5-37  
  extracting errorlog buffers, 5-12  
  purging files using CLUE CLEANUP, 5-7  
  saving automatically, 2-8, 5-1  
  saving output, 5-14  
  using CLUE CONFIG, 5-8  
DUMPSTYLE system parameter, 2-5  
DUMP subset, 2-5

## E

---

ERRORLOG.STB file, 4-35  
ERRORLOGBUFFERS system parameter, 2-7  
Error logging  
  global symbols, 4-35  
  routines, 4-35  
Error log messages, 5-12  
ESP symbol, 2-18  
EVALUATE command, 4-15  
  /CONDITION\_VALUE qualifier, 4-15  
  /PS qualifier, 4-15  
  /PTE qualifier, 4-15  
  /SYMBOLS qualifier, 4-15  
  /TIME qualifier, 4-15  
EXAMINE command, 4-18  
  /ALL qualifier, 4-18  
  /CONDITION\_VALUE qualifier, 4-18  
  /INSTRUCTION qualifier, 4-18  
  /NOPD qualifier, 4-18  
  /NOSUPPRESS qualifier, 4-19  
  /P0 qualifier, 4-19  
  /P1 qualifier, 4-19  
  /PD qualifier, 4-19  
  /PHYSICAL qualifier, 4-19  
  /PS qualifier, 4-19  
  /PTE qualifier, 4-19  
  /SYSTEM qualifier, 4-19  
  /TIME qualifier, 4-20  
EXCEPTION.STB file global symbols, 4-35  
Exception-handling routines, global symbols, 4-35  
Executive images  
  contents, 4-35, 4-88  
  global symbols, 4-33  
Executive stack pointer, 2-18  
EXEC\_INIT.STB file, 4-35  
EXIT command, 4-22  
Exiting from SDA, 4-22  
Expressions, 2-14  
  evaluating, 4-15  
Extended attribute blocks  
  See XABs

## F

---

F11BXQP.STB file, 4-35  
FABs (file access blocks), 4-56  
Fatal exceptions, 2-22  
FATALEXCPT bugcheck, 2-23  
FC\$GLOBALS.STB file, 4-35  
FCBs (file control blocks), 4-56  
FEN symbol, 2-18  
File access blocks  
    See FABs  
File control blocks  
    See FCBs  
File statistics blocks  
    See FSB  
File systems global symbols, 4-35  
File work areas  
    See FWAs  
Floating point  
    control register, 2-18  
    enable, 2-18  
    registers, 2-18  
FORMAT command, 4-23  
    /PHYSICAL qualifier, 4-23  
    /TYPE qualifier, 4-23  
FPCR register displaying, 4-75  
FPCR symbol, 2-18  
FP symbol, 2-18  
Frame pointers, 2-18  
FSB (file statistics block), 4-56  
Full and selective dumps, 2-4  
FWAs (file work areas), 4-56

## G

---

GBDs (global buffer descriptors), summary page, 4-56  
GBHs (global buffer headers), 4-56  
GBHSH (global buffer hash table), 4-56  
GBSBs (global buffer synchronization blocks), 4-56  
Global buffer descriptors  
    See GBDs  
Global buffer hash table  
    See GBHSH  
Global buffer headers  
    See GBHs  
Global buffer synchronization blocks  
    See GBSBs  
Global page tables, displaying, 4-125  
G operator, 2-15  
G symbol, 2-18

## H

---

Headers, crash dump, 4-105  
HELP command, 4-26  
    recording output, 4-50  
Hexadecimal value of an expression, 4-15  
H operator, 2-16  
H symbol, 2-18

## I

---

I/O databases  
    displaying SDA information, 4-81  
    global symbols, 2-18  
I/O request packets  
    See IRPs  
IDBs (interrupt dispatch blocks), 4-82  
IDXs (index descriptors), 4-56  
IFABs (internal file access blocks), 4-56  
IFIs (internal file identifiers), 4-56  
Image activator, global symbols, 2-18, 4-36  
IMAGE\_MANAGEMENT.STB file, global symbols, 4-36  
IMGDEF.STB file, 2-18  
Implementing the Watchpoint utility, WPDRIVER, 10-1  
Index descriptors  
    See IDXs  
/INDEX qualifier, 4-53  
Initialization code global symbols, 4-35  
Initializing Watchpoint utility, 10-2  
Interlocked queues, validating, 4-213  
Internal file access blocks  
    See IFABs  
Internal file identifiers  
    See IFIs  
Interrupt dispatch blocks  
    See IDBs  
INVEXCEPTN bugcheck, 2-23  
IODEF.STB file, 2-18  
I operator, 2-16  
IO\_ROUTINES.STB file global symbols, 4-36  
IPL register displaying, 4-75  
IPL symbol, 2-19  
IRABs (internal record access blocks), 4-56  
IRPs (I/O request packets), 4-82  
I symbol, 2-19

## J

---

JFBs (journaling file blocks), 4-56  
JIBs (job information blocks), 4-156  
JIB symbol, 2-19  
Job information block  
    See JIB

Journaling file blocks  
See JFBs

## K

---

Kernel stacks  
  displaying contents, 4-196  
  pointer, 2-19  
Kernel threads block, 2-19  
Kernel Threads Block  
  KTB, 4-156  
Key-less-than block  
  See KLTB  
Keys (keyboard), defining for SDA, 4-9  
KLTB (key-less-than block), 4-56  
KSP symbol, 2-19  
KTB  
  kernel threads block, 4-156  
KTB symbol, 2-19

## L

---

LATSRRATING.EXE file, 4-36  
LCK\$DEBUG.EXE file, 4-36  
Linker map, use in crash dump analysis, 2-22  
Linking two 32-bit values ("."), 2-16  
LKB (lock block), 4-118  
LMF\$GROUP\_TABLE.EXE file, 4-36  
Location in memory  
  examining, 4-18  
  SDA default, 4-18  
  translating to instruction, 4-18  
LOCKING.STB file, 4-36  
Lock management routines, global symbols, 4-36  
Lock manager, displaying SDA information, 4-116  
Locks, displaying SDA information, 4-177  
Logical operators, 2-15, 2-16  
  AND operator (&), 2-16  
  NOT operator (#), 2-15  
  OR operator (|), 2-16  
  XOR operator (\), 2-16  
LOGICAL\_NAMES.STB file global symbols, 4-36  
Lookaside lists displaying contents, 4-139

## M

---

Machine check frames displaying in SDA, 4-121  
MAP command, 4-28  
MCES register displaying, 4-75  
Mechanism arrays, 2-23  
Memory  
  examining, 4-18  
  formatting, 4-23  
  locations  
    decoding, 4-20  
    examining, 4-20  
  region  
    examining, 4-21

MESSAGE\_ROUTINES.STB file global symbols,  
  4-36  
MODIFY DUMP command, 4-31  
  /BLOCK=*n* qualifier, 4-31  
  /BYTE command, 4-31  
  /CONFIRM=*n* qualifier, 4-31  
  /LONGWORD qualifier, 4-31  
  /NEXT qualifier, 4-31  
  /OFFSET=*n* qualifier, 4-31  
  /QUADWORD qualifier, 4-31  
  /WORD qualifier, 4-31  
MSCP.EXE file, 4-36  
MULTIPATH.STB file, 4-36  
Multiplication operator (\*), 2-16  
Multiprocessing, global symbols, 4-38  
Multiprocessors  
  analyzing crash dumps, 2-12  
  displaying synchronization structures, 4-190

## N

---

NAMs (name blocks), 4-57  
Negative operator (-), 2-15  
NET\$CSMACD.EXE file, 4-36  
NET\$FDDI.EXE file, 4-36  
NETDEF.STB file, 2-18  
Nonpaged dynamic storage pool, displaying  
  contents, 4-139  
NOT operator (#), 2-15  
NT\_EXTENSION.EXE file, 4-36  
NWA (network work area), 4-57

## O

---

Object rights block, 2-19  
OpenVMS Cluster environments  
  displaying SDA information, 4-66  
OpenVMS Cluster environments, displaying SDA  
  information, 4-66  
OpenVMS Galaxy data structures, symbols, 2-18  
OpenVMS RMS  
  See RMS  
Operators (mathematical)  
  precedence of, 2-15, 2-16  
ORB symbol, 2-19  
OR operator (|), 2-16

## P

---

P0 region, examining, 4-19  
P1 region, examining, 4-19  
Paged dynamic storage pool displaying contents,  
  4-139  
Page faults, illegal, 2-33  
Page files  
  See also SYSS\$SYSTEM:PAGEFILE.SYS file

Page table base register, 2-19  
 Page table entries  
     See PTEs  
 Page tables, displaying, 4-125, 4-152  
 Parentheses (), as precedence operators, 2-16  
 PB (path block), 4-82  
 PCBB register displaying, 2-19, 4-75  
 PCBB symbol, 2-19  
 PCBs (process control blocks), 2-19  
     displaying, 4-153  
     hardware, 4-157  
     specifying the address of, 4-53, 4-150  
 PCB symbol, 2-19  
 PCC (process cycle counter), 2-19  
 PCC symbol, 2-19  
 PCs (program counters), 2-19  
     in a crash dump, 2-22  
 PC symbol, 2-19  
 PDTs (port descriptor tables), 4-146  
 PFN (page frame number)  
     See also PFN database  
 PFN database, displaying, 4-128, 4-134  
 PGFIPLHI bugcheck, 2-33  
 PHDs (process headers), 2-19, 4-154  
 PHD symbol, 2-19  
 Physical address operator (^P), 2-15  
 PID numbers, 4-152  
 PIO, Use process-permanent I/O data structures, 4-57  
 Port drivers, displaying SDA information, 4-66  
 Positive operator (+), 2-15  
 PRBR register displaying, 4-75  
 PRBR symbol, 2-19  
 Precedence operators, 2-16  
 Privileges  
     to analyze a crash dump, 3-1  
     to analyze a running system, 2-12, 3-1  
 Process contexts, changing, 4-46, 4-53, 4-77, 4-150  
 Process control blocks  
     See PCBs and System PCBs  
     See system PCBs  
 Process control region, 2-18  
     operator (H), 2-16  
 Processes  
     displaying  
         SDA information, 4-150, 4-200  
     examining hung, 2-12  
     image, 4-200  
     listening, 4-67  
     lock [brief], 4-152  
     scheduling state, 4-156, 4-201  
     spawning a subprocess, 4-208  
     system, 4-53  
 Process indexes, 4-152

Process names, 4-150  
 Processor base registers, 2-19  
 Processor context, changing, 4-45, 4-54, 4-74, 4-77, 4-150  
 Processor status  
     See PS  
 Process section tables  
     See PSTs  
 PROCESS\_MANAGEMENT.STB file global  
     symbols, 4-36  
 Program regions, examining, 4-19  
 PS (processor status)  
     evaluating, 4-15  
     examining, 4-19  
 PS symbol, 2-19  
 PSTs (process section tables) displaying, 4-154  
 PTBR register displaying, 4-75  
 PTBR symbol, 2-19  
 PTEs (page table entries)  
     evaluating, 4-15  
     examining, 4-19

## Q

---

QSRV\$GLOBALS.STB file, 4-36  
 Queues  
     stepping through, 4-41  
     validating, 4-213  
 Quorum, 4-66

## R

---

RABs (record access blocks), 4-57  
 Radixes, default, 2-15  
 Radix operators, 2-15  
 RDTs (response descriptor tables), 4-183  
 READ command, 4-34  
     /EXECUTIVE qualifier, 4-33  
     /FORCE qualifier, 4-33  
     /IMAGE qualifier, 4-34  
     /LOG qualifier, 4-34  
     /NOLOG qualifier, 4-34  
     /RELOCATE qualifier, 4-34  
     /SYMVA qualifier, 4-34  
     SYSSDISK, 4-35  
 Record access blocks  
     See RABs  
 Record lock blocks  
     See RLBs  
 Recovery unit blocks  
     See RUBs  
 Recovery unit file blocks  
     See RUFBs  
 Recovery unit stream blocks  
     See RUSBs

Recovery unit system services, global symbols, 4-36

RECOVERY\_UNIT\_SERVICES.STB file, global symbols, 4-36

Registers

- displaying, 4-75, 4-154
- integer, 2-19

REPEAT command, 4-41

- /UNTIL=condition qualifier, 4-41

Report system event, global symbols, 4-36

REQSYSDEF.STB file, 2-18

Resident images, 4-151, 4-161

/RESIDENT qualifier installing an image, 4-29

Resource blocks

- See RSBs

Resources, displaying SDA information, 4-175

Response descriptor tables

- See RDTs

Response ID

- See RSPID

RLBs (record lock blocks), 4-57

RMS

- data structures shown by SDA, 4-56
- displaying data structures, 4-155, 4-182
- global symbols, 2-18, 4-36

RMS.STB file, 4-36

RMSDEF.STB file, 2-18

RSBs (resource blocks), 4-118, 4-176

RSPID (response ID), displaying SDA information, 4-183

RUBs (recovery unit blocks), 4-57

RUFBs (recovery unit file blocks), 4-57

RUSBs (recovery unit stream blocks), 4-57

## S

S0 region, examining, 4-19

SAVEDUMP system parameter, 2-7, 2-34

SBs (system blocks), 4-67, 4-82

SCBB register, displaying, 4-75

SCBB symbol, 2-19

SCC (system cycle counter), 2-19

SCC symbol, 2-19

SCD

- See System Code Debugger

Schedulers, global symbols, 4-36

SCS (System Communications Services)

- displaying SDA information, 4-66, 4-67, 4-72, 4-146, 4-183
- global symbols, 2-18

SCSDEF.STB file, 2-18

SDASADD\_SYMBOL callable routine, 7-9

SDASALLOCATE callable routine, 7-10

SDASDBG\_IMAGE\_INFO callable routine, 7-11

SDASDEALLOCATE callable routines, 7-12

SDASDISPLAY\_HELP callable routine, 7-13

SDASENSURE callable routine, 7-15

SDASFORMAT callable routine, 7-16

SDASFORMAT\_HEADING callable routine, 7-18

SDASGETMEM callable routine, 7-33

SDASGET\_ADDRESS callable routine, 7-19

SDASGET\_BLOCK\_NAME callable routine, 7-20

SDASGET\_BUGCHECK\_MSG callable routine, 7-22

SDASGET\_CURRENT\_CPU callable routine, 7-24

SDASGET\_CURRENT\_PCB callable routine, 7-25

SDASGET\_HEADER callable routine, 7-26

SDASGET\_HW\_NAME callable routine, 7-28

SDASGET\_IMAGE\_OFFSET callable routine, 7-29

SDASGET\_INPUT callable routine, 7-31

SDASGET\_LINE\_COUNT callable routine, 7-32

SDASINIT logical name, 2-11

SDASINSTRUCTION\_DECODE callable routine, 7-35

SDASNEW\_PAGE callable routine, 7-37

SDASPARSE\_COMMAND callable routine, 7-38

SDASPRINT callable routine, 7-40

SDASREAD\_DIR:REQSYSDEF.STB file, 2-10, 2-11

SDASREAD\_DIR:SYSSBASE\_IMAGE.EXE file, 2-10, 2-11

SDASREAD\_DIR:SYSDEF.STB file, 2-11

SDASREAD\_SYMFILE callable routine, 7-42

SDASREQMEM callable routine, 7-44

SDASSET\_ADDRESS callable routine, 7-46

SDASSET\_CPU callable routine, 7-47

SDASSET\_HEADING\_ROUTINE callable routine, 7-48

SDASSET\_LINE\_COUNT callable routine, 7-50

SDASSET\_PROCESS callable routine, 7-51

SDASSKIP\_LINES callable routine, 7-52

SDASSYMBOLIZE callable routine, 7-54

SDASSYMBOL\_VALUE callable routine, 7-53

SDASTRYMEN callable routine, 7-56

SDASTYPE callable routine, 7-58

SDASVALIDATE\_QUEUE callable routine, 7-59

SDA, invoking by default, 2-8

SDA capabilities, 2-1

SDA CLUE, dump off system disk, 5-2

SDA CLUE commands

- archiving dump file information, 5-1
- collecting dump file information, 5-1

SDA command format, 2-14

SDA current CPU, 2-13, 4-45, 4-54, 4-74, 4-77, 4-150, 4-197

SDA current process, 2-13, 4-46, 4-53, 4-77, 4-150, 4-197

SDA symbol table

- building, 2-11
- expanding, 2-11

SDD  
 See System Dump Debugger

SEARCH command, 4-43  
 /LENGTH qualifier, 4-43  
 /MASK=*n* qualifier, 4-43  
 /PHYSICAL qualifier, 4-43  
 /STEPS qualifier, 4-43

Section type, 4-151, 4-161

SECURITY.STB file global symbols, 4-36

Self-relative queue, validating, 4-213

SET CPU command, 2-13, 4-45  
 analyzing a running system, 2-12

SET ERASE\_SCREEN command, 4-47

SET FETCH command, 4-48

SET LOG command, 4-50  
 compared with SET OUTPUT command, 4-50

SET NOLOG command, 4-50

SET OUTPUT command, 4-51  
 compared with SET LOG command, 4-50  
 /HEADER qualifier, 4-51  
 /INDEX qualifier, 4-51  
 /NOHEADER qualifier, 4-51  
 /NOINDEX qualifier, 4-51

SET OUTPUT command/SINGLE\_COMMAND  
 qualifier, 4-51

SET PROCESS command, 2-13, 4-53  
 /address qualifier, 4-53  
 /ID=*mn* qualifier, 4-53  
 /NEXT qualifier, 4-53  
 /SYSTEM qualifier, 4-53

SET RMS command, 4-56

SET SIGN\_EXTEND command, 4-59

SET SYMBOLIZE command, 4-60

SFSBs (shared file synchronization blocks), 4-57

Shadow set displaying SDA information, 4-83

Shareable address data section, 4-29

Shared file synchronization blocks  
 See SFSBs

SHOW ADDRESS command, /PHYSICAL  
 qualifier, 4-61

SHOW BUGCHECK command, /ALL qualifier,  
 4-63

SHOW CALL\_FRAME command, /NEXT\_FP  
 qualifier, 4-64

SHOW CLUSTER command, 4-66  
 /ADDRESS qualifier, 4-66  
 /CSID qualifier, 4-66  
 /NODE qualifier, 4-66  
 /SCS qualifier, 4-66

SHOW CONNECTIONS command, 4-72  
 /ADDRESS qualifier, 4-72  
 /NODE qualifier, 4-72  
 /SYSAP qualifier, 4-72

SHOW CPU command, 2-13, 4-45, 4-74  
 analyzing a running system, 2-12

SHOW CRASH command, 2-13, 2-22, 2-23, 4-45,  
 4-77  
 analyzing a running system, 2-12  
 /CPU qualifier, 4-77

SHOW DEVICE command, 2-22, 4-81  
 /ADDRESS qualifier, 4-81  
 /CDT qualifier, 4-81

SHOW DUMP command, 4-85  
 /ALL qualifier, 4-85  
 /BLOCK qualifier, 4-85  
 /COMPRESSION\_MAP qualifier, 4-85  
 /ERROR\_LOGS qualifier, 4-85  
 /HEADER qualifier, 4-85  
 /LMB qualifier, 4-85  
 /MEMORY\_MAP qualifier, 4-86  
 /SUMMARY qualifier, 4-86

SHOW EXECUTIVE command, 4-88  
 /SUMMARY qualifier, 4-88

SHOW GALAXY command, 4-92

SHOW GCT command, 4-93  
 /ADDRESS qualifier, 4-93  
 /ALL qualifier, 4-93  
 /CHILDREN qualifier, 4-93  
 /HANDLE qualifier, 4-93  
 /OWNER qualifier, 4-93  
 /SUMMARY qualifier, 4-93  
 /type qualifier, 4-93

SHOW GLOBAL\_SECTION\_TABLE command,  
 4-96  
 /SECTION\_INDEX qualifier, 4-96

SHOW GLOCK command, 4-98  
 /ADDRESS qualifier, 4-98  
 /ALL qualifier, 4-98  
 /BRIEF qualifier, 4-98  
 /GMDB\_TABLE qualifier, 4-98  
 /HANDLE qualifier, 4-98  
 /PROCESS\_TABLE qualifier, 4-98  
 /SYSTEM\_TABLE, 4-98

SHOW GMDB command, 4-101  
 /ADDRESS qualifier, 4-101  
 /ALL qualifier, 4-101  
 /NODE qualifier, 4-101  
 /SUMMARY qualifier, 4-101

SHOW GSD command, 4-103  
 /ADDRESS qualifier, 4-103  
 /ALL qualifier, 4-103  
 /DELETED qualifier, 4-103  
 /GLXGRP qualifier, 4-103  
 /GLXSYS qualifier, 4-103  
 /GROUP qualifier, 4-103  
 /SYSTEM qualifier, 4-103

SHOW GST command, 4-96

SHOW HEADER command, 4-105

SHOW LAN command, 4-106  
 /CLIENT qualifier, 4-106  
 /CLUEXIT qualifier, 4-106  
 /COUNTERS qualifier, 4-106  
 /CSMACD qualifier, 4-106

SHOW LAN command (cont'd)  
   /DEVICE qualifier, 4-106  
   /ELAN qualifier, 4-107  
   /ERRORS qualifier, 4-107  
   /FDDI qualifier, 4-107  
   /FULL qualifier, 4-107  
   /ICOUNTERS qualifier, 4-107  
   /QUEUE qualifier, 4-107  
   /SUMMARY qualifier, 4-107  
   /TIMESTAMPS qualifier, 4-107  
   /UNIT qualifier, 4-107  
   /VCi qualifier, 4-107  
 SHOW LOCK command  
   /ADDRESS qualifier, 4-116  
   /ALL qualifier, 4-116  
   /BLOCKING qualifier, 4-116  
   /BRIEF qualifier, 4-116  
   /CACHED qualifier, 4-116  
   /CONVERT qualifier, 4-116  
   /GRANTED, 4-116  
   /NAME qualifier, 4-116  
   /POOL qualifier, 4-116  
   /SUMMARY qualifier, 4-117  
   /WAITING qualifier, 4-117  
 SHOW LOCKS command, 4-116  
   /STATUS qualifier, 4-117  
 SHOW MACHINE\_CHECK command, 2-13,  
   4-121  
   /FULL qualifier, 4-121  
 SHOW MEMORY command, 2-6, 4-123  
   /ALL qualifier, 4-123  
   /BUFFER\_OBJECTS qualifier, 4-123  
   /CACHE qualifier, 4-123  
   /FILES qualifier, 4-123  
   /FULL qualifier, 4-123  
   /GH\_REGIONS qualifier, 4-123  
   /PHYSICAL\_PAGES qualifier, 4-124  
   /POOL qualifier, 4-124  
   /RESERVED qualifier, 4-124  
   /SLOTS qualifier, 4-124  
 SHOW PAGE\_TABLE command, 4-125  
   /FREE qualifier, 4-125  
   /GLOBAL qualifier, 4-125  
   /GPT qualifier, 4-125  
   /INVALID\_PRN qualifier, 4-126  
   /L1 qualifier, 4-126  
   /L2 qualifier, 4-126  
   /L qualifier, 4-126  
   /NONMEMORY qualifier, 4-126  
   /PTE\_ADDRESS qualifier, 4-126  
   /PT qualifier, 4-126  
   /S0S1 qualifier, 4-126  
   /S2 qualifier, 4-126  
   /SECTION\_INDEX qualifier, 4-126  
   /SPTW qualifier, 4-126  
 SHOW PAGE\_TABLE command/HEADER  
   qualifier, 4-125  
 SHOW PARAMETER command, 4-131  
   /ACP qualifier, 4-131  
   /ALL qualifier, 4-131  
   /CLUSTER qualifier, 4-131  
   /DYNAMIC qualifier, 4-131  
   /GALAXY qualifier, 4-131  
   /GEN qualifier, 4-131  
   /JOB qualifier, 4-131  
   /LGI qualifier, 4-131  
   /MAJOR qualifier, 4-131  
   /MULTIPROCESSING qualifier, 4-131  
   /PQL qualifier, 4-131  
   /RMS qualifier, 4-132  
   /SCS qualifier, 4-132  
   /SPECIAL qualifier, 4-132  
   /STARTUP qualifier, 4-132  
   /SYS qualifier, 4-132  
   /TTY qualifier, 4-132  
 SHOW PFN\_DATA command, 4-134  
   /ADDRESS qualifier, 4-134  
   /ALL qualifier, 4-134  
   /BAD qualifier, 4-134  
   /COLOR qualifier, 4-135  
   /FREE qualifier, 4-135  
   /MAP qualifier, 4-135  
   /MODIFIED qualifier, 4-135  
   /PRIVATE qualifier, 4-135  
   /RAD qualifier, 4-135  
   /UNTESTED qualifier, 4-136  
   /ZERO qualifier, 4-136  
 SHOW POOL command, 4-139  
   /ALL qualifier, 4-139  
   /BAP qualifier, 4-139  
   /BRIEF qualifier, 4-139  
   /CHECK qualifier, 4-139  
   /FREE qualifier, 4-139  
   /HEADER qualifier, 4-139  
   /MAXIMUM\_BYTES qualifier, 4-139  
   /NONPAGED qualifier, 4-139  
   /PAGED qualifier, 4-140  
   /RING\_BUFFER qualifier, 4-140  
   /STATISTICS qualifier, 4-140  
   /SUBTYPE qualifier, 4-140  
   /SUMMARY qualifier, 4-140  
   /TYPE qualifier, 4-140  
 SHOW PORTS command  
   /ADDRESS qualifier, 4-146  
   /BUS qualifier, 4-146  
   /CHANNEL qualifier, 4-146  
   /DEVICE qualifier, 4-146  
   /MESSAGE qualifier, 4-146  
   /NODE qualifier, 4-146  
   /VC qualifier, 4-146  
 SHOW PRN\_DATA command  
   /SYSTEM qualifier, 4-136

SHOW PROCESS/ALL command, 4-156  
 SHOW PROCESS/LOCKS command, 4-118  
 SHOW PROCESS/RMS command, 4-182  
   selecting display options, 4-57  
 SHOW PROCESS command, 4-54, 4-150  
   /ADDRESS qualifier, 4-150  
   /ALL qualifier, 4-150  
   /AUTHORIZED qualifier, 4-151  
   /BRIEF qualifier, 4-151  
   /BUFFER\_OBJECTS qualifier, 4-151  
   /CHANNEL qualifier, 4-151  
   /FANDLES qualifier, 4-151  
   /FID\_ONLY qualifier, 4-151  
   /GSTX qualifier, 4-151  
   /ID qualifier, 4-151  
   /IMAGES qualifier, 4-151  
   /INDEX qualifier, 4-151  
   /INVALID\_PFN qualifier, 4-152  
   /LOCKS qualifier, 4-152  
   /NEXT qualifier, 4-152  
   /NONMEMORY\_PFN qualifier, 4-152  
   /PAGE\_TABLES qualifier, 4-152  
   /PCB qualifier, 4-153  
   /PERSONA/RIGHTS/AUTHORIZED qualifier,  
     4-154  
   /PERSONA/RIGHTS qualifier, 4-154  
   /PERSONA qualifier, 4-153  
   /PHD qualifier, 4-154  
   /PPT qualifier, 4-154  
   /PROCESS\_SECTION\_TABLE qualifier, 4-154  
   /PST qualifier, 4-154  
   /PTE\_ADDRESS qualifier, 4-154  
   /PT qualifier, 4-154  
   /RDE qualifier, 4-154  
   /REGIONS qualifier, 4-154  
   /REGISTERS qualifier, 4-154  
   /RIGHTS qualifier, 4-154  
   /RMS qualifier, 4-155  
   /SECTION\_INDEX qualifier, 4-155  
   /SEMAPHORE qualifier, 4-155  
   /SYSTEM qualifier, 4-155  
   /THREADS qualifier, 4-155  
   /WORKING\_SET\_LIST qualifier, 4-156  
 SHOW RAD command, /ALL qualifier, 4-173  
 SHOW RESOURCES command, 4-118, 4-175  
   /ADDRESS qualifier, 4-175  
   /ALL qualifier, 4-175  
   /BRIEF qualifier, 4-175  
   /CACHED qualifier, 4-175  
   /CONTENTION qualifier, 4-175  
   /LOCKID qualifier, 4-175  
   /NAME qualifier, 4-175  
   /OWNED qualifier, 4-175  
   /STATUS qualifier, 4-176  
 SHOW RMD command, 4-180  
   /ADDRESS qualifier, 4-180  
   /ALL qualifier, 4-180  
   SHOW RMS command, 4-182  
   SHOW RSPID command, /CONNECTION  
     qualifier, 4-183  
   SHOW SHM\_CPP command, 4-185  
     /ADDRESS qualifier, 4-185  
     /ALL qualifier, 4-185  
     /IDENT qualifier, 4-185  
     /PFN qualifier, 4-185  
   SHOW SHM\_REG command, 4-188  
     /ADDRESS qualifier, 4-188  
     /ALL qualifier, 4-188  
     /IDENT qualifier, 4-188  
   SHOW SPINLOCKS command, 4-191  
     /ADDRESS qualifier, 4-190  
     /BRIEF qualifier, 4-190  
     /COUNTS qualifier, 4-190  
     /DYNAMIC qualifier, 4-190  
     /FULL qualifier, 4-190  
     /INDEX qualifier, 4-190  
     /OWNED qualifier, 4-190  
     /STATIC qualifier, 4-191  
   SHOW STACK command, 4-196  
     /ALL qualifier, 4-196  
     /EXECUTIVE qualifier, 4-196  
     /INTERRUPT qualifier, 4-196  
     /KERNEL qualifier, 4-196  
     /LONG qualifier, 4-196  
     /PHYSICAL qualifier, 4-196  
     /QUAD qualifier, 4-196  
     /SUPERVISOR qualifier, 4-196  
     /SYSTEM qualifier, 4-196  
     /USER qualifier, 4-196  
   SHOW SUMMARY command, 4-150, 4-200  
     /IMAGE qualifier, 4-200  
     /PROCESS\_NAME qualifier, 4-200  
     /THREAD qualifier, 4-200  
     /USER qualifier, 4-200  
     /VALUE qualifier, 4-203  
   SHOW SYMBOL command, 4-203  
     /ALL qualifier, 4-203  
     /ALPHA qualifier, 4-203  
   SHOW TQE command, 4-205  
     /ADDRESS qualifier, 4-205  
     /ALL qualifier, 4-205  
     /BACKLINK qualifier, 4-205  
     /PID qualifier, 4-205  
     /ROUTINE qualifier, 4-205  
   SHOW WORKING SET LIST command, 4-207  
   Signal array, 2-25  
   SISR register, displaying, 4-75  
   SISR symbol, 2-19  
   Site-specific startup command procedure, 2-8,  
     5-15  
     releasing page file blocks, 2-7  
   Software interrupt status register, 2-19  
   SPAWN command, 4-208  
     /INPUT qualifier, 4-208  
     /NOLOGICAL\_NAMES qualifier, 4-208



SPAWN command (cont'd)  
   /NOSYMBOLS qualifier, 4-208  
   /NOTIFY qualifier, 4-208  
   /NOWAIT qualifier, 4-208  
   /OUTPUT qualifier, 4-208  
   /PROCESS qualifier, 4-209

Spin locks  
   displaying SDA information, 4-190  
   owned, 4-75

Spinlock tracing, 6-1

Spinlock Tracing utility, using, 6-2

SPL\$DEBUG.EXE file, 4-36

SPL LOAD command, 6-4

SPL SHOW COLLECT command, 6-5

SPL SHOW TRACE  
   /NOWAIT qualifier, 6-6  
   /WAIT qualifier, 6-6

SPL SHOW TRACE command, 6-6  
   /ACQUIRE qualifier, 6-6  
   /FORKLOCK qualifier, 6-6  
   /FRKDSPTH qualifier, 6-6  
   /FRKEND qualifier, 6-6  
   /NOACQUIRE qualifier, 6-6  
   /NOFORKLOCK qualifier, 6-6  
   /NOFRKDSPTH qualifier, 6-6  
   /NOFRKEND qualifier, 6-6  
   /NORELEASE qualifier, 6-6  
   /NOSPINLOCK qualifier, 6-6  
   /RELEASE qualifier, 6-6  
   /SPINLOCK qualifier, 6-6  
   /SUMMARY qualifier, 6-7  
   /TOP qualifier, 6-7

SPL START COLLECT command  
   /ADDRESS qualifier, 6-11  
   /SPINLOCK qualifier, 6-11

SPL START TRACE  
   /FORKLOCK qualifier, 6-12  
   /FRKDSPTH qualifier, 6-12  
   /NOFORKLOCK qualifier, 6-12  
   /NOFRKDSPTH qualifier, 6-12

SPL START TRACE command  
   /ACQUIRE qualifier, 6-12  
   /BUFER qualifier, 6-12  
   /CPU qualifier, 6-13  
   /FRKEND qualifier, 6-13  
   /NOACQUIRE qualifier, 6-12  
   /NOFRKEND qualifier, 6-13  
   /NORELEASE qualifier, 6-12  
   /NOSPINLOCK qualifier, 6-12  
   /NOWAIT qualifier, 6-12  
   /RELEASE qualifier, 6-12  
   /SPINLOCK qualifier, 6-12  
   /WAIT qualifier, 6-12

SPL STOP COLLECT command, 6-14

SPL STOP TRACE command, 6-15

SPL UNLOAD command, 6-16

SP symbol, 2-19

SPTs (system page tables), displaying, 4-125

SPTs (system page tables), in system dump file, 2-5

SSPI.EXE file, 4-36

SSP symbol, 2-19

SSRVEXCEPT bugcheck, 2-23

Stack frames  
   displaying in SDA, 4-64  
   following a chain, 4-64

Stacks displaying contents, 4-196

Start I/O routine, 4-82

Subprocesses, 4-208

Subtraction operator (-), 2-16

Supervisor stack  
   displaying contents, 4-196  
   pointer to, 2-19

Symbols  
   defining  
     for SDA, 4-7  
   evaluating, 4-203  
   listing, 4-203  
   loading into the SDA symbol table, 4-34  
   name, 4-7  
   representing executive modules, 4-89  
   user-defined, 4-7

Symbol table files reading into SDA symbol table, 4-35

Symbol tables, specifying an alternate SDA, 3-6

SYSS\$ATMWORKS351.EXE file, 4-37

SYSS\$CLUSTER.EXE file, 4-37

SYSS\$DISK  
   as SDA output, 4-51  
   global read, 4-35

SYSS\$EW1000A.EXE file, 4-37

SYSS\$GALAXY.STB file, 4-37

SYSS\$IPC\_SERVICES.EXE file, 4-37

SYSS\$LAN.EXE file, 4-37

SYSS\$LAN\_ATM.EXE file, 4-37

SYSS\$LAN\_ATM4.EXE file, 4-37

SYSS\$LAN\_CSMACD.EXE file, 4-37

SYSS\$LAN\_FDDI.EXE file, 4-37

SYSS\$LAN\_TR.EXE file, 4-37

SYSS\$LOADABLE\_IMAGES:SYS.EXE file contents, 4-35

SYSS\$MME\_SERVICES.STB file, 4-37

SYSS\$NTA.STB file, 4-37

SYSS\$QIOSERVER\_KCLIENT.EXE file, 4-37

SYSS\$QIOSERVER\_KSERVER.EXE file, 4-37

SYSS\$SCS.EXE file, 4-37

SYSS\$SYSTEM:PAGEFILE.SYS file, 2-34  
   See also System dump files  
   as dump file, 2-7  
   releasing blocks containing a crash dump, 3-5

SYSS\$SYSTEM:SYS.EXE file, 4-33  
   contents, 4-88

SYSSYSTEM:SYSDEF.STB file, 2-12  
 SYSSYSTEM:SYSDUMP.DMP file, 2-34  
     See also System dump files  
         protection, 2-8  
         size of, 2-6  
 SYS\$TRANSACTION\_SERVICES.EXE file, 4-37  
 SYS\$UTC\_SERVICES.EXE file, 4-37  
 SYS\$XFCACHE\*.STB file, 4-37  
 SYSAP (system application), 4-183  
 SYSDEVICE.STB file global symbols, 4-37  
 SYSGETSYL.STB file global symbols, 4-37  
 SYSLDR\_DYN.STB file global symbols, 4-37  
 SYSLICENSE.STB file global symbols, 4-37  
 System blocks  
     See SBs  
 System Code Debugger, 1-1, 8-1  
     interface options, 8-2  
     networking, 8-9  
     starting, 8-7  
 System Code Debugger, sample session, 8-14  
 System Code Debugger commands, 8-8  
 System Communications Services  
     See SCS  
 System control block base register, 2-19  
 System Dump Analyzer (SDA) commands, 8-8  
 System Dump Analyzer utility (SDA), 1-1  
     invoked automatically on reboot, 5-1  
 System Dump Debugger, 1-2, 9-1  
     access to symbols in  
         OpenVMS executive images, 9-6  
     limitations, 9-6  
     preparing a System Dump, 9-2  
     sample session, 9-6  
     setting up test system, 9-3  
     setting up the build system, 9-3  
     starting, 9-4  
     summary of commands, 9-4  
     user-interface options, 9-1  
     using commands, 9-5  
 System dump files, 2-3 to 2-7  
     mapping physical memory to, 2-10  
     requirements for analysis, 2-10  
 System failures  
     analyzing, 2-21  
     causing, 2-33 to 2-35  
     diagnosing from PC contents, 2-22  
     summary, 4-77  
 System hang, 2-33  
 System images  
     contents, 4-35, 4-88  
     global symbols, 4-33  
 System management creating a crash dump file,  
     2-3  
 System message routines global symbols, 4-36  
 System page file  
     as dump file, 2-7  
     releasing blocks containing a crash dump, 3-5

System page tables  
     See SPTs  
 System PCBs (process control blocks) displaying,  
     4-155  
 System processes, 4-53  
 System region, examining, 4-19  
 Systems  
     analyzing running, 2-2, 2-12, 3-1  
     investigating performance problems, 2-12  
 System space base address, 2-18  
 System space operator (G), 2-15  
 System symbol table, 2-10  
 System time quadword examining, 4-20  
 SYSTEM\_DEBUG.EXE file, 4-38  
 SYSTEM\_PRIMITIVES.STB file global symbols,  
     4-38  
 SYSTEM\_SYNCHRONIZATION\_XXX.STB file  
     global symbols, 4-38

## T

TCPIP\$BGDRIVER.STB global symbols, 4-38  
 TCPIP\$INTEETACP.STB global symbols, 4-38  
 TCPIP\$INTERNET\_SERVICES.STB global  
     symbols, 4-38  
 TCPIP\$NET\_GLOBALS.STB file, 2-18  
 TCPIP\$NFS\_GLOBALS.STB file, 2-18  
 TCPIP\$NFS\_SERVICES.STB file, 4-38  
 TCPIP\$PROXY\_GLOBALS.STB file, 2-18  
 TCPIP\$PROXY\_SERVICES.STB file, 4-38  
 TCPIP\$PWIPACP.STB global symbols, 4-38  
 TCPIP\$PWIPDRIVER.STB global symbols, 4-38  
 TCPIP\$PWIP\_GLOBALS.STB file, 2-18  
 TCPIP\$TNDRIVER.STB global symbols, 4-38  
 TCPIP\$TN\_GLOBALS.STB file, 2-18  
 Terminal keys defining for SDA, 4-9  
 TMSCP.EXE file, 4-38  
 Trace table entries  
     See WPPTes  
 Transaction processing, global symbols, 2-18

## U

UCBs (unit control blocks), 4-72  
 Unary operators, 2-15 to 2-16  
 UNDEFINE command, 4-210  
 Unit control blocks  
     See UCBs  
 UNXSIGNAL bugcheck, 2-23  
 Use process-permanent I/O data structures  
     See PIO  
 User stacks  
     displaying contents, 4-196  
     pointer, 2-19  
 Using the \$QIO interface Watchpoint utility, 10-3

Using the Spinlock Tracing utility, 6-2  
USP symbol, 2-19

## V

---

VALIDATE PFN\_LIST command, 4-211  
  /ALL qualifier, 4-211  
  /BAD qualifier, 4-211  
  /FREE qualifier, 4-211  
  /MODIFIED qualifier, 4-211  
  /PRIVATE qualifier, 4-211  
  /UNTESTED qualifier, 4-211  
  /ZERO qualifier, 4-211  
VALIDATE QUEUE command, 4-213  
  /BACKLINK qualifier, 4-213  
  /LIST qualifier, 4-213  
  /PHYSICAL qualifier, 4-213  
  /QUADWORD qualifier, 4-213  
  /SELF\_RELATIVE qualifier, 4-213  
  /SINGLY\_LINKED qualifier, 4-213  
VALIDATE SHM\_CPP command, 4-215  
  /ADDRESS qualifier, 4-215  
  /ALL qualifier, 4-215  
  /IDENT qualifier, 4-215  
  /PRN qualifier, 4-215  
VCBs (volume control blocks), 4-83  
Virtual address operator (^V), 2-15  
VMS\_EXTENSION.EXE file, 4-38  
Volume control blocks  
  See VCBs  
Votes, 4-66

VPTB register, displaying, 4-75

## W

---

Watchpoint control blocks  
  See WPCBs  
Watchpoint protection, 10-9  
Watchpoint restore entries  
  See WPREs  
Watchpoint restrictions, 10-10  
Watchpoint utility, 1-2  
Watchpoint utility (WP)  
  implementation, 10-1  
WCBs (window control blocks), 4-57  
Window control blocks  
  See WCBs  
WPCBs (watchpoint control blocks), 10-6  
WPDRIVER  
  data structures, 10-6  
  device driver, 10-1  
  invoking, 10-5  
WPPTs (trace table entries), 10-7  
WPREs (watchpoint restore entries), 10-6

## X

---

XABs (extended attribute blocks), 4-57  
XDELTA breakpoint, 10-3  
XOR operator (\), 2-16

