



AlphaServer ES40

Owner's Guide

Order Number: EK-ES240-UG. A01

This guide is intended for managers and operators of AlphaServer ES40 systems.

First Printing, April 1999

The information in this publication is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN, NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL. THIS INFORMATION IS PROVIDED "AS IS" AND COMPAQ COMPUTER CORPORATION DISCLAIMS ANY WARRANTIES, EXPRESS, IMPLIED OR STATUTORY AND EXPRESSLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, GOOD TITLE AND AGAINST INFRINGEMENT.

This publication contains information protected by copyright. No part of this publication may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

© 1999 Digital Equipment Corporation.

All rights reserved. Printed in the U.S.A.

The software described in this guide is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of the agreement.

COMPAQ and the Compaq logo are registered in United States Patent and Trademark Office. Tru64 is a trademark of Compaq Computer Corporation. AlphaServer and OpenVMS are trademarks of Digital Equipment Corporation. UNIX is a registered trademark in the U.S. and other countries, licensed exclusively through X/Open Company Ltd.

Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

Other product names mentioned herein may be the trademarks of their respective companies.

Warning! This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Achtung! Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention! Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

FCC Notice: This equipment generates, uses, and may emit radio frequency energy. The equipment has been type tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of FCC rules, which are designed to provide reasonable protection against such radio frequency interference.

Operation of this equipment in a residential area may cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Any modifications to this device—unless expressly approved by the manufacturer—can void the user's authority to operate this equipment under part 15 of the FCC rules.

Contents

Preface	xi
Chapter 1 System Overview	
1.1 System Enclosures	1-2
1.2 System Chassis—Front View/Top View	1-4
1.3 System Chassis—Rear View	1-5
1.4 Rear Ports and Slots	1-6
1.5 Operator Control Panel	1-8
1.6 System Board	1-10
1.7 PCI Backplane	1-12
1.8 Power Supplies	1-14
1.9 Removable Media Storage	1-16
1.10 Hard Disk Storage	1-17
1.11 System Access	1-18
1.12 Console Terminal	1-20
Chapter 2 Operation	
2.1 Powering Up the System	2-2
2.2 Power-Up Displays	2-3
2.3 System Consoles	2-12
2.4 Displaying a Tru64 UNIX or OpenVMS Configuration	2-18
2.5 Setting SRM Environment Variables	2-28
2.6 Setting SRM Console Security	2-29
2.7 Displaying a Windows NT Hardware Configuration	2-30
2.8 Setting Up a System for Windows NT	2-31
2.9 Setting Automatic Booting	2-36
2.10 Changing the Default Boot Device	2-39
2.11 Running AlphaBIOS-Based Utilities	2-40

Chapter 3 Booting and Installing an Operating System

3.1	Setting Boot Options for UNIX or OpenVMS	3-2
3.2	Booting Tru64 UNIX	3-8
3.3	Starting a Tru64 UNIX Installation	3-12
3.4	Booting OpenVMS	3-14
3.5	Starting an OpenVMS Installation	3-18
3.6	Booting Windows NT	3-20
3.7	Starting a Windows NT Installation	3-22
3.8	Switching Between Operating Systems	3-24

Chapter 4 Using the Remote Management Console

4.1	RMC Overview	4-2
4.2	Operating Modes	4-4
4.3	Terminal Setup	4-9
4.4	Entering the RMC	4-10
4.5	SRM Environment Variables for COM1	4-12
4.6	RMC Command-Line Interface	4-13
4.7	Resetting the RMC to Factory Defaults	4-29
4.8	Troubleshooting Tips	4-31

Chapter 5 Configuring and Installing Components

5.1	Removing Enclosure Panels	5-2
5.2	Removing Covers from the System Chassis	5-6
5.3	Hot-Plug Components	5-9
5.4	Power Supply Configuration	5-10
5.5	Removing and Replacing Power Supplies	5-12
5.6	Installing a Hard Drive	5-14
5.7	Non-Hot-Plug Components	5-16
5.8	CPU Configuration	5-18
5.9	Installing CPUs	5-20
5.10	Memory Configuration	5-23
5.11	Installing DIMMs	5-26
5.12	PCI Configuration	5-30
5.13	Installing PCI Cards	5-32
5.14	Installing a Removable Media Device	5-35
5.15	Installing a Second Disk Cage	5-38
5.16	External SCSI Expansion	5-41

Chapter 6 Updating Firmware

6.1	Sources of Firmware Updates	6-2
6.2	Firmware Update Utility	6-4
6.3	Manual Updates	6-6
6.4	Updating from the CD-ROM	6-7
6.5	Updating from an OpenVMS System Disk	6-9
6.6	OpenVMS and UNIX Network Boots	6-10
6.7	Upgrading AlphaBIOS over the Network	6-12

Chapter 7 Troubleshooting

7.1	Power-Up Error Messages	7-2
7.2	RMC Error Messages	7-8
7.3	SRM Error Messages	7-10
7.4	SRM Diagnostics	7-12
7.5	Troubleshooting Tables	7-24
7.6	Option Card Problems	7-30
7.7	Troubleshooting the Windows NT Hard Disk	7-32

Chapter 8 Specifications

8.1	Physical Specifications	8-2
8.2	Environmental Specifications	8-6
8.3	Electrical Specifications	8-7
8.4	Regulatory Approvals	8-8
8.5	Acoustical Data	8-9

Figures

1-1	Compaq AlphaServer ES40 Systems	1-2
1-2	Top/Front Components (Pedestal/Rack View)	1-4
1-3	Rear Components (Pedestal/Rack View)	1-5
1-4	Rear Connectors	1-6
1-5	Operator Control Panel	1-8
1-6	Modules on System Board	1-10
1-7	PCI Backplane (Pedestal/Rack View)	1-12
1-8	Power Supplies	1-14
1-9	Removable Media Drive Area	1-16
1-10	Hard Disk Storage Cage with Drives (Tower View)	1-17
1-11	System Keys	1-18
1-12	Console Terminal Connections	1-20
2-1	Operator Control Panel	2-2

2-2	AlphaBIOS Setup Screen	2-12
2-3	Display System Configuration Screen	2-30
2-4	CMOS Setup Screen	2-32
2-5	Hard Disk Setup Screen	2-33
2-6	Advanced CMOS Setup Screen	2-34
2-7	AlphaBIOS Utilities Menu	2-41
2-8	Run Maintenance Program Dialog Box	2-42
3-1	AlphaBIOS Boot Screen	3-20
3-2	Installing Windows NT	3-22
4-1	Data Flow in Through Mode	4-4
4-2	Data Flow in Bypass Mode	4-6
4-3	Setup for RMC (Tower View)	4-9
4-4	RMC Jumpers (Default Positions)	4-30
5-1	Enclosure Panel Removal (Tower)	5-2
5-2	Enclosure Panel Removal (Pedestal)	5-4
5-3	Removing Covers from a Tower	5-7
5-4	Removing Covers from a Pedestal/Rack	5-8
5-5	Power Supply Locations	5-10
5-6	Installing a Power Supply (Pedestal/Rack View)	5-12
5-7	Installing a Hard Drive (Tower View)	5-14
5-8	CPU Slot Locations (Pedestal/Rack View)	5-18
5-9	CPU Slot Locations (Tower View)	5-19
5-10	CPU Card Installation (Pedestal/Rack View)	5-20
5-11	Memory Configuration (Pedestal/Rack View)	5-24
5-12	Memory Configuration (Tower View)	5-25
5-13	Installing DIMMs	5-26
5-14	Aligning DIMM in MMB	5-28
5-15	PCI Slot Locations (Pedestal/Rack)	5-30
5-16	PCI Slot Locations (Tower)	5-31
5-17	PCI Card Installation (Pedestal/Rack View)	5-32
5-18	Installing a 5.25-Inch Device (Pedestal/Rack View)	5-36
5-19	Installing a Second Disk Cage	5-38
6-1	AlphaBIOS Upgrade Screens	6-12

Tables

1	Compaq AlphaServer ES40 Documentation	xii
1-1	PCI Slot Mapping	1-13
2-1	Correspondence Between Logical and Physical PCI Slots	2-25
2-2	Device Naming Conventions	2-26
2-3	AlphaBIOS Option Key Mapping	2-44
3-1	OpenVMS Boot Flag Settings	3-5

4-1	Status Command Fields	4-17
4-2	Elements of Dial String and Alert String	4-27
4-3	RMC Troubleshooting	4-31
7-1	Error Beep Codes	7-2
7-2	RMC Error Messages	7-8
7-3	SROM Error Messages	7-10
7-4	Bit Assignments for Error Field	7-18
7-5	Power Problems	7-25
7-6	Problems Getting to Console Mode	7-26
7-7	Problems Reported by the Console	7-27
7-8	Boot Problems	7-28
7-9	Errors Reported by the Operating System	7-29
7-10	Troubleshooting PCI Bus Problems	7-31
7-11	Troubleshooting the System Hard Disk	7-32
8-1	Physical Characteristics — Tower	8-2
8-2	Physical Characteristics — Pedestal	8-3
8-3	Physical Characteristics — System Chassis	8-4
8-4	Physical Characteristics — Cabinets	8-5
8-5	Environmental Characteristics — All System Variants	8-6
8-6	Electrical Characteristics — All System Variants	8-7
8-7	Regulatory Approvals	8-8
8-8	Acoustical Data	8-9

Examples

2-1	Sample SROM Power-Up Display	2-4
2-2	SRM Power-Up Display	2-6
2-3	AlphaBIOS Initialization Screen	2-10
2-4	AlphaBIOS Boot Screen	2-11
2-5	Set Ocp_Text Command	2-17
2-6	Show Boot*	2-19
2-7	Show Config	2-20
2-8	Show Device	2-26
2-9	Show Memory	2-27
3-1	Booting UNIX from a Local SCSI Disk	3-8
3-2	RIS Boot	3-10
3-3	Text-Based Installation Display	3-12
3-4	Booting OpenVMS from the Local CD-ROM Drive	3-14
3-5	InfoServer Boot	3-16
3-6	OpenVMS Installation Menu	3-18
4-1	Dial-In Configuration	4-22
4-2	Dial-Out Alert Configuration	4-24

6-1	Update Utility Display	6-4
7-1	Checksum Error and Fail-Safe Load	7-4
7-2	Sample Console Event Log	7-12
7-3	Show Device Command	7-13
7-4	Test Command	7-14
7-5	Show Fru Command	7-16
7-6	Show Error Command	7-19
7-7	Show Power Command	7-20
7-8	Crash Command	7-22

Preface

Intended Audience

This manual is for system managers and operators of Compaq AlphaServer ES40 systems.

Document Structure

This manual uses a structured documentation design. Topics are organized into small sections, usually consisting of two facing pages. Most topics begin with an abstract that provides an overview of the section, followed by an illustration or example. The facing page contains descriptions, procedures, and syntax definitions.

This manual has eight chapters.

- **Chapter 1, System Overview**, gives an overview of the system and describes the components.
- **Chapter 2, Operation**, gives basic operating instructions on powering up and configuring the machine.
- **Chapter 3, Booting and Installing an Operating System**, describes how to boot a supported operating system and how to switch from one operating system to another.
- **Chapter 4, Using the Remote Management Console**, describes the function and operation of the integrated remote management console.
- **Chapter 5, Installing and Configuring Components**, shows how to install components.
- **Chapter 6, Updating Firmware**, describes how to update to a later version of system firmware.
- **Chapter 7, Troubleshooting**, gives basic troubleshooting procedures.
- **Chapter 8, Specifications**, gives system specifications.

Documentation Titles

Table 1 Compaq AlphaServer ES40 Documentation

Title	Order Number
User Documentation Kit	QZ-01BAA-GZ
Owner's Guide	EK-ES240-UG
User Interface Guide	EK-ES240-UI
Tower and Pedestal Basic Installation	EK-ES240-PD
Release Notes	EK-ES240-RN
Documentation CD (6 languages)	AG-RF9HA-BE
Maintenance Kit	QZ-01BAB-GZ
Service Guide	EK-ES240-SV
Service Guide HTML Diskette	AK-RFXDA-CA
Illustrated Parts Breakdown	EK-ES240-IP
Loose Piece Items	
Rackmount Installation Guide	EK-ES240-RG
Rackmount Installation Template	Ek-ES4RM-TP

Support Resources

Support resources for this system are available on the Internet, including a supported options list, firmware updates, and patches.

<http://www.digital.com/alphaserver/technical.html>

Chapter 1

System Overview

This chapter provides an overview of the system, including:


- System Enclosures
- System Chassis—Front View/Top View
- System Chassis—Rear View
- Rear Ports and Slots
- Operator Control Panel
- System Board
- PCI Backplane
- Power Supplies
- Removable Media Storage
- Hard Disk Storage
- System Access
- Console Terminal

NOTE: *See Chapter 5 for warnings and procedures for accessing internal parts of the system.*

1.1 System Enclosures

The Compaq AlphaServer ES40 family consists of a standalone tower, a pedestal with expanded storage capacity, and a rackmount system.

Figure 1-1 Compaq AlphaServer ES40 Systems

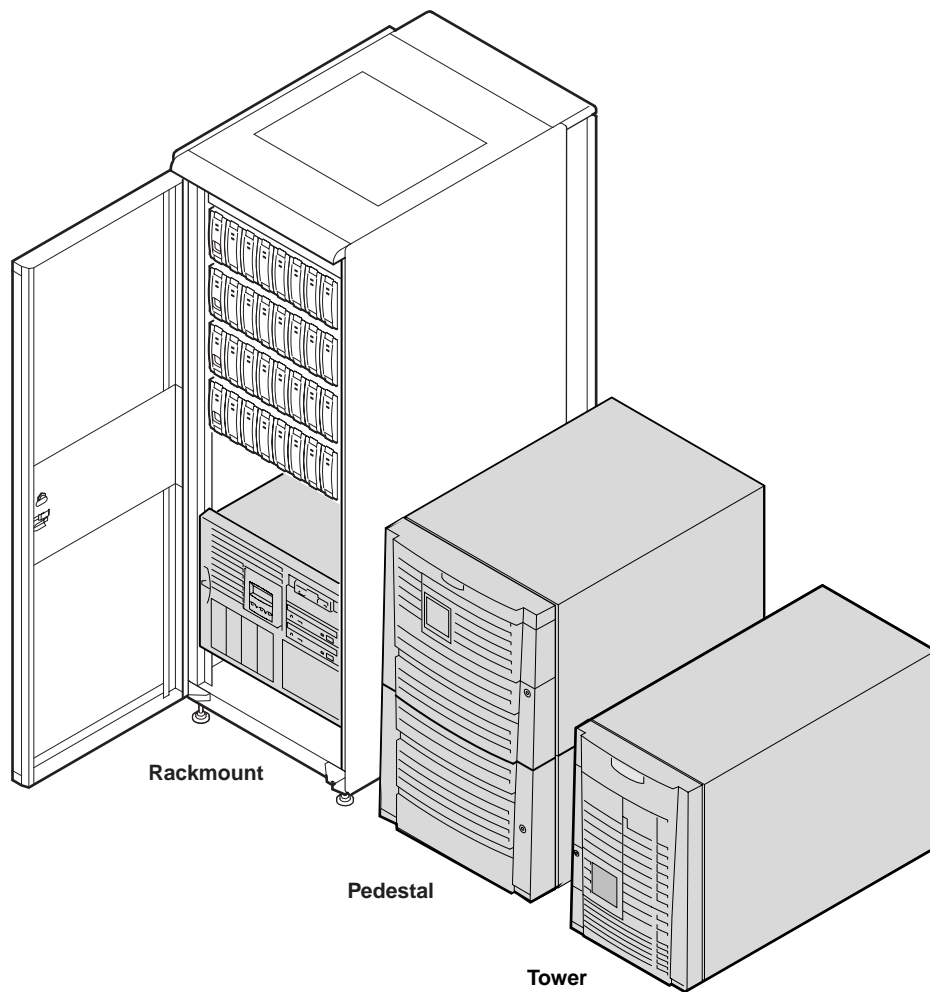

PK0212


Common Components

The basic building block of the system is the chassis, which houses the following common components:

- Up to four CPUs, based on the 21264 Alpha chip
- Memory DIMMs (200-pin); up to 16 or up to 32
- Six or ten 64-bit PCI slots
- Floppy diskette drive (3.5-inch, high density)
- CD-ROM drive
- Two half-height or one full-height removable media bays
- Up to two storage disk cages that house up to four 1.6-inch drives per cage
- Up to three 735-watt power supplies, offering N+1 power
- A 25-pin parallel port, two 9-pin serial ports, two universal serial bus (USB) ports, mouse and keyboard ports, and one MMJ connector for a local console terminal
- An operator control panel with a 16-character back-lit display and a Power button, Halt button, and Reset button

1.2 System Chassis—Front View/Top View

Figure 1-2 Top/Front Components (Pedestal/Rack View)

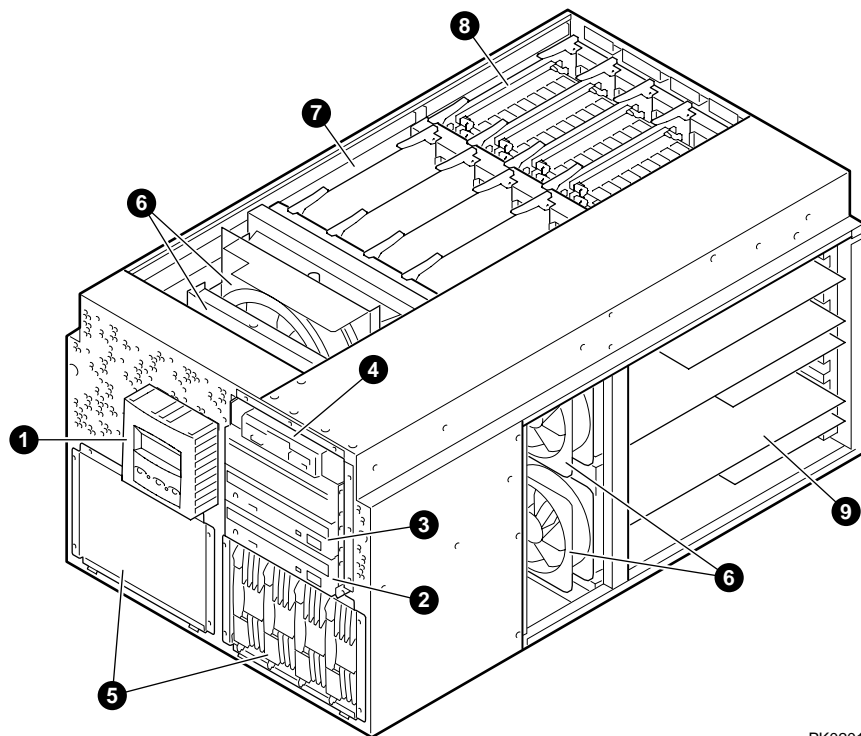


PK0201

- ❶ Operator control panel
- ❷ CD-ROM drive
- ❸ Removable media bays
- ❹ Floppy diskette drive
- ❺ Storage drive bays
- ❻ Fans
- ❼ CPUs
- ❽ Memory
- ❾ PCI cards

1.3 System Chassis—Rear View

Figure 1-3 Rear Components (Pedestal/Rack View)

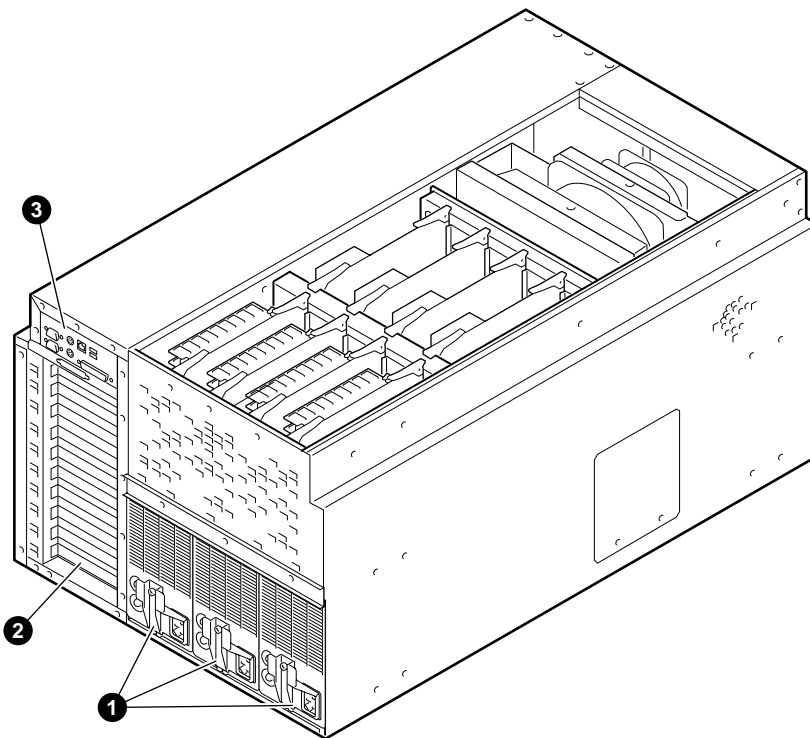


PK0206

- ❶ Power supplies
- ❷ PCI bulkhead
- ❸ I/O ports

1.4 Rear Ports and Slots

Figure 1-4 Rear Connectors

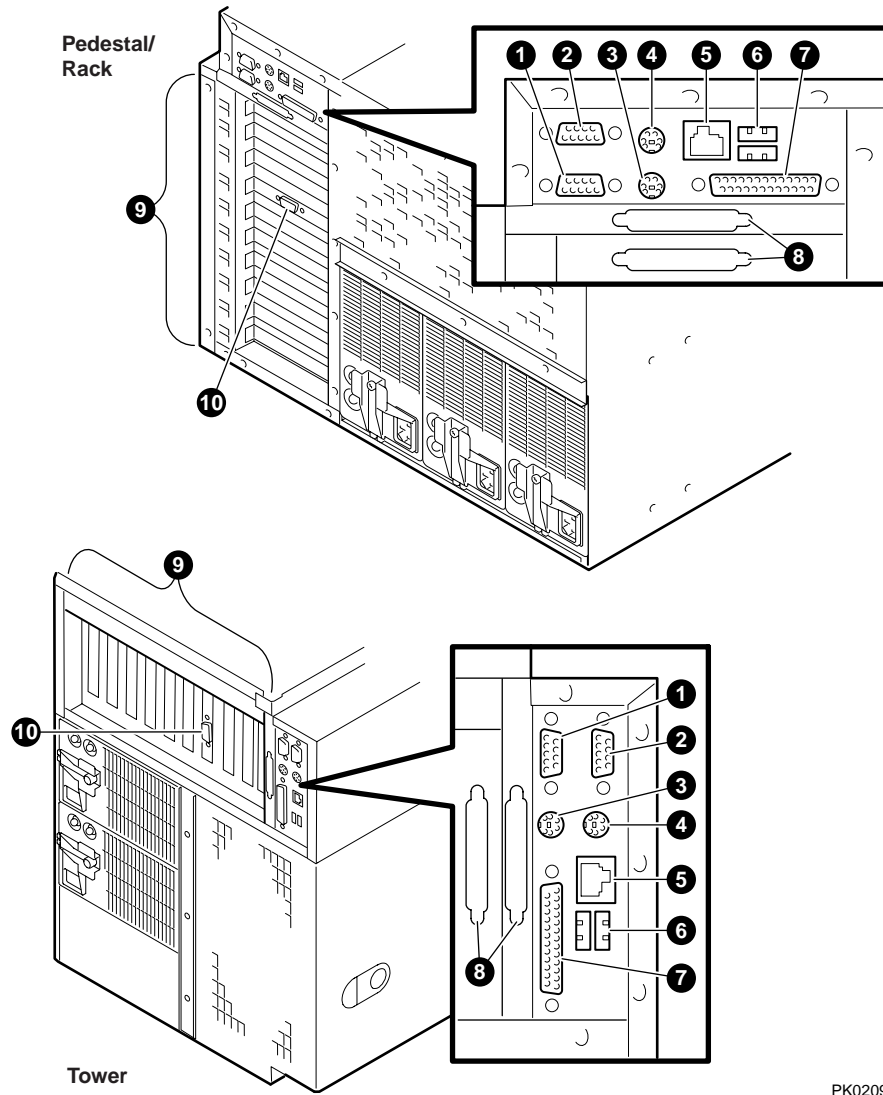


Rear Panel Connections

- ❶ Modem port—Dedicated 9-pin port for modem connection to remote management console.
- ❷ COM2 serial port—Extra port to modem or any serial device.
- ❸ Keyboard port—To PS/2-compatible keyboard.
- ❹ Mouse port—To PS/2-compatible mouse.
- ❺ COM1 MMJ-type serial port/terminal port—For connecting a console terminal.
- ❻ USB ports.
- ❼ Parallel port—To parallel device such as a printer.
- ❽ SCSI breakouts.
- ❾ PCI slots—For option cards for high-performance network, video, or disk controllers.
- ❿ PCI slot for VGA controller, if installed.

1.5 Operator Control Panel

The control panel provides system controls and status indicators. The controls are the Power, Halt, and Reset buttons. A 16-character back-lit alphanumeric display indicates system state. The panel has two LEDs: a green Power OK indicator and an amber Halt indicator.

Figure 1-5 Operator Control Panel

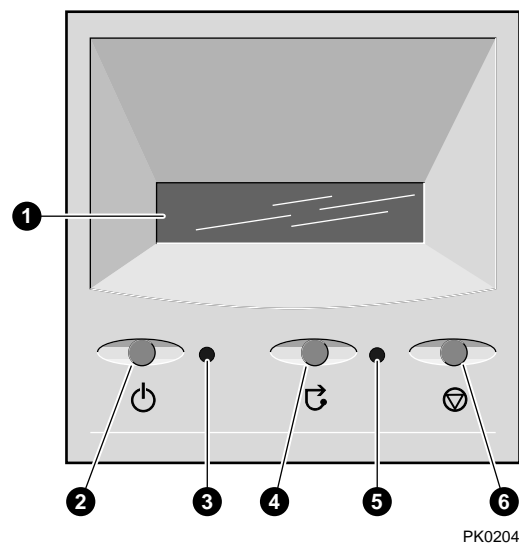

- ❶ Control panel display. A one-line, 16-character alphanumeric display that indicates system status during power-up and testing. During operation, the control panel is back lit.
- ❷ Power button. Powers the system on and off.

If a failure occurs that causes the system to shut down, pressing the power button off and then on clears the shutdown condition and attempts to power the system back on. Some conditions that prevent the system from powering on can be determined by entering the **env** command from the remote management console (RMC). The RMC is powered separately from the rest of the system and can operate as long as AC power is present. (See Chapter 4.)

- ③ Power LED (green). Lights when the power button is pressed.
- ④ Reset button. A momentary contact switch that restarts the system and reinitializes the console firmware. Power-up messages are displayed, and then the console prompt is displayed or the operating system boot messages are displayed, depending on how the startup sequence has been defined.
- ⑤ Halt LED (amber). Lights when you press the Halt button.
- ⑥ Halt button. Halts the system.

If Tru64 UNIX or OpenVMS is running, pressing the Halt button halts the operating system and returns to the SRM console. Pressing the Halt button does not halt the Windows NT operating system.

If the Halt button is latched when the system is reset or powered up, the system halts in the SRM console, regardless of the operating system. UNIX and OpenVMS systems that are configured to autoboot cannot boot until the Halt button is unlatched.

Commands issued from the remote management console (RMC) can be used to reset, halt, and power the system on or off. For information on RMC, see Chapter 4.


RMC Command	Function
Power {off, on}	Equivalent to pressing the Power button on the control panel to the ON or OFF position.
Halt {in, out}	Equivalent to pressing the Halt button on the control panel to cause a halt (halt in) or releasing it from the latched position to deassert the halt (halt out).
Reset	Equivalent to pressing the Reset button on the control panel.

1.6 System Board

The system board is located on the floor of the system card cage. It has slots for the CPUs and memory motherboards (MMBs).

The system board has the majority of the logic for the system. It holds the CPU cards and MMBs. Figure 1-6 shows the location of these modules on the system board.

Figure 1-6 Modules on System Board

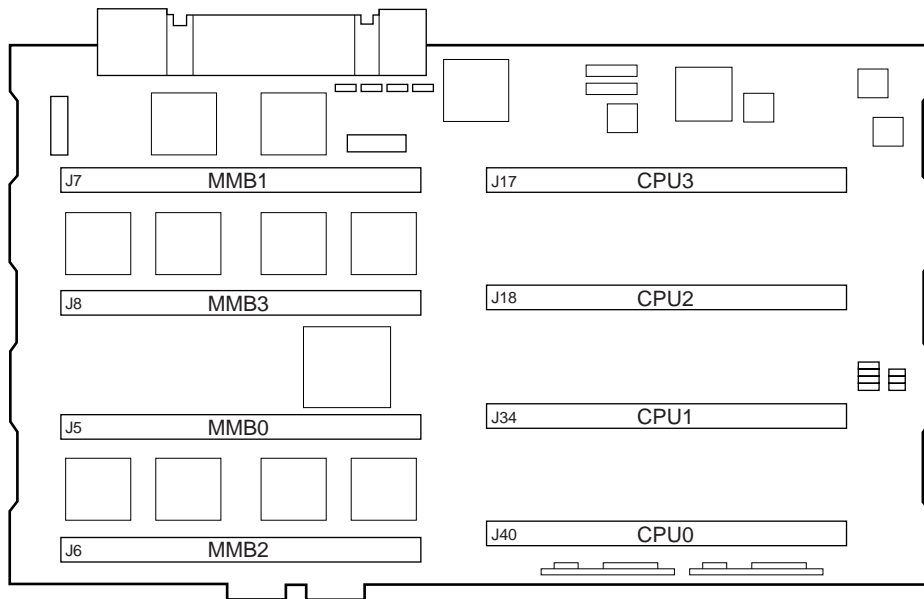

CPU Card

The system can have up to four CPU cards. The CPU cards are installed on the system board. Each CPU card contains a 21264 microprocessor, the third-generation implementation of the Alpha architecture.

The 21264 microprocessor is a superscalar CPU with out-of-order execution and speculative execution to maximize speed and performance. It contains four integer execution units and dedicated execution units for floating-point add, multiply, and divide. It has an instruction cache and a data cache on the chip. Each cache is a 64 KB, two-way, set-associative, virtually addressed cache that has 64-byte blocks. The data cache is a physically tagged, write-back cache.

Each CPU card has a 4 MB secondary B-cache (backup cache) consisting of late-write synchronous static RAMs (SRAMs) that provide low latency and high bandwidth. Each CPU card also has a 5 ->2 volt power regulator that supplies up to 100 watts at 2.2 volts to the CPU.

See Chapter 5 for instructions on installing additional CPUs.

Memory Motherboards (MMBs)

Memory is installed into memory motherboards (MMBs) located on the system board. There are four MMBs. The MMBs have either four or eight slots for installing DIMMs. The system memory uses JEDEC standard 200-pin synchronous DIMMs.

See Chapter 5 for memory configuration rules and installation instructions.

1.7 PCI Backplane

The PCI backplane has two 64-bit, 33 MHz PCI buses that support 64-bit PCI slots. The 64-bit PCI slots are split across two independent 64-bit, 33 MHz PCI buses. The PCI buses support 3.3 V or 5 V options. Figure 1-7 shows the location of the PCI slots in a 6-slot system and a 10-slot system.

Figure 1-7 PCI Backplane (Pedestal/Rack View)

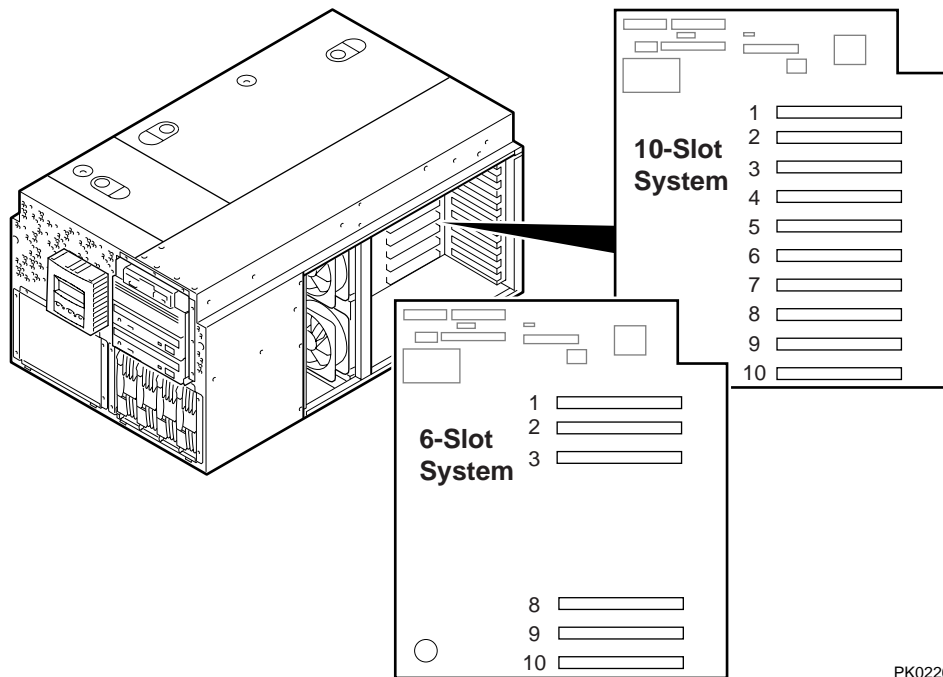


Table 1–1 shows the correspondence between the physical locations of the slots on the PCI backplane and the logical numbering reported with the SRM console **show config** command (described in Chapter 2). See Chapter 5 for instructions on installing PCI options.

Table 1–1 PCI Slot Mapping


Physical Slot	Logical Slot	PCI 0
1	1	Device
2	2	Device
3	3	Device
4	4	Device
Physical Slot	Logical Slot	PCI 1
5	1	Device
6	2	Device
7	3	Device
8	4	Device
9	5	Device
10	6	Device

NOTE: *PCI 0 and PCI 1 correspond to Hose 0 and Hose 1 in the logical configuration. On a six-slot system, physical slots 4–7 do not apply.*

1.8 Power Supplies

The power supplies provide power to components in the system chassis. The number of power supplies required depends on the system configuration.

Figure 1-8 Power Supplies

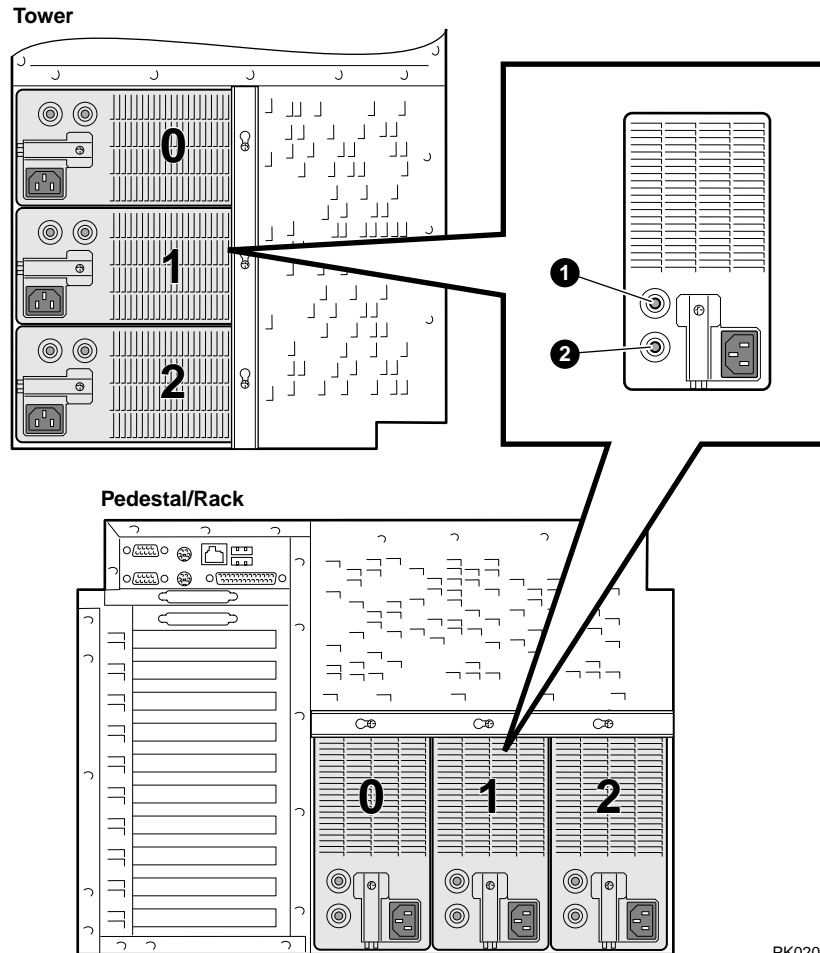

PK0207

One to three power supplies provide power to components in the system chassis. The system supports redundant power configurations to ensure continued system operation if a power supply fails.

When more than one power supply is installed, the supplies share the load. The power supplies select line voltage and frequency automatically (100 V or 120 V or 200–240 V and 50 Hz or 60 Hz).

Power Supply LEDs

Each power supply has two green LEDs that indicate the state of power to the system.

- ❶ POK (Power OK) Indicates that the power supply is functioning. The POK LED is on when the system is running. When the system power is on and a POK LED is off, that supply is not contributing to powering the system.
- ❷ +5 V Auxiliary Indicates that AC power is flowing from the wall outlet. As long as the power supply cord is plugged into the wall outlet, the +5V Aux LED is always on, even when the system power is off.


See Chapter 5 for instructions on installing additional power supplies.

1.9 Removable Media Storage

The system chassis houses a CD-ROM drive ❶ and a high-density 3.5-inch floppy diskette drive ❷ and supports two additional 5.25-inch half-height drives or one additional full-height drive. The 5.25-inch half-height area has a divider that can be removed to mount one full-height 5.25-inch device.

See Chapter 5 for information on installing a removable media drive.

Figure 1-9 Removable Media Drive Area

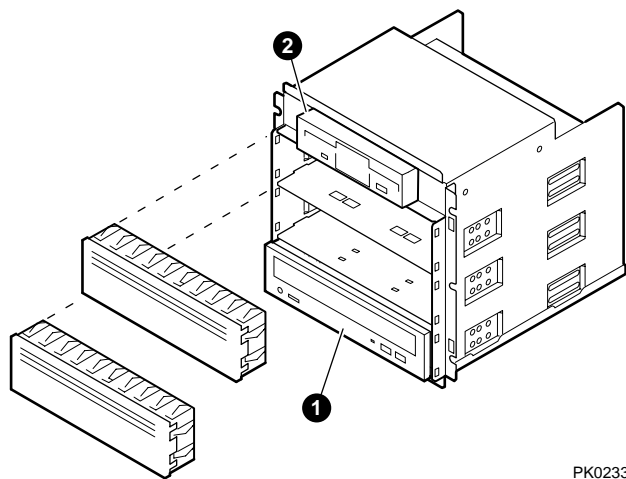


PK0233

1.10 Hard Disk Storage

The system chassis can have either one or two storage disk cages.

You can install four 1.6-inch hard drives in each storage disk cage. See Chapter 5 for information on installing hard disk drives.

Figure 1-10 Hard Disk Storage Cage with Drives (Tower View)

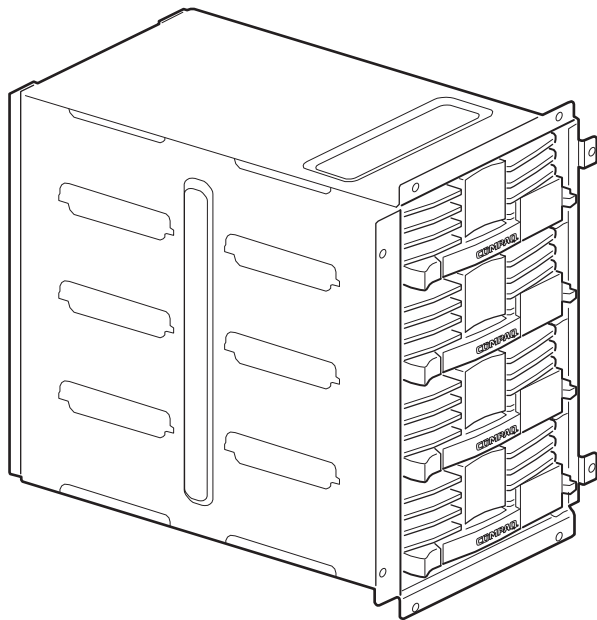


PK0935

1.11 System Access

At the time of delivery, the system keys are taped inside the small front door that provides access to the operator control panel and removable media devices.

Figure 1-11 System Keys

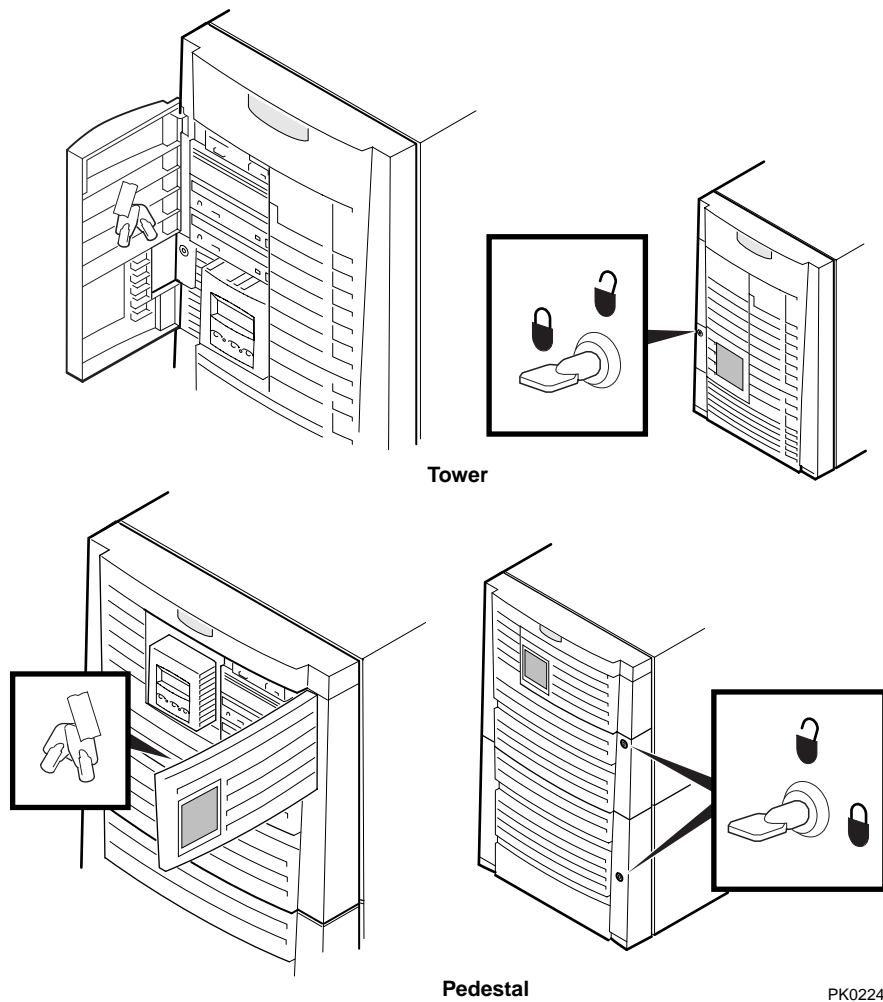

Both the tower and pedestal systems have a small front door through which the control panel and removable media devices are accessible. At the time of delivery, the system keys are taped inside this door.

The tower front door has a lock that lets you secure access to the disk drives and to the rest of the system.


The pedestal has two front doors, both of which can be locked. The upper door secures the disk drives and access to the rest of the system, and the lower door secures the expanded storage.

NOTE: *See Chapter 5 for warnings and procedures for accessing internal parts of the system.*

1.12 Console Terminal

The console terminal can be a serial (character cell) terminal connected to the COM1 or COM2 port or a VGA monitor connected to a VGA adapter on PCI 0. A VGA monitor requires a keyboard and mouse.

Figure 1-12 Console Terminal Connections

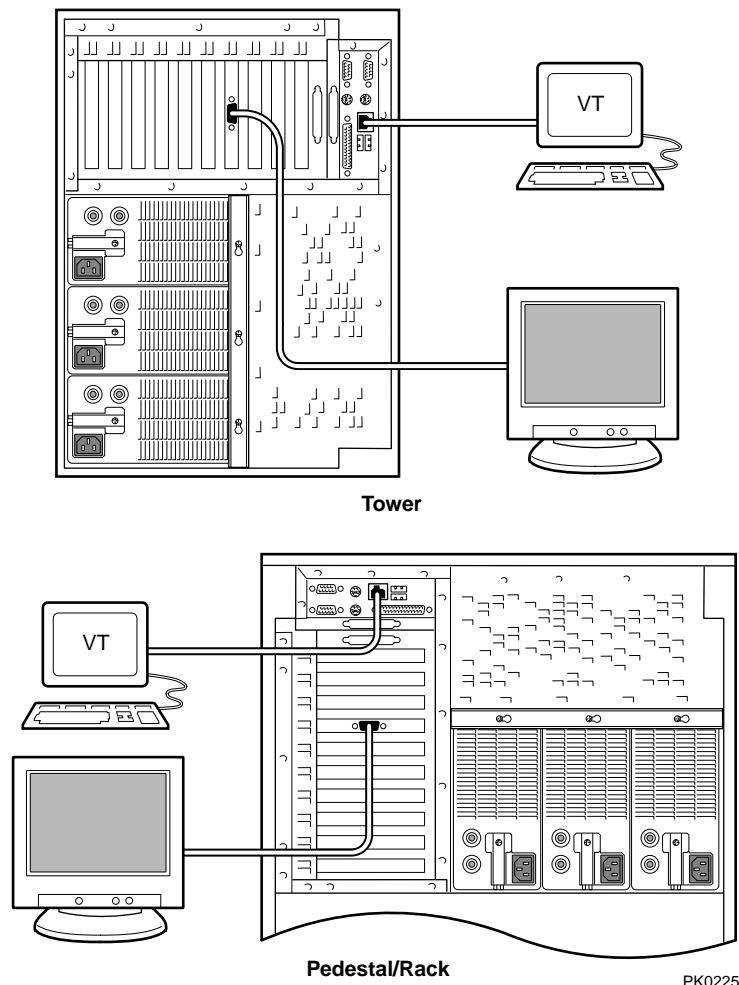

PK0225

Chapter 2

Operation

This chapter gives basic operating instructions, including powering up and configuring the machine. This chapter has the following sections:


- Powering Up the System
- Power-Up Displays
- System Consoles
- Displaying a UNIX or OpenVMS Configuration
- Setting SRM Environment Variables
- Setting SRM Console Security
- Displaying a Windows NT Hardware Configuration
- Setting Up a System for Windows NT
- Setting Automatic Booting
- Changing the Default Boot Device
- Running AlphaBIOS-Based Utilities

NOTE: *Before using this chapter, it is helpful to become familiar with the user interfaces to the system. See the Compaq AlphaServer ES40 User Interface Guide.*

2.1 Powering Up the System

To power up the system, press the power button. Testing begins, and status shows on the console terminal screen and in the control panel display.

Figure 2-1 Operator Control Panel

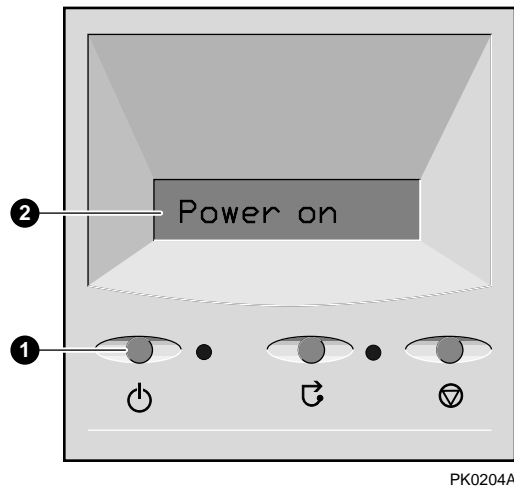

- ❶ Power button
- ❷ Control panel display

2.2 Power-Up Displays

Power-up information is displayed on the operator control panel and on the console terminal startup screen. Messages sent from the SROM (serial read-only memory) program are displayed first, followed by messages from the SRM console.

NOTE: *The power-up text that is displayed on the screen depends on what kind of terminal is connected as the console terminal: VT or VGA.*

*If the SRM **console** environment variable is set to **serial**, the entire power-up display, consisting of the SROM and SRM power-up messages, is displayed on the VT terminal screen. If **console** is set to **graphics**, no SROM messages are displayed, and the SRM messages are delayed until VGA initialization has been completed.*

- Section 2.2.1 shows the SROM power-up messages and corresponding operator control panel (OCP) messages.
- Section 2.2.2 shows the messages that are displayed once the SROM has transferred control to the SRM console.
- For a complete list of messages displayed on the OCP, see Chapter 7.

2.2.1 SRROM Power-Up Display

Example 2-1 Sample SRROM Power-Up Display

SRROM Power-Up Display

```
SRROM V1.00 CPU #00 @ 0500 MHz
SRROM program starting
Reloading SRROM

SRROM T1.5-F CPU # 00 @ 0500 MHz
SRROM program starting
Starting secondary on CPU #1
Starting secondary on CPU #2
Starting secondary on CPU #3
Bcache data tests in progress
Bcache address test in progress
CPU parity and ECC detection in progress
Bcache ECC data tests in progress
Bcache TAG lines tests in progress
Memory sizing in progress
Memory configuration in progress
Memory data test in progress
Memory address test in progress
Memory pattern test in progress
Memory thrashing test in progress
Memory initialization
Loading console
Code execution complete (transfer control)
```

OCP Message

```
PCI Test ①
Power on ②

RelCPU ③
BC Data ④

Size Mem ⑤

Load ROM ⑥
Jump to
Console
```

- ❶ When the system powers up, the SROM code is loaded into the I-cache (instruction cache) on the first available CPU, which becomes the primary CPU. The order of precedence is CPU0, CPU1, and so on. The primary CPU attempts to access the PCI bus. If it cannot, either a hang or a failure occurs, and this is the only message displayed.
- ❷ The primary CPU interrogates the I²C EEROM on the system board and CPU modules through shared RAM. The primary CPU determines the CPU and system configuration to jump to.

The primary CPU next checks the SROM checksum to determine the validity of the flash SROM sectors.

If flash SROM is invalid, the primary CPU reports the error and continues the execution of the SROM code. Invalid flash SROM must be reprogrammed.

If flash SROM is good, the primary CPU programs appropriate registers with the values from the flash data and selects itself as the target CPU to be loaded.

- ❸ The primary CPU (usually CPU0) initializes and tests the B-cache and memory, then loads the flash SROM code to the next CPU. That CPU then initializes the EV6 (21264 chip) and marks itself as the secondary CPU. Once the primary CPU sees the secondary, it loads the flash SROM code to the next CPU until all remaining CPUs are loaded.
- ❹ The flash SROM performs B-cache tests. For example, the ECC data test verifies the detection logic for single- and double-bit errors.
- ❺ The primary CPU initiates all memory tests. The memory is tested for address and data errors for the first 32 MB of memory. It also initializes all the “sized” memory in the system.

If a memory failure occurs, an error is reported. An untested memory array is assigned to address 0 and the failed memory array is deassigned. The memory tests are re-run on the first 32 MB of memory. If all memory fails, the “No Memory Available” message is reported and the system halts.

- ❻ If all memory passes, the primary CPU loads the console and transfers control to it.

2.2.2 SRM Console Power-Up Display

At the completion of SRM power-up, the primary CPU transfers control to the SRM console program. The console program continues the system initialization. Failures are reported to the console terminal through the power-up screen and a console event log.

Example 2-2 SRM Power-Up Display

OpenVMS PALcode V1.50-0, Tru64 UNIX PALcode V1.45-5

```
starting console on CPU 0                               ❶
initialized idle PCB
initializing semaphores
initializing heap
initial heap 200c0
memory low limit = 144000
heap = 200c0, 17fc0
initializing driver structures
initializing idle process PID
initializing file system
initializing hardware
initializing timer data structures
lowering IPL
CPU 0 speed is 2.00 ns (500MHz)
create dead_eater
create poll
create timer
create powerup
access NVRAM
Memory size 2048 MB
testing memory                                         ❷
...
probe I/O subsystem                                    ❸
probing hose 1, PCI
bus 0, slot 2, function 0 -- pka -- NCR 53C896
bus 0, slot 2, function 1 -- pkb -- NCR 53C896
bus 0, slot 4 -- ewa -- DE500-AA Network Controller
probing hose 0, PCI
probing PCI-to-ISA bridge, bus 1
bus 0, slot 2 -- vga -- DEC PowerStorm
bus 0, slot 15 -- dqa -- Acer Labs M1543C IDE
bus 0, slot 15 -- dqb -- Acer Labs M1543C IDE
starting drivers                                       ❹
```

- ❶ The primary CPU prints a message indicating that it is running the console. Starting with this message, the power-up display is sent to any console terminal, regardless of the state of the **console** environment variable.

If console is set to **graphics**, the display from this point on is saved in a memory buffer and displayed on the VGA monitor after the PCI buses are sized and the VGA device is initialized.

- ❷ The memory size is determined and memory is tested.
- ❸ The I/O subsystem is probed and I/O devices are reported. I/O adapters are configured.
- ❹ Device drivers are started.

Continued on next page

Example 2-2 SRM Power-Up Display (Continued)

```
entering idle loop
initializing keyboard
starting console on CPU 1
initialized idle PCB
initializing idle process PID
lowering IPL
CPU 1 speed is 2.00 ns (500MHz)
create powerup
entering idle loop
starting console on CPU 2
initialized idle PCB
initializing idle process PID
lowering IPL
CPU 2 speed is 2.00 ns (500MHz)
create powerup
starting console on CPU 3
initialized idle PCB
initializing idle process PID
lowering IPL
CPU 3 speed is 2.00 ns (500MHz)
create powerup
Memory Testing and Configuration Status
  Array      Size      Base Address
-----
    0        256Mb    0000000060000000
    1        512Mb    0000000040000000
    2        256Mb    0000000070000000
    3       1024Mb    0000000000000000

    2048 MB of System Memory
Testing the System
Testing the Disks (read only)
Testing the Network
initializing GCT/FRU at offset 192000
AlphaServer ES40 Console V5.4-5528, built on Feb  1 1999 at
01:43:35
P00>>>
```


- ⑤ The console is started on the secondary CPUs. The example shows a four-processor system.
- ⑥ Various diagnostics are performed.
- ⑦ Systems running UNIX or OpenVMS display the SRM console banner and the prompt, *Pnn>>>*. The number *n* indicates the primary processor. In a multiprocessor system, the prompt could be P00>>>, P01>>>, P02>>>, or P03>>>. From the SRM prompt, you can boot the UNIX or OpenVMS operating system.

2.2.3 AlphaBIOS Startup Screens

If the system is running the Windows NT operating system, the SRM console loads and starts the AlphaBIOS console. An initialization screen similar to Example 2-3 is displayed on the VGA monitor. Once AlphaBIOS initialization is complete, an AlphaBIOS boot screen similar to Example 2-4 is displayed.

Example 2-3 AlphaBIOS Initialization Screen

```
AlphaBIOS 5.68

Alpha Processor and System Information:
  System:      AlphaServer ES40
  Processor:   Alpha 21264, 500 MHz
  Memory:     256 MB

Alpha Processor(s) Status:
  Processor 0 Running
  Processors 1, 2, 3 Ready

SCSI Controller Initialization...

Initialize ATAPI #0...
  Device: CD-ROM SCSI ID:0 TOSHIBA CD-ROM XM62028 1110

F2=Setup  PAUSE=Pause Display  ESC=Bypass Network Init
```

PKO950

Example 2-4 AlphaBIOS Boot Screen




PK0949

2.3 System Consoles

System console programs are located in a flash ROM (read-only memory) on the system board. From the console interface, you can set up and boot the operating system, display the system configuration, and perform other tasks. For complete information on the SRM and AlphaBIOS consoles, see the *Compaq AlphaServer ES40 User Interface Guide*.

Figure 2-2 AlphaBIOS Setup Screen

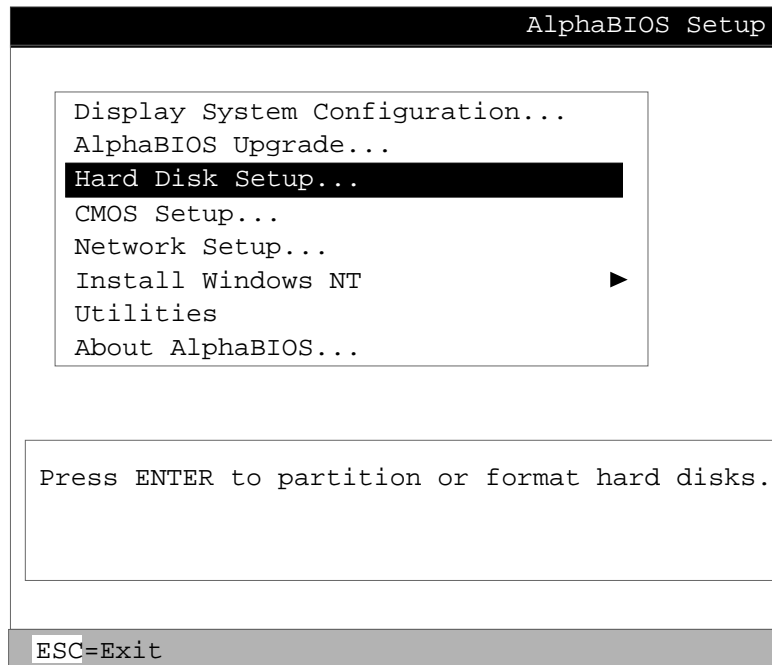

PK0905

SRM Console

Systems running the Tru64 UNIX or OpenVMS operating systems are configured from the SRM console, a command-line interface (CLI). From the CLI you can enter commands to configure the system, view the system configuration, and boot the system.

For example, to verify that the system sees the bootable devices that are attached, enter:

```
P00>>> show device
```

AlphaBIOS Console

Systems running the Windows NT operating system are configured from the AlphaBIOS console, a menu interface. From the AlphaBIOS boot screen, you can boot the operating system or press **F2** to enter a setup screen to set up the system. See Figure 2-2.

2.3.1 Switching Between Consoles

Under some circumstances, you may need to switch between the system consoles. For example, RAID devices are configured from the AlphaBIOS console.

- To enter the SRM console from Windows NT, press the Reset button, then press the Halt button. You can also enter SRM by changing the Console Selection option on the AlphaBIOS Advanced CMOS Setup screen. See the *Compaq AlphaServer ES40 User Interface Guide* for details.
- To enter the AlphaBIOS console from SRM, issue the **alphabios** command:
P00>>> alphabios

2.3.2 Selecting the Console and Display Device

The SRM `os_type` environment variable determines which user interface (SRM or AlphaBIOS) is the final console loaded on a power-up or reset. The SRM console environment variable determines to which display device (VT-type terminal or VGA monitor) the console display is sent.

Selecting the Console

The **`os_type`** variable selects the console. **`Os_type`** is factory configured as follows:

- For Windows NT, **`os_type`** is set to **`nt`**.
- For UNIX or OpenVMS, **`os_type`** is set to **`unix`** or **`vms`**, respectively.

If **`os_type`** is set to **`unix`** or **`vms`**, the SRM console is loaded on a power-up or reset. If **`os_type`** is set to **`nt`**, the SRM console is loaded and then SRM starts the AlphaBIOS console from system flash ROM.

Selecting the Display Device

The console terminal that displays the SRM user interface can be either a serial terminal (VT320 or higher, or equivalent) or a VGA monitor. A VGA monitor is required to run Windows NT.

The SRM **`console`** environment variable determines the display device.

- If **`console`** is set to **`serial`**, and a VT-type device is connected, the SRM console powers on in serial mode and sends power-up information to the VT device. The VT device can be connected to the MMJ port or to COM2.
- If **`console`** is set to **`graphics`**, the SRM console expects to find a VGA card connected to PCI 0 and, if so, displays power-up information on the VGA monitor after VGA initialization has been completed.

Continued on next page

You can verify the display device with the SRM **show console** command and change the display device with the SRM **set console** command. If you change the display device setting, you must reset the system (with the Reset button or the **init** command) to put the new setting into effect.

In the following example, the user displays the current console device (a graphics device) and then resets it to a serial device. After the system initializes, output will be displayed on the serial terminal.

```
P00>>> show console
console                graphics
P00>>> set console serial
P00>>> init
.
.
.
```


2.3.3 Setting the Control Panel Message

If you are running Tru64 UNIX or OpenVMS, you can create a customized message to be displayed on the operator control panel after startup self-tests and diagnostics have been completed.

When the operating system is running, the control panel displays the console revision. It is useful to create a customized message if you have a number of systems and you want to identify each system by a node name.

You can use the SRM **set ocp_text** command to change this message (see Example 2-5). The message can be up to 16 characters and must be entered in quotation marks.

Example 2-5 Set Ocp_Text Command

```
P00>>> set ocp_text "Node Alpha1"
```

2.4 Displaying a Tru64 UNIX or OpenVMS Configuration

View the system hardware configuration for UNIX and OpenVMS systems from the SRM console. View a Windows NT hardware configuration from the AlphaBIOS console. It is useful to view the hardware configuration to ensure that the system recognizes all devices, memory configuration, and network connections.

Use the following SRM console commands to view the system configuration for UNIX or OpenVMS systems. Additional commands to view the system configuration are described in the *Compaq AlphaServer ES40 User Interface Guide*.

- | | |
|--------------------|---|
| show boot* | Displays the boot environment variables. |
| show config | Displays the logical configuration of interconnects and buses on the system and the devices found on them. |
| show device | Displays the bootable devices and controllers in the system. |
| show fru | Displays the physical configuration of FRUs (field-replaceable units). See Chapter 7 for information on this command. |
| show memory | Displays configuration of main memory. |

2.4.1 Displaying Boot Environment Variables

Use the show boot* command to list the boot environment variables.

Example 2-6 Show Boot*

```
P00>>> show boot*
boot_dev          dka0.0.0.1.1
boot_file
boot_osflags      a
boot_reset        OFF
bootdef_dev       dka0.0.0.1.1
booted_dev
booted_file
booted_osflags
```

2.4.2 Displaying the Logical Configuration

Use the show config command to display the logical configuration. To display the physical configuration, issue the show fru command.

Example 2-7 Show Config

```
P00>>> show config

                                Compaq Computer Corporation
                                Compaq AlphaServer ES40

Firmware                               ❶
SRM Console:      V5.4-5528
ARC Console:      5.68
PALcode:          OpenVMS PALcode V1.50-0, Tru64 UNIX PALcode V1.47-5
Serial Rom:       V1.5-F
RMC Rom:          V1.0
RMC Flash Rom:   V1.2

Processors                               ❷
CPU 0             Alpha 21264-4 500 MHz 4MB Bcache
CPU 1             Alpha 21264-4 500 MHz 4MB Bcache
CPU 2             Alpha 21264-4 500 MHz 4MB Bcache
CPU 3             Alpha 21264-4 500 MHz 4MB Bcache

Core Logic                               ❸
Cchip             DECchip 21272-CA Rev 9(C4)
Dchip             DECchip 21272-DA Rev 2
Pchip 0           DECchip 21272-EA Rev 2
Pchip 1           DECchip 21272-EA Rev 2
TIG              Rev 10

Memory                               ❹
  Array      Size      Base Address
-----
  0          256Mb     0000000060000000
  1          512Mb     0000000040000000
  2          256Mb     0000000070000000
  3          1024Mb    0000000000000000

2048 MB of System Memory
```

Continued on next page

- ❶ **Firmware.** Version numbers of the SRM console, AlphaBIOS (ARC) console, PALcode, serial ROM, RMC ROM, and RMC flash ROM
- ❷ **Processors.** Processors present, processor version and clock speed, and amount of backup cache
- ❸ **Core logic.** Version numbers of the chips that form the interconnect on the system board
- ❹ **Memory.** Memory arrays and memory size

Continued on next page

Example 2-7 Show Config (Continued)

```

Slot Option                               Hose 0, Bus 0, PCI ⑤
  2/0 NCR 53C896                          pke0.7.0.2.0      SCSI Bus ID 7
  2/1 NCR 53C896                          pkf0.7.0.102.0    SCSI Bus ID 7
  4   DEC PowerStorm
  7   Acer Labs M1543C
 15  Acer Labs M1543C IDE dqa.0.0.15.0      Bridge to Bus 1, ISA
                                dqb.0.1.15.0
                                dqa0.0.0.15.0    TOSHIBA CD-ROM XM-6302B

 19  Acer Labs M1543C USB
                                Option
                                Floppy
                                Hose 0, Bus 1, ISA
                                dva0.0.0.1000.0

Slot Option                               Hose 1, Bus 0, PCI
  1   NCR 53C895                          pka0.7.0.1.1      SCSI Bus ID 7
                                dka0.0.0.1.1      RZ2DD-LS
                                dka100.1.0.1.1    RZ2DD-LS
                                dka200.2.0.1.1    RZ1CB-CS
  3   NCR 53C810                          pkb0.7.0.3.1      SCSI Bus ID 7
                                dkb0.0.0.3.1      RZ25
  4   DE500-BA Network Con ewa0.0.0.4.1      00-00-F8-09-90-FF
  6   DECchip 21152-AA                    Bridge to Bus 2, PCI

Slot Option                               Hose 1, Bus 2, PCI
  0   NCR 53C875                          pkc0.7.0.2000.1   SCSI Bus ID 7
  1   NCR 53C875                          pkd0.7.0.2001.1   SCSI Bus ID 7
  2   DE500-AA Network Con ewb0.0.0.2002.1   00-06-2B-00-25-5B
P00>>>

```

⑤ PCI bus information.

The “Slot” column lists the logical slots seen by the system. These are not the physical slots into which devices are installed. See Table 2–1 for the correspondence between logical slots and physical slots.

The NCR 53C896 on Hose 0, Bus 0 is a dual-channel Ultra2 SCSI multifunction controller. Two controllers reside on the same chip. They are shown as 2/0 and 2/1. The first number is the logical slot, and the second is the function.

The Acer Labs bridge chip, which is located in PCI logical slot 7, has two built-in IDE controllers. The CD-ROM is on the first controller.

NOTE: *The naming of devices (for example, dqa.0.0.15.0) follows the conventions described in Table 2–2.*

In Example 2–7, the following devices are present:

Hose 0, Bus 0, PCI

Slot 2/0	SCSI controller
Slot 2/1	SCSI controller
Slot 4	VGA controller
Slot 7	PCI to ISA bridge chip
Slot 15	IDE controller and CD-ROM drive
Slot 19	Universal serial bus (USB) controller

Hose 0, Bus 1, ISA

Diskette drive

Hose 1, Bus 0, PCI

Slot 1	SCSI controller and drives
Slot 3	SCSI controller and drives
Slot 4	Ethernet controller
Slot 6	PCI-to-PCI bridge chip to Bus 2

Hose 1, Bus 2, PCI

Slot 0	SCSI controller
Slot 1	SCSI controller
Slot 2	Ethernet controller

Continued on next page

Table 2-1 Correspondence Between Logical and Physical PCI Slots

Physical Slot	Logical Slot	PCI 0
1	1	Device
2	2	Device
3	3	Device
4	4	Device

Physical Slot	Logical Slot	PCI 1
5	1	Device
6	2	Device
7	3	Device
8	4	Device
9	5	Device
10	6	Device

NOTE: *PCI 0 and PCI 1 correspond to Hose 0 and Hose 1 in the logical configuration.*

2.4.3 Displaying the Bootable Devices

Use the **show device** command to display the bootable devices. **DK** = SCSI drive; **DQ** = IDE drive; **DV** = diskette drive; **EI** or **EW** = Ethernet controller; **PK** = SCSI controller.

Example 2-8 Show Device

```
P00>>> show device
dka0.0.0.1.1.1          DKA0          RZ2DD-LS  0306
dka100.1.0.1.1.1       DKA100        RZ2DD-LS  0306
dka200.2.0.1.1.1       DKA200        RZ1CB-CS  0844
dkb0.0.0.3.1           DKB0          RZ25      0900
dqa0.0.0.15.0          DQA0          TOSHIBA CD-ROM XM-6302B 1012
dva0.0.0.1000.0        DVA0
ewa0.0.0.4.1           EWA0          00-00-F8-09-90-FF
ewb0.0.0.2002.1        EWB0          00-06-2B-00-25-5B
pka0.7.0.1.1           PKA0          SCSI Bus ID 7
pkb0.7.0.3.1           PKB0          SCSI Bus ID 7
pkc0.7.0.2000.1        PKC0          SCSI Bus ID 7
pkd0.7.0.2001.1        PKD0          SCSI Bus ID 7
```

Table 2-2 Device Naming Conventions

Category	Description
dq Driver ID	Two-letter designator of port or class driver
	dk SCSI drive or CD ew Ethernet port
	dq IDE CD-ROM fw FDDI device
	dr RAID set device mk SCSI tape
	du DSSI disk mu DSSI tape
	dv Diskette drive pk SCSI port
	ei Ethernet port pu DSSI port
a Storage adapter ID	One-letter designator of storage adapter (a, b, c...).
0 Device unit number	Unique number (MSCP unit number). SCSI unit numbers are forced to 100 X node ID.
0 Bus node number	Bus node ID.
0 Channel number	Used for multi-channel devices.
15 Logical slot number	Corresponds to PCI slot number, as shown in Table 2-1.
0 Hose number	0 — PCI 0 1 — PCI 1

2.4.4 Viewing Memory Configuration

Use the `show memory` command to view the configuration of main memory.

Example 2-9 Show Memory

```
P00>>> show memory
  Array      Size      Base Address
-----
    0        256Mb     00000000060000000
    1        512Mb     00000000040000000
    2        256Mb     00000000070000000
    3       1024Mb     00000000000000000
```

2048 MB of System Memory

The **show memory** display corresponds to the memory array configuration described in Chapter 5. The display does not indicate the number of DIMMs or their size. Thus, in Example 2-9, Array 3 could consist of two sets of 128-MB DIMMs (eight DIMMs) or one set of 256-MB DIMMs (four DIMMs). Either combination provides 1024 MB of memory.

Use the **show fru** command to display the DIMMs in the system and their location. See Chapter 7.

2.5 Setting SRM Environment Variables

You may need to set several SRM console environment variables and built-in utilities to configure systems running the Tru64 UNIX or OpenVMS operating systems.

Set environment variables at the P00>>> prompt.

- To check the setting for a specific environment variable, enter the **show *envar*** command, where the name of the environment variable is substituted for *envar*.
- To reset an environment variable, use the **set *envar*** command, where the name of the environment variable is substituted for *envar*.

The boot-related environment variables are described in Chapter 3 of this book. For other environment variables you may need to set, see Chapter 2 in the *Compaq AlphaServer ES40 User Interface Guide*.

2.6 Setting SRM Console Security

You can set the SRM console to secure mode to prevent unauthorized personnel from modifying the system parameters or otherwise tampering with the system from the console.

When the SRM is set to secure mode, you can use only two console commands:

- The **boot** command, to boot the operating system
- The **continue** command, to resume running the operating system if you have inadvertently halted the system

The console security commands are as follows:

set password These commands put the console into secure mode.

set secure

clear password Exits secure mode.

login Turns off console security for the current session.


See the *Compaq AlphaServer ES40 User Interface Guide* for details on setting SRM console security.

2.7 Displaying a Windows NT Hardware Configuration

View a Windows NT configuration from AlphaBIOS.

1. From the AlphaBIOS Setup screen, select **Display System Configuration** and press Enter.
2. In the Display System Configuration screen, use the arrow keys to select the configuration category you want.

Figure 2-3 Display System Configuration Screen

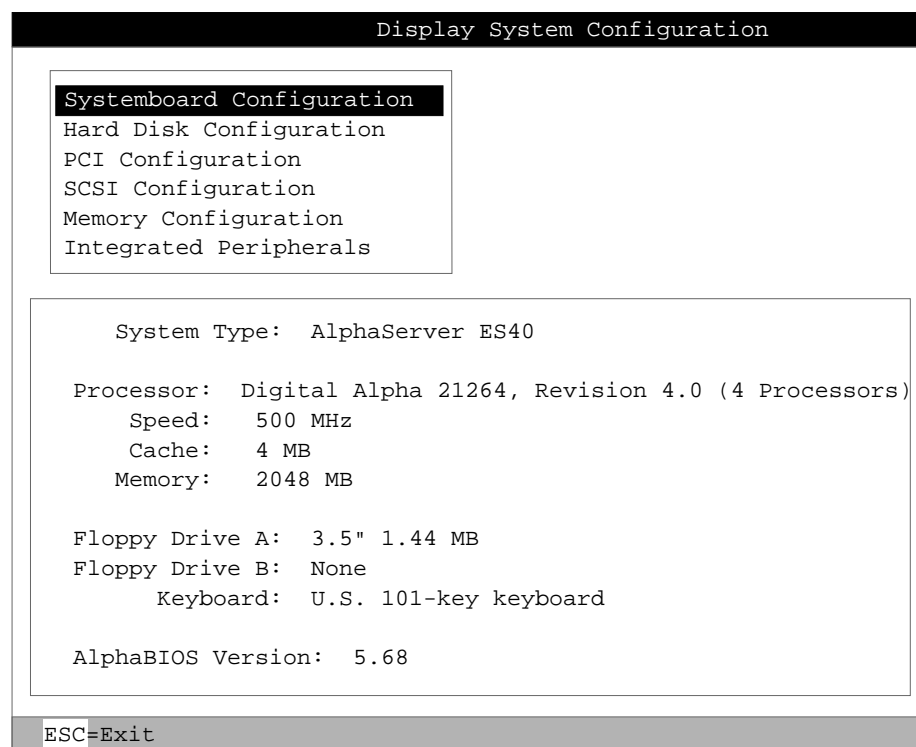

PK0902

2.8 Setting Up a System for Windows NT


Before you boot Windows NT, set the system date and time and set up the hard disks. Optionally, you can set the level of memory testing and set up system password protection.

If you are installing Windows NT from CD-ROM, use the AlphaBIOS CMOS Setup screen and the Hard Disk Setup screen to set up your system. Use the Advanced CMOS Setup screen to set the level of memory testing and to set password protection, if desired.

2.8.1 Setting the Date and Time

Set the date and time from the CMOS Setup screen.

Figure 2-4 CMOS Setup Screen

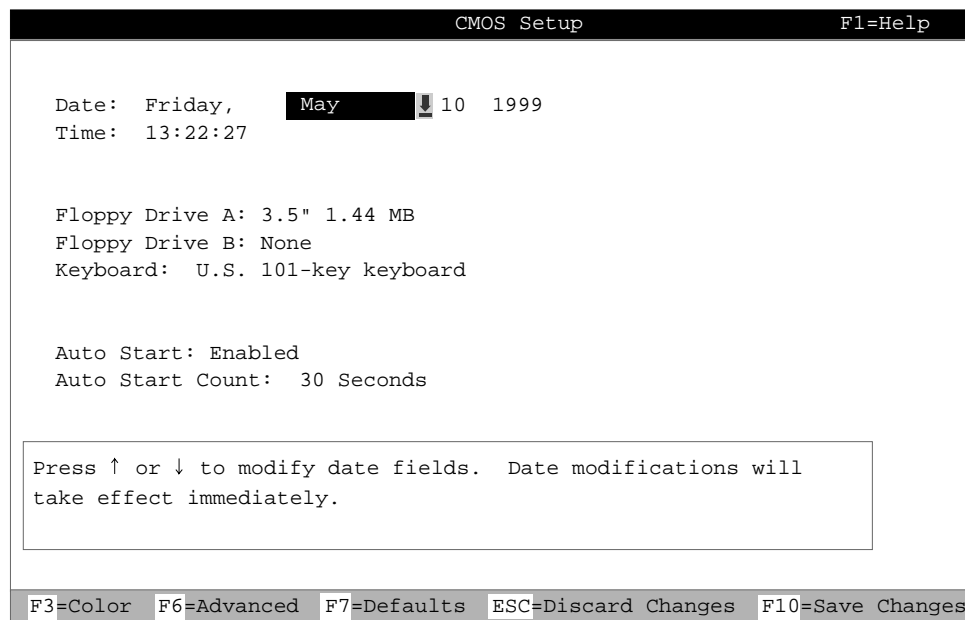

PK0901

1. Start AlphaBIOS.
2. From the AlphaBIOS Boot screen, press **F2** to enter AlphaBIOS Setup.
3. From AlphaBIOS Setup select **CMOS Setup**, and press Enter.
4. From CMOS Setup set the system date and time. Accept the defaults for all other items.

2.8.2 Setting Up the Hard Disk

Set up the hard disk from the Hard Disk Setup screen.

Figure 2-5 Hard Disk Setup Screen

Hard Disk Setup				
Disk 0	NCRC8xx #0, SCSI ID 0	4091 MB		
	Partition 1	4085 MB	FAT	
	Partition 2	6 MB	FAT	
Disk 1	NCRC8XX #0, SCSI ID 1	4091 MB		
	Partition 1	4091 MB	NTFS	
Disk 2	NCRC8XX #0, SCSI ID 2	4091 MB		
	Partition 1	4091 MB	NTFS	

INSERT =New DEL =Delete F6 =Format F7 =Express ESC =Exit

PK0940a


Set the date and time as described in Section 2.8.1 before setting up the hard disk.

1. From CMOS Setup press **F10** to return to the AlphaBIOS Setup screen.
2. Select **Hard Disk Setup** and press Enter.
3. Press **F7** to enter Express Setup and perform an express hard disk setup.
4. Press **F10** to continue the setup.

2.8.3 Setting the Level of Memory Testing

Set the level of memory testing that occurs when the system is power cycled from the advanced CMOS Setup screen.

Figure 2-6 Advanced CMOS Setup Screen

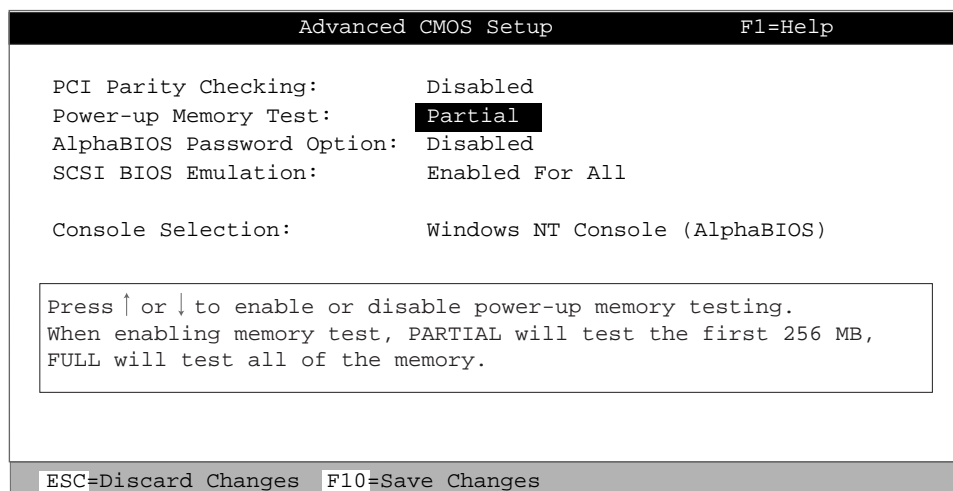

PK0903a

1. From Advanced CMOS Setup, select **Power-up Memory Test**.
2. Select the level of memory testing you want to occur when the system is power cycled. The three memory test settings are:

Disabled	No memory test performed by AlphaBIOS
Partial	Tests first 256 MB of memory
Full	Tests all of the memory

2.8.4 Setting Password Protection

Password protection provides two levels of security for your Windows NT system: setup protection and startup protection. When system setup protection is enabled, a password is required to start AlphaBIOS Setup. When startup password protection is enabled, a password is required before the system initializes.

Startup password protection provides more comprehensive protection than setup password protection because the system cannot be used at all until the correct password is entered.

To enable password protection:

1. Start AlphaBIOS Setup, select **CMOS Setup**, and press Enter.
 2. In the CMOS Setup screen, press **F6** to enter Advanced CMOS Setup.
 3. In the Advanced CMOS Setup screen (Figure 2–6), select **AlphaBIOS Password Option** and use the arrow keys to select the type of protection you want. An explanatory dialog box appears. Read the dialog box and press Enter to continue.
 4. Enter your password in the Enter New Password dialog box, then press Enter.
 5. Enter your password in the Confirm New Password dialog box, then press Enter.
 6. Press **F10** to save your changes.
-

NOTE: *To change your password, set up your password again.*

2.9 Setting Automatic Booting

Windows NT systems are factory set to auto start; UNIX and OpenVMS systems are factory set to halt in the SRM console. You can change these defaults, if desired.

Systems can boot automatically (if set to autoboot) from the default boot device under the following conditions:

- When you first turn on system power
- When you power cycle or reset the system
- When system power comes on after a power failure
- After a bugcheck (OpenVMS) or panic (UNIX)

2.9.1 Windows NT and Auto Start

On Windows NT systems the Auto Start option is enabled by default, which causes the operating system to start automatically whenever the machine is power cycled or reset.

If you have more than one version of Windows NT installed (for example, Version 4.0 and Version 5.0), the version you select as the primary operating system starts automatically if Auto Start is enabled.

If you do not want your Windows NT system to boot an operating system automatically, change the Auto Start setting on the CMOS Setup screen to Disabled.

2.9.2 Setting Tru64 UNIX or OpenVMS Systems to Auto Start

The SRM `auto_action` environment variable determines the default action the system takes when the system is power cycled, reset, or experiences a failure.

On systems that are factory configured for UNIX or OpenVMS, the factory setting for `auto_action` is `halt`. The `halt` setting causes the system to stop in the SRM console. You must then boot the operating system manually.

For maximum system availability, `auto_action` can be set to `boot` or `restart`.

- With the `boot` setting, the operating system boots automatically after the SRM `init` command is issued or the Reset button is pressed.
- With the `restart` setting, the operating system boots automatically after the SRM `init` command is issued or the Reset button is pressed, and it also reboots after an operating system crash.

To set the default action to `boot`, enter the following SRM commands:

```
P00>>> set auto_action boot
P00>>> init
```

For more information on `auto_action`, see the *Compaq AlphaServer ES40 User Interface Guide*.

2.10 Changing the Default Boot Device

It is not necessary to modify the boot file setting for Windows NT. You can change the default boot device for UNIX or OpenVMS with the `set bootdef_dev` command.

Windows NT

AlphaBIOS boots Windows NT from the operating system loader program, OSLOADER.EXE. A boot file setting is created along with the operating system selection during Windows NT setup, and this setting is usually not modified by the user. You can, however, modify this setting, if necessary. See the *Compaq AlphaServer ES40 User Interface Guide* for instructions.

UNIX or OpenVMS

With the UNIX or OpenVMS operating systems, you can designate a default boot device. You change the default boot device by using the **set bootdef_dev** SRM console command. For example, to set the boot device to the IDE CD-ROM, enter commands similar to the following:

```
P00>>> show bootdef_dev
bootdef_dev   dka400.4.0.1.1
P00>>> set bootdef_dev dqa500.5.0.1.1
P00>>> show bootdef_dev
bootdef_dev   dqa500.5.0.1.1
```

See the *Compaq AlphaServer ES40 User Interface Guide* for more information.

2.11 Running AlphaBIOS-Based Utilities

Depending upon the type of hardware you have, you may have to run hardware configuration utilities. Hardware configuration diskettes are shipped with your system or with options that you order.

Typical configuration utilities include:

- RAID standalone configuration utility for setting up RAID devices
- KZPSA configuration utility for configuring SCSI adapters

These utilities are run from the AlphaBIOS console


Utilities can be run either in graphics or serial mode. The SRM **console** environment variable controls which mode AlphaBIOS runs in at the time it is loaded by the SRM console.

If you are running Windows NT, your monitor is already in graphics mode. If you are running UNIX or OpenVMS and you have a VGA monitor attached, set the **console** environment variable to **graphics** and enter the **init** command to reset the system before invoking AlphaBIOS.

2.11.1 Running Utilities from a VGA Monitor

If you are running Windows NT, no terminal setup is required for running utilities.

Figure 2-7 AlphaBIOS Utilities Menu

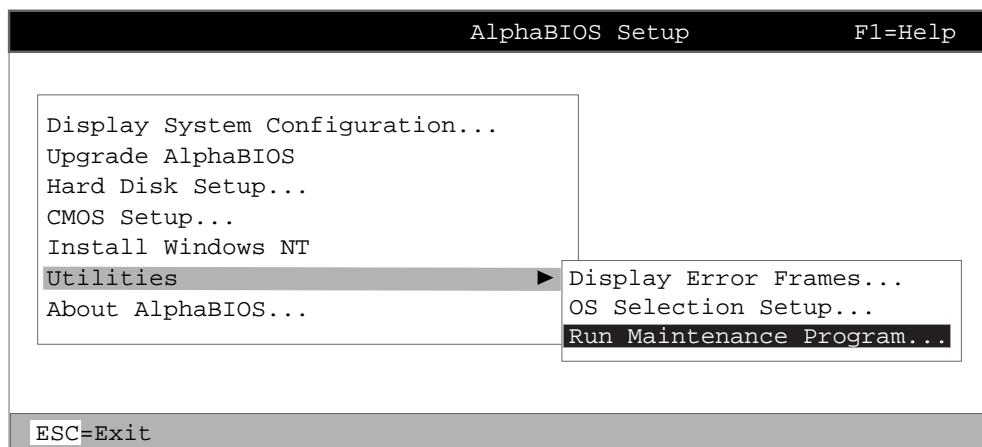


PK0954a

Running a Utility from a VGA Monitor

1. Start the AlphaBIOS console.
2. Press **F2** from the Windows NT Boot screen to display the AlphaBIOS Setup screen.
3. From AlphaBIOS Setup, select **Utilities**, then select **Run Maintenance Program** from the sub-menu that is displayed, and press Enter.

4. In the Run Maintenance Program dialog box, type the name of the program to be run in the Program Name field. Then Tab to the Location list box, and select the hard disk partition, floppy disk, or CD-ROM drive from which to run the program.
5. Press Enter to execute the program.

Figure 2-8 Run Maintenance Program Dialog Box

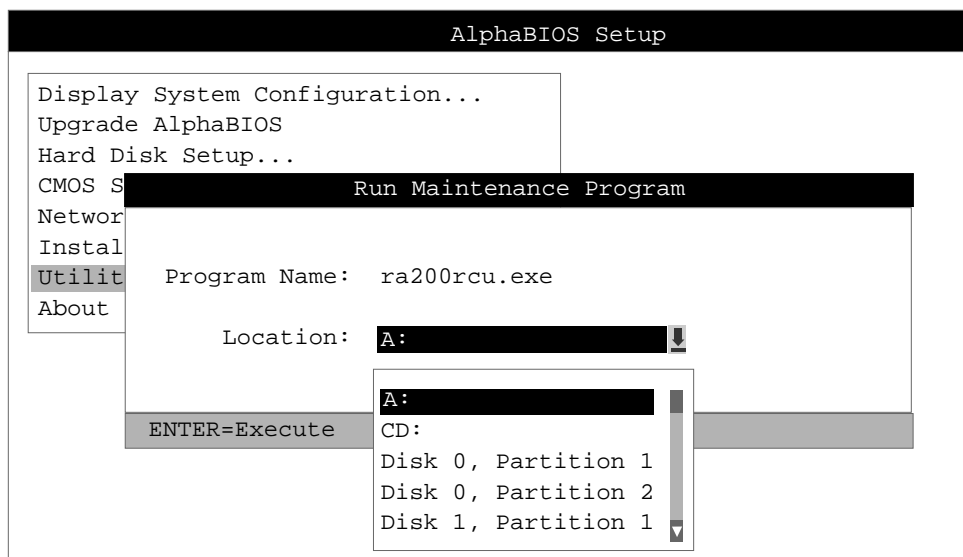

PK0929

2.11.2 Setting Up Serial Mode

Serial mode requires a VT320 or higher (or equivalent) terminal. To run AlphaBIOS and maintenance programs in serial mode, set the console environment variable to serial and enter the init command to reset the system.

Set up the serial terminal as follows:

1. From the General menu, set the terminal mode to VT`xxx` mode, 8-bit controls.
2. From the Comm menu, set the character format to 8 bit, no parity, and set receive XOFF to 128 or greater.

2.11.3 Running Utilities from a Serial Terminal

Utilities are run from a serial terminal the same way as from a VGA monitor. The menus are the same, but some key mappings are different.

Table 2-3 AlphaBIOS Option Key Mapping

AlphaBIOS Key	VTxxx Key
F1	Ctrl/A
F2	Ctrl/B
F3	Ctrl/C
F4	Ctrl/D
F5	Ctrl/E
F6	Ctrl/F
F7	Ctrl/P
F8	Ctrl/R
F9	Ctrl/T
F10	Ctrl/U
Insert	Ctrl/V
Delete	Ctrl/W
Backspace	Ctrl/H
Escape	Ctrl/[

Continued on next page

1. Issue the **alphabios** command at the P00>>> prompt to start the AlphaBIOS console.
2. From the AlphaBIOS Boot screen, press **F2**.
3. From AlphaBIOS Setup, select **Utilities**, and select **Run Maintenance Program** from the sub-menu that is displayed. Press Enter.
4. In the Run Maintenance Program dialog box, type the name of the program to be run in the Program Name field. Then tab to the Location list box, and select the hard disk partition, floppy disk, or CD-ROM drive from which to run the program.
5. Press Enter to execute the program.

Chapter 3

Booting and Installing an Operating System

This chapter gives instructions for booting the Tru64 UNIX, OpenVMS, or Windows NT operating systems and for starting an operating system installation. It also describes how to switch from one operating system to another. Refer to your operating system documentation for complete instructions on booting or starting an installation.

The following topics are included:

- Setting Boot Options for UNIX or OpenVMS
- Booting Tru64 UNIX
- Starting a Tru64 UNIX Installation
- Booting OpenVMS
- Starting an OpenVMS Installation
- Booting Windows NT
- Starting a Windows NT Installation
- Switching Between Operating Systems

NOTE: *Your system may have been delivered to you with factory-installed software (FIS); that is, with a version of the operating system already installed. If so, refer to the FIS documentation included with your system to boot your operating system for the first time.*

3.1 Setting Boot Options for UNIX or OpenVMS

You can set a default boot device, boot flags, and network boot protocols for UNIX or OpenVMS using the SRM set command with environment variables. Once these environment variables are set, the boot command defaults to the stored values. You can override the stored values for the current boot session by entering parameters on the boot command line.

The SRM boot-related environment variables are listed below and described in the following sections:

bootdef_dev	Defines a default boot device
boot_file	Specifies a default file name to be used for booting when no file name is specified by the boot command
boot_osflags	Defines parameters to enable specific functions during the boot process
ei*0_inet_init or ew*0_inet_init	Determines whether the interface's internal Internet database is initialized from nvram or from a network server (through the bootp protocol). Set this environment variable if you are booting UNIX from a RIS server.
ei*0_protocols or ew*0_protocols	Defines a default network boot protocol (bootp or mop).

3.1.1 bootdef_dev

The bootdef_dev environment variable specifies one or more devices from which to boot the operating system. When more than one device is specified, the system searches in the order listed and boots from the first device.

Enter the **show bootdef_dev** command to display the current default boot device. Enter the **show device** command for a list of all devices in the system.

The syntax is:

set bootdef_dev *boot_device*

boot_device The name of the device on which the system software has been loaded. To specify more than one device, separate the names with commas.

Example

In this example, two boot devices are specified. The system will try booting from dkb0 and, if unsuccessful, will boot from dka0.

```
P00>>> set bootdef_dev dkb0, dka0
```

NOTE: *When you set the **bootdef_dev** environment variable, it is recommended that you set the operating system boot parameters as well, using the **set boot_osflags** command.*

3.1.2 boot_file

The boot_file environment variable specifies the default file name to be used for booting when no file name is specified by the boot command.

The syntax is:

set boot_file *filename*

Example

In this example, a boot file is specified for booting OpenVMS from the InfoServer. APB_0712 is the file name of the APB program used for the initial system load (ISL) boot program.

```
P00>>> set boot_file apb_0712
```

3.1.3 boot_osflags

The `boot_osflags` environment variable sets the default boot flags and, for OpenVMS, a root number.

Boot flags contain information used by the operating system to determine some aspects of a system bootstrap. Under normal circumstances, you can use the default boot flag settings.

To change the boot flags for the current boot only, use the *flags_value* argument with the **boot** command.

The syntax is:

set boot_osflags *flags_value*

The *flags_value* argument is specific to the operating system.

UNIX Systems

UNIX systems take a single ASCII character as the *flags_value* argument.

- a** Load operating system software from the specified boot device (autoboot). Boot to multiuser mode.
- i** Prompt for the name of a file to load and other options (boot interactively). Boot to single-user mode.
- s** Stop in single-user mode. Boots /vmunix to single-user mode and stops at the # (root) prompt.
- D** Full dump; implies “s” as well. By default, if UNIX crashes, it completes a partial memory dump. Specifying “D” forces a full dump at system crash.

OpenVMS Systems

OpenVMS systems require an ordered pair as the *flags_value* argument: *root_number* and *boot_flags*.

root_number Directory number of the system disk on which OpenVMS files are located. For example:

<i>root_number</i>	Root Directory
--------------------	----------------

0 (default)	[SYS0.SYSEXEXE]
-------------	-----------------

1	[SYS1.SYSEXEXE]
---	-----------------

2	[SYS2.SYSEXEXE]
---	-----------------

3	[SYS3.SYSEXEXE]
---	-----------------

boot_flags The hexadecimal value of the bit number or numbers set. To specify multiple boot flags, add the flag values (logical OR). For example, the flag value 10080 executes both the 80 and 10000 flag settings. See Table 3-1.

Table 3-1 OpenVMS Boot Flag Settings

Flags_Value	Bit Number	Meaning
1	0	Bootstrap conversationally (enables you to modify SYSGEN parameters in SYSBOOT).
2	1	Map XDELTA to a running system.
4	2	Stop at initial system breakpoint.
8	3	Perform diagnostic bootstrap.
10	4	Stop at the bootstrap breakpoints.
20	5	Omit header from secondary bootstrap image.
80	7	Prompt for the name of the secondary bootstrap file.
100	8	Halt before secondary bootstrap.
10000	16	Display debug messages during booting.
20000	17	Display user messages during booting.

Continued on next page

Example

In the following UNIX example, the boot flags are set to autoboot the system to multiuser mode when you enter the **boot** command.

```
P00>>> set boot_osflags a
```

In the following OpenVMS example, *root_number* is set to 2 and *boot_flags* is set to 1. With this setting, the system will boot from root directory SYS2.SYSEXEC to the SYSBOOT prompt when you enter the **boot** command.

```
P00>>> set boot_osflags 2,1
```

In the following OpenVMS example, *root_number* is set to 0 and *boot_flags* is set to 80. With this setting, you are prompted for the name of the secondary bootstrap file when you enter the **boot** command.

```
P00>>> set boot_osflags 0,80
```

3.1.4 ei*0_inet_init or ew*0_inet_init

The ei*0_inet_init or ew*0_inet_init environment variable determines whether the interface's internal Internet database is initialized from nvram or from a network server (through the bootp protocol).

Legal values are **nvram** and **bootp**. The default value is **bootp**. Set this environment variable if you are booting UNIX from a RIS server.

To list the network devices on your system, enter the **show device** command. The Ethernet controllers start with the letters "ei" or "ew," for example, ewa0. The third letter is the adapter ID for the specific Ethernet controller. Replace the asterisk (*) with the adapter ID letter when entering the command.

The syntax is:

```
set ei*0_inet_init value or  
set ew*0_inet_init value
```

Example

```
P00>>> set ewa0_inet_init bootp
```

3.1.5 ei*0_protocols or ew*0_protocols

The ei*0_protocols or ew*0_protocols environment variable sets network protocols for booting and other functions.

To list the network devices on your system, enter the **show device** command. The Ethernet controllers start with the letters “ei” or “ew,” for example, ewa0. The third letter is the adapter ID for the specific Ethernet controller. Replace the asterisk (*) with the adapter ID letter when entering the command.

The syntax is:

```
set ei*0_protocols protocol_value or  
set ei*0_protocols protocol_value
```

The options for *protocol_value* are:

- mop** (default) Sets the network protocol to mop (Maintenance Operations Protocol), the setting typically used with the OpenVMS operating system.
- bootp** Sets the network protocol to bootp, the setting typically used with the UNIX operating system.
- bootp,mop** When both are listed, the system attempts to use the mop protocol first, regardless of which is listed first. If not successful, it then attempts the bootp protocol.

Example

```
P00>>> show device  
.  
.  
.  
ewa0.0.0.1001.0        EWA0            08-00-2B-3E-BC-B5  
ewb0.0.0.12.0        EWB0            00-00-C0-33-E0-0D  
ewc0.0.0.13.0        EWC0            08-00-2B-E6-4B-F3  
.  
.  
.  
P00>>> set ewa0_protocols bootp  
P00>>> show ewa0_protocols  
ewa0_protocols        bootp
```

3.2 Booting Tru64 UNIX

UNIX can be booted from a CD-ROM on a local drive (a CD-ROM drive connected to the system), from a local SCSI disk, or from a UNIX RIS server.

Example 3-1 Booting UNIX from a Local SCSI Disk

```
P00>>> sho dev ❶
dka0.0.0.1.1          DKA0          RZ2ED-LS  0306
dka100.1.0.1.1       DKA100       RZ2ED-LS  0306
dka200.2.0.1.1       DKA200       RZ2DD-LS  0306
dka300.3.0.1.1       DKA300       RZ2DD-LS  0306
dkc0.0.0.1.0         DKC0         RZ2DD-LS  0306
dkc100.1.0.1.0       DKC100       RZ2DD-LS  0306
dkc200.2.0.1.0       DKC200       RZ2DD-LS  0306
dkc300.3.0.1.0       DKC300       RZ2DD-LS  0306
dqa0.0.0.15.0        DQA0         TOSHIBA CD-ROM XM-6202B 1110
dva0.0.0.1000.0      DVA0
ewa0.0.0.4.1         EWA0         00-00-F8-10-67-97
pka0.7.0.1.1         PKA0         SCSI Bus ID 7
```

```
P00>>> boot ❷
❸
(boot dka0.0.0.1.1 -flags a)
block 0 of dka0.0.0.1.1 is a valid boot block
reading 13 blocks from dka0.0.0.1.1
bootstrap code read in
base = 200000, image_start = 0, image_bytes = 1a00
initializing HWRPB at 2000
initializing page table at 1fff0000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

Tru64 UNIX boot - Thu Jan 14 15:03:19 EST 1999

Loading vmunix ...
Loading at 0xfffffc0000230000
Current PAL Revision <0x4000500010130>
Switching to OSF PALcode Succeeded
New PAL Revision <0x400050002012d>

Sizes:
text = 4836176
data = 1045600
bss = 1603520
Starting at 0xfffffc00005671e0
```

```
Loading vmunix symbol table ... [1333528 bytes]
sysconfigtab: attribute Per-proc-address-space not in subsystem proc
Alpha boot: available memory from 0x134c000 to 0x1ffee000
Tru64 UNIX V4.0F-4 (Rev. 1180); Tue Feb  2 13:00:04 EST 1999
physical memory = 512.00 megabytes.
available memory = 492.64 megabytes.
using 1958 buffers containing 15.29 megabytes of memory
Master cpu at slot 0.
Firmware revision: 5.4-5160
PALcode: Tru64 UNIX version 1.45-5
Compaq AlphaServer ES40
.
.
.
Tru64 UNIX Version V4.0F

Login:
```

Example 3–1 shows a boot from a local SCSI drive. The example is abbreviated. For complete instructions on booting UNIX, see the *Tru64 UNIX Installation Guide*.

Perform the following tasks to boot a UNIX system:

1. Power up the system. The system stops at the SRM console prompt, P00>>>.
2. Set boot environment variables, if desired. See Section 3.1.
3. Install the boot medium. For a network boot, see Section 3.2.1.
4. Enter the **show device** command ❶ to determine the unit number of the drive for your device.
5. Enter the **boot** command ❷ and command-line parameters (if you have not set the associated environment variables). In Example 3–1, boot flags ❸ have already been set.

3.2.1 Booting UNIX over the Network

To boot your UNIX system over the network, make sure the system is registered on a Remote Installation Services (RIS) server. See the UNIX document entitled *Sharing Software on a Local Area Network* for registration information.

Example 3-2 RIS Boot

```
P00>>> show device ❶
dka0.0.0.1.1          DKA0          RZ2DD-LS  0306
dka100.1.0.1.1       DKA100        RZ2DD-LS  0306
dka200.2.0.1.1       DKA200        RZ1CB-CS  0844
dkb0.0.0.3.1         DKB0          RZ25      0900
dqa0.0.0.15.0        DQA0          TOSHIBA CD-ROM XM-6302B 1012
dva0.0.0.1000.0      DVA0
ewa0.0.0.4.1         EWA0          00-00-F8-09-90-FF
ewb0.0.0.2002.1      EWB0          00-06-2B-00-25-5B
pka0.7.0.1.1         PKA0          SCSI Bus ID 7
pkb0.7.0.3.1         PKB0          SCSI Bus ID 7
P00>>> set ewa0_protocols bootp ❷
P00>>> set ewa0_inet_init bootp ❸
P00>>> boot ewa0 Da ❹
.
.
.
```

Systems running Tru64 UNIX support network adapters, designated ew*0 or ei*0. The asterisk stands for the adapter ID (a, b, c, and so on).

1. Power up the system. The system stops at the SRM console prompt, P00>>>.
2. Set boot environment variables, if desired. See Section 3.1.
3. Enter the **show device** command ❶ to determine the unit number of the drive for your device.
4. Enter the following commands. Example 3–2 assumes you are booting from ewa0. If you are booting from another drive, enter that device name instead.

```
P00>>> set ewa0_protocols bootp
P00>>> set ewa0_inet_init bootp
```

The first command ❷ enables the bootp network protocol for booting over the Ethernet controller. The second command ❸ sets the internal Internet database to initialize from the network server through the bootp protocol.

5. Enter the **boot** command ❹ and command-line parameters (if you have not set the associated environment variables). In Example 3–2 the **boot** command sets the system to boot automatically from ewa0 and specifies a full memory dump (Da) in case of a system shutdown.

For complete instructions on booting UNIX over the network, see the *Tru64 UNIX Installation Guide*.

3.3 Starting a Tru64 UNIX Installation

UNIX is installed from the CD-ROM drive connected to the system. The display that you see after you boot the CD depends on whether your system console is a VGA monitor or a serial terminal.

Example 3-3 Text-Based Installation Display

```
P00>>> b dqa0
(boot dqa0.0.0.15.0 -flags a
block 0 of dqa0.0.0.15.0 is a valid boot block
reading 16 blocks from dqa0.0.0.15.0
bootstrap code read in
base = 200000, image_start = 0, image_bytes = 2000
initializing HWRPB at 2000
initializing page table at 1fff0000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code

Tru64 UNIX boot - Thu Jan 14 15:03:19 EST 1999

Loading vmunix ...
.
.

Initializing system for Tru64 UNIX installation. Please
wait...

*** Performing CDRom Installation

Loading installation process and scanning system hardware.

Welcome to the UNIX Installation Procedure

This procedure installs UNIX onto your system. You will be
asked a series of system configuration questions. Until you
answer all questions, your system is not changed in any way.

During the question and answer session, you can go back to any
previous question and change your answer by entering: history
You can get more information about a question by entering:
help
```


There are two types of installations:

- o The Default Installation installs a mandatory set of software subsets on a predetermined file system layout.
- o The Custom Installation installs a mandatory set of software subsets plus optional software subsets that you select. You can customize the file system layout.

The UNIX Shell option puts your system in single-user mode with superuser privileges. This option is provided for experienced UNIX system administrators who want to perform file system or disk maintenance tasks before the installation.

The Installation Guide contains more information about installing UNIX.

- 1) Default Installation
- 2) Custom Installation
- 3) UNIX Shell

Enter your choice:

1. Boot the operating system from the CD-ROM drive connected to the system.
2. Follow the UNIX installation procedure that is displayed after the installation process is loaded.
 - If your system console is a VGA monitor, the X Server is started and an Installation Setup window is displayed. Click on the fields in the Installation Setup window to enter your responses to the installation procedure.
 - If your system console is a serial terminal, a text-based installation procedure is displayed, as shown in Example 3-3. Enter the choices appropriate for your system.

See the *Tru64 UNIX Installation Guide* for complete installation instructions.

3.4 Booting OpenVMS

OpenVMS can be booted from a CD-ROM on a local drive (the CD-ROM drive connected to the system) or from a CD-ROM drive on the InfoServer.

Example 3-4 Booting OpenVMS from the Local CD-ROM Drive

```
P00>>> show device ❶  
dka0.0.0.1.1          DKA0          RZ2CA-LA  NIH0  
dka100.1.0.1.1       DKA100        RZ2CA-LA  NIH0  
dqa0.0.0.15.0        DQA0          TOSHIBA CD-ROM XM-6302B  1012  
dva0.0.0.1000.0      DVA0  
ewa0.0.0.6.1         EWA0          00-00-F8-10-D6-03  
pka0.7.0.1.1         PKA0          SCSI Bus ID 7  
P00>>>
```

```
.  
.  
.
```

```
P00>>> boot -flags 0,0 dka0 ❷  
(boot dka0.0.0.1.1 -flags 0,0)  
block 0 of dka0.0.0.1.1 is a valid boot block  
reading 898 blocks from dka0.0.0.1.1  
bootstrap code read in  
base = 200000, image_start = 0, image_bytes = 70400  
initializing HWRPB at 2000  
initializing page table at 3ffee000  
initializing machine state  
setting affinity to the primary CPU  
jumping to bootstrap code
```

OpenVMS (TM) Alpha Operating System, Version V7.1-2

Example 3–4 shows a boot from a CD-ROM on a local drive. The example is abbreviated. For complete instructions on booting OpenVMS, see the OpenVMS installation document.

1. Power up the system. The system stops at the SRM console prompt, P00>>>.
2. Set boot environment variables, if desired. See Section 3.1.
3. Install the boot medium. For a network boot, see Section 3.4.1.
4. Enter the **show device** command ❶ to determine the unit number of the drive for your device.
5. Enter the **boot** command and command-line parameters (if you have not set the associated environment variables.) In Example 3–4, the **boot** command with the **-flags** option ❷ causes the system to boot from [SYS0.EXE] on device DKA0.

3.4.1 Booting OpenVMS from the InfoServer

You can boot OpenVMS from a LAN device on the InfoServer. The devices are designated EW*0 or EI*0. The asterisk stands for the adapter ID (a, b, c, and so on).

Example 3-5 InfoServer Boot

```
P00>>> show device ❶
dka0.0.0.1.1          DKA0          RZ2CA-LA  N1H0
dka100.1.0.1.1       DKA100        RZ2CA-LA  N1H0
dqa0.0.0.15.0        DQA0          TOSHIBA CD-ROM XM-6302B 1012
dva0.0.0.1000.0      DVA0
ewa0.0.0.6.1         EWA0          00-00-F8-10-D6-03
pka0.7.0.1.1         PKA0          SCSI Bus ID 7
P00>>>
.
.
.
P00>>> boot -flags 0,0 -file apb_0712 ewa0 ❷
      (boot ewa0.0.0.6.1 -file APB_0712 -flags 0,0)
Trying MOP boot.
.....
Network load complete.
Host name: CALSUN
Host address: aa-00-04-00-a4-4e
bootstrap code read in
base = 200000, image_start = 0, image_bytes = 70400
initializing HWRPB at 2000
initializing page table at 3ffee000
initializing machine state
setting affinity to the primary CPU
jumping to bootstrap code
```

Network Initial System Load Function
Version 1.2

③

```
FUNCTION          FUNCTION
ID
1      -          Display Menu
2      -          Help
3      -          Choose Service
4      -          Select Options
5      -          Stop
Enter a function ID value:
```

Enter a function ID Value: 3

④

```
OPTION          OPTION
ID
1      -          Find Services
2      -          Enter known Service Name
```

Enter an Option ID value: 2

Enter a Known Service Name: ALPHA_V71-2_SSB

OpenVMS (TM) Alpha Operating System, Version V7.1-2

1. Power up the system. The system stops at the P00>>> console prompt.
2. Insert the operating system CD-ROM into the CD-ROM drive connected to the InfoServer.
3. Enter the **show device** command ❶ to determine the unit number of the drive for your device.
4. Enter the **boot** command and any command-line parameters ❷. In Example 3-5 the device is EWA0. APB_0712 is the file name of the APB program used for the initial system load (ISL) boot program.

The InfoServer ISL program displays a menu ❸.

5. Respond to the menu prompts ❹, using the selections shown in this example.

For complete instructions on booting OpenVMS from the InfoServer, see the OpenVMS installation document.

3.5 Starting an OpenVMS Installation

After you boot the operating system CD-ROM, an installation menu is displayed on the screen. Choose item 1 (Install or upgrade OpenVMS Alpha). Refer to the OpenVMS installation document for information on creating the system disk.

Example 3-6 OpenVMS Installation Menu

OpenVMS (TM) Alpha Operating System, Version V7.1-2
Copyright © 1999 Digital Equipment Corporation. All rights reserved.

Installing required known files...

Configuring devices...

You can install or upgrade the OpenVMS Alpha operating system
or you can install or upgrade layered products that are included
on the OpenVMS Alpha operating system CD-ROM.

You can also execute DCL commands and procedures to perform
"standalone" tasks, such as backing up the system disk.

Please choose one of the following:

- 1) Install or upgrade OpenVMS Alpha Version V7.1-2
- 2) Display products that this procedure can install
- 3) Install or upgrade layered products
- 4) Show installed products
- 5) Reconfigure installed products
- 6) Remove installed products
- 7) Execute DCL commands and procedures
- 8) Shut down this system


Enter CHOICE or ? for help: (1/2/3/4/5/6/7/8/?) 1

1. **Boot the OpenVMS operating system CD-ROM.**
2. **Choose option 1 (Install or upgrade OpenVMS Alpha). To create the system disk, see the OpenVMS installation document.**

3.6 Booting Windows NT

Microsoft Windows NT is started from the AlphaBIOS boot screen.

Figure 3-1 AlphaBIOS Boot Screen

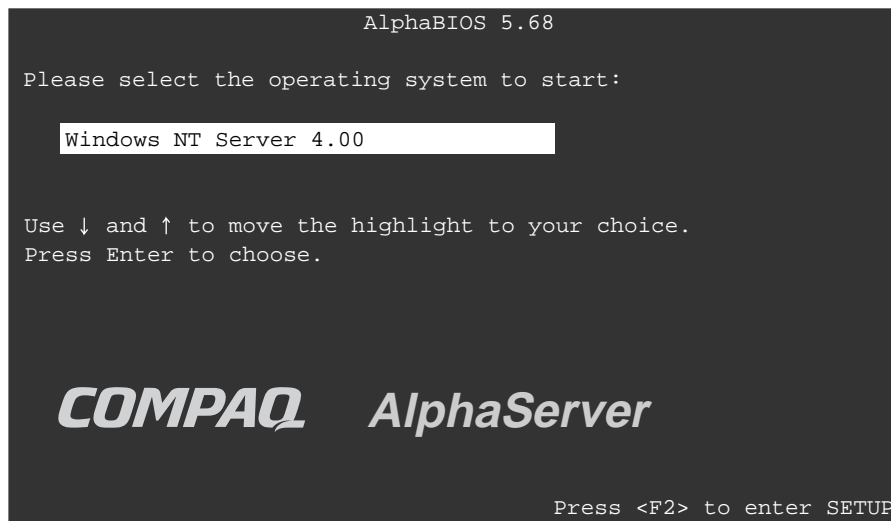

PK0949

Before You Can Boot Windows NT

- The AlphaBIOS console must be running. Windows NT systems are factory configured to start AlphaBIOS after the system has been fully initialized.
- The SRM **console** environment variable must be set to **graphics**. This is the factory setting for systems with Windows NT.

Preboot Tasks

1. Before you boot Windows NT, set the system date and time and set up the hard disks, as described in Chapter 2.
2. Perform other setup tasks, as described in Chapter 2.

Boot Procedure

The method used for booting Windows NT is determined by the Auto Start setting in the AlphaBIOS Standard CMOS Setup screen. Auto Start Enabled is the factory setting for Windows NT systems. With Auto Start enabled, press enter to start Windows NT.


If you disabled Auto Start, use the arrow keys at the boot screen to select the version of Windows NT to start. Press Enter to boot Windows NT.

NOTE: *If the system is powered up with the Halt button latched or if the RMC **halt in** command has been issued, the SRM console will not load AlphaBIOS. Release the Halt button or issue the RMC **halt out** command.*

3.7 Starting a Windows NT Installation

Windows NT is installed from CD-ROM. Insert the CD-ROM in the drive connected to the system, start AlphaBIOS Setup, select the menu item Install Windows NT, and follow the prompts.

Figure 3-2 Installing Windows NT

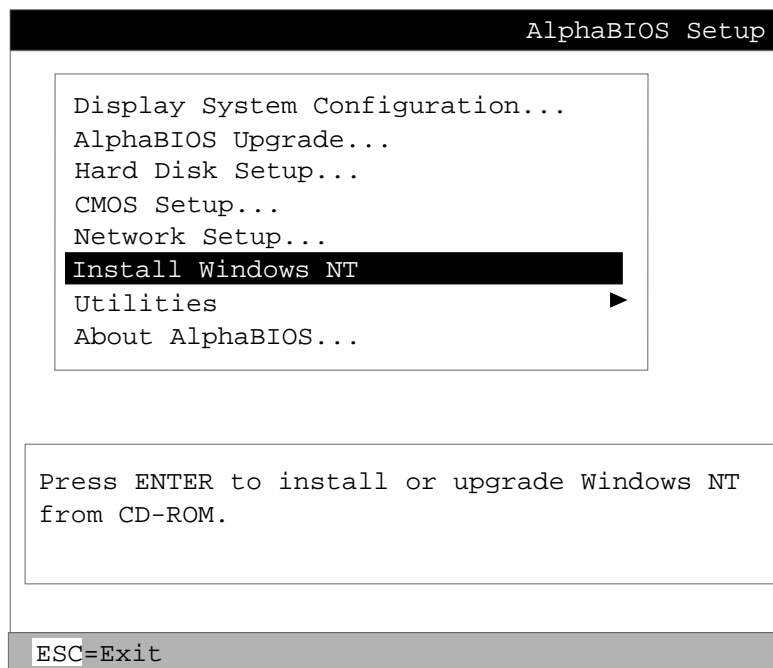

PK0922

If this is a new Windows NT installation, set the system date and time and set up the hard disk as described in Chapter 2. Then install the operating system as follows:

1. Insert the Windows NT CD into the CD-ROM drive connected to the system.
2. Start AlphaBIOS Setup.
3. Select **Install Windows NT** and press Enter.
4. Follow the prompts to complete the installation. For more information on installing Windows NT, refer to the installation guide in your Windows NT software package.

3.8 Switching Between Operating Systems

The system supports three operating systems. You can install Tru64 UNIX, OpenVMS, or Windows NT. You can also switch from one operating system to another by removing the disk for the operating system that is currently installed and installing the disk for the operating system you want to run.



WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others. These measures include:

- 1. Remove any jewelry that may conduct electricity.**
- 2. If accessing the system card cage, power down the system and wait two minutes to allow components to cool.**
- 3. Wear an anti-static wrist strap when handling internal components.**

CAUTION: *The file structures of the three operating systems are incompatible. When you switch between operating systems, you cannot read the data off disks associated with the operating system that was running previously.*

When you switch between operating systems, be sure to pull out the system and data disks for the operating systems you will not be using. Otherwise, you risk corrupting data on the system disk.

To run Windows NT on an AlphaServer ES40 system, you must use only options that are supported on Windows NT. See the Supported Options List for Compaq ProLiant Alpha 4200/4200R.

3.8.1 Switching from UNIX or OpenVMS to Windows NT

Follow this procedure if you have already installed UNIX or OpenVMS and want to switch to Windows NT.

CAUTION: *Before switching operating systems, make a note of the boot path and location of the system disk (controller, SCSI ID number, and so on) of the operating system you are removing so that you can restore that operating system at a later date.*

1. Shut down the operating system and power off the system. Unplug the power cord from each power supply.
2. Remove the enclosure panels and system covers as described in Chapter 5.
3. Remove any options that are not supported on Windows NT and replace them with supported options. See Chapter 5 for option installation procedures.
4. Remove the UNIX or OpenVMS operating system disk and insert the Windows NT system disk.
5. Plug in the power supplies and power up the system.
6. Enter the following commands at the SRM console prompt:

```
P00>>> set console graphics
P00>>> set os_type nt
P00>>> init
```
7. At the AlphaBIOS boot screen, start AlphaBIOS Setup (**F2**), select **CMOS Setup**, and press Enter. Set the system date and time.
8. In CMOS Setup, check that the setup for the floppy and other basic parameters is accurate. Set system-specific parameters, such as the memory test and password, in Advanced CMOS Setup as needed. Press **F10** to save the changes.
9. From the AlphaBIOS Setup screen select **Utilities**. In the selection box that is displayed, choose **OS Selection Setup**. Make sure the selections (boot name, boot file, and so on) are what you want. Press **F10** to save any changes.
10. Return to the boot screen and boot Windows NT.

3.8.2 Switching from Windows NT to UNIX or OpenVMS

Follow this procedure if you have already installed Windows NT and want to switch to UNIX or OpenVMS.

CAUTION: *Before switching operating systems, make a note of the boot path and location of the system disk (controller, SCSI ID number, and so on) of the operating system you are removing so that you can restore that operating system at a later date.*

1. Shut down the operating system and power off the system. Unplug the power cord from each power supply.
2. Remove the enclosure panels and system covers as described in Chapter 5.
3. Remove any options that are not supported on Tru64 UNIX or OpenVMS and replace them with supported options. See Chapter 5 for option installation procedures.
4. Remove the Windows NT system disk and insert the UNIX or OpenVMS system disk.
5. Plug in the power supplies and power up the system.
6. In AlphaBIOS, access the Advanced CMOS Setup screen and change the Console Selection to UNIX console (SRM) or OpenVMS Console (SRM), as appropriate. Press **F10** to save the change. This menu selection changes the setting of the **os_type** environment variable so that the SRM console is loaded the next time you reset your system.
7. Press the Reset button to reset the system.
8. In the SRM console, restore the boot parameters you saved previously for UNIX or OpenVMS.
9. Boot the UNIX or OpenVMS operating system.
10. Set the system date and time.

Chapter 4

Using the Remote Management Console

You can manage the system through the remote management console (RMC). The RMC is implemented through an independent microprocessor that resides on the system board. The RMC also provides configuration and error log functionality.

This chapter explains the operation and use of the RMC. Sections are:

- RMC Overview
- Operating Modes
- Terminal Setup
- Entering the RMC
- SRM Environment Variables for COM1
- RMC Command-Line Interface
- Resetting the RMC to Factory Defaults
- Troubleshooting Tips

4.1 RMC Overview

The remote management console provides a mechanism for monitoring the system (voltages, temperatures, and fans) and manipulating it on a low level (reset, power on/off, halt).

The RMC performs monitoring and control functions to ensure the successful operation of the system.

- Monitors thermal sensors on the CPUs, the PCI backplane, and the power supplies
- Monitors voltages, power supplies, and fans
- Handles hot swap of power supplies and fans
- Controls the operator control panel (OCP) display and writes status messages on the display
- Detects alert conditions such as excessive temperature, fan failure, and power supply failure. On detection, RMC displays messages on the OCP, pages an operator, and sends an interrupt to SRM or AlphaBIOS, which then passes the interrupt to the operating system or an application.
- Shuts down the system if any fatal conditions exist. For example:
 - The temperature reaches the failure limit.
 - The cover to the system card cage is removed.
 - The main fan (Fan 6) and the redundant fan (Fan 5) fail.
- Retrieves and passes information about a system shutdown to SRM or AlphaBIOS at the next power-up. SRM or AlphaBIOS displays a message regarding the last shutdown.
- Provides a command-line interface (CLI) for the user to control the system. From the CLI you can power the system on and off, halt or reset the system, and monitor the system environment.
- Passes error log information to shared RAM so that this information can be accessed by the system.

The RMC logic is implemented using an 8-bit microprocessor, PIC17C44, as the primary control device. The firmware code resides on the microprocessor and in flash memory. If the RMC firmware should ever become corrupted or obsolete, you can update it manually using a Loadable Firmware Update Utility. See Chapter 6 for details. The microprocessor can also communicate with the system power control logic to turn on or turn off power to the rest of the system.

The RMC is powered by an auxiliary 5V supply. You can gain access to the RMC as long as AC power is available to the system (through the wall outlet). Thus, if the system fails, you can still access the RMC and gather information about the failure.

Configuration, Error Log, and Asset Information


The RMC provides additional functionality to read and write configuration and error log information to FRU error log devices. These operations are carried out via shared RAM (also called dual-port RAM or DPR).

At power-on, the RMC reads the EEPROMs in the system and dumps the contents into the DPR. These EEPROMs contain configuration information, asset inventory and revision information, and error logs. During power-up the SROM sends status and error information for each CPU to the DPR. The system also writes error log information to the DPR when an error occurs. Service providers can access the contents of the DPR to diagnose system problems.

4.2 Operating Modes

The RMC can be configured to manage different data flow paths defined by the `com1_mode` environment variable. In through mode (the default), all data and control signals flow from the system COM1 port through the RMC to the active external port. You can also set bypass modes so that the signals partially or completely bypass the RMC. The `com1_mode` environment variable can be set from either SRM or the RMC. See Section 4.6.1.

Figure 4-1 Data Flow in Through Mode

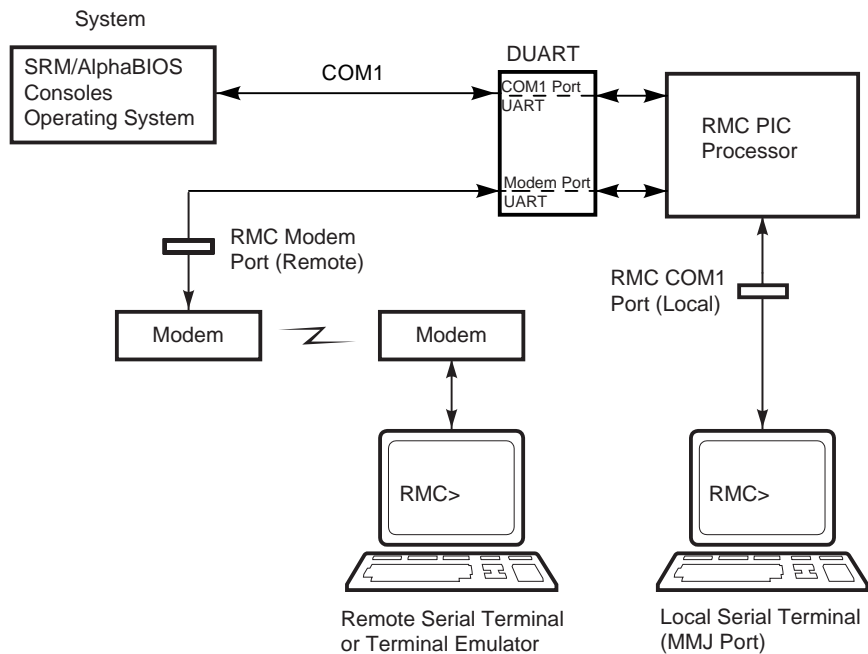

PK0908

Through Mode

Through mode is the default operating mode. The RMC routes every character of data between the internal system COM1 port and the active external port, either the local COM1 serial port (MMJ) or the 9-pin modem port. If a modem is connected, the data goes to the modem. The RMC filters the data for a specific escape sequence. If it detects the escape sequence, it enters the RMC CLI.

Figure 4–1 illustrates the data flow in through mode. The internal system COM1 port is connected to one port of the DUART chip, and the other port is connected to a 9-pin external modem port, providing full modem controls. The DUART is controlled by the RMC microprocessor, which moves characters between the two UART ports. The local MMJ port is always connected to the internal UART of the microprocessor. The escape sequence signals the RMC to enter the CLI. Data issued from the CLI is transmitted between the RMC microprocessor and the active port that enters the RMC.

NOTE: *The internal system COM1 port should not be confused with the external COM1 serial port on the back of the system. The internal COM1 port is used by the system software to send data either to the COM1 port on the system or to the RMC modem port if a modem is connected.*


Local Mode

You can set a local mode in which only the local channel can communicate with the system COM1 port. In local mode the modem is prevented from sending characters to the system COM1 port, but you can still enter the RMC from the modem.

4.2.1 Bypass Modes

For modem connection, you can set the operating mode so that data and control signals partially or completely bypass the RMC. The bypass modes are snoop, soft bypass, and firm bypass.

Figure 4-2 Data Flow in Bypass Mode

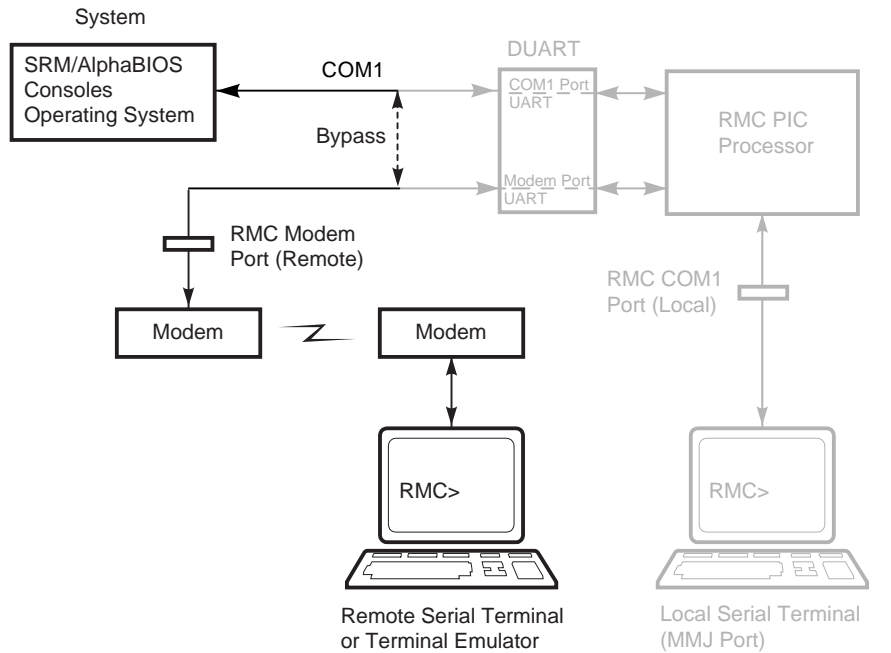

PK0908a

Figure 4–2 shows the data flow in the bypass modes. Note that the internal system COM1 port is connected directly to the modem port.

NOTE: *You can connect a serial terminal to the modem port in any of the bypass modes.*

The local terminal is still connected to the RMC and can still enter the RMC to switch the COM1 mode if necessary.

Snoop Mode

In snoop mode data partially bypasses the RMC. The data and control signals are routed directly between the system COM1 port and the external modem port, but the RMC taps into the data lines and listens passively for the RMC escape sequence. If it detects the escape sequence, it enters the RMC CLI.

The escape sequence is also passed to the system on the bypassed data lines. If you decide to change the default escape sequence, be sure to choose a unique sequence so that the system software does not interpret characters intended for the RMC.

In snoop mode the RMC is responsible for configuring the modem for dial-in as well as dial-out alerts and for monitoring the modem connectivity.

Because data passes directly between the two UART ports, snoop mode is useful when you want to monitor the system but also ensure optimum COM1 performance.

Soft Bypass Mode

In soft bypass mode all data and control signals are routed directly between the system COM1 port and the external modem port, and the RMC does not listen to the traffic on the COM1 data lines. The RMC is responsible for configuring the modem and monitoring the modem connectivity. If the RMC detects loss of carrier or the system loses power, it switches automatically into snoop mode. If you have set up the dial-out alert feature, the RMC pages the operator if an alert is detected and the modem line is not in use.

Soft bypass mode is useful if management applications need the COM1 channel to perform a binary download, because it ensures that RMC does not accidentally interpret some binary data as the escape sequence.

Continued on next page

After downloading binary files, you can set the **com1_mode** environment variable from the SRM console to switch back to snoop mode or other modes for accessing the RMC, or you can hang up the current modem session and reconnect it.

Firm Bypass Mode


In firm bypass mode all data and control signals are routed directly between the system COM1 port and the external modem port. The RMC does not configure or monitor the modem. Firm bypass mode is useful if you want the system, not the RMC, to fully control the modem port and you want to disable RMC remote management features such as remote dial-in and dial-out alert.

You can switch to other modes by resetting the **com1_mode** environment variable from the SRM console, but you must then set up the RMC again from the local terminal.

4.3 Terminal Setup

You can use the RMC from a modem hookup or the serial terminal connected to the system. As shown in Figure 4-3, a modem is connected to the dedicated 9-pin modem port ❶ and a terminal is connected to the COM1 serial port/terminal port (MMJ) ❷.

Figure 4-3 Setup for RMC (Tower View)

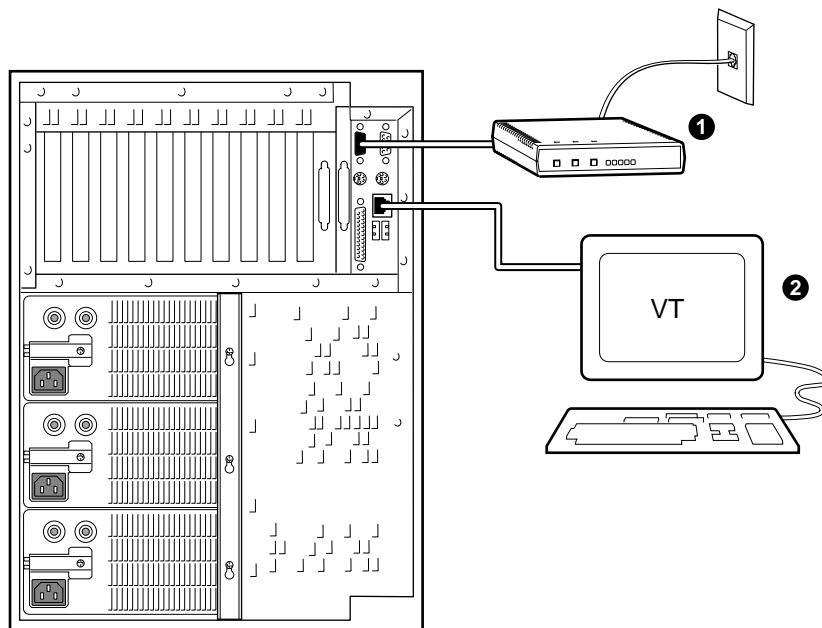

PK0934

4.4 Entering the RMC

You type an escape sequence to invoke the RMC. You can enter RMC from any of the following: a modem, the local serial console terminal, the local VGA monitor, or the system. The “system” includes the operating system, SRM, AlphaBIOS, or an application.

- You can enter the RMC from the local terminal regardless of the current operating mode.
 - You can enter the RMC from the modem if the RMC is in through mode, snoop mode, or local mode. In snoop mode the escape sequence is passed to the system and displayed.
-

NOTE: *Only one RMC session can be active at a time.*

Entering from a Serial Terminal

Invoke the RMC from a serial terminal by typing the following default escape sequence:

```
^[^[ rmc
```

This sequence is equivalent to typing Ctrl/left bracket, Ctrl/left bracket, rmc. On some keyboards, the Esc key functions like the Ctrl/left bracket combination.

To exit, enter the **quit** command. This action returns you to whatever you were doing before you invoked the RMC. In the following example, the **quit** command returns you to the system COM1 port.

```
RMC> quit  
Returning to COM port
```


Entering from the Local VGA Monitor

To enter the RMC from the local VGA monitor, the **console** environment variable must be set to **graphics**.

Invoke the SRM console and enter the **rmc** command.

```
P00>>> rmc
You are about to connect to the Remote Management Console.
Use the RMC reset command or press the front panel reset
button to disconnect and to reload the SRM console.
Do you really want to continue? [y/(n)] y
Please enter the escape sequence to connect to the Remote
Management Console.
```

After you enter the escape sequence, the system enters the CLI and the RMC> prompt is displayed.

When the RMC session is completed, reset the system with the Reset button on the operator control panel or issue the RMC **reset** command.

```
RMC> reset
Returning to COM port
```

4.5 SRM Environment Variables for COM1

Several SRM environment variables allow you to set up the COM1 serial port (MMJ) for use with the RMC.

You may need to set the following environment variables from the SRM console, depending on how you decide to set up the RMC.

com1_baud	Sets the baud rate of the COM1 serial port and the modem port. The default is 9600.
com1_flow	Specifies the flow control on the serial port. The default is software .
com1_mode	Specifies the COM1 data flow paths so that data either flows through the RMC or bypasses it. This environment variable can be set from either the SRM or the RMC.
com1_modem	Specifies to the operating system whether or not a modem is present.

See the *Compaq AlphaServer ES40 User Interface Guide* for information on setting SRM environment variables.

4.6 RMC Command-Line Interface

The remote management console supports setup commands and commands for managing the system.

The RMC commands are listed below.

clear {alert, port}
deposit
disable {alert, remote}
dump
enable {alert, remote}
env
halt {in, out}
hangup
help or ?
power {on, off}
quit
reset
send alert
set {alert, com1_mode, dial, escape, init, logout, password, user}
status

NOTE: *The **deposit** and **dump** commands are reserved for service providers.*

For an RMC commands reference, see the *Compaq AlphaServer ES40 User Interface Guide*.

Continued on next page

Command Conventions

Observe the following conventions for entering RMC commands:

- Enter enough characters to distinguish the command.

NOTE: *The **reset** and **quit** commands are exceptions. You must enter the entire string for these commands to work.*

- For commands consisting of two words, enter the entire first word and at least one letter of the second word. For example, you can enter **disable a** for **disable alert**.
- For commands that have parameters, you are prompted for the parameter.
- Use the Backspace key to erase input.
- If you enter a nonexistent command or a command that does not follow conventions, the following message is displayed:

```
*** ERROR - unknown command ***
```
- If you enter a string that exceeds 14 characters, the following message is displayed:

```
*** ERROR - overflow ***
```
- Use the Backspace key to erase input.

4.6.1 Defining the COM1 Data Flow

Use the set com1_mode command from SRM or RMC to define the COM1 data flow paths.

You can set **com1_mode** to one of the following values:

through	All data passes through RMC and is filtered for the escape sequence. This is the default.
snoop	Data partially bypasses RMC, but RMC taps into the data lines and listens passively for the escape sequence.
soft_bypass	Data bypasses RMC, but RMC switches automatically into snoop mode if loss of carrier occurs.
firm_bypass	Data bypasses RMC. RMC remote management features are disabled.
local	Changes the focus of the COM1 traffic to the local MMJ port if RMC is currently in one of the bypass modes or is in through mode with an active remote session.

Example

```
RMC> set com1_mode  
Com1_mode (THROUGH, SNOOP, SOFT_BYPASS, FIRM_BYPASS, LOCAL): local
```

NOTE: *For more details, see the Compaq AlphaServer ES40 User Interface Guide.*

4.6.2 Displaying the System Status

The RMC status command displays the current RMC settings. Table 4-1 explains the status fields.

```
RMC> status
PLATFORM STATUS
On-Chip Firmware Revision: V1.0
Flash Firmware Revision: V1.2
Server Power: ON
System Halt: Deasserted
RMC Power Control: ON
Escape Sequence: ^^[RMC
Remote Access: Enabled
RMC Password: set
Alert Enable: Disabled
Alert Pending: YES
Init String: AT&F0E0V0X0S0=2
Dial String: ATXDT9,15085553333
Alert String: ,,,,,,5085553332#;
Com1_mode: THROUGH
Last Alert: CPU door opened
Logout Timer: 20 minutes
User String:
```

Table 4–1 Status Command Fields

Field	Meaning
On-Chip Firmware Revision:	Revision of RMC firmware on the microcontroller.
Flash Firmware Revision:	Revision of RMC firmware in flash ROM.
Server Power:	ON = System is on. OFF = System is off.
System Halt:	Asserted = System has been halted. Deasserted = Halt has been released.
RMC Power Control:	ON= System has powered on from RMC. OFF = System has powered off from RMC.
Escape Sequence:	Current escape sequence for access to RMC console.
Remote Access:	Enabled = Modem for remote access is enabled. Disabled = Modem for remote access is disabled.
RMC Password:	Set = Password set for modem access. Not set = No password set for modem access.
Alert Enable:	Enabled = Dial-out enabled for sending alerts. Disabled = Dial-out disabled for sending alerts.
Alert Pending:	YES = Alert has been triggered. NO = No alert has been triggered.
Init String:	Initialization string that was set for modem.
Dial String:	Pager string to be dialed when an alert occurs.
Alert String:	Identifies the system that triggered the alert to the paging service. Usually the phone number of the monitored system.
Com1_mode:	Identifies the current COM1 mode.
Last Alert:	Type of alert (for example, power supply 1 failed).
Logout Timer:	The amount of time before the RMC terminates an inactive modem connection. The default is 20 minutes.
User String:	Notes supplied by user.

4.6.3 Displaying the System Environment

The RMC env command provides a snapshot of the system environment.

```
RMC> env
```

```
System Hardware Monitor
```

```
Temperature (warnings at 45.0°C, power-off at 50.0°C)
```

```
CPU0: 26.0°C   CPU1: 26.0°C   CPU2: 27.0°C   CPU3: 26.0°C  
Zone0: 29.0°C   Zone1: 30.0°C   Zone2: 31.0°C
```

```
Fan RPM
```

```
Fan1: 2295   Fan2: 2295   Fan3: 2205  
Fan4: 2235   Fan5: OFF    Fan6: 2518
```

```
Power Supply(OK, FAIL, OFF, '----' means not present)
```

```
PS0 : OK     PS1 : OK     PS2 : ----
```

```
CPU0: OK     CPU1: OK     CPU2: OK     CPU3: OK
```

```
CPU CORE voltage
```

```
CPU0: +2.192V   CPU1: +2.192V   CPU2: +2.192V   CPU3: +2.192V
```

```
CPU IO voltage
```

```
CPU0: +1.488V   CPU1: +1.488V   CPU2: +1.488V   CPU3: +1.488V
```

```
Bulk voltage
```

```
+3.3V Bulk: +3.328V   +5V Bulk: +5.076V   +12V Bulk: +12.096V  
Vterm: +1.824V       Cterm: +2.000V     -12V Bulk: -12.480V
```

①

②

③

④

⑤

⑥

- ❶ CPU temperature. In this example four CPUs are present.
- ❷ Temperature of PCI backplane: Zone 0 includes PCI slots 1–3, Zone 1 includes PCI slots 7–10, and Zone 2 includes PCI slots 4–6.
- ❸ Fan RPM. With the exception of Fan 5, all fans are powered as long as the system is powered on. Fan 5 is OFF unless Fan 6 fails.
- ❹ The normal power supply status is either OK (system is powered on) or OFF (system is powered off or the power supply cord is not plugged in). FAIL indicates a problem with a supply.
- ❺ CPU CORE voltage and CPU I/O voltage. In a healthy system, the core voltage for all CPUs should be the same, and the I/O voltage for all CPUs should be the same.
- ❻ Bulk power supply voltage.

4.6.4 Power On and Off, Reset, and Halt

The RMC power {on, off}, halt {in, out}, and reset commands perform the same functions as the buttons on the operator control panel.

Power On and Power Off

The RMC **power on** command powers the system on, and the **power off** command powers the system off. The Power button on the OCP, however, has precedence.

- If the system has been powered off with the Power button, the RMC cannot power the system on. If you enter the **power on** command, the message “Power button is OFF” is displayed, indicating that the command will have no effect.
- If the system has been powered on with the Power button, and the **power off** command is used to turn the system off, you can toggle the Power button to power the system back on.

When you issue the **power on** command, the terminal exits RMC and reconnects to the server’s COM1 port.

```
RMC> power on
Returning to COM port
RMC> power off
```

Halt In and Halt Out

The **halt in** command halts the system. The **halt out** command releases the halt. When you issue either the **halt in** or **halt out** command, the terminal exits RMC and reconnects to the server's COM1 port.

```
RMC> halt in
Returning to COM port
RMC> halt out
Returning to COM port
```

The **halt out** command cannot release the halt if the Halt button is latched in. If you enter the **halt out** command, the message "Halt button is IN" is displayed, indicating that the command will have no effect. Toggling the Power button on the operator control panel overrides the **halt in** condition.

Reset

The RMC **reset** command restarts the system. The terminal exits RMC and reconnects to the server's COM1 port.

```
RMC> reset
Returning to COM port
```

4.6.5 Configuring Remote Dial-In

Before you can dial in through the RMC modem port or enable the system to call out in response to system alerts, you must configure RMC for remote dial-in.

Connect your modem to the 9-pin modem port and turn it on. Enter the RMC from either the local serial terminal or the local VGA monitor to set up the parameters.

Example 4-1 Dial-In Configuration

```
RMC> set password ❶
RMC Password: ****
Verification: ****
RMC> set init ❷
Init String: AT&F0E0V0X0S0=2
RMC> enable remote ❸
RMC> status ❹
.
.
Remote Access: Enabled
.
.
.
```

NOTE: *The following modems require the initialization strings shown here. For other modems, see your modem documentation.*

Modem	Initialization String
Motorola 3400 Lifestyle 28.8	AT&F0E0V0X0S0=2
AT &T Dataport 14.4/FAX	AT&F0E0V0X0S0=2
Hayes Smartmodem Optima 288 V-34/V.FC + FAX	AT&FE0V0X0S0=2

- ❶ Sets the password that is prompted for at the beginning of a modem session. The string cannot exceed 14 characters and is not case sensitive. For security, the password is not echoed on the screen. When prompted for verification, type the password again.
- ❷ Sets the initialization string. The string is limited to 31 characters and can be modified depending on the type of modem used. Because the modem commands disallow mixed cases, the RMC automatically converts all alphabetic characters entered in the init string to uppercase.

The RMC automatically configures the modem's flow control according to the setting of the SRM **com1_flow** environment variable. The RMC also enables the modem carrier detect feature to monitor the modem connectivity.
- ❸ Enables remote access to the RMC modem port by configuring the modem with the setting stored in the initialization string.
- ❹ Verifies the settings. Check that the Remote Access field is set to Enabled.

Dialing In

The following example shows the screen output when a modem connection is established.

```

ATDT915085553333
RINGING
RINGING
CONNECT 9600/ARQ/V32/LAPM
RMC Password: *****
Welcome to RMC V1.2
P00>>> ^[^[rmc
RMC>

```

1. At the RMC> prompt, enter commands to monitor and control the remote system.
2. When you have finished a modem session, enter the **hangup** command to cleanly terminate the session and disconnect from the server.

4.6.6 Configuring Dial-Out Alert

When you are not monitoring the system from a modem connection, you can use the RMC dial-out alert feature to remain informed of system status. If dial-out alert is enabled, and the RMC detects alarm conditions within the managed system, it can call a preset pager number.

You must configure remote dial-in for the dial-out feature to be enabled. See Section 4.6.5.

To set up the dial-out alert feature, enter the RMC from the local serial terminal or local VGA monitor.

Example 4-2 Dial-Out Alert Configuration

```
RMC> set dial ❶  
Dial String: ATXDT9,15085553333  
RMC> set alert ❷  
Alert String: ,,,,,,5085553332#;  
RMC> enable alert ❸  
RMC> clear alert ❹  
RMC> send alert ❺  
Alert detected!  
RMC> clear alert ❻  
RMC> status ❼  
.   
.   
Alert Enable: Enabled   
.   
.
```

A typical alert situation might be as follows:

- The RMC detects an alarm condition, such as over temperature warning.
- The RMC dials your pager and sends a message identifying the system.
- You dial the system from a remote serial terminal.
- You enter the RMC, check system status with the **env** command, and, if the situation requires, power down the managed system.
- When the problem is resolved, you power up and reboot the system.

The elements of the dial string and alert string are shown in Table 4–2. Paging services vary, so you need to become familiar with the options provided by the paging service you will be using. The RMC supports only numeric messages.

- ❶ Sets the string to be used by the RMC to dial out when an alert condition occurs. The dial string must include the appropriate modem commands to dial the number.
- ❷ Sets the alert string, typically the phone number of the modem connected to the remote system. The alert string is appended after the dial string, and the combined string is sent to the modem when an alert condition is detected.
- ❸ Enables the RMC to page a remote system operator.
- ❹ Clears any alert that may be pending. This ensures that the **send alert** command will generate an alert condition.
- ❺ Forces an alert condition. This command is used to test the setup of the dial-out alert function. It should be issued from the local serial terminal or local VGA monitor. As long as no one connects to the modem and there is no alert pending, the alert will be sent to the pager immediately. If the pager does not receive the alert, re-check your setup.
- ❻ Clears the current alert so that the RMC can capture a new alert. The last alert is stored until a new event overwrites it. The Alert Pending field of the **status** command becomes NO after the alert is cleared.
- ❼ Verifies the settings. Check that the Alert Enable field is set to Enabled.

NOTE: *If you do not want dial-out paging enabled at this time, enter the **disable alert** command after you have tested the dial-out alert function. Alerts continue to be logged, but no paging occurs.*

Continued on next page

Table 4-2 Elements of Dial String and Alert String

Dial String	
	The dial string is case sensitive. The RMC automatically converts all alphabetic characters to uppercase.
ATXDT	AT = Attention. X = Forces the modem to dial "blindly" (not seek the dial tone). Enter this character if the dial-out line modifies its dial tone when used for services such as voice mail. D = Dial T = Tone (for touch-tone)
9,	The number for an outside line (in this example, 9). Enter the number for an outside line if your system requires it. , = Pause for 2 seconds.
15085553333	Phone number of the paging service.
Alert String	
,,,,,,	Each comma (,) provides a 2-second delay. In this example, a delay of 12 seconds is set to allow the paging service to answer.
5085553332#	A call-back number for the paging service. The alert string must be terminated by the pound (#) character.
;	A semicolon (;) must be used to terminate the entire string.

4.6.7 Resetting the Escape Sequence

The RMC set escape command sets a new escape sequence.

The new escape sequence can be any character string, not to exceed 14 characters. A typical sequence consists of two or more control characters. It is recommended that control characters be used in preference to ASCII characters. Use the **status** command to verify the new escape sequence before exiting the RMC.

The following example consists of two instances of the Esc key and the letters “FUN.” The “F” is not displayed when you set the sequence because it is preceded by the escape character. Enter the **status** command to see the new escape sequence.

```
RMC> set escape
Escape Sequence: un
RMC> status
.
.
.
Escape Sequence: ^^[^FUN
```

CAUTION: *Be sure to record the new escape sequence. Restoring the default sequence requires moving a jumper on the system board.*

4.7 Resetting the RMC to Factory Defaults

If the non-default RMC escape sequence has been lost or forgotten, RMC must be reset to factory settings to restore the default escape sequence.




WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.

The following procedure restores the default settings:

1. Shut down the operating system and press the Power button on the operator control panel to the OFF position.
2. Unplug the power cord from each power supply. Wait until the +5V Aux LEDs on the power supplies go off before proceeding.
3. Remove enclosure panels as described in Chapter 5.
4. Remove the system card cage cover and fan cover from the system chassis, as described in Chapter 5.
5. Remove CPU1 as described in Chapter 5.
6. On the system board, install jumper J25 over pins 1 and 2. See Figure 4-4 for the location of J25. (The default jumper positions are shown.)

Figure 4-4 RMC Jumpers (Default Positions)

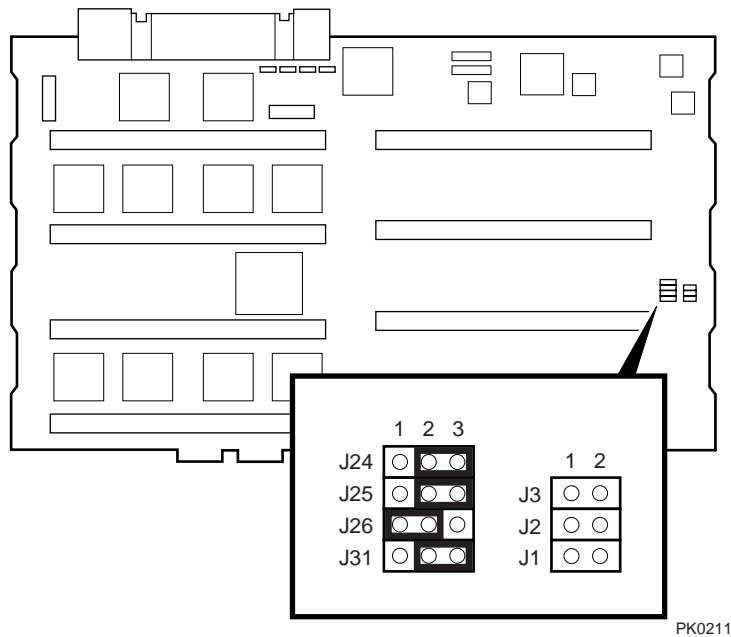

7. Plug a power cord into one power supply, and then wait until the control panel displays the message “System is down.”
8. Unplug the power cord. Wait until the +5V Aux LED on the power supply goes off before proceeding.
9. Install jumper J25 over pins 2 and 3.
10. Reinstall CPU1, the card cage cover and fan cover and the enclosure panels.
11. Plug the power cord into each of the power supplies.

NOTE: After the RMC has been reset to defaults, perform the setup procedures to enable remote dial-in and call-out alerts. See Section 4.6.5.

4.8 Troubleshooting Tips

Table 4-3 lists possible causes and suggested solutions for symptoms you might see.

Table 4-3 RMC Troubleshooting

Symptom	Possible Cause	Suggested Solution
You cannot enter the RMC from the modem.	The RMC may be in soft bypass or firm bypass mode.	Issue the show com1_mode command from SRM and change the setting if necessary. If in soft bypass mode, you can disconnect the modem session and reconnect it.
The terminal cannot communicate with the RMC correctly.	System and terminal baud rates do not match.	Set the baud rate for the terminal to be the same as for the system. For first-time setup, suspect the console terminal, since the RMC and system default baud is 9600.
RMC will not answer when the modem is called.	Modem cables may be incorrectly installed.	Check modem phone lines and connections.
	RMC remote access is disabled or the modem was power cycled since last being initialized.	From the local serial terminal or VGA monitor, enter the set password and set init commands, and then enter the enable remote command.
	The modem is not configured correctly.	Modify the modem initialization string according to your modem documentation.

Table 4–3 RMC Troubleshooting (Continued)

Symptom	Possible Cause	Suggested Solution
RMC will not answer when modem is called. (continued from previous page)	On AC power-up, RMC defers initializing the modem for 30 seconds to allow the modem to complete its internal diagnostics and initializations.	Wait 30 seconds after powering up the system and RMC before attempting to dial in.
After the system is powered up, the COM1 port seems to hang or you seem to be unable to execute RMC commands.	There is a normal delay while the RMC completes the system power-on sequence.	Wait about 40 seconds.
New escape sequence is forgotten.		RMC console must be reset to factory defaults.
During a remote connection, you see a “+++” string on the screen.	The modem is confirming whether the modem has really lost carrier. This is normal behavior.	
The message “unknown command” is displayed when you enter a carriage return by itself.	The terminal or terminal emulator is including a line feed character with the carriage return.	Change the terminal or terminal emulator setting so that “new line” is not selected.

Chapter 5


Configuring and Installing Components

This chapter shows how to configure and install components in a tower or pedestal system. Installation of components in a rackmount system is reserved for service providers and self-maintenance customers.



WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others. These measures include:

- 1. Remove any jewelry that may conduct electricity.**
- 2. If accessing the system card cage, power down the system and wait 2 minutes to allow components to cool.**
- 3. Wear an anti-static wrist strap when handling internal components.**



WARNING: To prevent injury, unplug the power cord from each power supply before installing components.

Installation Tools


You need the following tools to install components.

- Phillips #2 screwdriver (a magnetic screwdriver is recommended)
- Allen wrench (3 mm)
- Anti-static wrist strap

5.1 Removing Enclosure Panels

Open and remove the front door. Loosen the screws that allow you to remove the top and side panels.

Figure 5-1 Enclosure Panel Removal (Tower)

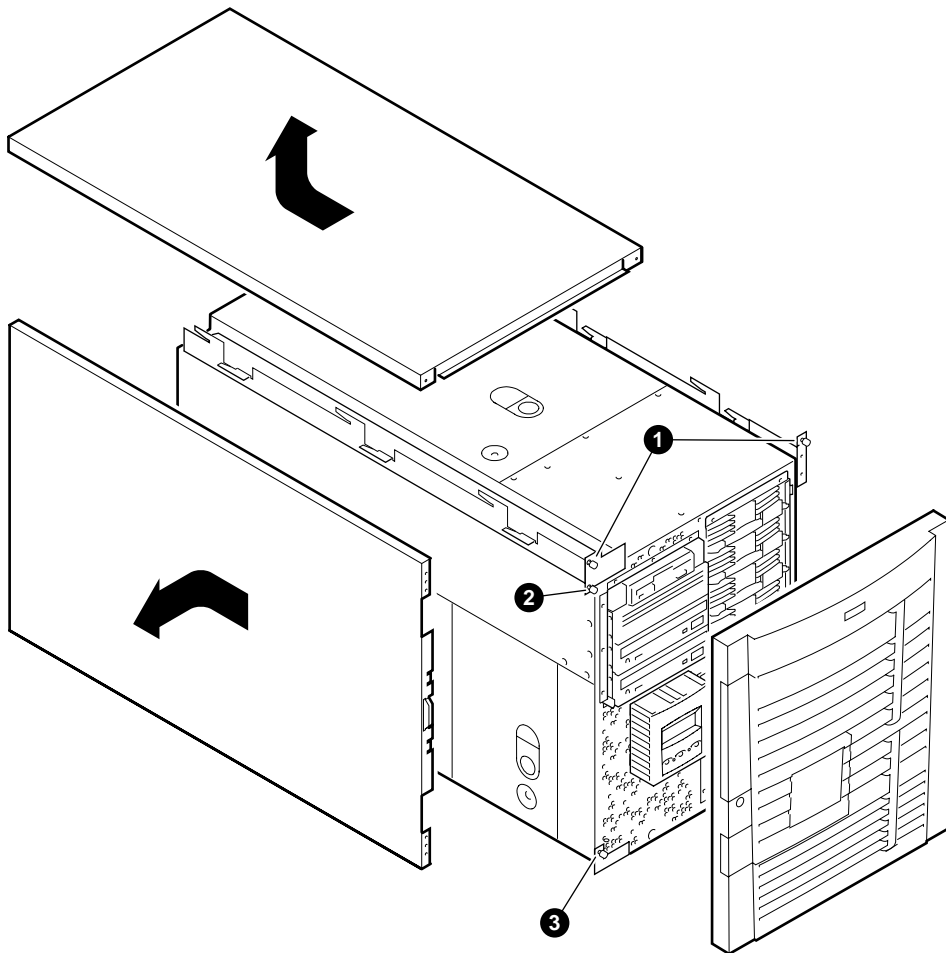


PK0221

To Remove Enclosure Panels from a Tower

The enclosure panels are secured by captive screws.

1. Remove the front door.
2. To remove the top panel, loosen the top left and top right screws ❶. Slide the top panel back and lift it off the system.
3. To remove the left panel, loosen the screw ❷ at the top and the screw ❸ at the bottom. Slide the panel back and then tip it outward. Lift it off the system.
4. Go to Section 5.2 for instructions on removing covers from the system chassis.

Figure 5-2 Enclosure Panel Removal (Pedestal)

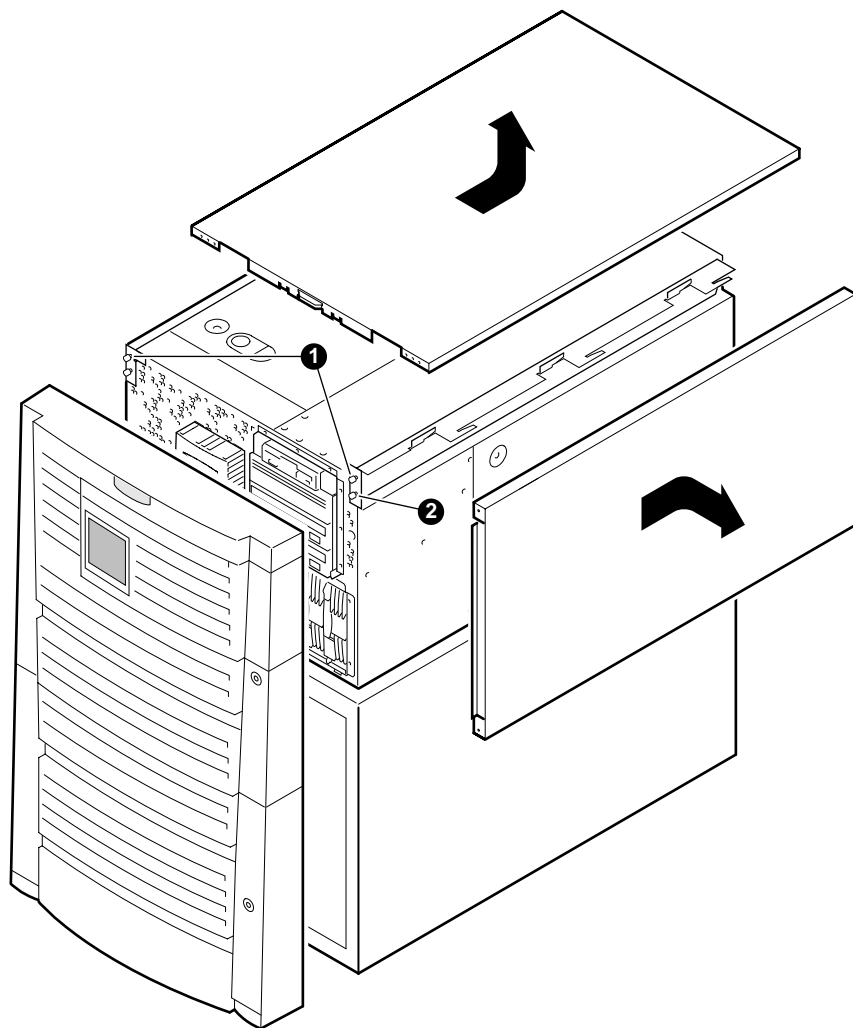

PK0234

To Remove Enclosure Panels from a Pedestal

The enclosure panels are secured by captive screws.

1. Open and remove the front doors.
2. To remove the top enclosure panel, loosen the captive screws shown in ❶. Slide the top panel back and lift it off the system.
3. To remove the right enclosure panel, loosen the captive screw shown in ❷. Slide the panel back and then tip it outward. Lift the panel from the three tabs.
4. Go to Section 5.2 for instructions on removing covers from the system chassis.

5.2 Removing Covers from the System Chassis



WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.



=== V @ >240VA

WARNING: High current area. Currents exceeding 240 VA can cause burns or eye injury. Avoid contact with parts or remove power prior to access.




WARNING: Contact with moving fan can cause severe injury to fingers. Avoid contact or remove power prior to access.

Figure 5-3 and Figure 5-4 show the location and removal of covers on the tower and pedestal/rackmount systems, respectively. The numbered callouts in the illustrations correspond to the following:


- ❶ 3mm Allen captive quarter-turn screw that secures each cover.
- ❷ Spring-loaded ring that releases cover. Each cover has a pull-up ring.
- ❸ Fan area cover. This area contains the main system fan and a redundant fan.
- ❹ System card cage cover. This area contains CPUs and memory DIMMs. To remove the system card cage cover, you must first remove the fan area cover ❸. An interlock switch shuts the system down when you remove the system card cage cover.
- ❺ PCI card cage cover. This area contains PCI cards and four fans.

Figure 5-3 Removing Covers from a Tower

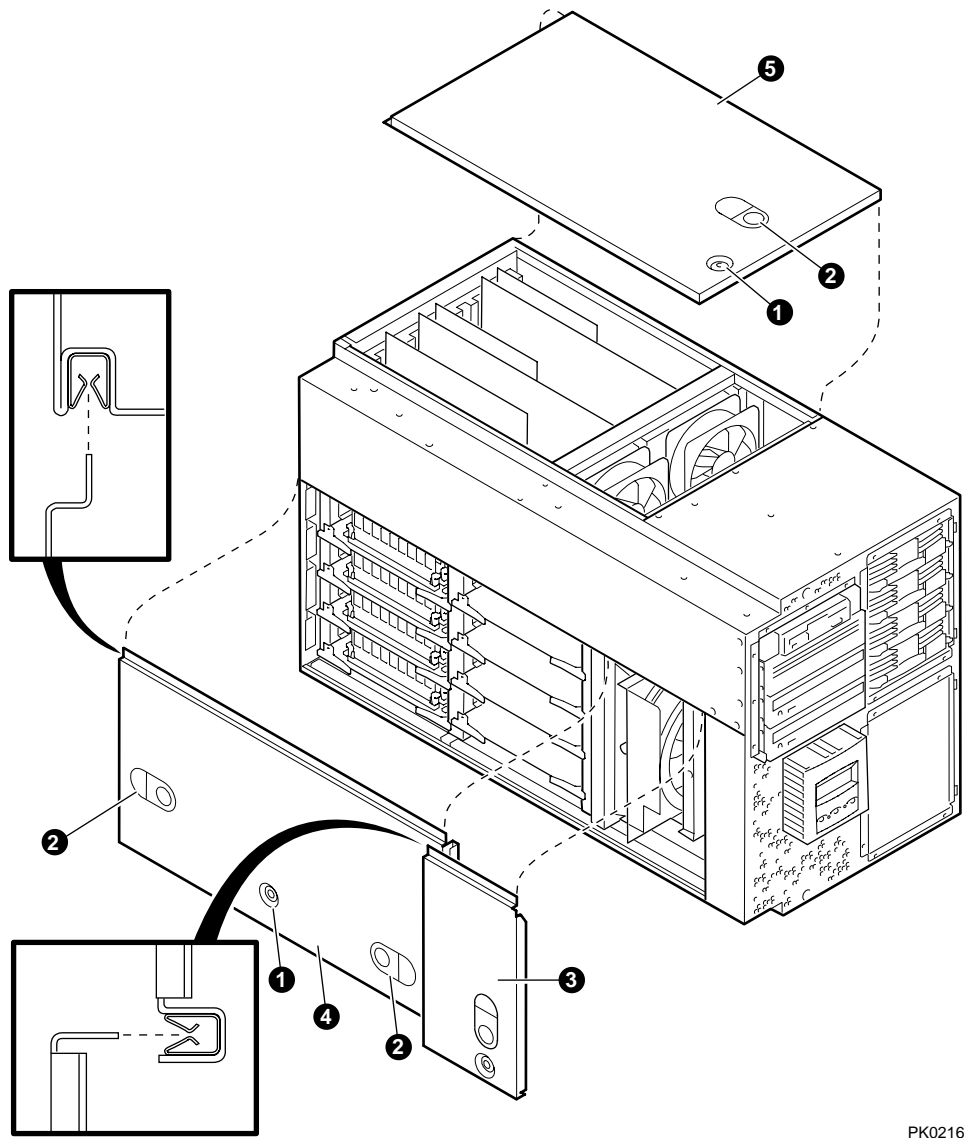

PK0216

Figure 5-4 Removing Covers from a Pedestal/Rack

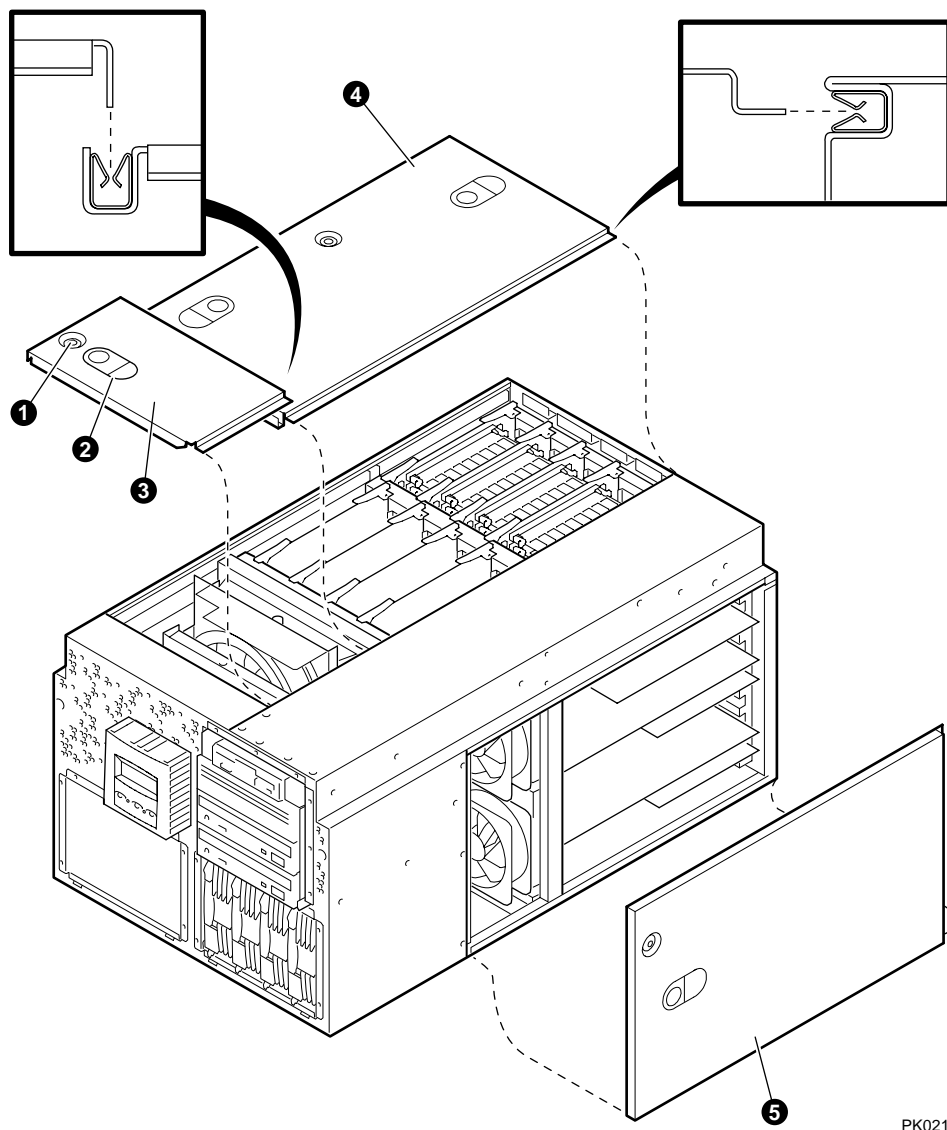

PK0215

5.3 Hot-Plug Components

Power supplies and hard drives are hot-plug components. You can install these components without interrupting the operation of the system.




WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others. These measures include the following:

- 1. Remove any jewelry that may conduct electricity.**
- 2. If accessing the system card cage, power down the system and wait 2 minutes to allow components to cool.**
- 3. Wear an anti-static wrist strap when handling internal components.**

5.4 Power Supply Configuration

You can add a power supply for redundancy at any time.

Figure 5-5 Power Supply Locations

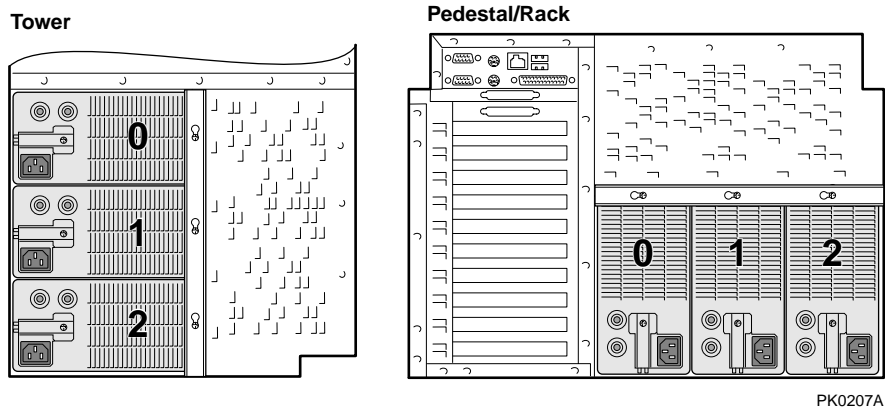

The system can have the following power configurations:

Single Power Supply. A single power supply is provided with entry-level systems, such as a system configured with:

- One or two CPUs
- One storage cage


Two Power Supplies. Two power supplies are required if the system has more than two CPUs or if the system has a second storage cage.

Redundant Power Supply. If one power supply fails, the redundant supply provides power and the system continues to operate normally. A second power supply adds redundancy for an entry-level system such as the system described under “Single Power Supply.” A third power supply adds redundancy for a system that requires two power supplies.

Recommended Installation Order. Generally, power supply 0 is installed first, power supply 1 second, and power supply 2 third, but the supplies can be installed in any order. See Figure 5-5. The power supply numbering corresponds to the numbering displayed by the SRM **show power** command.

5.5 Removing and Replacing Power Supplies

Figure 5-6 Installing a Power Supply (Pedestal/Rack View)

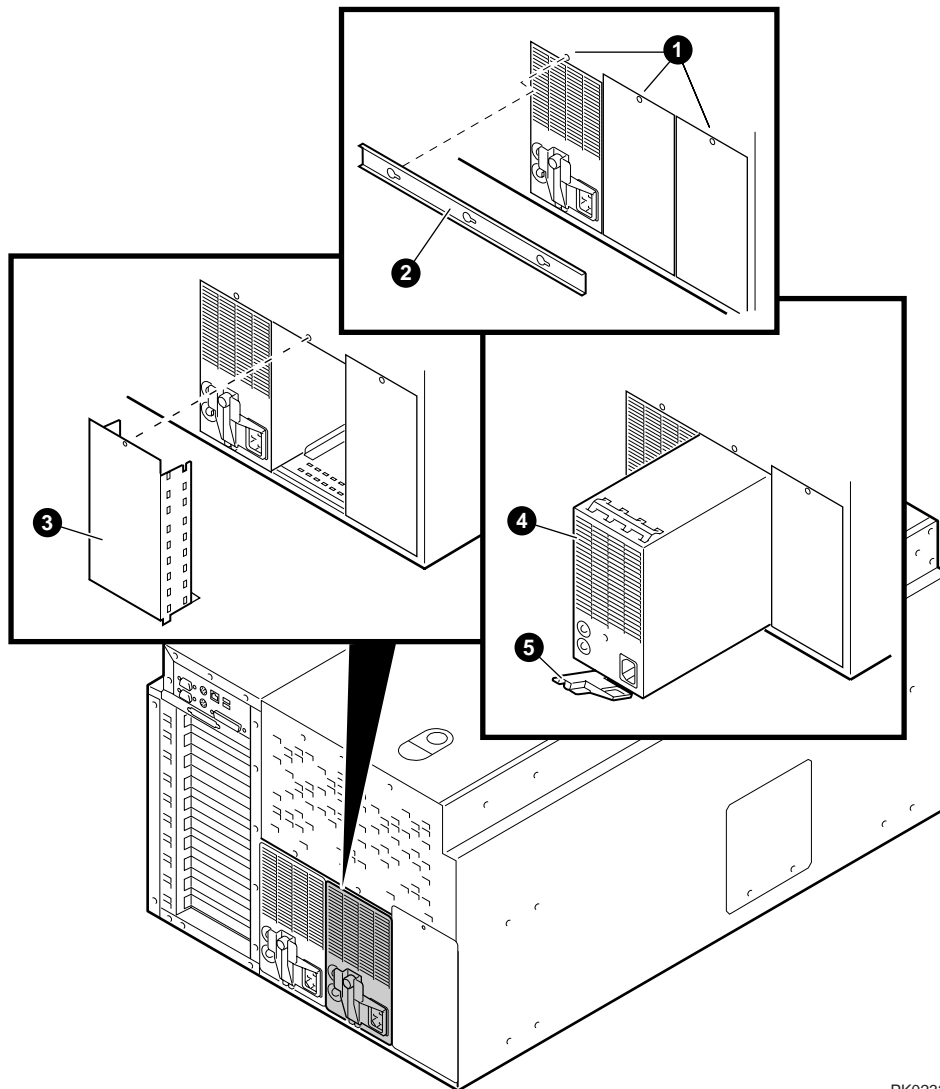

PK0232

1. Loosen the three Phillips screws ❶ that secure the power supply bracket. (There is no need to remove the screws.) Remove the bracket ❷.
2. If you are installing a new supply, remove the screw and blank cover ❸. If you are replacing a power supply, release the latch ❹ on the supply and pull the supply out of the system.
3. Insert and seat the new power supply ❺.
4. Swing the latch ❻ to lock the power supply into place. Tighten the captive screw on the latch.
5. Plug the AC power cord into the supply. Wait a few seconds for the POK LED to light.


Verification

Check that both power supply LEDs are lit.

5.6 Installing a Hard Drive

You can install a hard drive while the system is running.

Figure 5-7 Installing a Hard Drive (Tower View)

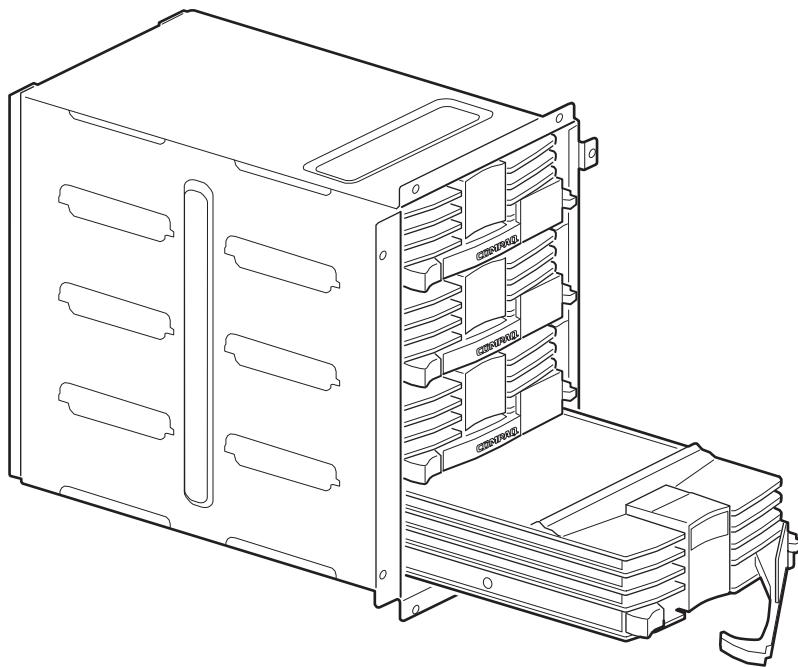

PK0938

1. Unlock the front door to access the storage drive area.
2. Remove a blank bezel for the next available slot.
3. Release the plastic handle on the front of the drive carrier. Align the drive in the slot and push it into place. Push in the handle to secure the drive.

Verification — SRM Console

The SRM console polls for SCSI devices every 30 seconds. If the device does not appear to be working, access the SRM console and enter the **show device** command to view a list of the bootable devices.

5.7 Non-Hot-Plug Components

CPUs, memory DIMMs, PCI cards, and removable media devices are not hot-plug components. You must shut down the operating system, turn off power to the system, and unplug the power cord from each supply before installing these components.



WARNING: To prevent injury, unplug the power cord from each power supply before installing components.


Follow the procedure below before installing CPUs, memory DIMMs, PCI cards, or removable media devices:

1. Shut down the operating system according to the instructions in the operating system documentation.
2. Shut down power on all external options connected to the system.
3. Shut down power to the system.
4. Unplug the power cord from each power supply.
5. Become familiar with the location of the module slots and any configuration rules.

5.8 CPU Configuration


Before installing additional CPUs, become familiar with the location of the CPU slots and the configuration rules.

Figure 5-8 CPU Slot Locations (Pedestal/Rack View)

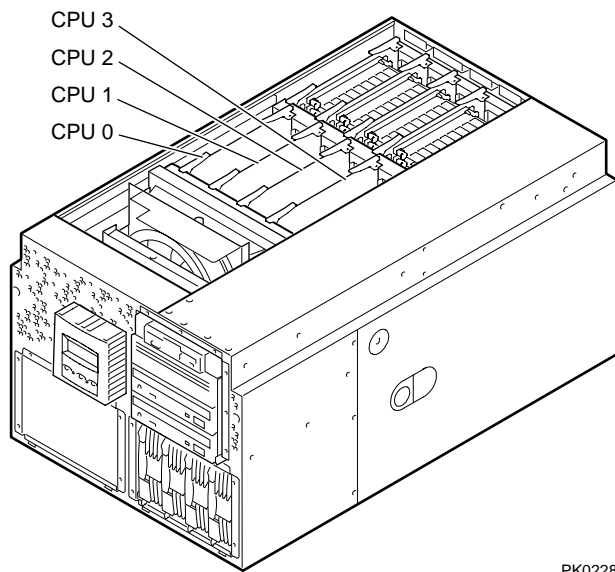

PK0228

Figure 5-9 CPU Slot Locations (Tower View)

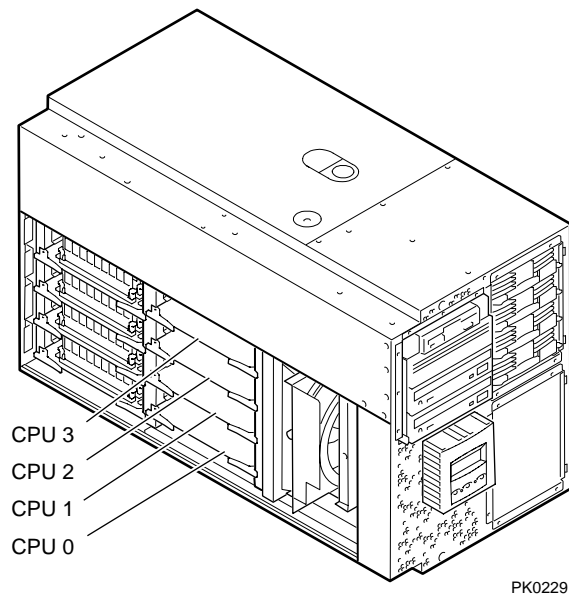


CPU Configuration Rules

1. A CPU must be installed in slot 0. The system will not power up without a CPU in slot 0.
2. CPU cards must be installed in numerical order, starting at CPU slot 0. The slots are populated from left to right on a pedestal or rackmount system and from bottom to top on a tower system. See Figure 5-8 and Figure 5-9.
3. CPUs must be identical in speed and cache size.

5.9 Installing CPUs

Figure 5-10 CPU Card Installation (Pedestal/Rack View)

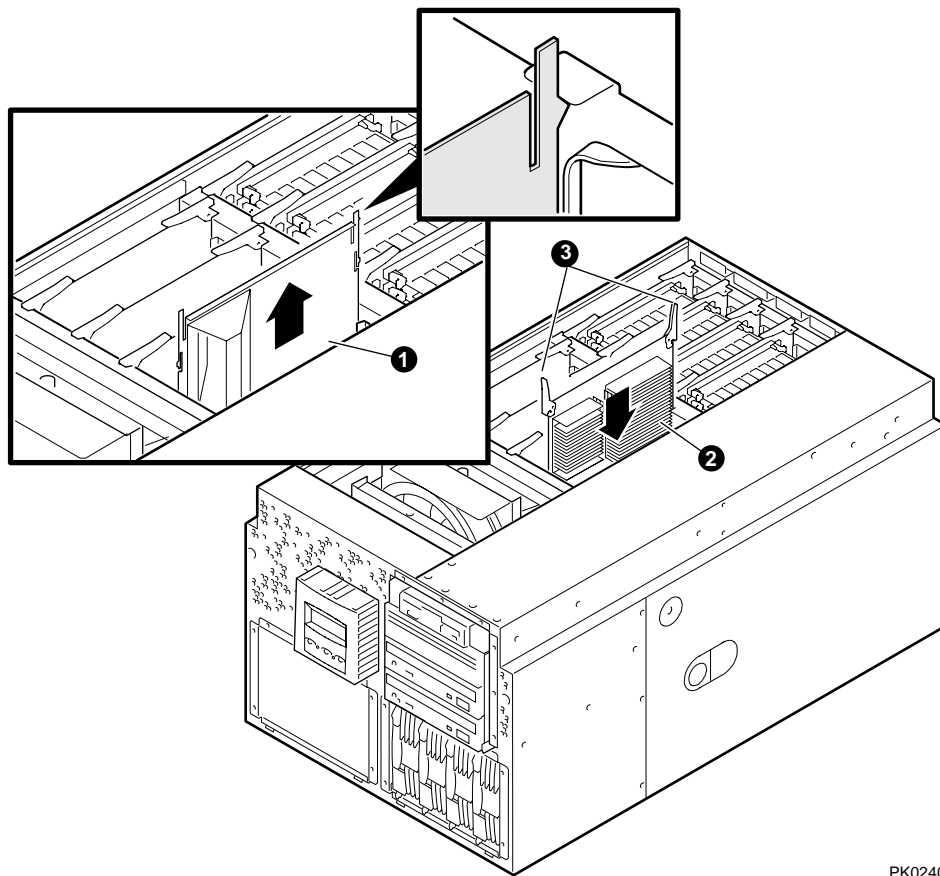

PK0240



WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.




WARNING: CPU cards have parts that operate at high temperatures. Wait 2 minutes after power is removed before touching any module.



--- V @ >240VA

WARNING: High current area. Currents exceeding 240 VA can cause burns or eye injury. Avoid contact with parts or remove power prior to access.



WARNING: To prevent injury, unplug the power cord from each power supply before installing components.

1. Shut down the operating system and turn off power to the system. Unplug the power cord from each power supply.
2. Access the system chassis by following the instructions in Section 5.1.
3. Remove the covers from the fan area and the system card cage as explained in Section 5.2.
4. Determine the slot where you will install the card. See Figure 5-8 or Figure 5-9.
5. Remove and discard the airflow deflector plate ❶ from the CPU slot. See Figure 5-10.
6. Insert the CPU card ❷ in the connector and push down on both latches ❸ simultaneously.
7. Replace the system card cage cover, fan cover, and enclosure covers.
8. Reconnect the power cords.

Continued on next page

Verification — SRM Console

1. Turn on power to the system.
5. During power-up, observe the screen display. The newly installed CPU should appear in the display.
6. Issue the **show config** command to display the status of the new CPU.

Verification — alphabios Console

1. Start AlphaBIOS Setup, select **Display System Configuration**, and press Enter.
2. Using the arrow keys, select **Systemboard Configuration** and check the Processor field to determine how many processors are present.

5.10 Memory Configuration

Become familiar with the rules for memory configuration before adding DIMMs to the system.


Refer to Figure 5–11 or Figure 5–12 and observe the following rules for installing DIMMs.

- You can install up to 16 DIMMs or up to 32 DIMMs, depending on the system model you purchased.
- A set consists of 4 DIMMs. You must install all 4 DIMMs.
- Fill sets in numerical order. Populate all 4 slots in Set 0, then populate Set 1, and so on.
- An “array” is one set for systems that support 16 DIMMs and two sets for systems that support 32 DIMMs.
- DIMMs in an array must be the same size and type. For example, suppose you have populated Sets 0, 1, 2, and 3. When you populate Set 4, the DIMMs must be the same size and type as those installed in Set 0. Similarly, Set 5 must be populated with the same size and type of DIMMs as are in Set 1, and so on, as indicated in the following table.

Array	System Supporting 32 DIMMs	System Supporting 16 DIMMs
0	Set 0 and Set 4	Set 0
1	Set 1 and Set 5	Set 1
2	Set 2 and Set 6	Set 2
3	Set 3 and Set 7	Set 3


Continued on next page

Figure 5-11 Memory Configuration (Pedestal/Rack View)

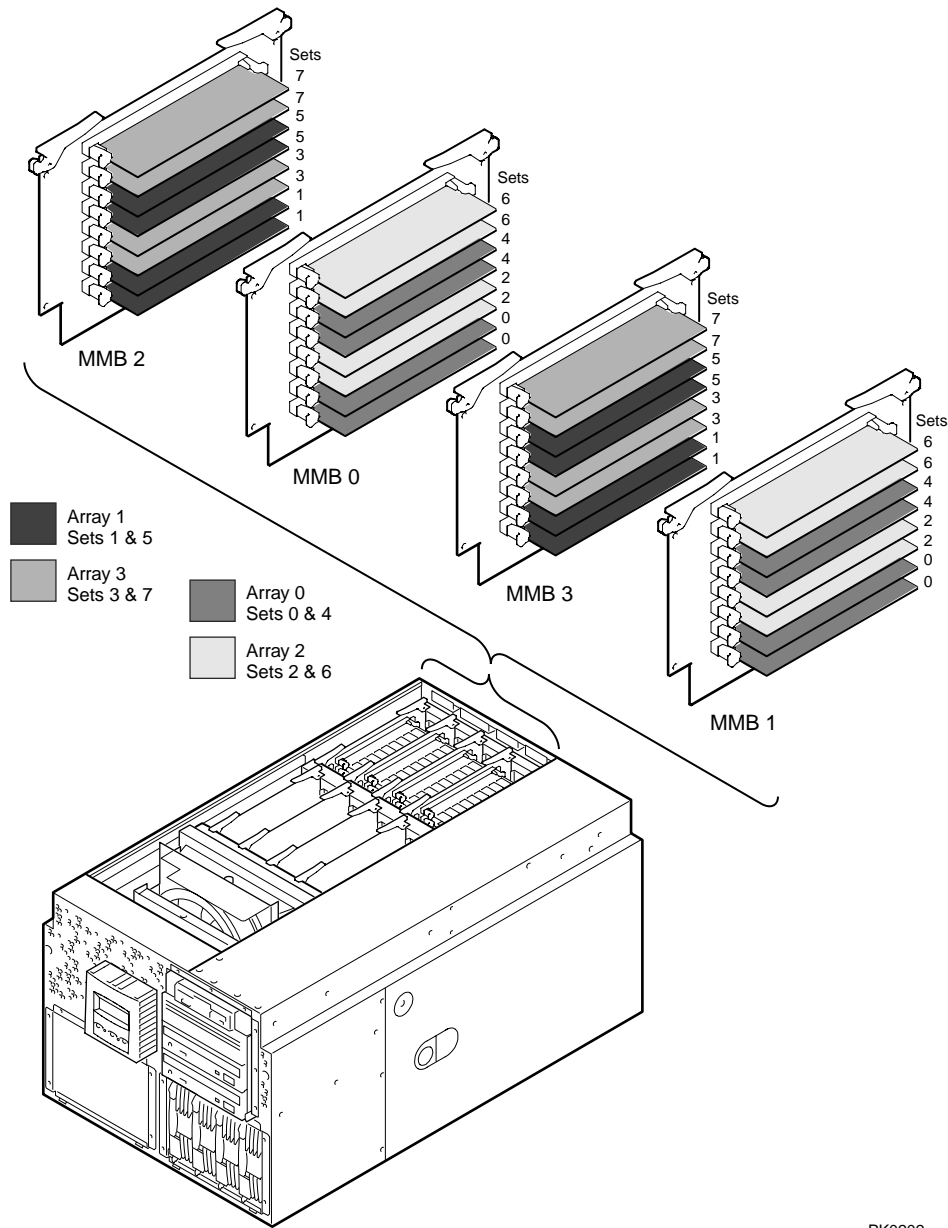


PK0202

Figure 5-12 Memory Configuration (Tower View)

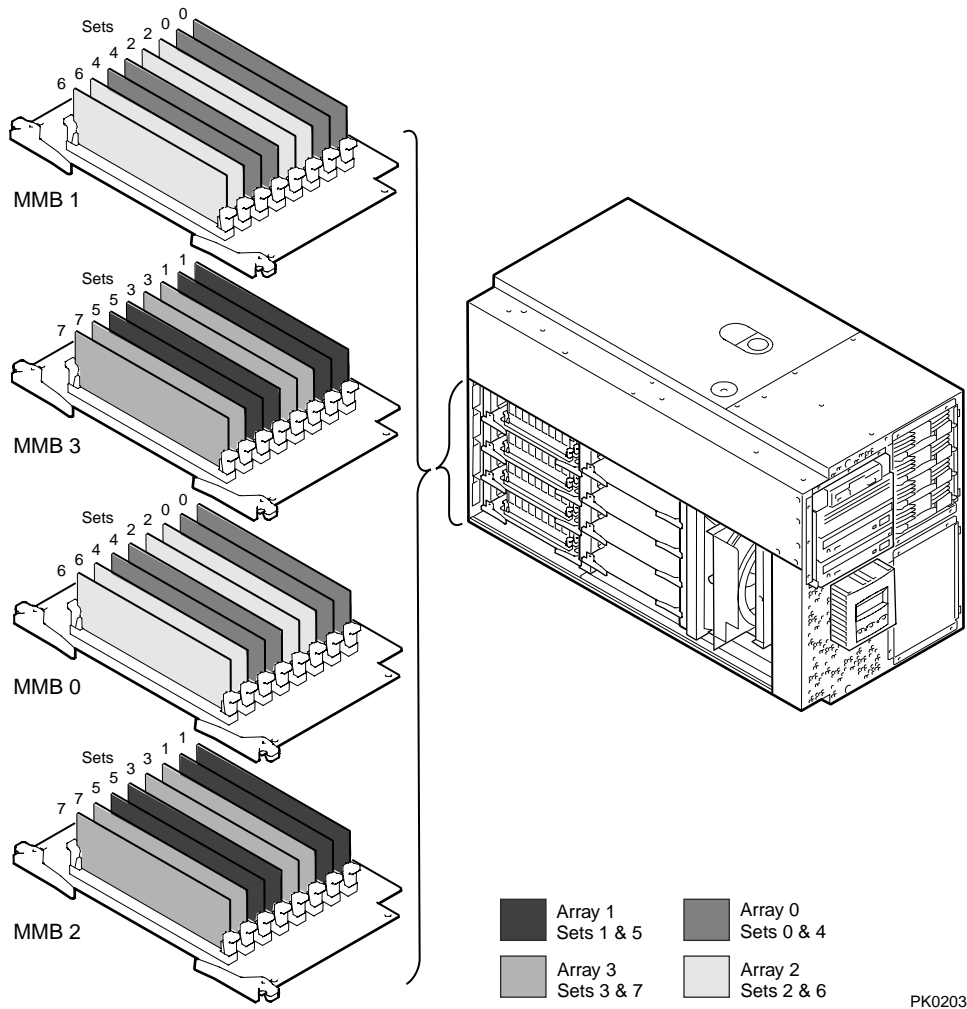

5.11 Installing DIMMs

Figure 5-13 Installing DIMMs

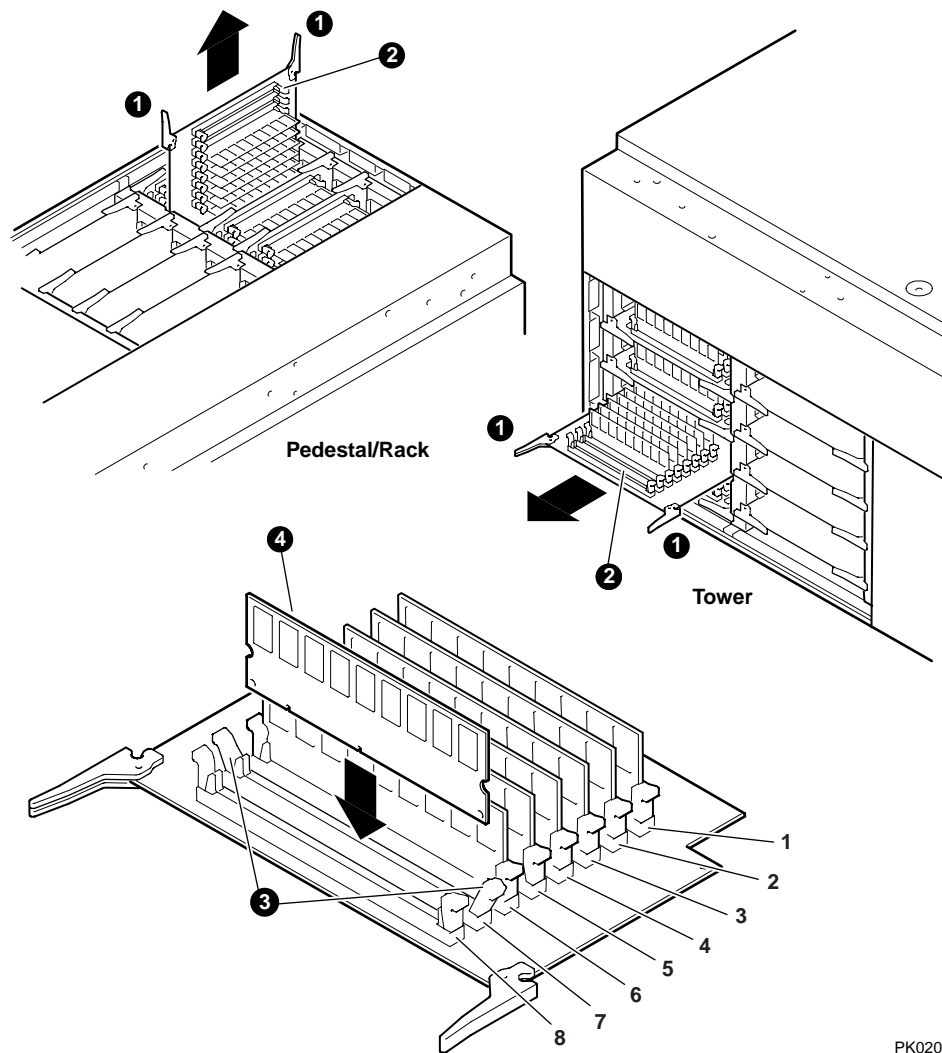


PK0205




WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.



WARNING: Memory DIMMs have parts that operate at high temperatures. Wait 2 minutes after power is removed before touching any module.



WARNING: To prevent injury, unplug the power cord from each power supply before installing components.




WARNING: High current area. Currents exceeding 240 VA can cause burns or eye injury. Avoid contact with parts or remove power prior to access.

1. Shut down the operating system and turn off power to the system. Unplug the power cord from each power supply.
2. Access the system chassis by following the instructions in Section 5.2.
3. Remove the fan cover and the system card cage cover.
4. Use Figure 5–11 or Figure 5–12 to determine where sets of memory DIMMs should be installed. Begin with the lowest numbered set.
5. Release the clips ❶ securing the appropriate MMB ❷ and slide out the MMB. See Figure 5–13.
6. Release the clips ❸ on the MMB slot where you will install the DIMM ❹.


Continued on next page

7. To install the DIMM, align the notches on the gold fingers with the connector keys as shown in Figure 5-14.

Figure 5-14 Aligning DIMM in MMB

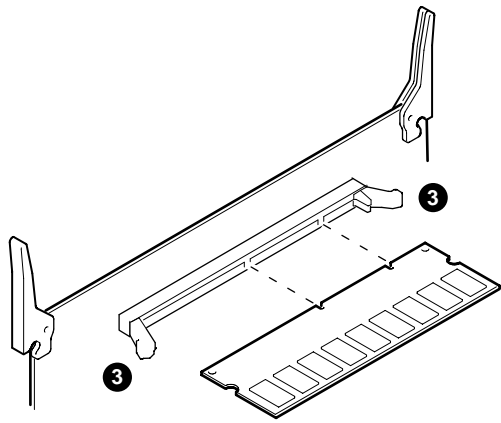

PK0953

8. Secure the DIMM with the clips  on the MMB slot.
9. Reinstall the MMB.
10. Replace the system card cage cover and enclosure covers.
11. Reconnect the power cords.

Verification — SRM Console


1. Turn on power to the system.
2. During power-up, observe the screen display for memory. The display shows how much memory is in each array.
3. Issue the **show memory** command to display the total amount of memory in the system.

Verification — AlphaBIOS Console

1. Start AlphaBIOS Setup, select **Display System Configuration**, and press Enter.
2. Using the arrow keys, select **Memory Configuration** to display the new memory.


5.12 PCI Configuration

Figure 5-15 PCI Slot Locations (Pedestal/Rack)

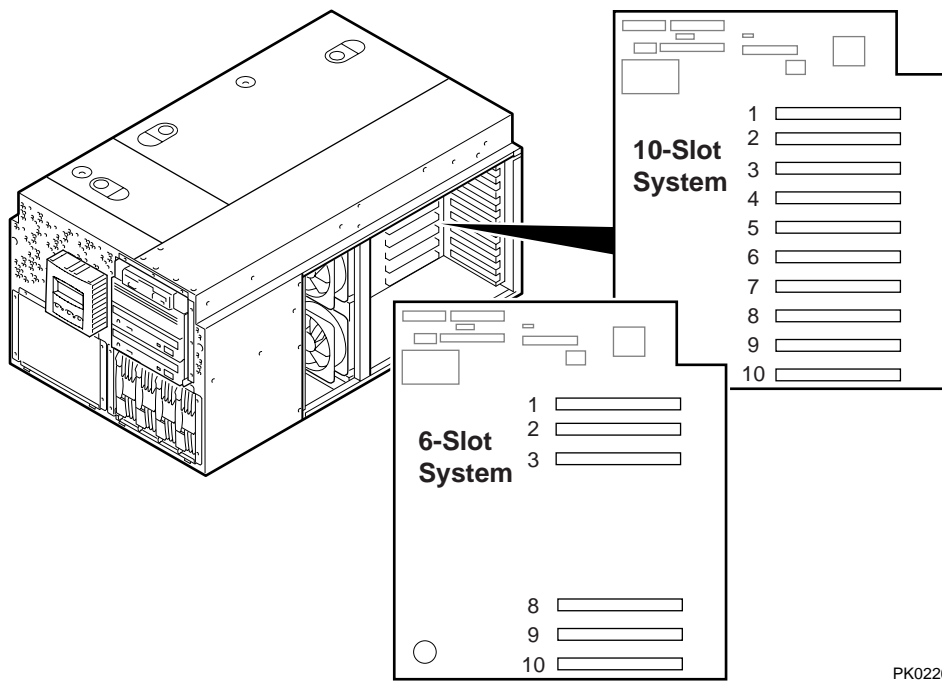

PK0226

Figure 5-16 PCI Slot Locations (Tower)

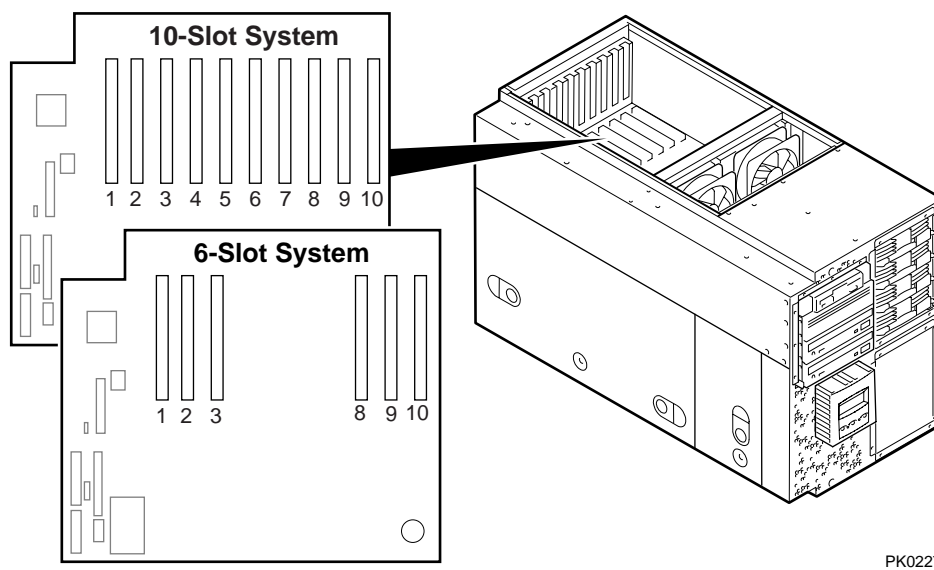

PK0227

The PCI slots are split across two independent 64-bit, 33 MHz PCI buses: PCI0 and PCI1. These buses correspond to Hose 0 and Hose 1 in the system logical configuration. The slots on each bus are listed below.


System Variant	Slots on PCI 0	Slots on PCI 1
Six-slot system	1-3	8-10
Ten-slot system	1-4	5-10

Some PCI options require drivers to be installed and configured. These options come with a floppy or a CD-ROM. Refer to the installation document that came with the option and follow the manufacturer's instructions.

NOTE: *If you have a VGA controller, it must be installed on PCI 0.*

5.13 Installing PCI Cards

Figure 5-17 PCI Card Installation (Pedestal/Rack View)

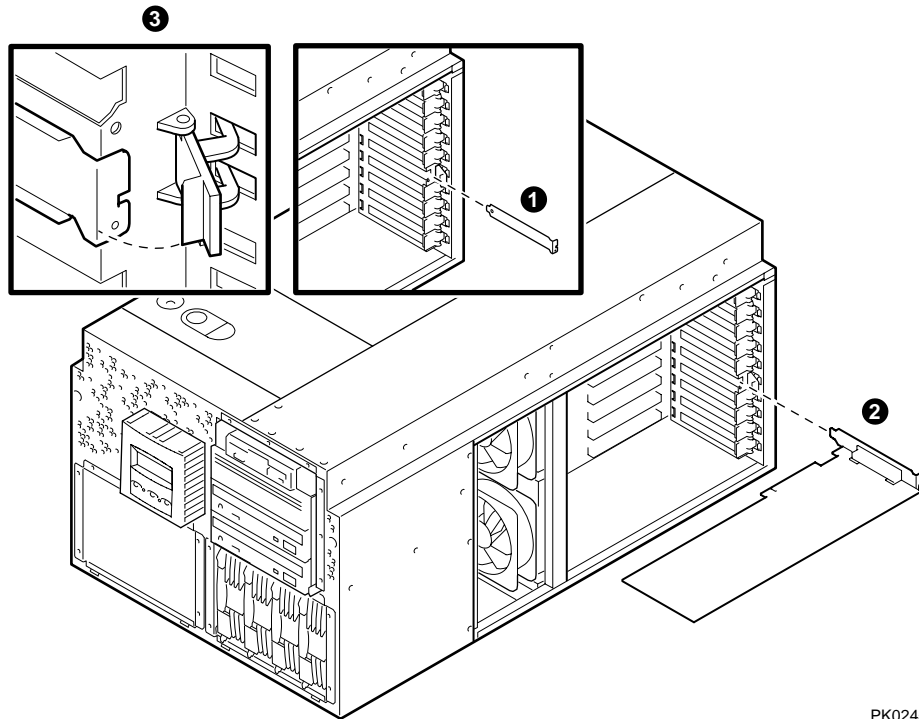

PK0245



WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.




WARNING: To prevent fire, use only modules with current limited outputs. See National Electrical Code NFPA 70 or Safety of Information Technology Equipment, Including Electrical Business Equipment EN 60 950.



=== V @ >240VA

WARNING: High current area. Currents exceeding 240 VA can cause burns or eye injury. Avoid contact with parts or remove power prior to access.



WARNING: To prevent injury, unplug the power cord from each power supply before installing components.

NOTE: *Some full-length PCI cards may have extender brackets for installing into ISA/EISA card cages. Remove the extender brackets before installing the card.*

1. Shut down the operating system and turn off power to the system. Unplug the power cord from each power supply.
2. Access the system chassis by following the instructions in Section 5.1. Remove the cover from the PCI card cage area as described in Section 5.2.
3. Determine the location of the PCI slot. See Figure 5–15 or Figure 5–16.
4. Remove and discard the bulkhead filler plate ❶ from the PCI slot.
5. Insert the card into the connector ❷.
6. Connect cables and secure the module to the card cage with the latch ❸.
7. Replace the PCI card cage cover and enclosure covers.
8. Reconnect the power cords.

Continued on next page

Verification — SRM Console

1. Turn on power to the system.
2. During power-up, observe the screen display for PCI information. The new option should be listed in the display.
3. Issue the SRM **show config** command. Examine the PCI bus information in the display to make sure that the new option is listed.
4. If you installed a bootable device, enter the SRM **show device** command to determine the device name. For example, look for dq, dk, ew, and so on.

Verification — AlphaBIOS Console

1. Start AlphaBIOS Setup, select **Display System Configuration**, and press Enter.
2. Using the arrow keys, select **PCI Configuration** to determine that the new option is listed.

5.14 Installing a Removable Media Device




WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.



WARNING: To prevent injury, unplug the power cord from each power supply before installing components.

Continued on next page

Figure 5-18 Installing a 5.25-Inch Device (Pedestal/Rack View)

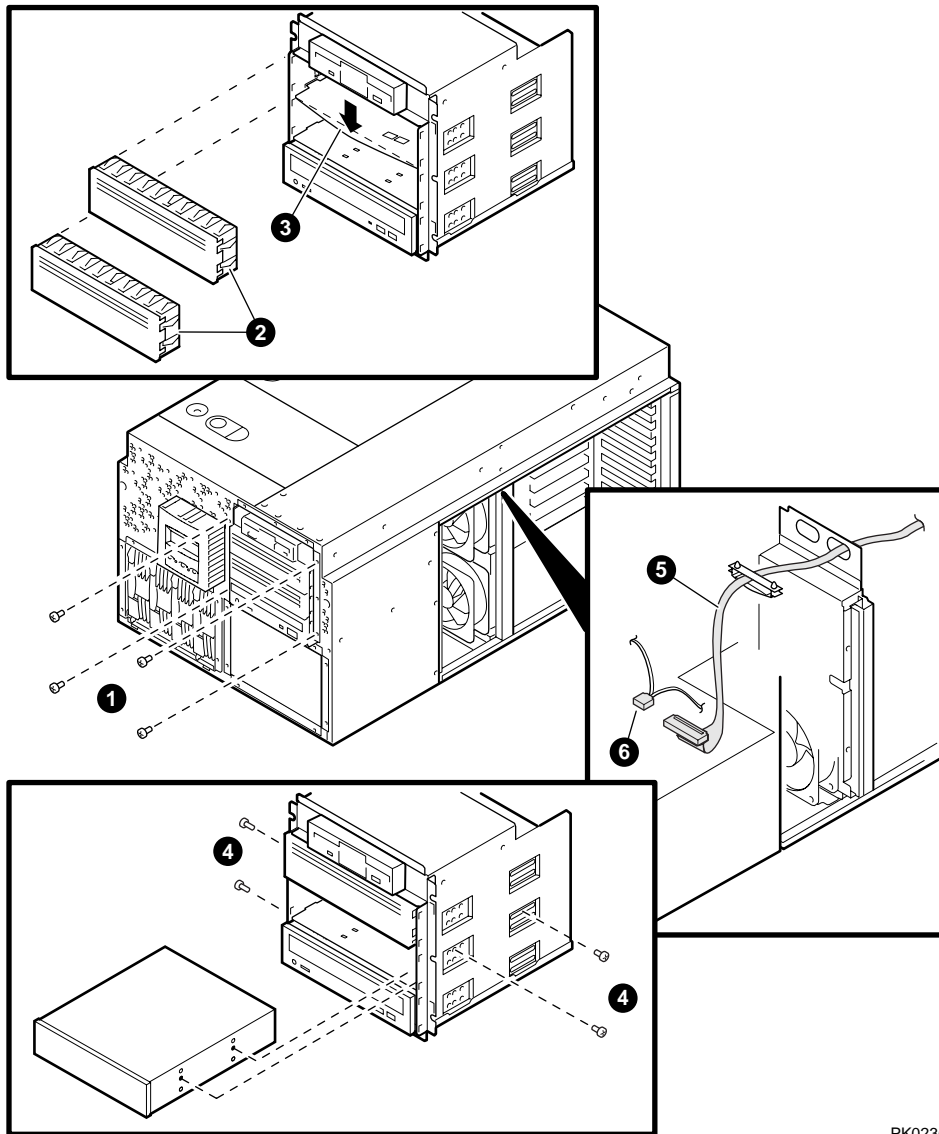

PK0235

1. Shut down the operating system and turn off power to the system. Unplug the power cord from each power supply.
 2. Remove the cover to the PCI card cage area.
 3. Unplug the signal and power cables to the CD.
 4. Remove and set aside the four screws ❶ securing the removable media cage. Remove the cage.
-

CAUTION: *Be careful not to tangle the wires to the CD-ROM and floppy.*


5. Remove a blank storage panel ❷ for the desired storage slot by pushing from behind the panel. If you are installing a full-height device, remove two panels.
If you are installing a full-height device, also remove the divider plate between the top two slots ❸ by pressing the center of the plate and bending it sufficiently to free it from the slots.
6. Set the SCSI ID on the device as desired.
7. Slide the storage device into the desired storage slot and secure the device to the unit with four of the screws ❹ provided inside the removable media drive cage.
8. Slide the removable media cage back in and replace the four screws set aside previously.
9. Plug in the signal cable ❺, route it into the PCI cage, and attach it to the appropriate controller.
10. Plug the power cable (4-conductor) ❻ into the storage device.
11. Plug the signal and power cables back into the CD.
12. Replace the PCI card cage cover and enclosure covers.
13. Reconnect the power cords.

Verification — SRM Console

1. Turn on power to the system.
2. When the system powers up to the P00>>> prompt, enter the SRM **show device** command to determine the device name. For example, look for dq, dk, ew, and so on.

5.15 Installing a Second Disk Cage


Figure 5-19 Installing a Second Disk Cage

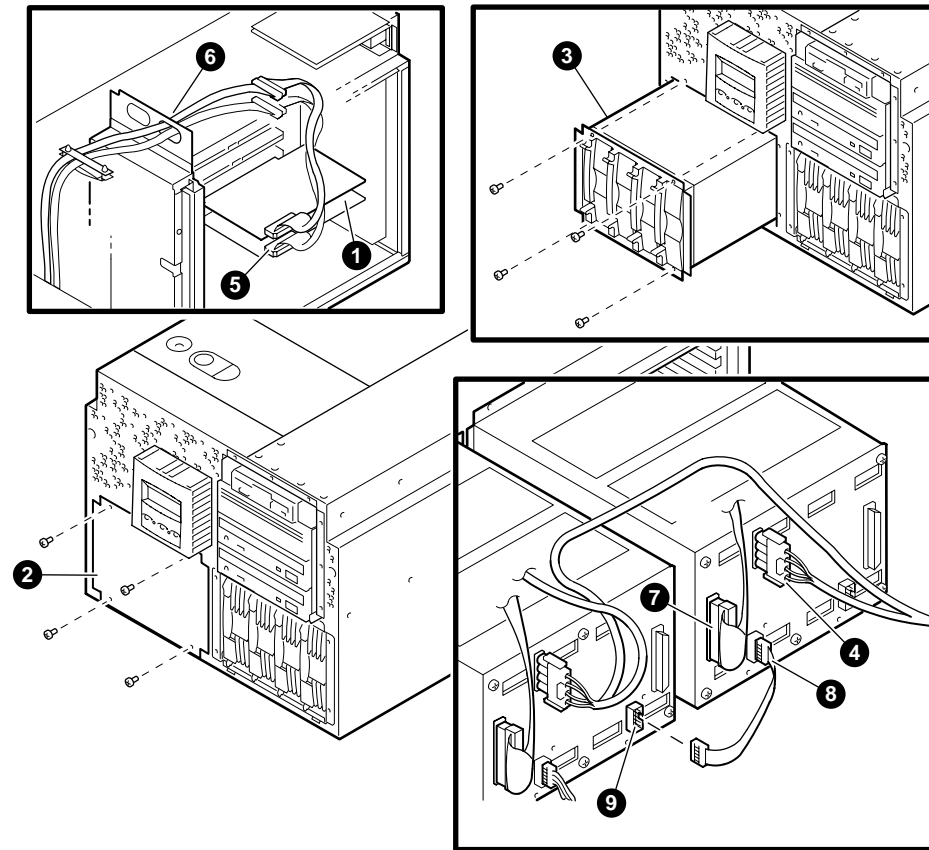

PK0247



WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.



WARNING: To prevent injury, unplug the power cord from each power supply before installing components.

1. Remove the cover to the PCI card cage.
2. Install the SCSI controller ❶ in the PCI backplane.
3. Unscrew the disk cage filler plate ❷ and set aside the four screws.
4. Slide the cage ❸ into the system chassis part way.
5. Pull out the two fans blocking access to the cabling.
6. Connect the power source cable ❹ to the storage backplane.
7. Plug one end of the 68-conductor SCSI cable ❺ (17-04867-01) into the SCSI controller ❶.
8. Route the SCSI cable through the accessible opening ❻ in the PCI cage and plug it into the J3 (IN) connector ❼ on the back of the storage backplane.
9. Plug one end of the 10-pin storage subsystem management cable (17-03971-08) into the J2 connector ❸ on the back of the newly installed disk cage, and plug the other end into J9 ❾ on the other disk cage.
10. Slide the cage the rest of the way into the system chassis and replace the four screws set aside previously.
11. Replace the two fans.
12. Replace the PCI card cage cover and enclosure covers.

Continued on next page

Verification — SRM Console

1. Turn on power to the system.
2. When the system powers up to the P00>>> prompt, enter the SRM **show device** command to determine the device name. For example, look for dq, dk, ew, and so on.

5.16 External SCSI Expansion

External SCSI devices, such as tabletop or rack-mounted storage devices, can be connected to the system using PCI-based SCSI adapters. Use the following rules to determine if a particular device can be used:

- The device must be supported by the operating system. Consult the supported options list.
- Do not exceed the maximum number of devices supported on the SCSI controller to be used.
- Each device on the bus must have a unique SCSI ID.
- The entire SCSI bus length, from terminator to terminator, must not exceed the following limits:

Fast differential SCSI	6 meters
Fast single-ended SCSI	3 meters
Ultra-wide SCSI	1.5 meters
Ultra 2 SCSI	6 meters
- Ensure that the SCSI bus is properly terminated and that no devices in the middle of the bus are terminated.
- For best performance, wide devices should be operated in wide SCSI mode.

Chapter 6

Updating Firmware

This chapter describes how to update to a later version of system firmware. Typically, you update system firmware whenever the operating system is updated. You might also need to update firmware:

- If you add I/O device controllers and adapters
- If enhancements are made to the firmware
- If the serial ROM or RMC firmware should ever become corrupted

This chapter contains the following topics:

- Sources of Firmware Updates
- Firmware Update Utility
- Manual Updates
- Updating from the CD-ROM
- Updating from an OpenVMS System Disk
- OpenVMS and UNIX Network Boots
- Upgrading AlphaBIOS over the Network

6.1 Sources of Firmware Updates

The AlphaBIOS firmware for Windows NT and the SRM firmware for UNIX and OpenVMS reside in the flash ROM located on the system board. The Alpha Systems Firmware Update Kit comes on a CD-ROM, which is updated quarterly. You can also obtain Alpha firmware updates from the Internet.

Quarterly Update Service

The Alpha Systems Firmware Update Kit CD-ROM is available by subscription from Compaq.

Alpha Firmware Internet Access

You can also obtain Alpha firmware update files from the Internet :

<http://www.compaq.com/alphaserver/>

Click on the name of the system. On the page for the system, click on Firmware Updates.

If you do not have a Web browser, you can access files using anonymous ftp:

<ftp://ftp.digital.com/pub/DEC/>

Click down the following directories: [Alpha/firmware/readme.html](#)

The README file explains how to download firmware updates.

AlphaBIOS Firmware

The AlphaBIOS firmware is included on the Alpha Systems Firmware Update Kit CD-ROM. You can also obtain the latest version of the AlphaBIOS firmware from the World Wide Web.

<http://www.windows.digital.com/products/products.asp>

Click on the product name.

6.2 Firmware Update Utility

The system firmware is updated from a Loadable Firmware Update Utility. When you boot the medium containing the update image, the Loadable Firmware Update Utility banner is displayed.

Before updating the firmware, enter the **list** command to list the current revision of the firmware. Enter the **update** command to update the SRM and AlphaBIOS firmware automatically.

Example 6-1 Update Utility Display

```
***** Loadable Firmware Update Utility *****
-----
Function      Description
-----
Display      Displays the system's configuration table.
Exit         Done exit LFU (reset).
List         Lists the device, revision, firmware name, and
            update revision.
Readme       Lists important release information.
Update       Replaces current firmware with loadable data
            image.
Verify       Compares loadable and hardware images.
? or Help    Scrolls this function table.
-----

UPD> list
Device      Current Revision  Filename      Update Revision
Abios       5.68              abios_fw      5.69
SRM         5.4               srm_fw        5.5
```

```
UPD> update
```

```
Confirm update on:
```

```
Abios
```

```
srm
```

```
[Y/(N)]y
```

```
WARNING: updates may take several minutes to complete for  
each device.
```

```
DO NOT ABORT!
```

```
Abios    Updating to V5.6-9...  Verifying V5.6-9...  PASSED.
```

```
srm      Updating to V5.4-7...  Verifying V5.4-7...  PASSED.
```

```
UPD> exit
```

6.3 Manual Updates

If RMC firmware or serial ROM (SROM) ever become corrupted, you can perform a manual update.

1. Boot the update medium.
2. At the UPD> prompt, enter the **exit** command and answer **y** at the prompt:

```
UPD> exit
```

```
Do you want to do a manual update [y/(n)] y
```

```
AlphaServer ES40 Console V5.4-5528, built on April 6, 1999  
at 05:02:30
```

3. To update RMC firmware, enter **update rmc**. To update the serial ROM (SROM), enter **update srom**. For example:

```
UPD> update srom
```

The remainder of the display is similar to that shown in Example 6-1.

6.4 Updating from the CD-ROM

You can update the system firmware from CD-ROM, either from the SRM console or the AlphaBIOS console.

6.4.1 Updating from the SRM Console

1. At the SRM console prompt, enter the **show device** command to determine the drive name of the CD-ROM drive.
2. Load the Alpha Systems Firmware Update CD into the drive.
3. Boot the system from the CD, using the drive name determined in step 1 (for example, dqa0).

```
P00>>> boot dqa0
```

4. Enter the **update** command at the UPD> prompt.
5. When the update is complete, exit from the Firmware Update Utility.

```
UPD> exit
```


Continued on next page

6.4.2 Updating from the AlphaBIOS Console

1. Insert the Alpha Systems Firmware Update CD into the CD-ROM drive.
2. Press **F2** at the entry screen to start AlphaBIOS Setup.
3. Select **AlphaBIOS Upgrade** and press Enter.

AlphaBIOS searches for the update file on disk, CD-ROM, and the network. When the update is found, the image is updated.

4. Once the update is complete, the system restarts with the updated AlphaBIOS.

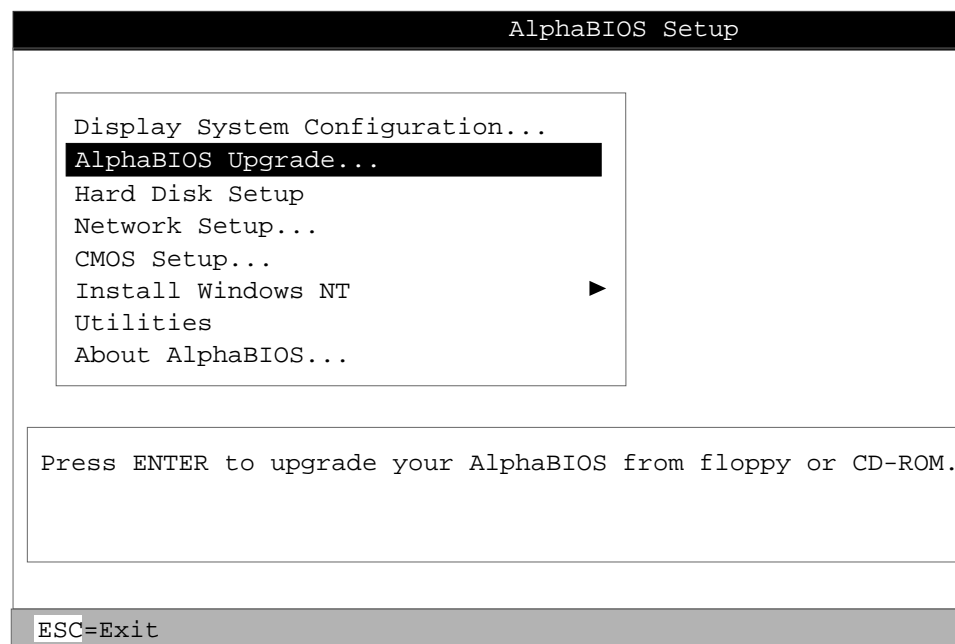

PK0930

6.5 Updating from an OpenVMS System Disk

You can update OpenVMS from a system disk.

1. Download the firmware update image from the Firmware Updates Web site.
2. Rename the downloaded file to fwupdate.exe.
3. Enter the following commands on the OpenVMS Alpha system:

```
$ set file/attr=(rfm:fix,lrl:512,mrs:512,rat:none)
fwupdate.exe
$ copy/contiguous fwupdate.exe "system_disk":[sys0.sysexec]
```

NOTE: *Insert the name of your system disk in place of "system_disk," for example, dka100.*

4. Shut down the operating system to get to the SRM console prompt.
5. Boot the update utility from the SRM console as follows:

```
P00>>> boot dka100 -flags 0,a0
```

NOTE: *Replace dka100 with the name of the system disk, if different.*

6. After some messages are displayed, you will be prompted for the bootfile. Enter the directory and file name as follows :

```
Bootfile: [sys0.sysexec]fwupdate.exe
```

7. Enter the update command at the UPD> prompt.

6.6 OpenVMS and UNIX Network Boots

You can update OpenVMS using the MOP network protocol. You can update Tru64 UNIX with the BOOTP protocol.

6.6.1 Updating UNIX Using the BOOTP Protocol

1. Download the firmware update image from the Firmware Updates Web site.
2. Copy the downloaded file to a UNIX based network server for BOOTP booting on the AlphaServer system. For details on configuring the BOOTP server, refer to UNIX documentation or the system's Firmware Release Notes document.
3. Enter the **update** command at the UPD> prompt.

6.6.2 Updating OpenVMS Using the MOP Protocol

1. Download the firmware update image from the Firmware Updates Web site.
2. Copy the downloaded file to an OpenVMS based network server for MOP booting on the AlphaServer system. For details on configuring the MOP server, refer to OpenVMS documentation or the system's Firmware Release Notes document.
3. To ensure that the downloaded file is in a proper VMS fixed record format, enter the following command before using the file for MOP booting:

```
$ set file/attr=(rfm:fix,lrl:512,mrs:512,rat:none) "fwupdate.sys"
```

NOTE: *Replace "fwupdate.sys" with the name of the firmware image you downloaded.*

4. Boot the update file. For example:

```
P00>>> boot -file fwupdate ewa0
```
5. Enter the **update** command at the UPD> prompt.

6.7 Upgrading AlphaBIOS over the Network

You can upgrade AlphaBIOS over the network if you have set up an AlphaBIOS server and AlphaBIOS client and if you have configured the Network Setup screen. See the *Compaq AlphaServer ES40 User Interface Guide* for information on the network setup feature.

Figure 6-1 AlphaBIOS Upgrade Screens

```
Upgrade AlphaBIOS

Old Version: 5.68
New Version: 5.69

WARNING: This will take several seconds.
         Do *NOT* reset or power-cycle the system before
         receiving notification that the upgrade process
         has completed.

F10=Continue  ESC=Abort
```

PK0951

```
Run new AlphaBIOS

Upgrade complete. The updated version of AlphaBIOS
will now be executed.

Enter=Execute  ESC=Continue
```

PK0952

Requirements

To upgrade AlphaBIOS over a network, you must meet the following requirements:

- A DHCP and TFTP server or a BOOTP and TFTP server configured with the appropriate client information.
- An AlphaBIOS-based client with:
 - A network adapter from the DEC DC21x4 family of Ethernet adapters
 - 16 MB of RAM
 - The Network Setup screen configured based on the AlphaBIOS server's settings.

Network Upgrade Procedure

1. Verify that AlphaBIOS is correctly configured for your network by examining the Network Setup screen.
2. At the AlphaBIOS Setup screen, select **AlphaBIOS Upgrade** and press Enter. A screen similar to Figure 6–1 is displayed.
3. AlphaBIOS searches for the upgrade file on disk, CD-ROM, and the network. When the upgrade is found, the upgrade process begins.

Once the upgrade is complete, your system restarts with the upgraded AlphaBIOS.

NOTE: *If the network adapter is initialized, but the call to the DHCP and BOOTP servers fails, the IP addresses shown on the Network Setup screen are taken from nonvolatile memory. If this information is valid, the network can still transfer files from a TFTP server.*

Chapter 7

Troubleshooting

This chapter describes procedures for resolving problems with the system. To correct a problem, locate the troubleshooting table for that problem type and follow the guidelines provided. If you cannot correct the problem, report it to your service provider.

This chapter covers the following topics:

- Power-Up Error Messages
- RMC Error Messages
- SRAM Error Messages
- SRM Diagnostics
- Troubleshooting Tables
- Option Card Problems
- Troubleshooting the Windows NT Hard Disk

7.1 Power-Up Error Messages

Three sets of diagnostics are performed at power-up: RMC, SRM, and SRM. As the diagnostics run, messages are displayed on the control panel. Some messages are also displayed on the console terminal. Error messages that are displayed can be used to diagnose problems.

7.1.1 Messages with Beep Codes

Table 7-1 Error Beep Codes

Beep Code	Associated Messages	Meaning
1	Jump to Console	SRM code has completed execution. System jumps to SRM console. SRM messages should start to be displayed. If no SRM messages are displayed, there is a problem. See Section 7.1.2.
1-3		VGA monitor not plugged in. The first beep is a long beep.
1-1-4	ROM err	The ROM err message is displayed briefly, then a single beep is emitted, and Jump to Console is displayed. The SRM code is unable to load the console code; a flash ROM header area or checksum error has been detected. See Section 7.1.2.
2-1-2	Cfg ERR <i>n</i> Cfg ERR <i>s</i>	Configuration error on CPU <i>n</i> (<i>n</i> is 0, 1, 2, or 3) or a system configuration error (<i>s</i>). The system will still power up. Contact your service provider.
1-2-4	BC error CPU error BC bad	Backup cache (B-cache) error. Indicates that a CPU is bad. Contact your service provider.
1-3-3	No mem	No usable memory detected. Some memory DIMMs may not be properly seated or some DIMM sets may be faulty. See Section 7.1.3.

A few error messages that appear on the operator control panel are announced by audible error beep codes, as indicated in Table 7-1. For example, a 1-1-4 beep code consists of one beep, a pause (indicated by the hyphen), one beep, a pause, and a burst of four beeps. This beep code is accompanied by the message "ROM err."

Related messages are also displayed on the console terminal if the console device is connected to the serial line and the SRM **console** environment variable is set to **serial**.

7.1.2 Checksum Error

If Jump to Console is the last message displayed on the operator control panel, the console firmware is corrupted. When the system detects the error, it attempts to load a utility called the fail-safe loader (FSL) so that you can load new console firmware images.

Example 7-1 Checksum Error and Fail-Safe Load

```
Loading console
Console ROM checksum error
Expect: 00000000.000000FE
Actual: 00000000.000000FF
XORval: 00000000.00000001
Loading program from floppy
Code execution complete (transfer control)

OpenVMS PALcode V1.3-3, Digital UNIX PALcode V1.4-2

starting console on CPU 0
.
.
starting drivers
entering idle loop

P00>>> Boot update_cd

OpenVMS PALcode V1.3-3, Digital UNIX PALcode V1.4-2

starting console on CPU 0
.
.
starting drivers
entering idle loop
.
.
.
```

```

***** Loadable Firmware Update Utility ***** ⑥
-----
Function      Description
-----
Display      Displays the system's configuration table.
Exit         Done exit LFU (reset).
List         Lists the device, revision, firmware name, and
             update revision.
Readme       Lists important release information.
Update       Replaces current firmware with loadable data
             image.
Verify       Compares loadable and hardware images.
? or Help    Scrolls this function table.
-----
UPD> update ⑦

```

The sequence shown in Example 7-1 occurs:

- ① The system detects the checksum error and writes a message to the console screen.
- ② The system attempts to automatically load the FSL program from the floppy drive.
- ③ As the FSL program is initialized, messages similar to the console power-up messages are displayed. This example shows the beginning and ending messages.
- ④ At the P00>>> console prompt, boot the Loadable Firmware Update Utility (LFU) from the Alpha Systems Firmware CD (shown in the example as the variable *update_cd*).
- ⑤ As the LFU program is initialized, messages similar to the console power-up messages are displayed. This example shows a few of the messages.
- ⑥ After the “entering idle loop” message, the banner for the Loadable Firmware Update Utility is displayed.
- ⑦ At the UPD> prompt, enter the **update** command to load the new console firmware images.

7.1.3 No MEM Error

If the SROM code cannot find any available memory, a 1-3-3 beep code is issued (one beep, a pause, a burst of three beeps, a pause, and another burst of three beeps), and the message “No MEM” is displayed. The system does not come up to the console program. This error indicates missing or bad DIMMs.

The console terminal displays text similar to the following:

```
Failed M:1 D:2           ❶  
Failed M:1 D:1  
Failed M:0 D:2  
Failed M:0 D:1  
Incmpat M:3 D:6        ❷  
Incmpat M:3 D:5  
Incmpat M:2 D:6  
Incmpat M:2 D:5  
Missing M:3 D:2       ❸  
Incmpat M:3 D:1  
Illegal M:2 D:2       ❹  
Incmpat M:2 D:1  
No usable memory detected
```

- ❶ Indicates failed DIMMs. M identifies the MMB; D identifies the DIMM. In this line, DIMM 2 on MMB1 failed.
- ❷ Indicates that some DIMMs in this array are not the same. All DIMMs in the affected array are marked as incompatible (incmpat).
- ❸ Indicates that a DIMM in this array is missing. All missing DIMMs in the affected array are marked as missing.
- ❹ Indicates that the DIMM data for this array is unreadable. All unreadable DIMMs in the affected array are marked as illegal.

7.2 RMC Error Messages

Table 7-2 lists the error messages that might be displayed on the operator control panel by the remote management console during power-up. Most fatal error messages prevent the system from completing its power-up. Contact your service provider if a fatal error is displayed. Warning messages require prompt attention but may not prevent the system from completing its power-up.

Table 7-2 RMC Error Messages

Message	Meaning
Fatal Messages	
AC loss	No AC power to the system.
CPU n failed	CPU failed. “n” is 0, 1, 2, or 3.
VTERM failed	No VTERM voltage to CPUs.
CTERM failed	No CTERM voltage to CPUs.
Fan5, 6 failed	Main fan (6) or redundant fan (5) failed.
OverTemp failure	System temperature has passed the high threshold.
No CPU in slot 0	Configuration requires that a CPU be installed in slot 0.
CPU door opened	System card cage cover off. Reinstall cover.
TIG error	Code essential to system operation is not running.
Mixed CPU types	Different types of CPU are installed. Configuration requires that all CPUs be the same type.
Bad CPU ROM data	Invalid data in EEROM on the CPU.

NOTE: *The CPU n failed message does not necessarily prevent the completion of power-up. If the system finds a good CPU, it continues the power-up process.*

Table 7-2 RMC Error Messages (Continued)

Message	Meaning
Warning Messages	
PS n failed	Power supply failed. “n” is 0, 1, or 2.
OverTemp Warning	System temperature is near the high threshold.
Fan n failed	Fan failed. “n” is 0 through 6.
PCI door opened	Cover to PCI card cage is off. Reinstall cover.
Fan door opened	Cover to main fan area (fans 5 and 6) is off. Reinstall cover.
3.3V bulk warn	Power supply voltage over or under threshold.
5V bulk warn	Power supply voltage over or under threshold.
12V bulk warn	Power supply voltage over or under threshold.
-12V bulk warn	Power supply voltage over or under threshold.
VTERM warn	Voltage regulator over or under threshold.
CTERM warn	Voltage regulator over or under threshold.
CPU n VCORE warn	CPU core voltage over or under threshold. “n” is 0, 1, 2, or 3.
CPU n VIO warn	I/O voltage on CPU over or under threshold. “n” is 0, 1, 2, or 3.

7.3 SROM Error Messages

The SROM power-up identifies errors that may or may not prevent the system from coming up to the console. It is possible that these errors may prevent the system from successfully booting the operating system. Errors encountered during SROM power-up are displayed on the operator control panel (OCP). Some errors are also displayed on the console terminal if the console output is set to serial.

Table 7-3 lists the SROM error messages. Contact your service provider.

Table 7-3 SROM Error Messages

Code	SROM Message	OCP Message
FD	PCI data path error	PCI Err
FA	No usable memory detected	No Mem
EF	Bcache data lines test error	BC Error
EE	Bcache data march test error	BC Error
ED	Bcache address test error	BC Error
EC	CPU parity detection error	CPU Err
EB	CPU ECC detection error	CPU Err
EA	Bcache ECC data lines test error	BC Error
E9	Bcache ECC data march test error	BC Error
E8	Bcache TAG lines test error	BC Error
E7	Bcache TAG march test error	BC Error
E6	Console ROM checksum error	ROM Err
E5	Floppy driver error	Flpy Err
E4	No real-time clock (TOY)	TOY Err
E3	Memory data path error	Mem Err
E2	Memory address line error	Mem Err
E1	Memory pattern error	Mem Err
E0	Memory pattern ECC error	Mem Err
7F	Configuration error on CPU #3	CfgERR 3

Table 7-3 SROM Error Messages (Continued)

Code	SROM Message	OCP Message
7E	Configuration error on CPU #2	CfgERR 2
7D	Configuration error on CPU #1	CfgERR 1
7C	Configuration error on CPU #0	CfgERR 0
7B	Bcache failed on CPU #3 error	BC Bad 3
7A	Bcache failed on CPU #2 error	BC Bad 2
79	Bcache failed on CPU #1 error	BC Bad 1
78	Bcache failed on CPU #0 error	BC Bad 0
77	Memory thrash error on CPU #3	MtrERR 3
76	Memory thrash error on CPU #2	MtrERR 2
75	Memory thrash error on CPU #1	MtrERR 1
74	Memory thrash error on CPU #0	MtrERR 0
73	Starting secondary on CPU #3 error	RCPU 3 E
72	Starting secondary on CPU #2 error	RCPU 2 E
71	Starting secondary on CPU #1 error	RCPU 1 E
70	Starting secondary on CPU #0 error	RCPU 0 E
6F	Configuration error with system	CfgERR S

7.4 SRM Diagnostics

The SRM console event log and SRM console commands help you troubleshoot problems that do not prevent the system from coming up to the console.

7.4.1 Console Event Log

A console event log consists of status messages received during power-up self-tests. If problems occur during power-up, error messages indicated by asterisks (*) may be embedded in the console event log. To display a console event log one screen at a time, use the more el command.**

Example 7-2 shows a console event log that shows errors. The console reported that CPU 1 did not power up and fans 1 and 2 failed.

Example 7-2 Sample Console Event Log

```
>>> more el
*** Error - CPU 1 failed powerup diagnostics ***
  Secondary start error
EV6 BIST          = 1
STR status       = 1
CSC status       = 1
PChip0 status    = 1
PChip1 status    = 1
DIMx status      = 0
TIG Bus status   = 1
DPR status       = 0
CPU speed status = 0
CPU speed        = 0
Powerup time     = 00-00-00 00:00:00
CPU SROM sync    = 0

*** Error - Fan 1 failed ***

*** Error - Fan 2 failed ***
```

7.4.2 Show Device Command

Use the SRM show device command to list the controllers and bootable devices in the system. If storage devices are missing from the display, see Table 7-7.

Example 7-3 Show Device Command

```
P00>>> show device
dka0.0.0.1.1          DKA0          RZ2DD-LS  0306
dka100.1.0.1.1       DKA100        RZ2DD-LS  0306
dka200.2.0.1.1       DKA200        RZ1CB-CS  0844
dkb0.0.0.3.1         DKB0          RZ25      0900
dqa0.0.0.15.0        DQA0          TOSHIBA CD-ROM XM-6302B 1012
dva0.0.0.1000.0      DVA0
ewa0.0.0.4.1         EWA0          00-00-F8-09-90-FF
ewb0.0.0.2002.1     EWB0          00-06-2B-00-25-5B
pka0.7.0.1.1         PKA0          SCSI Bus ID 7
pkb0.7.0.3.1         PKB0          SCSI Bus ID 7
pkc0.7.0.2000.1     PKC0          SCSI Bus ID 7
pkd0.7.0.2001.1     PKD0          SCSI Bus ID 7
```

7.4.3 Test Command

The test command verifies all the devices in the system. This command can be used on all supported operating systems.

Example 7-4 Test Command

```
P00>>> test
Testing the Memory
Testing the DK* Disks(read only)
No DU* Disks available for testing
No DR* Disks available for testing
Testing the DQ* Disks(read only)
Testing the DF* Disks(read only)
No MK* Tapes available for testing
No MU* Tapes available for testing
Testing the DV* Floppy Disks(read only)
Testing the VGA (Alphanumeric Mode only)
Testing the EWA0 Network
Testing the EWB0 Network
P00>>>
```

The **test** command also does a quick test on the system speaker. A beep is emitted as the command starts to run.

The tests are run sequentially, and the status of each subsystem test is displayed to the console terminal as the tests progress. If a particular device is not available to test, a message is displayed. The test script does no destructive testing; that is, it does not write to disk drives.

The syntax is:

test [*argument*]

Use the **-lb** (loopback) argument for console loopback tests.

To run a complete diagnostic test using the **test** command, the system configuration must include:

- A serial loopback connected to the COM2 port (not included)
- A parallel loopback connected to the parallel port (not included)

- A trial diskette with files installed
- A trial CD-ROM with files installed

The test script tests devices in the following order:

1. Memory tests (one pass)
2. Read-only tests: DK* disks, DR* disks, DQ* disks, DU* disks, MK* tapes, DV* floppy.
3. Console loopback tests if **-lb** argument is specified: COM2 serial port and parallel port.
4. VGA console tests: These tests are run only if the console environment variable is set to **serial**. The VGA console test displays rows of the word *compaq*.
5. Network internal loopback tests for EW* networks.

NOTE: *No write tests are performed on disk and tape drives. Media must be installed to test the diskette drive and tape drives.*

Testing a Windows NT System

To test a system running Windows NT, invoke the SRM console in one of the following ways and then enter the **test** command.

- From the AlphaBIOS console, press the Halt button, and press the Reset button to reset the system.
- Alternatively, select **UNIX (SRM)** or **OpenVMS (SRM)** from the Advanced CMOS Setup screen and then reset the system.

The second method changes the **os_type** environment variable to **unix** or **openvms**, causing the SRM console to start on each subsequent reset. To restore your original setup for Windows NT, enter the following commands while still in the SRM console:

```
P00>>> set os_type nt
P00>>> init
```

7.4.4 Show FRU Command

The show fru command displays a table showing the physical configuration of the field-replaceable units (FRUs) in the system. Use the show fru command with the show error command (Section 7.4.5) to determine if any FRUs have errors logged.

Example 7-5 Show Fru Command

❶	❷	❸	❹	❺	❻
		Part#	Serial#	Misc.	Other
P00>>> show fru					
FRUname	E	Part#	Serial#	Misc.	Other
SMB0	00	54-25385-01.C03	NI81561341		
SMB0.CPU0	00	54-30158-03.A05	NI90260078		
SMB0.CPU1	00	54-30158-03.A05	NI90260073		
SMB0.CPU2	00	54-30158-03.A05	NI90260056		
SMB0.CPU3	00	54-30158-03.A05	NI90260071		
SMB0.MMB0	00	54-25582-01.B02	AY90112345		
SMB0.MMB0.DIM1	00	54-24941-EA.A01CPQ	NI90202001		
SMB0.MMB0.DIM2	00	54-24941-EA.A01CPQ	NI90200102		
SMB0.MMB0.DIM3	00	54-24941-EA.A01CPQ	NI90200103		
SMB0.MMB0.DIM4	00	54-24941-EA.A01CPQ	NI90200104		
SMB0.MMB0.DIM5	00	54-24941-EA.A01CPQ	NI90202005		
SMB0.MMB0.DIM6	00	54-24941-EA.A01CPQ	NI90202006		
SMB0.MMB1	00	54-25582-01.B02	AY90112301		
SMB0.MMB1.DIM1	00	54-25053-BA.A01CPQ	NI90112341		
SMB0.MMB1.DIM2	00	54-25053-BA.A01CPQ	NI90112342		
SMB0.MMB1.DIM3	00	54-25053-BA.A01CPQ	NI90112343		
SMB0.MMB1.DIM4	00	54-25053-BA.A01CPQ	NI90112344		
SMB0.MMB1.DIM5	00	54-25053-BA.A01CPQ	NI90112345		
SMB0.MMB1.DIM6	00	54-25053-BA.A01CPQ	AY80112346		
SMB0.MMB2	00	54-25582-01.B02	AY80012302		
SMB0.MMB2.DIM1	00	54-25053-BA.A01CPQ	NI90112331		
SMB0.MMB2.DIM2	00	54-25053-BA.A01CPQ	AY80112332		
SMB0.MMB2.DIM3	00	54-25053-BA.A01CPQ	AY80112333		
SMB0.MMB2.DIM4	00	54-25053-BA.A01CPQ	AY80112334		
SMB0.MMB2.DIM5	00	54-25053-BA.A01CPQ	AY80112335		
SMB0.MMB2.DIM6	00	54-25053-BA.A01CPQ	AY80112336		
SMB0.MMB3	00	54-25582-01.B02	AY90112303		
SMB0.MMB3.DIM1	00	54-25053-BA.A01CPQ	AY80112341		
SMB0.MMB3.DIM2	00	54-25053-BA.A01CPQ	AY80112342		
SMB0.MMB3.DIM3	00	54-25053-BA.A01CPQ	AY80112343		
SMB0.MMB3.DIM4	00	54-25053-BA.A01CPQ	AY80112344		
SMB0.MMB3.DIM5	00	54-25053-BA.A01CPQ	AY80112345		
SMB0.MMB3.DIM6	00	54-25053-BA.A01CPQ	AY80112346		
SMB0.CPB0	00	54-30156-01	AY80100999		
SMB0.CPB0.PCI4	00	ELSA GLoria Synergy			
SMB0.CPB0.PCI5	00	NCR 53C895			
SMB0.CPB0.PCIA	00	DE500-BA Network Cont			
SMB0.CPB0.SBM0	00	-	-		

PWR0	00	30-49448-01.A02	2P90700557	API-7850
PWR1	00	30-49448-01.A02	2P90700558	API-7850
FAN1	00	70-40073-01	-	Fan
FAN2	00	70-40073-01	-	Fan
FAN3	00	70-40072-01	-	Fan
FAN4	00	70-40071-01	-	Fan
FAN5	00	70-40073-02	-	Fan
FAN6	00	70-40074-01	-	Fan
JIO0	00	54-25575-01	-	Junk I/O
OCP0	00	70-33894-0x	-	OCP

P00>>>

- ❶ **FRUname** The FRU name recognized by the SRM console. The name also indicates the location of that FRU in the physical hierarchy.

SMB = system board; CPU = CPUs; MMB = memory motherboard; DIM = DIMMs; CPB = PCI backplane; PCI = PCI option; SBM = SCSI backplane; PWR = power supply; FAN = fans; JIO= I/O connector module (junk I/O).
- ❷ **E** Error field. Indicates whether the FRU has any errors logged against it. FRUs without errors show 00 (hex). FRUs with errors have a non-zero value that represents a bit mask of possible errors. See Table 7-4.
- ❸ **Part #** The part number of the FRU in ASCII, either a Compaq part number or a vendor part number.
- ❹ **Serial #** The serial number. For Compaq FRUs, the serial number has the form XXYWWNNNNN.
XX = manufacturing location code
YWW = year and week
NNNNN = sequence number. For vendor FRUs, the 4-byte sequence number is displayed in hex.
- ❺ **Misc.** Miscellaneous information about the FRUs. For Compaq FRUs, a model name, number, or an "a.k.a" name. For vendor FRUs, the manufacturer's name.
- ❻ **Other** Optional data. For Compaq FRUs, the Compaq part alias number (if one exists). For vendor FRUs, the year and week number of manufacture.

Continued on next page

Table 7-4 Bit Assignments for Error Field

Bit	Meaning
Bit 0 is 1	Failure
Bit 1 is 1	TDD error has been logged
Bit 2 is 1	At least one SDD error has been logged
Bit 3 is 1	FRU EEPROM is unreadable
Bit 4 is 1	Checksum failure on bytes 0-62
Bit 5 is 1	Checksum failure on bytes 64-126
Bit 6 is 1	Checksum failure on bytes 128-254
Bit 7 is 1	FRU's system serial does not match system's

NOTE: *Contact your service provider if the E (error) field shows any of these errors.*

7.4.5 Show Error Command

The show error command displays FRUs that have errors logged. If the devices installed do not have any errors in their EEPROM, a show error command redisplay the SRM console prompt. Example 7-6 shows errors logged in the system board's EEPROM. Contact your service provider if the show error command displays an error.

Example 7-6 Show Error Command

```
P00>>> show error
SMB0      TDD - Type: 1 Test: 1 SubTest: 1 Error: 1
SMB0      SDD - Type: 4 LastLog: 1 Overwrite: 0
P00>>>
```

7.4.6 Show Power Command

Use the SRM show power command to determine whether the failure of a system running UNIX or OpenVMS was related to a fan, temperature, or power supply problem. You can use this command if you are able to restart the system. Otherwise, invoke RMC and use the env command.

Example 7-7 Show Power Command

```
P00>>> show power
```

	Status	
Power Supply 0	Good	❶
Power Supply 1	Good	
Power Supply 2	Not Available	
System Fan 1	Good	❷
System Fan 2	Good	
System Fan 3	Bad	
System Fan 4	Good	
System Fan 5	Good	
System Fan 6	Good	
CPU 0 Temperature	Warning	❸
CPU 1 Temperature	Good	
CPU 2 Temperature	Good	
CPU 3 Temperature	Good	
Zone 0 Temperature	Good	❹
Zone 1 Temperature	Good	
Zone 2 Temperature	Good	

```
P00>>>
```

- ❶ Power supplies. Power supply 2 is not installed.
- ❷ System fans. Fan 3 is not working.
- ❸ Temperature sensors on CPUs. CPU 0 is above threshold.
- ❹ Temperature sensors on PCI backplane.

7.4.7 Crash Command

For fatal errors, the UNIX and OpenVMS operating systems will save the contents of memory to a crash dump file. Crash dump files can be used to determine why the system crashed.

Example 7-8 Crash Command

```
P00>>> crash
```

```
CPU 0 restarting
```

```
DUMP: 19837638 blocks available for dumping.  
DUMP: 118178 wanted for a partial compressed dump.  
DUMP: Allowing 2060017 of the 2064113 available on 0x800001  
device string for dump = SCSI 1 1 0 0 0 0 0.  
DUMP.prom: dev SCSI 1 1 0 0 0 0 0, block 2178787  
DUMP: Header to 0x800001 at 2064113 (0x1f7ef1)  
device string for dump = SCSI 1 1 0 0 0 0 0.  
DUMP.prom: dev SCSI 1 1 0 0 0 0 0, block 2178787  
DUMP: Dump to 0x800001: .....: End 0x800001  
device string for dump = SCSI 1 1 0 0 0 0 0.  
DUMP.prom: dev SCSI 1 1 0 0 0 0 0, block 2178787  
DUMP: Header to 0x800001 at 2064113 (0x1f7ef1)  
succeeded
```

```
halted CPU 0
```

```
halt code = 5  
HALT instruction executed  
PC = fffffc0000568704  
P00>>>
```

The SRM **crash** command forces a crash dump to the selected device for UNIX and OpenVMS systems. Use this command when the system has hung and you are able to halt it with the Halt button or the RMC **halt in** command. The **crash** command restarts the operating system and forces a crash dump to the selected device.

7.5 Troubleshooting Tables

This section describes some strategies for troubleshooting problems that might prevent the system from completing its power-up or that might prevent you from booting the operating system. Use the troubleshooting tables on the following pages to diagnose the following types of problems.

- Power problems
 - Problems that prevent the system from powering up to the SRM console prompt
 - Failures reported on the SRM console
 - Boot problems
 - Errors reported by the operating system
-

NOTE: *Check your service agreement before handling internal parts of the system. If in doubt, contact your service provider.*

Table 7-5 Power Problems

Symptom	Action
System does not power on.	<p>Check that AC power is available and all power cords are plugged in.</p> <p>Check the Power setting on the control panel. Toggle the Power button to off, then back on to clear a remote power disable.</p> <p>Check error messages on the control panel.</p> <p>Check that the ambient room temperature is within environmental specifications (10–40°C, 50–104°F).</p> <p>Internal power supply cables might not be plugged in at the system board. Contact your service provider.</p>
Power supply shuts down after a few seconds	<p>The system may be powered off by one of the following:</p> <ul style="list-style-type: none">—A remote management console command—System software—Fan failure—Over-temperature condition—Power supply failure—Faulty CPU <p>Invoke RMC and use the env command for an indication of a hardware problem. See Chapter 4 for information on RMC.</p> <p>Check that the power supplies are installed correctly and correctly seated.</p>

Table 7-6 Problems Getting to Console Mode

Symptom	Action
Power-up screen is not displayed.	<p>Interpret the error beep codes and observe the control panel display at power-up for a failure detected during self-tests.</p> <p>Check keyboard and monitor connections.</p> <p>Press the Return key. If the system enters console mode, check that the console environment variable is set correctly.</p> <p>If you are using a VGA monitor as the console terminal, the console variable should be set to graphics. If you are using a serial console terminal, the console environment variable should be set to serial.</p> <p>If console is set to serial, the power-up display is routed to the COM1 serial communication port or MMJ port and cannot be viewed from the VGA monitor.</p> <p>Try connecting a console terminal to the COM1 serial communication port. When using the COM1 port, you must set the console environment variable to serial.</p> <p>If the system has a customized NVRAM file, try pressing the Halt button and then powering up or resetting the system. This will bypass the NVRAM script.</p>

Table 7-7 Problems Reported by the Console

Symptom	Action
Power-up tests are not completed.	Interpret the error beep codes at power-up and check the power-up screen for a failure detected during self-tests.
The system attempts to boot from the floppy drive after a checksum error is reported (error beep code 1-1-4).	The system automatically reverts to the fail-safe loader to load new SRM and AlphaBIOS firmware. If the fail-safe load does not work, contact your service provider to replace the system board.
Console program reports error:	
Error beep codes report an error at power-up.	Use the error beep codes and control panel messages to determine the error.
Power-up screen includes error messages.	Enter the more el command when the SRM prompt is displayed to read the event log.
Power-up screen or console event log indicates problems with mass storage devices.	Check the cabling and seating of the device. If this is not the problem, the device is bad and should be replaced.
Storage devices are missing from the show config display.	Check the cabling and seating of the device, then wait 5 seconds for the device to appear in the console display. If the device still does not appear, contact your service provider.
PCI devices are missing from the show config display.	See Section 7.6.

Table 7–8 Boot Problems

Symptom	Action
System cannot find boot device.	<p>Check the system configuration for the correct device parameters (node ID, device name, and so on).</p> <p>For UNIX and OpenVMS, use the show config and show device commands.</p> <p>For Windows NT, use the AlphaBIOS Display System Configuration menu and the CMOS Setup menus.</p> <p>Check the system configuration for the correct environment variable settings.</p> <p>For UNIX and OpenVMS, examine the auto_action, bootdef_dev, boot_osflags, and os_type environment variables.</p> <p>For network boots, make sure ei*0_protocols or ew*0_protocols is set to bootp for UNIX or mop for OpenVMS.</p> <p>For Windows NT, examine the Auto Start and Auto Start Count options on the CMOS Setup menu.</p>
Device does not boot.	<p>For problems booting over a network, make sure ei*0_protocols or ew*0_protocols is set to bootp for UNIX or mop for OpenVMS.</p> <p>Run the test command to check that the boot device is operating.</p>

Table 7-9 Errors Reported by the Operating System

Symptom	Action
System has crashed, but SRM console is operating.	<p>Press the Halt button and enter the SRM crash command to provide a crash dump file for analysis. (OpenVMS and UNIX only.)</p> <p>If the problem is intermittent, run the SRM test command.</p> <p>Refer to the <i>OpenVMS Alpha System Dump Analyzer Utility Manual</i> for information on how to interpret OpenVMS crash dump files.</p> <p>Refer to the <i>Guide to Kernel Debugging</i> for information on using the UNIX Krash Utility.</p>
System is hung and SRM console is not operating.	Contact your service provider.
Operating system has crashed and rebooted.	Contact your service provider. If the problem is intermittent, you might have a defective component.

7.6 Option Card Problems

Option card problems can include problems related to network options and PCI options.

Network Problems

Network problems can vary, depending on the type of network option card that you have installed. See the option card documentation for information on troubleshooting network problems. Make sure you have correctly set the network type for the network interface card.

PCI Parity Errors

Some PCI devices do not implement PCI parity, and some have a parity-generating scheme that may not comply with the PCI Specification. In such cases, the device functions properly as long as parity is not checked.

You can turn off parity checking so that false PCI parity errors do not result in machine check errors. When you disable PCI parity, no parity checking is implemented for any PCI device.

- For UNIX and OpenVMS systems, use the **set pci_parity off** command from the SRM console.
- For Windows NT, set the PCI Parity Checking option on the Advanced CMOS Setup menu to Disabled.

PCI Bus Problems

PCI bus problems at startup are usually indicated by the inability of the system to detect the PCI device. Use Table 7-10 to diagnose the likely cause of the problem.

Table 7-10 Troubleshooting PCI Bus Problems

Step	Action
1	Check the cabling and confirm that the PCI card is correctly seated.
2	Run system console PCI diagnostics for devices on the Supported Options List. (If the device is not on the list, refer to the device's documentation.) <ul style="list-style-type: none">• Storage adapter—Run the test command to exercise the storage devices off the PCI controller option.• Ethernet adapter—Run the test command to exercise an Ethernet adapter.
3	Check for a bad slot by moving the suspected controller to a different slot.
4	Contact the option manufacturer.

7.7 Troubleshooting the Windows NT Hard Disk

Table 7-11 gives AlphaBIOS error messages that indicate hard disk problems and suggests possible causes and solutions.

Table 7-11 Troubleshooting the System Hard Disk

Error Message	Possible Cause	Corrective Action
"Internal error occurred"	Incompatible or failed disk cables.	Try another cable known to be good.
	Disk controller not configured.	Check your hard disk controller documentation to see if you have to run a configuration utility to set up your hard disk.
	Disk controller malfunction.	Test controller functioning using the controller's diagnostic utility. If an error is found, contact your service representative for a replacement.
	Improper SCSI termination.	Check to see that terminating resistor packs are removed from all drives except the controller itself and the last drive connected to it.

Table 7-11 Troubleshooting the System Hard Disk (Continued)

Error Message	Possible Cause	Corrective Action
<p>“No hard drives were found connected to your computer”</p>	<p>No hard disk installed.</p>	<p>Install hard disk.</p>
	<p>Cable not connected to either the disk or controller.</p>	<p>Check the cable connections to ensure that cable connectors are fully seated.</p>
	<p>Cable not connected to either the disk or controller.</p>	<p>Check the cable connections to ensure that cable connectors are fully seated.</p>
	<p>No power to drive.</p>	<p>Check cable connections. If problem persists, try connecting the drive to a different power connector.</p>
<p>“Perform an express disk setup?”</p>	<p>Disk drive malfunction.</p>	<p>Try replacing the drive with a drive known to be good. If problem persists, hard drive is defective. Contact your service provider.</p>
	<p>Hard disk 0 does not have any partitions defined.</p>	<p>Perform an express disk setup to automatically create default disk partition arrangement on hard disk 0.</p>

Chapter 8

Specifications

This chapter gives specifications for Compaq AlphaServer ES40 systems:

- Physical specifications
- Environmental specifications
- Electrical specifications
- Regulatory approvals
- Acoustical data

8.1 Physical Specifications

Table 8-1 Physical Characteristics — Tower

Dimensions		
Height	50.8 cm (20.0 in.)	
Width	38.7 cm (15.25 in.)	
Depth	78.7 cm (31.0 in.)	
Weight	Nominal: 65 kg (143 lb) Max: 96 kg (211 lb)	
Shipping Container		
Height	82.4 cm (32.2 in.)	
Width	60.2 cm (24.0 in.)	
Depth	101.6 cm (40.0 in.)	
Weight	Nominal: 78 kg (172 lb) Max: 110 kg (242 lb)	
Clearances		
	Operating	Service
Front	75 cm (29.5 in.)	75 cm (29.5 in.)
Rear	15 cm (6 in.)	75 cm (29.5 in.)
Left side	None	75 cm (29.5 in.)
Right side	None	None

Table 8-2 Physical Characteristics — Pedestal

Dimensions		
Height	78.2 cm (30.8 in.)	
Width	50.8 cm (20.0 in.)	
Depth	80.6 cm (31.75 in.)	
Weight	Nominal: 127 kg (280 lb) Max: 159 kg (350 lb)	
Shipping Container		
Height	107.7 cm (42.4 in.)	
Width	100.3 cm (39.5 in.)	
Depth	60.7 cm (23.9 in.)	
Weight	Nominal: 149 kg (328 lb) Max: 185 kg (407 lb)	
Clearances		
	Operating	Service
Front	75 cm (29.5 in.)	75 cm (29.5 in.)
Rear	15 cm (6 in.)	75 cm (29.5 in.)
Left side	None	None
Right side	None	75 cm (29.5 in.)

Table 8–3 Physical Characteristics — Rackmount

Dimensions		
Height	35.2 cm (13.87 in.)	Fits 14 in. [8U] standard RETMA cabinets
Width	44.7 cm (17.6 in.)	
Depth	76.5 cm (30.1 in.)	
Weight		
1. When lifting	Nominal: 50 kg (110 lb)	Max: 76 kg (167.2 lb)
2. Total added to cabinet (includes brackets, slides, and cables)	Nominal: 59 kg (130 lb)	Max: 92 kg (202.4 lb)
Shipping Container		
Height	73.2 cm (28.8 in.)	
Width	60.7 cm (24.0 in.)	
Depth	101.6 cm (40.0 in.)	
Weight	Nominal: 72 kg (158 lb) Max: 106 kg (233 lb)	
Clearances		
	Operating	Service
	See requirements of specific cabinet.	Min: 121.9 cm (4 ft) 76.3 cm (30 in.) withdrawal on rails)

Table 8–4 Physical Characteristics — Cabinets

Dimensions	
H9A10 M-Series	
Height	170 cm (67.0 in.)
Width	60 cm (23.6 in.)
Depth	110 cm (43.27 in.)
Weight	Configuration-dependent Max payload 1000 lb
H9A15 M-Series	
Height	200 cm (79.0 in.)
Width	60 cm (23.6 in.)
Depth	110 cm (43.27 in.)
Weight	Configuration-dependent Max payload 1000 lb
Shipping Container	
H9A10 M-Series	
Height	185.5 cm (73 in.)
Width	91.5 cm (36 in.)
Depth	122 cm (48 in.)
Weight	Nominal: 430 kg (946 lb) Max: 625 kg (1375 lb)
H9A15 M-Series	
Height	216 cm (85 in.)
Width	91.5 cm (36 in.)
Depth	122 cm (48 in.)
Weight	Nominal: 550 kg (1056 lb) Max: 640 kg (1408 lb)

8.2 Environmental Specifications

Table 8-5 Environmental Characteristics — All System Variants

Temperature	Operating	10–35° C (50–95° F)
	Nonoperating	Not tested
	Storage (60 days)	–40 to 66° C (–40 to 151° F)
	Rate of change	11° C/hr (20° F/hr)
Relative humidity	Operating	20 to 80%
	Nonoperating	20 to 80%
	Storage (60 days)	10 to 95%
	Rate of change	20%/hr
Max wet bulb temp	Operating	28° C (82° F)
	Storage (60 days)	46° C (115° F)
Min dew point temp	Operating	2° C (36° F)
	Storage (60 days)	Not tested
Heat dissipation	Nominal	Maximum
Tower and Rack Pedestal H9A10/H9A15	900 w, 3074 BTU/hr	1300 w, 4440 BTU/hr
	1480 w, 5054 BTU/hr	2400 w, 8196 BTU/hr
	Config-dependent	4800 w, 16392 BTU/hr
Airflow and quality	Intake location	Front
	Exhaust location	Tower, Pedestal, and Rackmount: Rear H9A10/H9A15: Rear and top
	Particle size	N/A
	Concentration	N/A
Altitude	Operating	3037 m (10,000 ft)
	Nonoperating	12190 m (40,000 ft)
Mechanical shock	Operating Tower/Pedestal	7.5 G, 10 +/- 3 ms
	M-Series Cabinet	5.0 G, 10 +/- 3 ms
Vibration	Operating	10–500 Hz .1 G peak

8.3 Electrical Specifications

Table 8-6 Electrical Characteristics — All System Variants

Nominal voltage (Vac)	100	120	200–240
Voltage range (Vac) temporary condition)	90–110	110–128	180–250
Power source phase	Single	Single	Single
Nominal frequency (Hz)	50/60	50/60	50/60
Frequency range (Hz)	49–51/59–61	49–51/59–61	49–51/59–61
RMS current (max. steady state)			
Tower and Rackmount			
Single power cord	11.0 A	8.5 A	5.0 A
Multiple power cords	6.5 A	5.3 A	3.0 A
Pedestal			
Each power cord	12.0 A	10.5 A	7.0 A
M-Series cab config.-dependent			
Nominal voltage (Vac)	100	120	220–240
Each power cord	24 A	24 A	16 A

System Variant	Quantity	Power Cords Length	Type
Tower	Up to 3	190 cm (75 in.)	IEC 320 C13 to NEMA 5–15 (N. America) or IEC 320 C13 to country-specific
Pedestal	2	190 cm (75 in.)	120 V nonremovable NEMA 5–15 (N. America) or 200–240 V IEC 320 C13 to country-specific
Rackmount	3	452 cm (14 ft. 10 in.)	IEC 320 C13 to NEMA 5–15 (N. America) or IEC 320 C13 to IEC 320 C14 (other countries)
Cabinet	2	330 cm (10 ft 10 in.)	120 V nonremovable NEMA L5-30P or 200–240 V nonremovable IEC 309

NOTE: *Power supplies are universal, PFC, auto ranging, 100/120/200–240 Vac.*

8.4 Regulatory Approvals

Table 8-7 Regulatory Approvals

Agency approvals	UL: Listed to UL1950 (3 rd edition) and to CAN/CSA-C22.2 No. 950-M95 TUV: EN 60950/A4:1997 GS marked FCC: Part 15.B Class A CE: EN55022, en50082 VCCI Class II ITE BCIQ: CISPR22, CNS13438 c-Tick: CISPR22, as/nzs 3548
Reviewed to	AS/NZ 3260:1993 Australian/New Zealand Standard EN 60950/A4: 1997 European Norm IEC 950 (2 nd edition, 3 rd amend)

8.5 Acoustical Data

Table 8-8 gives the noise declaration for the AlphaServer ES40 system.

Table 8-8 Acoustical Data

Acoustics — Declared Values per ISO 9296 and ISO 7779				
Product	L_{WAdr} B		L_{pAmf} dBA (bystander positions)	
	Idle	Operate	Idle	Operate
DH-64AAA-AA (AlphaServer ES40) [with 0 x HDD]	6.6	6.6	48	48
DH-64AAA-AA + DS-RZ2ED-16	6.6	6.6	48	48
DH-64AAA-AA + DS-RZ2ED-16 + BA36R-R* + 6 x DS-RZ1ED-VW	6.7	6.8	49	50

Current values for specific configurations are available from Compaq representatives.
1 B = 10 dBA.

Index

A

- Acoustics, 8-9
- AlphaBIOS console
 - boot screen, 2-11, 2-13, 3-20
 - CMOS Setup screen, 2-31
 - Display System Configuration screen, 2-30
 - hard disk setup, 2-33
 - memory test, 2-34
 - running in serial mode, 2-44
 - setting date and time, 2-32
 - setup screen, 2-12
 - startup screens, 2-10
- AlphaBIOS initialization screen, 2-10
- AlphaBIOS utilities, 2-40
- APB program, 3-17
- Auto start, 2-36
 - UNIX or OpenVMS, 2-38
 - Windows NT, 2-37
- auto_action environment variable, 2-38
- Autoboot, 2-36
- Auxiliary power supply, RMC, 4-3

B

- Boot device, setting, 2-39
- Boot flags
 - OpenVMS, 3-5
 - UNIX, 3-4
- Boot options, 3-2
- Boot problems, 7-28
- Boot procedure
 - OpenVMS, 3-15
 - UNIX, 3-9
 - Windows NT, 3-21

- Boot screen, AlphaBIOS, 2-13, 3-20
- boot_file environment variable, 3-3
- boot_osflags environment variable, 3-4
- bootdef_dev environment variable, 3-2
- Booting
 - OpenVMS, 3-14
 - OpenVMS, from InfoServer, 3-16
 - OpenVMS, from local CD-ROM, 3-14
 - UNIX, from SCSI disk, 3-8
 - UNIX, from the network, 3-10
 - Windows NT, 3-20
- bootp protocol, 3-7
- Bypass modes, 4-6
- Bypassing the RMC, 4-6

C

- Checksum error, 7-4
- CMOS Setup screen, 2-31
- COM1 data flow, defining, 4-15
- COM1 environment variables, 4-12
- com1_mode environment variable, 4-4
- Command conventions, RMC, 4-14
- Components
 - system chassis, 1-3
 - system front, 1-4
 - system rear, 1-5
- Configuration
 - CPU, 5-19
 - memory, 5-23
 - PCI, 5-30
 - power supply, 5-11
- Connectors, rear, 1-6
- console environment variable (SRM), 2-3, 2-15
- Console event log, 7-12
- Console programs, 2-12

- Console tests, 7-15
- Console, selecting, 2-15
- Consoles, switching between, 2-14
- Control panel, 1-8
- Control panel messages, 2-3
- Controls
 - halt button, 1-9
 - power button, 1-8
 - reset button, 1-9
- Covers
 - removing from pedestal or rack, 5-8
 - removing from tower, 5-7
- CPU card, 1-11
- CPU slot locations, 5-18
- CPUs
 - configuring, 5-19
 - installing, 5-20
- crash command (SRM), 7-22
- Crash dump, 7-23

D

- Date and time, setting in AlphaBIOS, 2-32
- Device naming, SRM, 2-26
- Diagnostic tests, 7-14
- Diagnostics, 7-2
- Dial-in configuration, 4-22
- Dial-out alert, 4-24
- DIMMs
 - configuring, 5-23
 - installing, 5-26
- Disk cage, installing, 5-38
- Display device, selecting, 2-15
- Display device, verifying, 2-16
- Display System Configuration screen, 2-30
- DPR, 4-3
- Dual-port RAM, 4-3

E

- EEPROMs, 4-3
- ei*0_inet_init environment variable, 3-6
- ei*0_protocols environment variable, 3-7
- Electrical specifications, 8-7
- Enclosure panels
 - removing, 5-2
 - removing from a pedestal, 5-5
 - removing from a tower, 5-3

- env command (RMC), 4-18
- Environment, monitoring, 4-18
- Environmental specifications, 8-6
- Error beep codes, 7-2
- Error log information, RMC, 4-3
- Error messages
 - from RMC, 7-8
 - SRM, 7-11
- Errors reported by operating system, 7-29
- Escape sequence (RMC), 4-10
- Event log, 7-12
- ew*0_inet_init environment variable, 3-6
- ew*0_protocols environment variable, 3-7

F

- Factory-installed software (FIS), 3-1
- Fail-safe loader, 7-4
- Fan failure, 7-25
- Firm bypass mode, 4-8
- Firmware
 - updating, 6-1
 - updating from AlphaBIOS, 6-8
 - updating from OpenVMS system disk, 6-9
 - updating from SRM, 6-7
 - updating using BOOTP, 6-10
 - updating using MOP, 6-11
- Firmware update utility, 6-4
- Firmware updates
 - AlphaBIOS Web location, 6-2
 - Internet access, 6-2
 - manual, 6-6
 - quarterly update service, 6-2
 - sources of, 6-2
- Flash ROM, updating, 6-6
- Flash SRM, 2-5
- FRUs, displaying, 7-16, 7-19

H

- Halt button, 1-9
- Halt in/out command (RMC), 1-9
- Halt, remote, 1-9, 4-21
- hangup command (RMC), 4-23
- Hard disk setup, AlphaBIOS, 2-33
- Hard disk troubleshooting, 7-32
- Hard drives, 1-17
 - installing, 5-15

Hardware configuration
 viewing, 2-18
 Windows NT, 2-30
Hot-plug components, 5-9

I

InfoServer, 3-17
Initialization screen, AlphaBIOS, 2-10
Installing a disk cage, 5-38
Installing CPUs, 5-20
Installing DIMMs, 5-26
Installing hard drives, 5-14, 5-15
Installing OpenVMS, 3-18, 3-19
Installing PCI cards, 5-32
Installing power supplies, 5-12
Installing UNIX, 3-12
Installing Windows NT, 3-22, 3-23
ISL boot program, 3-17

K

Key mapping, AlphaBIOS, 2-44

L

LEDs
 control panel, 1-8
 power supply, 1-15
LFU, 6-4, 7-5
Local mode, 4-5
Loopback tests, 7-15

M

Memory configuration, 5-23
 pedestal/rack, 5-24
 tower, 5-25
Memory failure, 2-5
Memory test
 settings in AlphaBIOS, 2-34
Messages, power-up, 2-3
Modules, system board, 1-10
MOP protocol, 3-7
more el command (SRM), 7-12

N

Network problems, 7-30
No MEM error, 7-6

O

OCP messages, 2-3
OpenVMS
 booting, 3-14
 booting from InfoServer, 3-17
 booting from InfoServer, 3-16
 booting from local CD-ROM, 3-14
 installing, 3-18, 3-19
Operating systems
 switching to UNIX or OpenVMS, 3-26
 switching to Windows NT, 3-25
Operating systems, switching between, 3-24
Operator control panel, 1-8
 customized message, 2-17
 start-up messages, 2-3
Option card problems, 7-30
OSLOADER program, 2-39

P

Pagers, 4-26
Password protection, Windows NT, 2-35
PCI bus problems, 7-31
PCI cards, installing, 5-32
PCI parity errors, 7-30
PCI slot locations
 pedestal, 5-30
 tower, 5-31
PCI slots, 2-25
PCI, configuring, 5-30
Physical specifications, 8-2
PIC processor, 4-3
Ports, system rear, 1-7
Power button, 1-8
Power off/on command (RMC), 1-9
Power problems, 7-25
Power supplies, 1-14
 configuring, 5-11
 installation order, 5-11
 installing, 5-12
 locations, 5-10

- redundant, 5-11
- Power supply LEDs, 1-15
- Powering up, 2-2
- Power-on, remote, 1-9
- Power-on/off, from RMC, 4-20
- Power-up display
 - SRM, 2-6
 - SRM, 2-4, 2-5
- Power-up displays, 2-3
- Power-up memory failure, 2-5
- Power-up memory test, AlphaBIOS, 2-34
- Power-up procedure, 2-5
- Preboot tasks, Windows NT, 3-21
- Problems getting to console mode, 7-26
- Problems reported by console, 7-27
- Processor card, 1-11

Q

- quit command (RMC), 4-10

R

- Redundant power supply, 5-11
- Regulatory approvals, 8-8
- Remote power-on/off, 4-20
- Removable media, 1-16
- Removable media device, installing, 5-36
- Removing enclosure panels, 5-2
 - from a pedestal, 5-5
 - from a tower, 5-3
- Reset button, 1-9
- Reset command (RMC), 1-9
- Reset, from RMC, 1-9, 4-21
- RIS boot, 3-10
- RIS boot procedure, 3-11
- RMC
 - auxiliary power supply, 4-3
 - bypass modes, 4-6
 - CLI, 4-13
 - command conventions, 4-14
 - commands, 4-13
 - configuring call-out, 4-22
 - data flow diagram, 4-4
 - dial-out alert, 4-24
 - entering, 4-10
 - env command, 4-18
 - error messages, 7-8

- escape sequence, 4-10
- exiting, 4-10
- exiting from local VGA, 4-11
- firm bypass mode, 4-8
- hangup command, 4-23
- local mode, 4-5
- logic, 4-3
- operating modes, 4-4
- overview, 4-2
- PIC processor, 4-3
- quit command, 4-10
- remote power on/off, 4-20
- remote reset, 4-21
- resetting to factory defaults, 4-29
- set com1_mode command, 4-15
- set escape command, 4-28
- snoop mode, 4-7
- soft bypass mode, 4-7
- status command, 4-16
- terminal setup, 4-9
- through mode, 4-5
- troubleshooting, 4-31
- RMC firmware, updating, 6-6

S

- SCSI bus length, 5-41
- SCSI expansion, 5-41
- Security, for SRM console, 2-29
- Serial mode, setting up, 2-43
- Serial terminal
 - running utilities from, 2-44
- set com1_mode command (RMC), 4-15
- set escape command (RMC), 4-28
- set ocp_text command (SRM), 2-17
- Setting SRM environment variables, 2-28
- Setup, Windows NT, 2-31
- Shared RAM, 4-3
- show boot* command (SRM), 2-19
- show command (SRM), 2-18
- show config command (SRM), 2-20
- show device command (SRM), 2-26
- show error command (SRM), 7-19
- show fru command (SRM), 7-16
- show memory command (SRM), 2-27
- show power command (SRM), 7-20
- Slot numbers
 - CPUs, 5-18

- PCI, 5-30, 5-31
- Snoop mode, 4-7
- Soft bypass mode, 4-7
- Specifications, 8-2
- SRM console, 2-13
 - device naming, 2-26
 - power-up display, 2-6
 - security, 2-29
- SRM console commands
 - crash, 7-22
 - show boot*, 2-19
 - show config, 2-20
 - show device, 2-26
 - show error, 7-19
 - show fru, 7-16
 - show memory, 2-27
 - show power, 7-20
 - test, 7-14
- SRM diagnostics, 7-12
- SRM environment variables, setting, 2-28
- SROM
 - error messages, 7-11
 - power-up display, 2-4, 2-5
 - power-up messages, 2-3
- Startup screens, AlphaBIOS, 2-10
- status command (RMC), 4-16
- Storage
 - hard drive, 1-17
 - removable media, 1-16
- System board, 1-10
- System chassis
 - components, 1-3
- System diagnostics, 7-2
- System enclosures, 1-2

T

- Terminal setup (RMC), 4-9
- test command (SRM), 7-14
- Through mode (RMC), 4-5
- Tools for installation, 5-1
- Troubleshooting
 - boot problems, 7-28

- categories of problems, 7-24
- errors reported by operating system, 7-29
- network problems, 7-30
- option card problems, 7-30
- PCI bus problems, 7-31
- PCI parity errors, 7-30
- power problems, 7-25
- problems getting to console mode, 7-26
- problems reported by console, 7-27
- RMC, 4-31
- system diagnostics, 7-2
- test command, 7-14
- Windows NT hard disk, 7-32
- with console event log, 7-12

U

- UART ports, 4-5
- UNIX
 - booting, 3-8
 - booting from SCSI disk, 3-8
 - booting over the network, 3-10
 - installing, 3-12
 - text-based installation display, 3-12
- Updating firmware, 6-1
- User interfaces, 2-12
- Utilities
 - running from serial terminal, 2-44
 - running from VGA monitor, 2-41
- Utilities, AlphaBIOS, 2-40

V

- VGA console tests, 7-15

W

- Windows NT
 - booting, 3-20
 - installing, 3-22, 3-23
 - troubleshooting hard disk, 7-32

